



NOTE: FUSE NUMBER = FIRST FUSE NUMBER + INCREMENT

(16) = PIN NOS. FOR PLCC "NL" PACKAGE

Data I/O Corporation