| - Pall-set - et                                    | out the                    | MMPLE 2-8         |                       |
|--|----------------------------|-------------------|-----------------------|
| • TEM  | IDUT - MUM                 | - <- 8            |                       |
| TIME 0.0   | - 2E 0                     | 1                 |                       |
| • 0.0 00F 00 0.0                                   |                            | TE                | MOUT , TUUM           |
| 4.0000 - 00  |                            | AC NC             |                       |
| 4.0000E 00 0.0<br>8.0000E 00 0.0<br>1.2000E 01 0.0 |                            |                   |                       |
| 1.20000  |                            |                   | +                     |
|  |                            |                   | -+                    |
|  |                            |                   | *                     |
| AGUIDE   |                            |                   | *                     |
|  |                            |                   | *                     |
| TOUSING  |                            |                   |                       |
|  |                            |                   |                       |
|  |                            |                   |                       |
| CSM  |                            |                   |                       |
|  |                            |                   |                       |
|  |                            |                   | EXAMPLE 2-8           |
|  |                            |                   |                       |
| - THE CONTINU                                      | ious systi                 | EIM               | 1 TEMOUT V            |
|  |                            |                   |                       |
| MODELING PL  | RUGRAM                     | F PROCESS OUTPUT  |                       |
|  |                            | F PRECESS MINIMUM | +                     |
|  |                            | -2.9642E          | 0                     |
| A program  | • TEMPERATURE              | TEMOUT I          | +                     |
| for simulating                                     | -MATORE (                  | D.0               |                       |
|  |                            | 0.0               |                       |
| physical systems                                   | • TIME<br>0.0              | 0.0               |                       |
|  | • 4.00005 00               | 0.0               |                       |
|  | 0.00005 00                 |                   |                       |
|  | • 1.20COE 01<br>1.6COOE 01 |                   |                       |
| Walter L. Green                                    | UI UI                      |                   |                       |
| 2.4000E 01 1.                                      | 1425-01                    | t                 |                       |
|  | 8 806E 00                  | +                 |                       |
| 3. 2000E 01  | .9 190E 00                 | +                 |                       |
|  | 3.1 8305 00<br>2.1 045E 00 | +                 | ener in the second    |
|  | 1.9 020E 00                | +                 | and the second second |
|  | 9.4755E 0C                 | +                 |                       |
| Presenting • 6.0000E 01<br>6.4000E 01              | 877E-01                    | +                 |                       |
| a very   | 01 -1.4835E 00             |                   |                       |
| convenient, 7.2000E                                | 01 -2.5153E 00             | +                 |                       |
| nexible, and 8.0000E                               | 01 -3.3 006E 00            |                   |                       |
| user-oriented • 8.40COE<br>8.8000E                 | 01 -1.5125E 0C             | +                 |                       |
| approach to 9.2000E<br>9.6000E                     |                            | +                 |                       |
| Solving • 1.0CODE                                  | 02 5.0 8475 00             |                   |                       |
| • 1.0800E  | 02 8.9 245E CC             |                   | +                     |
| equations with                                     |                            |                   | +                     |
| comparatively                                      | 02 7.0053E 0C              | +                 | *                     |
| simple 1.2800E                                     | 02 -5.5492E-01             | +                 |                       |
| programming 1.3600E                                | 02 -1.0056E 01             |                   |                       |
| statements. 1.4000E                                | 02 -1.5793E 01             | +                 |                       |
| • 1.4800E  | 02 -1.5532E 01             | +                 | States and the set    |
| 1.52005  |                            |                   |                       |
| 1.5200E<br>1.5500E<br>1.6C00F                      | 02 -7.04045 00             | +                 |                       |

and and

# A GUIDE TO USING CSMP— The Continuous System Modeling Program

A Program for Simulating Physical Systems

Frank H. Speckhart

Professor Mechanical and Aerospace Engineering Department University of Tennessee, Knoxville

### Walter L. Green

Professor Electrical Engineering Department University of Tennessee, Knoxville

Prentice-Hall, Inc., Englewood Cliffs, New Jersey

Library of Congress Cataloging in Publication Data

SPECKHART, FRANK H A guide to using CSMP—the Continuous system modeling program.

Includes bibliographical references and index. 1. CSMP (Computer Program) 2. Digital computer simulation. 3. Engineering—Data processing. I. Green, Walter L., joint author. II. Trile, TA343.S64 001.6'424 75-19498 ISBN 0-13-371377-6

© 1976 by Prentice-Hall, Inc. Englewood Cliffs, N.J.

All rights reserved. No part of this book may be reproduced in any form, by mimeograph or any other means, without permission in writing from the publisher.

10 9 8 7 6 5

Printed in the United States of America.

PRENTICE-HALL INTERNATIONAL, INC., London PRENTICE-HALL OF AUSTRALIA, PTY. LTD., Sydney PRENTICE-HALL OF CANADA, LTD., Toronto PRENTICE-HALL OF INDIA PRIVATE LIMITED, New Delhi PRENTICE-HALL OF JAPAN, INC., Tokyo PRENTICE-HALL OF SOUTHEAST ASIA (PTE.) LTD., Singapore

# **CONTENTS**

## PREFACE ix

# 1 INTRODUCTION 1

An Application-Oriented Program 1 Background Required for Using CSMP 2 The Power of CSMP 3 References 4

# 2 FUNDAMENTALS OF SYSTEM/360 CSMP 5

A General Overview of CSMP 5 Symbols and Constants 7 Operators 8 Format 9 Structure of CSMP 10 Initial Segment 11 Dynamic Segment 12 iv Contents

**Terminal Segment** 12 Sort and Nosort Sections 12 Solving Problems with CSMP 14 Example 2.1 Spring-Mass-Damper System 14 Example 2.2 Simulation of a Block Diagram 18 Example 2.3 Solution of the Van der Pol Equation 25 **Example 2.4** Transient Temperature Response 30 Example 2.5 Three-Stage Saturn Vehicle 35 Example 2.6 Control System with Compensation 39 Example 2.7 RCL Circuit Problem 42 **Example 2.8** Temperature Control for a Chemical Process 52 **Example 2.9** Simulation of Gear Train Containing Backlash 58 Example 2.10 Beam Deflection Problem 60 Example 2.11 Stress Analysis of Cam-Follower System 65 References 68 Problems 69

# 3

## ADVANCED FEATURES OF CSMP 81

Integration Methods 81 Variable-Step Integration Methods 82 Integration Error Requirements 82 85 Fixed-Step Integration Methods **Choosing the Integration Method** 85 The Variable KEEP 89 Changing Integration Technique and Output Interval During a Run 90 Example 3.1 90 User Supplied Integration Method 93 Example 3.2 93 **Data Statements** 95 Subscripted Variables 95 **DIMENSION Statement** 97 98 FORTRAN Specification Card STORAGE Statement .98 Assigning Values to Subscripted Variables 98 Specification Form of Integral Statement 103 Example 3.3 104 Example 3.4 107 109 **Overlay Statement** Example 3.5 110 **Translation Control Statements** 112 END 113 Example 3.6 114

RESET 117 Example 3.7 118 CONTINUE 119 STOP 123 ENDJOB 124 ENDJOB STACK 124 Data Output 124 FORTRAN Output 124 Example 3.8 126 **DEBUG Subroutine** 129 PREPARE 132 134 Example 3.9 DECK 135 **User Defined Functions and Subroutines** 138 **MACRO** Functions 140 Example 3.10 145 Example 3.11 147 Example 3.12 151 **PROCEDURE** Function 154 Example 3.13 158 **FORTRAN Subprograms** 165 **General Guidelines** 165 Example 3.14 167 Memory 168 171 History Implicit Functions 171 Formulation of Implicit Functions 172 Example 3.15 176 Example 3.16 177 References 179 Problems 179

# 4 FURTHER APPLICATION OF CSMP 193

**Frequency Response** 194 Frequency Response Without Integration 195 Example 4.1 196 197 Frequency Response Using Array Integrators Example 4.2 200 **State Variable Formulation From Transfer Functions** 205 **Digital Control Systems** 209 Example 4.3 210 211 Example 4.4

vi Contents

> Example 4.5 215 Example 4.6 221 Simulation Digital Logic 224 Example 4.7 224 Example 4.8 228 References 233 Problems 233

# 5

#### CSMP III 244

**Output Statements** 245 PRINT 245 TITLE 245 RERUN 246 PRINTPAGE 246 OUTPUT 246 Example 5.1 247 LABEL 248 PAGE 252 Example 5.2 253 Example 5.3 254 CALL PRINT and CALL OUTPUT 260 260 RANGE Functions 260 Arbitrary Function Generators 262 FUGEN 262 CALL FGLOAD 262 TWOVAR 263 CALL TVLOAD 264 SLOPE 265 TRANSF 265 **Control Statements** 266 END CONTINUE 266 **INPUT and ENDINPUT** 267 CALL FINISH 267 CALL CONTIN 267 Integration Techniques 267 Array Integration 268 DELMAX 268 TIME 268 **Double-Precision Operation** 268 References 271 Problems 271

APPENDIX

# *I* LISTING AND DEFINITION OF ALL CSMP FUNCTIONS 281

APPENDIX

## *II* DIAGNOSTIC MESSAGES, PROGRAM RESTRICTIONS, AND RESERVED WORDS 304

APPENDIX

# III MATHEMATICS OF INTEGRATION METHODS 317

References

**INDEX** 321

# PREFACE

During the last few years the digital computer has assumed a prominent role in system simulation and in the solution of nontrivial mathematical equations. Computer languages such as FORTRAN, BASIC, and PL/1 have provided users with a convenient method for communicating with the computer on a wide range of problems. In many cases, specialized computer programs have been developed that are directly tailored to a particular class of problems. A notable example is in the area of modeling physical systems. Several software packages are available, one of the most widely used being the Continuous System Modeling Program (S/360 CSMP and CSMP III) which was developed by the IBM Company.

CSMP is a program especially designed to allow users to simulate all types of physical systems with a minimum of programming difficulty. The language employs user-oriented statements for formulating numerically complicated mathematical operations such as integration and differentiation. Input data, problem parameters, and program output are handled by extremely simple statements. The power and flexibility of FORTRAN is retained with CSMP since it is used as the source language. Essentially, all capabilities of FORTRAN can be used in a CSMP program.

The basic objective of this text is to provide instruction for both the college student and the practicing engineer and scientist on the use of CSMP in modeling physical systems and solving mathematical equations. The book assumes that the reader has no background in CSMP and only an introductory knowledge of FORTRAN.

In many programming texts, the essential ingredients for writing a complete program (input, output, and structure statements) are contained in various chapters throughout the book. This means the user must read the entire text before formulating and writing meaningful programs. This book is organized in such a way x Preface

that the reader need study only the first two chapters in order to solve significant problems.

The basic fundamentals of CSMP are presented with detailed explanations and are illustrated by example problems. From our experience as both students and teachers, we feel that this approach is more appealing and effective in the learning process. Thus, important concepts, program statements, and general software procedures are illustrated by actual working programs representing disciplines from a large cross section of engineering, mathematics, and related fields.

The first two chapters present introductory material and are designed to bring the reader to a point where it is possible to effectively use the program. Each example in Chapter Two concentrates on presenting one or two key concepts and then showing how these concepts are applied in a typical application. The third chapter has a somewhat different objective in that it concentrates on presenting the more advanced features of CSMP and is developed under five main headings; Integration Methods, Data Statements, Translation Control Statements, Subprograms, and Data Output. Once the reader has a basic knowledge of CSMP, the material in this chapter can be used to increase programming capability and as a convenient reference section. As in the second chapter, all important concepts are illustrated by practical example programs. Chapter Four concentrates on specific examples dealing with the frequency response of a system, the simulation of digital control systems, and the simulation of logic functions.

All of the material prior to Chapter Five is written for S/360 CSMP. With the exception of output capability, there is very little difference in using S/360 CSMP and CSMP III. Consequently, the first four chapters also apply to CSMP III. The additional capabilities and slight programming changes are outlined in Chapter Five.

Practice problems are included at the close of all major chapters. Any serious potential user of CSMP should work these problems since it is practically impossible to master a program language without actually writing programs.

The material contained in the Appendix is quite useful in that it gives a complete summary of all functions and signal sources available in CSMP as well as a list of definitions, restrictions, diagnostic messages, and reserved words.

The authors wish to express their appreciation to Mr. George Miles and Mr. Wayne Toppins of the University of Tennessee Computing Center for their assistance and helpful comments. Also, we are grateful to our wives for their continuous encouragement.

F.H.S., W.L.G.

# **1** INTRODUCTION

In the years preceding the development and wide acceptance of the digital computer, solutions for system simulations and differential equations were commonly programmed on the analog computer. Inherent with the analog computer was the necessity for the user to give careful consideration to both magnitude and time scaling of the problem variables. Complex operations such as square roots, squaring, and trigonometric functions usually required special purpose hardware. The solution to higher-order equations or to several simultaneous equations resulted in a complicated maze of patch-panel wiring. Troubleshooting for a misplaced wiring connection on the patch board was a tedious and time-consuming task.

Following the introduction of FORTRAN and other high-level programming languages, digital computer methods were developed that made possible the numerical solution to problems that were formerly solved on the analog computer. Mathematicians, researchers, and engineers were confronted with developing and debugging their own programs or relying on the skill of a professional programmer. Relying on a programmer to develop software often results in either the user not adequately describing the problem or the programmer not correctly interpreting the user's request.

If, however, users accept the challenge of developing their own software, they are faced with the problem of devoting so much effort to writing programs that little time is left for the main responsibilities of their positions.

### An Application-Oriented Program

In response to the need for a program language that did not require extensive knowledge of FORTRAN methods and numerical techniques, IBM developed an

#### 2 Introduction

application-oriented program known as *Digital Simulation Language-90 (DSL-90)* for the 7090 digital computer series.<sup>(1)</sup> This program was later modified and adapted for use with the IBM System/360. The name of the simulation was changed to *Continuous System Modeling Program (System/360 CSMP)*.<sup>(2-4)</sup> More recently the scope of CSMP has been extended to include greater flexibility by incorporating CRT graphic-display capability, multiple printer-plots on a single page, line-printer charts, overstrikes for graytoning and contour definition, and several new function blocks.<sup>(5-6)</sup> This version of the program is known as *CSMP III*. Since there is very little difference between S/360 CSMP and CSMP III, both forms are simply referred to as CSMP. This book will use both forms.

CSMP was particularly written to solve either a system of ordinary differential equations or analog block diagrams as encountered in system theory. In developing the program, emphasis was placed on simplified input data statements, output statements, and on program control statements that almost directly describe the mathematical equations or physical variables of the problem. In effect, CSMP allows the user to concentrate on the details of the physical system rather than the usual concerns of numerical analysis and programming.

#### **Background Required For Using CSMP**

A person entirely unacquainted with computer programming can learn to solve significant and rather complex problems with CSMP with less than two hours of preparation. An introductory knowledge of FORTRAN is a helpful but not an essential prerequisite. Using CSMP is like using any other programming language in that the scope of problems which one can solve increases with the depth of preparation and the frequency of application.

Using the CSMP program is similar in many respects to using the electronic analog computer. Many of the special CSMP statements perform the same function as typical analog computer components. As previously noted, there is never a need to be concerned with amplitude and time-scaling. CSMP digital simulation has many other advantages over the use of an analog machine in that it (1) is more accurate; (2) is easier to program; and (3) has much greater capability in handling nonlinear and time-variant problems.

Anyone working in a field of science who has a need to simulate a system or solve ordinary differential equations will quickly recognize the power of CSMP. Typically, CSMP can be used to model the dynamic behavior of an automobile, to determine the effect of adding nonlinear rubber isolaters in controlling the vibration of a machine, to study the effects of changing the deadband in a controller of a nonlinear feedback-control system, to simulate the cardiovascular system, and to predict the future performance of the stock market from a *yet to be derived* nonlinear, time-varying, multiple input/output model. Apparently, the number of potential applications for CSMP is limited only by the needs and imagination of its users.<sup>(7-11)</sup>

### The Power of CSMP


The flexibility and ease of using CSMP cannot be described in a few short sentences. However, as a simple introduction, consider the following nonlinear, time-varying, differential equation:

$$\frac{d^2y}{dt^2} + yt\frac{dy}{dt} + y = t^2$$
$$y(0) = 1.0$$
$$\dot{y}(0) = 2.0$$

The program below illustrates the ease of solving this equation.

With the exception of control cards, the entire program listing consists of only eight statements. The output from the computer will be a column listing giving 100 discrete values of the dependent variable Y calculated uniformly over three units of problem time. As a comparison, the reader might reflect on the effort required to solve this problem by numerical methods using FORTRAN or by simulation using an analog computer.

As another simple example, suppose the step response of the following block diagram representation of a system is desired.

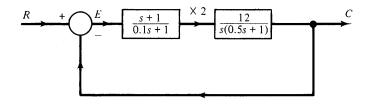

This system can be simulated using only ten CSMP statements.

As these illustrations point out, only a few program statements are required for problem simulations. Solutions using FORTRAN or an analog computer would certainly require much more complicated programming. However, FORTRAN and analog simulation are powerful in their own right. The purpose of this text is to give the reader a background in CSMP and leave the ranking of programming methods to someone else.

#### 4 Introduction

CSMP is most useful for small and medium-size simulations. For extremely large and complex problems the simulation may be limited by program-size restrictions. Also, because of the flexibility in programming, CSMP simulations may require slightly more computer time than custom-developed programs.

#### REFERENCES

- SYN, W.M. and R.N. LINEBARGER, "DSL/90-A Digital Simulation Program for Continuous System Modeling." 1966 Spring Joint Computer Conference, April 26-28, 1968.
- 2. System/360 Continuous System Modeling Program, User's Manual GH20-0367-4; Program Number 360A-CX-16X. IBM Corporation, Technical Publications, White Plains, N. Y.
- 3. System/360 Continuous System Modeling Program (360A-CX-16X), Application Description, H20-0240-1. IBM Corporation, Technical Publications, White Plains, N. Y.
- 4. BRENNAN, R.D. and M.Y. SILBERBERG, "The System/360 Continuous System Modeling Program." *SIMULATION* 11, No. 6, December 1968, 301-308.
- 5. Continuous System Modeling Program III (CSMP III), Application Description, program number 5734-XS9. IBM Corporation, Data Products Division, White Plains, N. Y.
- 6. Continuous System Modeling Program III (CSMP III), Program Reference Manual SH19-7001-2, Program Number 5734-XS9. IBM Corporation, Data Processing Division, White Plains, N. Y.
- CHUBB, B.A., "Application of a Continuous System Modeling Program to Control System Design." Proceedings 11th Joint Automatic Control Conference, June 24, 1970.
- EDEN, M.S., "The Use of CSMP Digital Simulation Language in Manual Flight Control Analysis." *Proceedings 1970 Summer Computer Simulation Conference*, June 10– 12, 1970.
- BRENNAN, R.D., C.T. DEWIT, W.A. WILLIAMS, and QUATTRIN, "The Utility of a Digital Simulation Language for Ecological Modeling." *Oecologia* 4, May 1970, 113–132.
- WINTON, H.J. and R.N. LINEBARGER, "Digital Simulation of Human Temperature Control." Proceedings 1970 Summer Computer Simulation Conference, June 10-12, 1970.
- 11. WOLF, J. and W.L. GREEN, "Simulation Study of Predictive Control." *Proceedings of the National Electronics Conference*, Vol. 27, Oct., 1972.

# **2** FUNDAMENTALS OF SYSTEM/360 CSMP<sup>†</sup>

The objective of this chapter is to present those fundamentals of CSMP that will allow the beginning user to write productive programs. Extensive discussions of format, program structure, and the functions of the simulation language as separate sections within the chapter are purposely avoided. This is because the authors have found through experience that the basic fundamentals can be more readily grasped by presenting examples that illustrate practical applications of the program.

The discussions of symbols, constants, operators, structure, and format provide a working description of the simulation language. These discussions are followed by eleven examples that have been carefully selected to enable the reader to develop a fundamental knowledge of the simulation language as he progresses through the material. Problems at the end of the chapter should be considered as part of the text, for it is practically impossible for one to ever develop programming skill without personally formulating and writing programs.

### A General Overview of CSMP

CSMP is an application-oriented program in that it is specially written for scientists, engineers, and analysts who are involved in work that requires the solution of ordinary differential equations or in simulating a system that has been modeled as a block diagram. Long hours of tedious program development and program debugging are not required for effecting the solution of rather complicated problems.

<sup>†</sup>Even though this chapter specifically deals with S/360 CSMP, the same programming fundamentals also apply to CSMP III. With the noted exception of the Example 2.2, all programs in this chapter will run on a CSMP III system.

The utility and ease of using CSMP stems mainly from (1) simplified program statements; (2) flexibility of program structure; and (3) a basic set of preprogrammed function blocks.

Program statements can be broken down into three categories: *data statements, structure statements*, and *control statements*. Data statements pertain to entities such as initial conditions for integration or numerical values for parameters and constants of the problem. Structure statements are the heart of the program in that the inner-relationship of the problem variables are here defined. Control statements are used to specify the problem run-time, the integration increment, the format of the output data resulting from the problem solution, and other specific options relating to translation and execution of the program. In reality, the user is not compelled to make a decision in terms of which category a problem statement belongs. These categories are defined simply to describe the types of statements that are utilized.

The program structure of CSMP is composed of three segements: *Initial*, *Dynamic*, and *Terminal*. Generally, data statements will appear in the Initial segment. In addition, calculations that are required to be performed only one time during a simulation (i.e., the volume of a cylinder) can be conveniently placed in this segment. The Dynamic segment is usually composed of structure statements that describe the dynamics of the system or explicitly describe a set of differential equations. The Terminal segment is the last segment in the program and is usually made up of control statements.

Many problems simulated by CSMP will not require the explicit structure described above. Examples that use the Initial, Dynamic, and Terminal segmentation as well as examples in which this segmentation can be omitted are presented in this chapter.

The flexibility of CSMP can be considerably extended to include the power of FORTRAN conditional logic and branching. This extension is accomplished through the *sort* and *nosort* options of the program. If the user does not specify sort and nosort sections, a sort subprogram within CSMP will automatically place the problem statements in the correct order for the simulation. Automatic sorting relieves the user from the task of keeping up with the proper order of program statements as required by the FORTRAN language. However, occasions often arise whereby conditional logic and branching are necessary in a simulation. The NOSORT label card provides this additional flexibility by establishing sections in the program in which the statements are executed by ordinary FORTRAN rules. A more detailed discussion on the structure of CSMP, including the sort and nosort options, will be given later.

Perhaps one of the greatest assets of CSMP is the availability of thirty-four *functional blocks*.<sup>(1)</sup> A functional block plays a role similar to a FORTRAN subroutine in that the user specifies a function but, in this case, the subroutine that specifies the properties of the function is pre-programmed in the CSMP package. The different types of functional blocks are (1) mathematical functions;

(2) system macros; (3) switching functions; (4) function generators; (5) signal sources; (6) logic functions; and (7) FORTRAN functions. A complete list of the functional blocks along with appropriate descriptions of what the functions accomplish is given in Appendix I. Illustrations using many of these functions will be presented in this chapter.

Most simulations require some form of integration. For this purpose, CSMP gives the user a choice of seven pre-programmed methods. If the user does not specify an integration method, the program will automatically use Runge-Kutta with variable integration-step size (RKS).

The user interested in installation and system requirements for running CSMP should consult appropriate IBM manuals.<sup>(2-3)</sup>

The following paragraphs describe the use of symbols, constants, and operators as normally employed in programming languages and particularly as employed in CSMP. Next, a fairly comprehensive description of the structure of CSMP is presented. Many readers may find it advantageous to proceed to Example 2.1 and return to the following material at a later time.

### **Symbols and Constants**

All symbols used in CSMP programs must begin with an alphabetic letter (A through Z) and contain not more than six characters. Only alphabetic and numeric characters with no embedded-blanks are allowed. Some examples of valid and invalid symbols are:

| Allowed | Not Allowed | Type of Error               |
|---------|-------------|-----------------------------|
| Q1      | 1Q          | First character is a number |
| B12345  | BA          | Embedded-blank              |
| ABCDEF  | ABCDEFG     | Too many characters         |
| I1J2    | *AB         | Invalid first character     |
| K       | A(A         | Invalid second character    |

There are certain words reserved for CSMP and FORTRAN that cannot be used as symbols. These reserved words are listed in Appendix II. Unlike FORTRAN, the CSMP language does not require that symbols having a first character of I, J, K, L, M, or N be automatically treated as integers. All symbols, unless otherwise specified, will be treated as floating-point numbers.<sup>†</sup> The method of designating a symbol as an integer is discussed in Chap. 3.

Floating-point (real) constants can be written two ways. The most common method involves numbers with only a decimal point.

†A floating-point number contains a decimal. For more information see Reference 4.

234.256756 0.005945 - 45.7 + 100.0

This type of number is limited to a total of twelve characters and not more than seven significant decimal digits. For either very large or small numbers, the format involving the letter E should be used. This type constant can assume values between approximately  $10^{-75}$  through  $10^{+75}$ . Examples of E-format numbers, which can be used in a CSMP program, are listed below.

| E-format  | Equivalent to           |
|-----------|-------------------------|
| 3.254E4   | 3.254 × 10 <sup>4</sup> |
| -678.1E7  | $-6.781	imes10^9$       |
| 0.0231E-5 | $2.31	imes10^{-7}$      |
| 1764.7E11 | $1.7647 \times 10^{14}$ |

Integers are written without a decimal point and can contain up to ten digits.

The use of subscripted variables [e.g., X(4), Y(4, 5, 7)] is permitted in the CSMP language with certain restrictions. These restrictions and guidelines for using subscripted variables are outlined in Chap. 3. Double precision is only available in CSMP III. This is covered in detail in Chap. 5.

#### **Operators**

Operators used for the basic arithmetic operations are exactly the same as FORTRAN. These operators are tabulated below.

| Symbol | Function       | Symbol | Function                                     |
|--------|----------------|--------|--|
| +      | addition       | **     | exponentiation                               |
| _      | subtraction    | =      | replacement                                  |
| *      | multiplication | ( )    | grouping of<br>variables and/or<br>constants |
| 1      | division       |        |  |

The order in which calculations are performed is also exactly the same as FORTRAN.

| Operation                                     | Hierarchy     |
|---|---------------|
| Evaluation of functions                       | 1st (highest) |
| Exponentiation (**)                           | 2nd           |
| Multiplication and<br>division (* and /)      | 3rd           |
| Addition and subtraction $(+ \text{ and } -)$ | 4th (lowest)  |

Operators of the same hierarchy, with the exception of exponentiation, are performed from left to right and exponentiation operations are performed right to left. Expressions within parentheses are always performed first. The order of some arithmetic calculations is shown in the following examples:

$$A/B*C = \frac{A}{B}C \qquad A/(B*C) = \frac{A}{B*C}$$
$$A**B**C = A^{(B^{C})} \qquad (A**B)**C = (A^{B})^{C} = A^{B*C}$$

Many programming errors can be attributed to mistakes in interpreting the correct hierarchy of operations. For this reason, it is recommended that sufficient sets of parentheses be used to insure that the arithmetic operations are performed in the desired order.

### Format

As with FORTRAN, only columns 1 through 72 are read as part of the program. Consequently, columns 73 through 80 are not processed and can be used for any type of identification. Unlike FORTRAN, structure statements can begin in any column. Some typical CSMP statements printed on computer cards are shown in Fig. 2.1.

Three consecutive periods (...) at the end of the information contained on a computer card indicates that the statement is continued to the next card.

$$Y = 3.569*SIN(3.14159*TIME/180.0) + 54.632*EXP(21.3*TIME) \dots$$
  
-2.32\*X\*Z/(3.14159\*P)  
Three consecutive periods  
allows continuation to the  
next card.

A statement may be continued on as many as eight cards for a total of nine cards to express a single statement. Special care should be taken *not* to separate a constant or a symbol on consecutive cards. This type of error is very difficult to find since no diagnostic messages are printed.

An asterisk in the first column denotes a comment card. Comment cards have no effect on the execution of the program. They can be placed anywhere in the program and will be printed with the program listing. Blank cards may be inserted

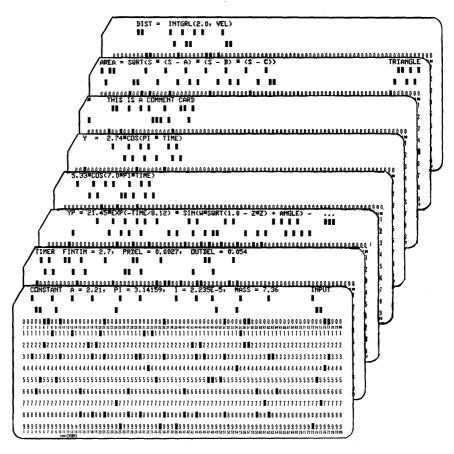


Fig. 2.1 Computer cards printed with examples of CSMP statements.

in the computer card deck to add additional lines of spacing in the listing of the program.

#### Structure of CSMP

The solution of most problems does not require a detailed understanding of the structure of CSMP. However, in complicated simulations where it is required to control the order of the execution of the program, an understanding of the structure of the CSMP program is necessary.

Basically the CSMP program can be divided into three segments:

INITIAL DYNAMIC TERMINAL Each of the three segments can be further divided by repeated use of sort and nosort sections. The program simulation statements are contained in the body of these sections. A diagram showing the basic structure of a CSMP program is shown in Fig. 2.2.

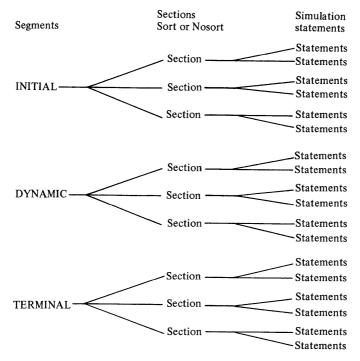


Fig. 2.2 Structure of the CSMP program.

The following paragraphs give a description of the INITIAL, DYNAMIC, and TERMINAL segments and explain their application. It should be noted that the three segments must appear in the order presented and each segment can be used only once.

### **Initial Segment**

The Initial segment is the first to appear in the program. It is used exclusively for calculations that need to be performed only once. The use of the Initial segment can reduce computer time since all statements listed in this segment will be executed only once. All calculations for initial conditions must be included in this segment. It is not always necessary or even desirable to use the Initial segment, consequently, this segment is optional. To specify the use of the Initial segment, a card must be inserted with the label INITIAL at the beginning of the segment.

#### **Dynamic Segment**

The CSMP program uses an iterative procedure for problem solution. Since iterations only occur in the Dynamic segment, all simulation statements that are used to describe the dynamic response must be included in this segment. In effect, the Dynamic segment can be thought of as a subprogram that is executed at each iteration step. The Dynamic segment can be specified by two methods as listed below.

- 1. If the Initial segment is not specified, the Dynamic segment is automatically incorporated into the program. No labeling is necessary.
- 2. If the Initial segment is specified, a card with the label DYNAMIC must precede the statements in the Dynamic segment.

### **Terminal Segment**

The Terminal segment is the last of the three segments and is used for those calculations that should be performed at the completion of the simulation. This segment is optional and is only executed when a statement with the label TER-MINAL is placed after the Dynamic segment.

### Sort and Nosort Sections

One of the most important and valuable features of the CSMP program is the sorting capability. The sorting feature chooses the correct order for the execution of the structure statements. This means that in a section where the statements are sorted (called a *sort section*), the order in which the statements are placed in the program deck has absolutely no effect on the order of statement execution. The sort section cannot be used for all types of operations. For example, the following FORTRAN conditional logic and branching statements, which control the order of execution, obviously conflict with the CSMP sorting procedure.

6

Consequently, these types of FORTRAN statements cannot be used in a sort section. An expression such as

$$\mathbf{X} = \mathbf{X} + 1.0$$

in which the same variable appears on both sides of the equal sign is another type of operation that cannot be used in a sort section. Also excluded from sort sections are FORTRAN WRITE and FORMAT instructions such as the following:

```
WRITE(6, 100) X, Y, Z
100 FORMAT(3F30.5)
```

In nosort sections, no sorting is performed and therefore all statements are exe-

cuted in the exact order in which they appear in the program. FORTRAN conditional logic and branching and all other similar statements that specify a particular order of control must be included in a nosort section.

All statements in the Initial and Dynamic segments not labeled by a NOSORT card are automatically placed in sort sections while statements in the Terminal segment are automatically placed in a nosort section. To specify a change in section in any of the three segments, the use of a separate card with either a SORT or NOSORT label is required. An example of a particular CSMP program having a complex structure is illustrated in Fig. 2.3.

In this example the first group of statements in the Initial segment are automatically sorted up to the point where the NOSORT statement is included. After the NOSORT card, all remaining statements in the Initial segment are contained in a nosort section. The first NOSORT label in the Dynamic segment places the first group of statements in a nosort section. The next group of statements after the SORT label are sorted. A NOSORT label then changes the last group of statements in the Dynamic segment back to a nosort section. In the Terminal segment,

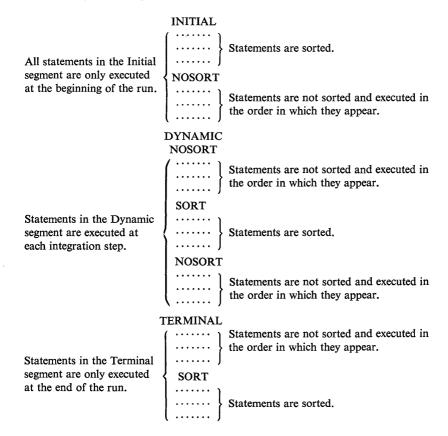


Fig. 2.3 Example of a CSMP program having a complex structure.

the first group of statements are automatically placed in a nosort section. The following SORT label changes the last group of statements to a sort section.

Note that when a section contains both sort and nosort segments, the segments will be executed in the order they appear.

#### Solving Problems with CSMP

The following eleven example problems illustrate the use of CSMP to simulate a wide range of engineering and mathematical problems. By studying the examples and working the problems at the end of the chapter, the reader will have a good working knowledge of CSMP.

#### Example 2.1 Spring-Mass-Damper System

Some of the very basic concepts of CSMP can be illustrated by simulating the motion of the linear spring-mass-damper system that is shown in Fig. 2.4.

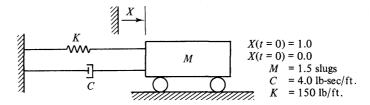


Fig. 2.4 Spring-mass-damper system.

Applying Newton's second law leads directly to the following second-order equation of motion.

$$M\frac{d^2X}{dt^2} + C\frac{dX}{dt} + KX = 0$$
(2.1)

When dealing with differential equations higher than first-order, it is helpful to reduce all equations to a set of first-order expressions. For some problems, this can require a major effort. However, for Eq. 2.1, it is only necessary to introduce new symbols and rearrange variables.

Let

$$\text{VEL} = \frac{dX}{dt} \qquad (\text{velocity})$$

and

$$ACC = \frac{d(\text{VEL})}{dt}$$
 (acceleration)

The resulting two first-order equations for velocity and acceleration along with the initial conditions are:


$$\frac{dX}{dt} = \text{VEL} \tag{2.2}$$

$$\frac{d(\text{VEL})}{dt} = -(C*\text{VEL} + K*X)/M$$
(2.3)

Initial conditions: X(t = 0) = 1.0, VEL(t = 0) = 0.0

With this brief explanation, a CSMP program containing only the basic features needed to numerically solve Eqs. (2.2) and (2.3) is shown in Fig. 2.5. In this example program it is not necessary to specify the Initial, Dynamic, or Terminal segments. All statements are automatically placed in the Dynamic segment and sorted. Thus the order in which the structure statements are arranged in the deck has no effect on the execution of the program. The first two statements of the program are comment cards and are identified by an asterisk in the first column. As previously mentioned, comment cards do not affect the execution of the program. The third card is a CONSTANT statement used to assign values to variables.

```
K = SPRING CONSTANT, X = DISPLACEMENT
                C = DAMPING CONSTANT,
                                                                                       1
   M = MASS,
   VEL = VELOCITY, ACC = ACCELERATION, XO = INITIAL DISPLACEMENT
                                                                                       2
      CONSTANT M = 1.5, C = 4.0, K = 150.0, XO = 1.0
                                                                                       3
                                                                                       4
      ACC = (-K * X - C * VEL)/M
                                                                                       5
      X = INTGRL(XC,VEL)
                                                                                       6
7
      VEL = INTGRL(0.0,ACC)
PRINT X, VEL, ACC
TITLE SIMULATION OF A SPRING-MASS-DAMPER SYSTEM
                                                                                       8
                                                                                       9
      TIMER FINTIM = 2.0, PRDEL = 0.05
                                                                                      10
END
                                                                                      11
STOP
END JOB
                                                                                      12
```

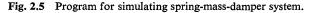

CONSTANT. The word CONSTANT must be the first label on the card and must be followed by at least one blank space. Otherwise, after this first blank space, blanks are not considered. Successive variables can be set equal to constants (both real and integer) by putting the variable name on the left side of the equal sign. A comma following a numeric value permits another assignment. Notice that a comma should not be placed after the last number. A CONSTANT statement must be continued to following cards by the use of three consecutive periods(...). The format of the CONSTANT card used in this example is

CONSTANT M = 1.5, C = 4.0, K = 150.0, XO = 1.0

The fourth card is an ordinary FORTRAN statement used to calculate the acceleration (ACC). Statements 5 and 6 use a special mathematical function (INTGRL) that is unique to CSMP. The INTGRL statement represents the mathematical function of integration as defined by Table 2.1.

#### Table 2.1

#### Formulation for Integration

| Mathematical Function   |
|---|
| $Y = \int_0^t X  dt + IC$                                       |
| Equivalent Laplace transform                                    |
| $X(s) \longrightarrow \boxed{\frac{1}{s}} \longrightarrow Y(s)$ |
|   |

In the definition presented in Table 2.1, the integration is with respect to the independent variable *t*. The symbol TIME is a reserved word in the CSMP program and is used to represent the independent variable. The integrand can be an algebraic expression, but the initial condition (IC) of the INTGRL function must be a constant or symbol. If the INTGRL function is included as part of a statement, it must be the rightmost part of the expression.

| Allowed   | Not Allowed   |
|---|---|
| Y = INTGRL(7.0, X-Z)<br>Y = 10.0 + INTGRL(Q,X)<br>Y = 3.0*INTGRL(Q,X) | Y = INTGRL(3.0 + 4.0, X-Z) Y = INTGRL(Q,X) + 10.0 Y = INTGRL(Q,X)*3.0 |

INTGRL is only one of several mathematical functions available to the CSMP user. A listing and a definition for all functions are contained in Appendix I.

The fifth and sixth statements of Fig. 2.5 represent the integration of Eqs (2.2) and (2.3). In statement 5, the velocity VEL is integrated to obtain the displacement X with the initial condition of X0. In the same manner, the sixth statement will perform the integration of the acceleration ACC to obtain the velocity VEL with the initial velocity equal to zero. The seventh card is a PRINT statement which has the following general definition.

PRINT. The PRINT card is used to specify the variables that will be printed at each specific interval during the simulation. All variables following the PRINT label plus the independent variable TIME will be printed and correctly labeled. A comma must be inserted between successive variable names and at least one blank space must follow the PRINT label. The PRINT label should appear only once in the program. If more than one PRINT statement is included, only the last will be executed. If necessary, three periods (...) can be used to continue to following cards. An example of the PRINT statement is:

#### PRINT X, VEL, ACC

A column format is automatically used for output when there are less than nine dependent variables printed. An example of this is shown in Fig. 2.6 which is the output of the program of Fig. 2.5. Up to forty-nine dependent variables can be printed. When more than eight are specified, an equation-form output format is used as shown in Fig. 2.7. Notice that the output for both Figs. 2.6 and 2.7 is E-format with five significant digits. The user has no other choice of output format when using the CSMP PRINT statement. The eighth card in the program is a TITLE statement.

TITLE. The TITLE card allows the user to specify a heading that will appear at the top of each page of printed output. At least one blank space must follow the label TITLE and the first character must be a number or an alphabetic letter. Continuation to successive cards is not permitted, but up to five TITLE cards can

RK S

| STROCATIO   | I DI A SENIN | 0-PA33-CAMPE | N STSTER    |  |
|-------------|--------------|--------------|-------------|--|
| TIME        | х            | VEL          | ACC         |  |
| 0.0         | 1.0000E 00   | 0.0          | -1.0000E C2 |  |
| 5.0000E-02  | 8.8283E-01   | -4.4884E 00  | -7.6313E 01 |  |
| 1.0000E-01  | 5.7793E-01   | -7.3878E CO  | -3.8093E 01 |  |
| 1.5000E-01  | 1.7863E-01   | -8.2319E 00  | 4.0884E CO  |  |
| 2.0000E-01  | -2.1177E-01  | -7.C839E 00  | 4.0068E 01  |  |
| 2.5000E-01  | -5.0491E-01  | -4.4556E 00  | 6.2373E C1  |  |
| 3.0000E-01  | -6.4574E-01  | -1.1340E 00  | 6.7598E 01  |  |
| 3.50002-01  | -6.2098E-01  | 2.0328E 00   | 5.6677F 01  |  |
| 4.000UE-01  | -4.5698E-01  | 4.3385E 00   | 3.4129E 01  |  |
| 4.5000E-01  | -2.C871E-01  | 5.362CE 00   | 6.5725E 00  |  |
| 5.0000E-01  | 5.6407E-02   | 5.0288E 00   | -1.9051E C1 |  |
| 5.5000E-01  | 2.75518-01   | 3.58455 00   | -3.7109E 01 |  |
| 6.0000E-01  | 4.0411E-01   | 1.4990E 00   | -4.4409E 01 |  |
| 6.5000E-01  | 4.2404E-01   | -6.6988E-01  | -4.0618E 01 |  |
| 7.0000E-01  | 3.4430E-01   | -2.41455 00  | -2.7991E 01 |  |
| 7.5000E-01  | 1.9559E-01   | -3.3879E 00  | -1.0524E 01 |  |
| 8.000000-01 | 2.0609E-02   | -3.4633E 00  | 7.1746E 00  |  |
| 8.5000E-01  | -1.3725F-01  | -2.73555 00  | 2.1020E 01  |  |
| 9.0000E-01  | -2.4395E-01  | -1.4716E 00  | 2.83195 01  |  |
| 9.5000E-01  | -2.8142E-01  | -2.81C0E-02  | 2.8217E 01  |  |
| 1.00000 00  | -2.4971E-01  | 1.2417E 00   | 2.1660E 01  |  |
| 1.0500E 00  | -1.6472E-01  | 2.0683E 00   | 1.0957E 01  |  |
| 1.1000E 00  | -5.2589E-02  | 2.3178E 00   | -9.2178E-01 |  |
| 1.1500E 00  | 5.7602E-02   | 2.0048E 00   | -1.1106E C1 |  |
| 1.2000E 00  | 1.4084E-01   | 1.2714E 00   | -1.7474E 01 |  |
| 1.25008 00  | 1.8140E-01   | 3.3817E-01   | -1.9042E 01 |  |
| 1.30002 00  | 1.7533E-01   | -5.5613E-01  | -1.6050E 01 |  |
| 1.3500E 00  | 1.2983E-01   | -1.2113E 00  | -9.7523E 00 |  |
| 1.4000E 00  | 6.0245E-02   | -1.5071E 00  | -2.0055E CC |  |
| 1.4500E 00  | -1.4458E-02  | -1.42C6E 00  | 5.2340E 00  |  |
| 1.5000E 00  | -7.6524E-02  | -1.0192E 00  | 1.0370E 01  |  |
|             | -1.1330E-01  | -4.3434E-01  | 1.2489E 01  |  |
|             |              |              |             |  |
| 1.6000E 00  | -1.1952E-01  | 1.7708E-01   | 1.1480E 01  |  |
| 1.6500E 00  | -9.7571E-02  | 6.7160E-01   | 7.9662E 00  |  |
| 1.7000E 00  | -5.5995E-02  | 9.5046E-01   | 3.0650E 00  |  |
| 1.7500E 00  | -6.7754E-03  | 5.7667E-01   | -1.9269E CO |  |
| 1.8000E 00  | 3.7855E-02   | 7.7575E-01   | -5.8542E 00 |  |
| 1.8500E 00  | 6.8238E-02   | 4.22105-01   | -7.9494E 00 |  |
| 1.9000E 00  | 7.9188E-02   | 1.58515-02   | -7.9611E 00 |  |
| 1.9500E 00  | 7.0622E-02   | -3.4333E-01  | -6.1466E 00 |  |
| 2.0000E 00  | 4.6938E-02   | -5.7898E-01  | -3.1499E 00 |  |
|             |              |              |             |  |

SIMULATION OF A SPRING-MASS-CAMPER SYSTEM

### Fig. 2.6 Column-type output for spring-mass-damper system.

| C SMP |   |            |         |   |                          |         |   |                    |    | SIMP     | INTEGRATION                   |         |                               |
|-------|---|------------|---------|---|--------------------------|---------|---|--------------------|----|----------|-------------------------------|---------|-------------------------------|
| TIME  | = | 0.0        | X<br>R  | = | 1.0000E 03<br>1.0000E 00 | Ŷ       |   | 1.0000E<br>0.0     | 06 | Z<br>T   | = 4.5776E-05<br>= 0.0         | QW      | = 0.0<br>= 0.0                |
|       |   |            | ε1      | = | 1.0000E 03               | τ1      | = | 5.0000E            | 02 | ΰD       | = 1.0000E 09                  | AB      | = 0.0                         |
| TIME  | = | 1.2500E 01 | x       |   | 2.2535E 03               | ¥       |   | 5.0782E            |    | Z        | = -1.2535E 02                 | Q       | = 2.8169E 04                  |
|       |   |            | R<br>El | = | 4.4376E-01<br>1.6692E 02 | V<br>T1 | = | 1.1868E<br>5.1250E |    | Ť<br>0 D | = 5.2665E 00<br>= 1.1444E 10  | W<br>AB | = 7.9347E 08<br>= -3.3524E 06 |
|       |   |            |         |   |                          |         |   |                    |    |          |                               |         |                               |
| TIME  | = | 2.5000E 01 | X<br>R  | = | 5.0781E 03<br>1.9692E-01 | Ŷ       |   | 2.5787E<br>2.4423E |    | 2        | = -4.0781E 02<br>= 4.8094E 00 | Q<br>W  | = 1.2695E 05<br>= 1.6117E 10  |
|       |   |            | εı      |   | 1.9531E 02               | Ť1      |   | 5.2500E            |    | DO       | = 1.3095E 11                  | AB      | = -5.0577E 07                 |
| TIME  | ÷ | 3.7500E 01 | x       | = | 1.1443E 04               | Y       |   | 1.3094E            |    | Z        | = -1.0443E 03                 | Q       | = 4.2911E 05                  |
|       |   |            | к<br>Е1 |   | 8.7390E-02<br>2.9722E 02 | V<br>TI |   | 3.7111E<br>5.3750E |    | T<br>DD  | = 3.2431E 00<br>= 1.4984E 12  | ₩<br>AB | = 1.8414E 11<br>= -4.4347E 08 |
|       |   |            |         |   |                          | ••      |   | J.J.J.J.J.         |    | 00       |                               | -0      |                               |
| TIME  | = | 5.0000E 01 | X<br>R  | * | 2.5786E 04<br>3.8780E-02 | v       |   | 6.6494E<br>4.9768E |    | 2        | = -2.4786E 03<br>= 1.9300E 00 | QW      | = 1.2893E 06<br>= 1.6623E 12  |
|       |   |            | Ēl      | = | 5.0561E 02               | Ťı      |   | 5.5000E            |    | υD       | = 1.7146E 13                  | ÅВ      | = -3.1809E 09                 |

Fig. 2.7 Example of equation-type output.

.....

INTEGRATION

be used. Each TITLE card provides one line of heading on each page of output. An example of a TITLE statement is

### TITLE SIMULATION OF A SPRING-MASS-DAMPER SYSTEM

The ninth card is called a TIMER statement.

TIMER. The TIMER card is used to specify the variables that control the run-time, print increment, integration interval (step-size), and minimum allowable integration interval. In Fig. 2.5, only two TIMER variables are used, FINTIM, and PRDEL. An example of the TIMER statement is

TIMER FINTIM = 2.5, PRDEL = 0.05 At least one blank A comma must space must follow separate listings the label TIMER

FINTIM. FINTIM is a symbol that appears on the TIMER card and determines the value of TIME (independent variable) at which the run is terminated. FINTIM is set equal to the desired simulation time and must be included on the TIMER card.

PRDEL. This TIMER variable controls the increment for the output of the PRINT statement. If the value for PRDEL is not specified, it is automatically set equal to FINTIM/100. If a value of OUTDEL is also included on a TIMER card, the output increment of the PRINT statement can change. At this point, there is no need to explain the relationship between PRDEL and OUTDEL, since it will be covered later in this chapter.

The three other variables that can appear on the TIMER card are defined below. A detailed explanation is included in Example 2.2 and in Chap. 3.

OUTDEL. Print increment for the print-plot output

DELT. Integration interval

DELMIN. Minimum integration interval

The format for specifying the above variables on a TIMER card is similar to a CONSTANT card. At least one blank must follow the label TIMER, and successive listings of variables must be separated by commas. The order in which the variables are listed on the TIMER card is not important.

The last three statements (END, STOP, and ENDJOB) must be included to signify the end of the program. These cards must appear in the order shown in Fig. 2.5 and the ENDJOB statement must begin in the first column. For more complicated simulations, the END, STOP, and ENDJOB cards can be used to control the execution of the program. A detailed explanation will follow when advanced topics are considered in Chap. 3. For most simulations the user needs only to use these cards to signify the end of the program.

#### Example 2.2 Simulation of a Block Diagram

The previous example illustrated one of the principal attributes of CSMP, the solution of a differential equation. Another important application is determining the response of a system that is modeled as a block diagram. Block diagram representation of a system is often used in control system analysis and design. However, the concept of a block diagram is not restricted to control systems alone. In fact, this application extends to such areas as physiology, transportation, energy conservation, and economics.

The basic premise of the block diagram, or signal-flow graph, stems from the application of Laplace transforms or operator notation. For example, a system might be represented by the second-order, linear, time-invariant differential equation

$$\frac{d^2x(t)}{dt^2} + A\frac{dx(t)}{dt} + Bx(t) = ku(t)$$
(2.4)

If dx(0)/dt = x(0) = 0, application of Laplace transforms yields

$$\frac{X(s)}{U(s)} = \frac{K}{s^2 + As + B} \tag{2.5}$$

In the sense of the block diagram, the above relationship can be represented by the configuration shown in Fig. 2.8.

$$\underbrace{U(s)}_{s^2 + As + B} \xrightarrow{X(s)} Fig. 2.8 Block diagram representation of a second-order differential equation.$$

Laplace transforms and block diagrams offer the convenience of analyzing a system without the necessity of working directly with the system equations. In effect, the Laplace transform changes a linear differential equation to an algebraic expression.

Suppose we consider the simplified schematic diagram of a position control system shown in Fig. 2.9. Neglecting viscous friction and the electrical time-constant of the motor, this position control system can also be represented by the block diagram of Fig. 2.10. Generally, the block diagram is much easier to work with than the schematic.

As an example, suppose the parameters in Fig. 2.10 have the values of  $K_m = 4$ ,

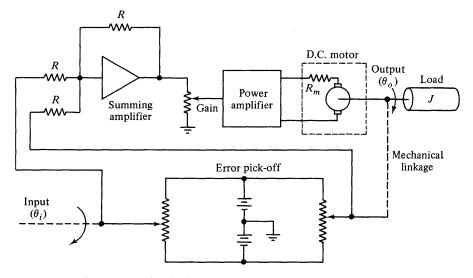


Fig. 2.9 Simplified schematic diagram of a position control system.


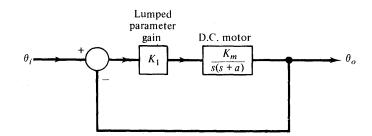


Fig. 2.10 Block diagram of the position control system.

 $K_1 = 1.5625$ , and a = 2. We desire to simulate the response of the system to a unit-step input.

To solve this problem, we first restructure the system diagram so that it is compatible to CSMP modeling. A suitable diagram for this purpose is presented in Fig. 2.11.

Two basic dynamic blocks are present in this representation and can be broken out as separate entities as follows:

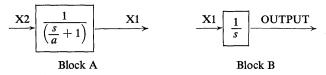


There is no real significance attached to the order of the blocks, block A could have appeared as the block nearest the output and preceded by block B. The arrangement of the blocks, for linear systems, is a matter of user preference. The symbols X1, X2, X3, ERROR, etc., are intermediate variables. They could have been designated by other symbols up to six characters in length. It is normally desirable to use variable names which describe physical variables in the problem. A significant point that should be made is that each block must have an input and an output variable. For example, X2 is the input and X1 is the output for block A; whereas, X1 is the input and OUTPUT is the output of block B.

Blocks A and B have special meaning in CSMP. In a sense they are represented as subprograms and can be executed by simple statements. The mathematical functional relationship for block A is shown in Table 2.2. The 1/s term (integration) was previously discussed in Example 2.1.

#### Table 2.2

#### Formulation for First Order Lag

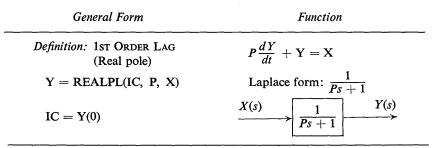

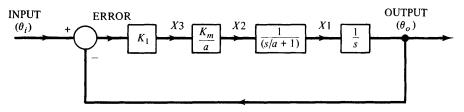


Fig. 2.11 A CSMP representation of the system in Fig. 2.10.

These formulations help explain why the original system was subdivided as given in Fig. 2.11. Note that the general form for REALPL is 1/(Ps + 1). This means that when we encounter terms of the form 1/(s + a) we must divide the numerator and denominator by a. This changes the form to (1/a)/(s/a + 1) and the (1/a) term in the numerator can either be associated with another constant or represented by a single block as follows.

$$\rightarrow \boxed{\frac{1}{(s+a)}} \longrightarrow \implies \rightarrow \boxed{\frac{1}{a}} \rightarrow \boxed{\frac{1}{(\frac{s}{a}+1)}} \longrightarrow$$

A program listing for the CSMP simulation of this problem is presented in Fig. 2.12.<sup>†</sup> For convenience, the CSMP block representation corresponding to this program is

```
CSMP PROGRAM FOR EXAMPLE 2 - BLOCK DIAGRAM OF SECOND ORDER SYSTEM
    NOTE THAT THE ASTERISK IN COLUMN ONE SIGNIFIES A COMMENT STATEMENT
TITLE PRINTED LISTING OF "OUTPUT" (SIMULATION) AND "OUTEXT" (ANALYTICAL)
  THE TITLE IS ALWAYS GIVEN AT THE TOP OF THE "PRINTED LISTING" PAGE(S)
   INPUT
           = STEP(0.0)
   ERROR
           = INPUT - OUTPUT
   OUTPUT
          = INTGRL(0.0,X1)
   X1
           = REALPL(0.0,1.0/2.0,X2)
   X2
           = 2.0*X3
   Х3
           = 1.5625*ERROR
* THE FOLLOWING STATEMENTS ARE NOT PART OF THE CSMP SIMULATION. THEY
*ARE USED TO CALCULATE THE EXACT SOLUTION OF "DUTPUT" FOR COMPARISON
   OUTEXT
          = 1.0 - ((EXP(-WN*ZETA*TIME))/SQRT(1.0 - ZETA*ZETA))*...
   SIN(WN*SQRT(1.0 -ZETA*ZETA)*TIME + THETA)
   WN
           = 2.5
   ZETA
           = 0.4
   THETA
           = ATAN(SQRT(1.0 - ZETA*ZETA)/ZETA)
 END OF SPECIAL CALCULATION SECTION FOR "OUTPUT" COMPARISON
TIMER FINTIM = 5.2, OUTDEL = 0.16, PRDEL = 0.04
PRTPLT OUTPUT(ERROR), ERROR(,0.5)
PRINT OUTPUT, OUTEXT
LABEL STEP RESPONSE FOR SECOND ORDER SYSTEM
END
STOP
ENDJOB
                    Fig. 2.12 CSMP listing for Example 2.2.
```

<sup>†</sup>The symbol OUTPUT cannot be used in a CSMP III program since it is a reserve word that has a special meaning. To run this program on CSMP III, the symbol, OUTPUT, must be replaced by another symbol.

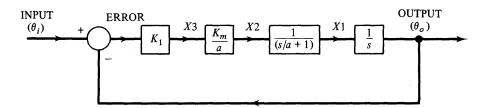


Fig. 2.13 Programming block diagram for Example 2.2.

repeated in Fig. 2.13. One can easily relate the input-output variables of the blocks in Fig. 2.13 to the statements given in the program listing. Since the arrangement of the cards is not unique, one may start with any block and proceed to describe the system.

Several new terms have been introduced in this problem that were not used in Example 2.1. These terms include PRTPLT, OUTDEL, STEP and LABEL. A general definition of these terms will be given before examining the computer output for Example 2.2.

PRTPLT. An example of a PRTPLT output is given in Fig. 2.14. PRTPLT statements are used to specify those variables that the user desires to be printerplotted. Continuation cards are not allowed, but up to ten separate PRTPLT statements containing 100 variables can be used. A card giving a typical PRTPLT request might appear as

### PRTPLT X1, OUTPUT, ERROR

In this case, separate printer plots will be made for X1, OUTPUT, and ERROR. Another useful feature of the PRTPLT request is the capability of printing up to a maximum of three additional problem variables on the same page as the printerplotted variable. These additional variables appear on the far right side of the page in column format. The statement

#### PRTPLT X1(ERROR, OUTPUT), X2, OUTPUT

means that separate printer plots will be made for X1, X2, and OUTPUT. In addition, the values of ERROR and OUTPUT will be printed on the right side of the pages that give the printer-plot of X1.

The range and scale of a printer-plotted variable can be controlled as follows:

| PRTPLT | SIGX(0.2, 3.0)    | statement (1) |
|--------|-------------------|---------------|
| PRTPLT | SIGX(, 4.0)       | statement (2) |
| PRTPLT | SIGX(-1.2, )      | statement (3) |
| PRTPLT | SIGX(0.4, , XOUT) | statement (4) |

The information given by each statement is:

Statement (1)—The printer-plot of SIGX will not show values less than 0.2 or greater than 3.0. Consequently, the scale of the printer-plot will be adjusted for a maximum of 3.0 and a minimum of 0.2.

Statement (2)—The printer-plot of SIGX does not have a specified lower bound but the upper bound is 4.0.

|            |            | NIMUM        | OUTPUT | VERSUS TIME | MAXIMU           |             |
|------------|------------|--------------|--------|-------------|------------------|-------------|
|            | 0.0        |              |        |             | 1.2537E          |             |
| TIME       | OUTPUT     | I            |        |             | I                | ERROR       |
| 0.0        | 0.0        | +            |        |             |                  | 1.0000E 00  |
| 1.60005-01 | 7.11725-02 | +            |        |             |                  | 9.2883F-01  |
| 3.2000E-01 | 2.48355-01 | +            |        |             |                  | 7.5165E-01  |
| 4.8C00E-01 | 4.78562-01 |              | +      |             |                  | 5.21445-01  |
| 6.4CCOE-01 | 7.1618E-01 |              |        | +           |                  | 2.8382F-01  |
| 8.0CC0E-01 | 9.2708E-01 |              |        | +           |                  | 7.2920E-02  |
| 9.60005-01 | 1.0901E 00 |              |        |             |                  | -9.0071E-02 |
| 1.12005 00 | 1.1963E 00 |              |        |             |                  | -1.9626E-01 |
| 1.2800E 00 | 1.24685 00 |              |        |             | +                | -2.4684E-01 |
| 1.4400E 00 | 1.2502E 00 |              |        |             |                  | -2.5023E-01 |
| 1.60005 00 | 1.21895 00 |              |        |             | •                | -2.1887E-01 |
| 1.76005 00 | 1.16655 00 | ************ |        |             |                  | -1.6653E-01 |
| 1.9200E 00 | 1.1060E 00 |              |        |             |                  | -1.06025-01 |
| 2.08005 00 | 1.04785 00 |              |        |             |                  | -4.7760E-02 |
| 2.2400F 00 | 9.9900E-01 |              |        |             |                  | 1.0018E-03  |
| 2.4000E 00 | 9.6373E-01 |              |        |             | · <del>-</del> + | 3.6273E-02  |
| 2.56COE 00 | 9.43025-01 |              |        |             | •                | 5.6984E-02  |
| 2.7200E 00 | 9.3568E-01 |              |        |             |                  | 6.4324E-02  |
| 2.88COE 00 | 9.39045-01 |              |        |             | •+               | 6.09635-02  |
| 3.040CE 00 | 9.4971E-01 |              |        |             | •+               | 5.0286E-02  |
| 3.20005 00 | 9.64265-01 |              |        |             | •                | 3.57395-02  |
| 3.3600E 00 | 9.79658-01 |              |        |             |                  | 2.0346E-02  |
| 3.5200E 00 | 9.93585-01 |              |        |             | +                | 6.4203F-03  |
| 3.6800E 00 | 1.00465 00 |              |        |             |                  | -4.5576E-03 |
| 3.8400E 00 | 1.01195 00 |              |        |             |                  | -1.1911E-02 |
| 4.00005 00 | 1.01568 00 |              |        |             | +                | -1.5641E-02 |
| 4.1600E 00 | 1.0162E 00 |              |        |             | +                | -1.6236E-02 |
| 4.32005 00 | 1.01455 00 | ~~~~~~~~~~   |        |             | +                | -1.4472E-02 |
| 4.48005 00 | 1.0112E 00 |              |        |             | +                | -1.1236E-02 |
| 4.6400E 00 | 1.00745 00 |              |        |             | +                | -7.3662E-03 |
| 4.8000E 00 | 1.00365 00 |              |        |             | +                | -3.5610E-03 |
| 4.95COE 00 | 1.0003E 00 |              |        |             | +                | -3.1376E-04 |
| 5.12COE 00 | 9.97925-01 |              |        |             | +                | 2.0832E-03  |
| 5.2000F 00 | 9.9707E-01 |              |        |             | +                | 2.9293E-03  |
|            |            |              |        |             |                  |             |

Fig. 2.14 Printer-plot for step response of Example 2.2.

Statement (3)—SIGX will not have printer-plotted values less than -1.2. The upper bound is unspecified.

Statement (4)—The printer-plot of SIGX has a lower bound of 0.4 and the upper bound unspecified. Also, XOUT will be listed on the right side of the SIGX printer-plot. Finally, printer-plots can only be made using the independent variable (usually TIME) along the abscissa and the requested dependent variable as the ordinate. In other words, it is not possible to plot two dependent variables simultaneously as in a phase-plane plot.

OUTDEL. OUTDEL controls the output increment of the independent variable for printer-plots. If printer-plot points are desired every 0.04 time-units, we use OUTDEL = 0.04. The OUTDEL specification is included on the TIMER card. A typical example of an OUTDEL assignment is

TIMER FINTIM = 10.0, OUTDEL = 0.02

If printer-plots are requested but OUTDEL is not specified, the program will use an OUTDEL = PRDEL. If PRDEL is not given in the program, OUTDEL is set to FINTIM/100. When OUTDEL and PRDEL are both specified, the smaller of the two will be adjusted to be a submultiple of the larger. A useful guide in selecting the OUTDEL interval is that each page of OUTPUT will contain fifty lines. Thus, if the user desires the printer-plot to be contained on one page only, the OUTDEL value should be OUTDEL = FINTIM/50. In general, the OUT-DEL selection, based on the number of pages for the plot, is given by OUTDEL = FINTIM/(50 × number of output pages).

STEP. STEP is one of several signal sources available in CSMP. This particular signal provides a unit-step forcing-function and is described in Table 2.3.

#### Table 2.3

#### Formulation for a Unit Step Signal

| Gen                         | eral Form                                  | Function  |
|-----------------------------|--|---|
| Definition:                 | Unit-step input<br>or forcing<br>function. | $Y = 0  t < T$ $Y = 1  t \ge T$                   |
| $\mathbf{Y} = \mathbf{STE}$ | EP(T)                                      | $Y \boxed{\begin{array}{c} 1.0 \\ T \end{array}}$ |

A unit-step input applied at t = 0 is expressed by

#### XIN = STEP(0.0)

If the input forcing-function is a step of weight 3 applied at t = 2.4, the expression is written as

$$XIN = 3.0*STEP(2.4)$$

LABEL. LABEL cards are used for placing an open-format title or heading at the top of each page of printer-plotted output. The first non-blank character following LABEL must be alphabetic or numeric. After the first non-blank character, special symbols (=, /, \*, etc.) may be used within the heading. As with PRTPLT cards, continuation cards are not permitted, but up to ten LABEL cards may be used for each simulation. Consider the following illustration.

> PRTPLT ROVER, SIGMA LABEL RESPONSE OF SYSTEM MODEL – PROBLEM 1 PRTPLT X1 LABEL STATE X1 WITH INITIAL CONDITION X2 = 2.0

Since the first LABEL statement is associated with the first PRTPLT statement, the second with the second, and so on, the heading, RESPONSE OF SYSTEM MODEL-PROBLEM 1, will appear at the top of each page of printer-plotted output for the variables ROVER and SIGMA. The printer-plot of X1 will have a heading of STATE X1 WITH INITIAL CONDITION X2 = 2.0. If the number of PRTPLT cards exceeds the number of LABEL cards, the excess print-plots will not have headings.

Refer to Fig. 2.12 and consider the following portion of the listing:

TIMER FINTIM = 8.0, OUTDEL = 0.16, PRDEL = 0.04PRTPLT OUTPUT (ERROR), ERROR (, 0.5) LABEL STEP RESPONSE FOR SECOND ORDER SYSTEM PRINT OUTPUT, OUTEXT

The TIMER card gives the information that the simulation will run for 8.0 sec, printer-plotted output will occur every 0.16 sec, and printed output every 0.04 sec. We note that with a FINTIM of 8.0 and OUTDEL of 0.16, there will be one page for each printer-plotted variable (number of pages = FINTIM/(OUTDEL \*50)).

The PRTPLT card specifies printer plots for OUTPUT and ERROR. The plot for OUTPUT will have ERROR given in tabular form at the right side of the page. The plot of ERROR will have an upper bound of 0.5. The heading, STEP RESPONSE FOR SECOND ORDER SYSTEM will appear at the top of each page of printer-plotted output. The printer-plot for OUTPUT is given in Fig. 2.14 while Fig. 2.15 shows the plot for ERROR.

The PRINT card designates that OUTPUT and OUTEXT will be printed out. As indicated in the program listing of Fig. 2.12, the exact analytical solution (OUTEXT) is calculated. Notice also in Fig. 2.16 the very close agreement between the CSMP numerical solution (OUTPUT) and the exact analytical solution. This is an indication of the accuracy that can be expected.

### Example 2.3 Solution of the Van der Pol Equation

This example illustrates the ease of solving a nonlinear differential equation for various parameter values. The particular example is the well-known Van der Pol equation, which is shown below with the selected initial conditions.

2.9293E-03

STEP RESPONSE FOR SECOND ORDER SYSTEM PAGE 1 MINIMUM MAXIMUM ERROR VERSUS TIME -2.5372E-01 5.0000E-01 TIME ERROR I T 0.0 1.00005 00 1.6000E-01 9-28835-01 3.2000E-01 7.51656-01 4.80005-01 5.21445-01 6.4000E-01 2.83825-01 8.0000E-01 7.2920E-02 \_\_\_\_\_+ 9.6000E-01 -9.0071E-02 ------1.1200E 00 -1.9626E-01 ---+ 1.2800E 00 -2.4684E-01 ٠ Note that the plotted value of 1.4400E 00 -2.5023E-01 ٠ ERROR does not exceed the 1.6000E 00 -2.1887E-01 --+ specified value of 0.5 1.76COE 00 -1.6653E-01 -----1.9200E 00 -1.0602E-01 -----2.0800E 00 -4.7760E-02 2.2400E 00 1.00185-03 \_\_\_\_\_\_ 2.4000E 00 3.6273E-02 2.5600E 00 5.6984E-02 2.7200E 00 6.43245-02 2.8800E 00 6.0963E-02 3.0400E 00 5.02865-02 3.2000E 00 3.5739E-02 3.3600E 00 2.03465-02 3.5200E 00 6.4203E-03 -4.5576E-03 3.6800E 00 3.84005 00 -1.1911E-02 4.0000E 00 -1.5641E-02 4.1600E 00 -1.6236E-02 4.3200E 00 -1.44728-02 4.4800E 00 -1.1236E-02 4.64005 00 -7.3662E-03 4.8000E 00 -3.5610E-03 \_\_\_\_\_ 4.9600E 00 -3.1376E-04 5.1200E 00 2.0832E-03 \_\_\_\_\_\_ 5.2000E 00

Fig. 2.15 System error response for Example 2.2.

 $\ddot{X} + E(X^2 - 1)\dot{X} + X = 0$ (2.6)X(0) = 2.0 $\dot{X}(0) = 0.0$ 

A helpful first step is to change the second-order differential equation to an equivalent set of first-order equations, easily accomplished as

$$\dot{X} = XD \tag{2.7}$$

$$\ddot{X} = XDD = -E(X^2 - 1)XD - X$$
(2.8)

The program for solving Eqs. (2.7) and (2.8) is straight forward, as shown in Fig. 2.17. An ordinary FORTRAN statement is used to calculate XDD and two INTGRL functions are used to integrate XDD and XD to obtain XD and X, respectively.

In this example the following PARAMETER card is used to make a sequence of simulation runs for five different values of the constant E.

PARAMETER 
$$E = (0.05, 0.5, 2.0, 10.0, 50.0)$$

One separate run is made for each value of E. Figs. 2.18 and 2.19 show the printer-plot outputs for E = 2.0 and E = 50.0. Note that the parameter value E is listed at the beginning of each plot and on each page of PRINT output.

PRINTED LISTING OF "OUTPUT" (SIMULATION) AND "OUTEXT" (ANALYTICAL)

|                          | <b></b>                  | CSMP Solution             |
|--------------------------|--------------------------|---------------------------|
|                          |                          | Analytical Solution       |
| TIME<br>0.0              | 0UTPUT<br>0+0            | V<br>©UTEXT<br>4∙7684E−07 |
| 4.0000E-02               | 4.8652E-03               | 4. 8663E-03               |
| 8.0000E-02               | 1.8912E-02               | 1.8913E-02                |
| 1.2000E-01               | 4.13005-02               | 4.1300E-02                |
| 1.6000E-01<br>2.00C0E-01 | 7.1172E-02<br>1.0767E-01 | 7.1172E-02<br>1.0767E-01  |
| 2.40005-01               | 1.4992E-01               | 1.4992E-01                |
| 2.8000E-01               | 1.9710E-01               | 1.9710E-01                |
| 3.2000E-01               | 2.4835E-01               | 2.48355-01                |
| 3.6000E-01               | 3.02888-01               | 3.0288E-C1                |
| 4.0000E-01               | 3.5991E-01               | 3.5991E-01                |
| 4.4000E-01<br>4.8000E-01 | 4.1871E-01               | 4.18716-01                |
| 5.2000E-01               | 4.7856E-01<br>5.3882E-01 | 4.7856E-01<br>5.3883E-01  |
| 5.6000E-01               | 5.9888E-01               | 5.9888E-01                |
| 6.0000E-01               | 6.5817E-01               | 6.5817E-01                |
| 6.40005-01               | 7.1618E-01               | 7.1619E-01                |
| 6.8000E-01               | 7.7246E-01               | 7.72475-01                |
| 7.2000E-01               | 8.2660E-01               | 8.2660E-01                |
| 7.60C0E-01<br>8.0000E-01 | 8.78245-01               | 8.7824E-01                |
| 8.40C0E-01               | 9.2708E-01<br>9.7286E-01 | 9.27C8E-01<br>9.7287E-01  |
| 8. 9000E-01              | 1.0154E 00               | 1. 0154E 00               |
| 9.2000E-01               | 1.0545E 00               | 1.0545E 00                |
| 9.60005-01               | 1.0901E 00               | 1.0901E 00                |
| 1.00005 00               | 1.1220E 00               | 1.1221E 00                |
| 1.0400E 00               | 1.1504E 00               | 1.15045 00                |
| 1.0800E 00<br>1.1200E 00 | 1.1751E 00<br>1.1963E 00 | 1.1751E 00<br>1.1963E 00  |
| 1.1600E 00               | 1.2139E 00               | 1.21395 00                |
| 1.20005 00               | 1.2281E 00               | 1.2281E 00                |
| 1.2400E 00               | 1.2390E 00               | 1.2391E 00                |
| 1.28C0E 00               | 1.2468E 00               | 1.2469E 00                |
| 1.3200E 00               | 1.25175 00               | 1.2517E 00                |
| 1.3600E 00               | 1.2537E 00               | 1.2537E 00                |
| 1.4000E 00<br>1.4400E 00 | 1.2532E 00<br>1.2502E 00 | 1.2532E 00<br>1.2502E 00  |
| 1.48COE 00               | 1.2451E 00               | 1.2451E 00                |
| 1.5200E 00               | 1.2380E 00               | 1.2380E 00                |
| 1.56005 00               | 1.2292E 00               | 1.2292E 00                |
| 1.6000E 00               | 1.2189E 00               | 1.2189E 00                |
| 1.6400E 00               | 1.2072E 00               | 1.2072E 00                |

Fig. 2.16 Diagram illustrating printer output for Example 2.2.

When making a sequence of runs using a PARAMETER card, all printer-plots for the same variable will have a common scale. This means that some plots may not cover the full range (example: Fig. 2.19); however, a common scale has the advantage that a direct comparison can be made between plots of sequential runs.

In Example 2.1, a description of the CONSTANT statement was given. The application of both the INCON and PARAMETER cards is identical to the CONSTANT statement. They are completely interchangeable but are lettered differently as a matter of convenience to the user. The description given below is, therefore, equally valid for all three cards.

#### 28 Fundamentals of System/360 CSMP

LABEL SOLUTION OF THE VAN DER POL EQUATION

THE FOLLOWING PARAMETER STATEMENT RECYCLES THE PROGRAM FOR THE FIVE \* DIFFERENT VALUES OF E. PARAMETER E = (0.05, 0.5, 2.0, 10.0, 50.0) INCON XI = 2.0, XDI = 0.0XDD = -E\*(X\*X - 1.0)\*XD - XX = INTGRL(XI, XD) XD = INTGRL(XDI,XDD) PRTPLT X (XD, XDD) TIMER FINTIM = 10.0, OUTDEL = 0.25 END STOP ENDJOB

Fig. 2.17 Program to solve Van der Pol equation.

| SOLUTION | 0F | THE | VAN | DER  | PCL | FOUAT   | TON  |
|----------|----|-----|-----|------|-----|---------|------|
| 30001101 | 0, |     |     | OL:N |     | L QO AI | 10.4 |

| SOLUTIO    | N OF THE VAN DE | R PCL EQUATIO | IN |              | PAGE 1  |                         |
|------------|-----------------|---------------|----|--------------|---------|-------------------------|
|            | MI              | NTMUM         | x  | VERSUS TIME  | MAXIMU  | IM                      |
|            |                 | 197E 00       | Ê  | = 2.0000E 00 | 2.0174E |                         |
| TIME       | x               | T             |    |              | T       | XD XDD                  |
| 0.0        | 2.0000E 00      |               |    |              | +       | 0.0 -2.0000E 00         |
| 2.5000E-01 | 1.9597E 00      |               |    |              | +       | -2.6104E-01 -4.7673E-01 |
| 5.0000E-01 | 1.8839E CC      |               |    |              | +       | -3.3346E-01 -1.8382E-01 |
| 7.500JE-01 | 1.7955E 00      |               |    |              | +       | -3-7194E-01 -1-4120E-01 |
| 1.0000E 00 | 1.6980E 00      |               |    |              |         | -4.0872E-01 -1.5853E-01 |
| 1.2500E 0J | 1.5905E 00      |               |    |              | +       | -4.5342E-01 -2.0331E-01 |
| 1.500JE 00 | 1.4701E 00      |               |    |              | +       | -5.1291E-01 -2.7892E-01 |
| 1.7500E 00 | 1.3320E 00      |               |    |              | -+      | -5.9721E-01 -4.0725E-01 |
| 2.0000E 00 | 1.1679E 00      |               |    |              |         | -7.2507E-01 -6.4001E-01 |
| 2.2500E 00 | 9.6270E-01      |               |    |              |         | -9.3568E-01 -1.0997E 00 |
| 2.5000E 00 | 6.8613E-01      |               |    |              |         | -1.3174E 00 -2.0806E 00 |
| 2.7500E 00 | 2.73975-01      |               |    | +            |         | -2.0640E 00 -4.0920E 00 |
| 3.0000E 00 | -3.9365E-01     |               |    | •            |         | -3.3366E 00 -5.2454E 00 |
| 3.2500E 00 | -1.3112E 00     | +             | •  |              |         | -3.4977E 00 6.3417E 00  |
| 3.5000E 00 | -1.9025E 0C     | -+            |    |              |         | -1.1781E 00 8.0742E 00  |
| 3.7500E 00 | -2.0197E 00     | +             |    |              |         | -1.5696E-02 2.1164E 00  |
| 4.0000E 00 | -1.9815E 00     | +             |    |              |         | 2.5613E-01 4.8245E-01   |
| 4.2500E 00 | -1.9069E 00     | -+            |    |              |         | 3.27956-01 1.77756-01   |
| 4.500JE 00 | -1.8201E 00     | +             |    |              |         | 3.6465E-01 1.3333E-01   |
| 4.7500E 00 | -1.7247E 00     | +             |    |              |         | 3.99195-01 1.48175-01   |
| 5.0000E 00 | -1.6199E 00     | +             |    |              |         | 4.4076E-01 1.8815E-01   |
| 5.2500E 00 | -1.5033E 00     | +             |    |              |         | 4.95476-01 2.54896-01   |
| 5.5000E 00 | -1.3704E 00     |               |    |              |         | 5.7187E-01 3.6616E-01   |
| 5.7500E 00 | -1.2143E 00     |               |    |              |         | 6-8561E-01 5-6372E-01   |
| 6.0000E 00 | -1.0219E 00     |               | •  |              |         | 8-6868E-01 9-4486E-01   |
| 6.2500E 00 | -7.6847E-01     |               | •  |              |         | 1.1921E 00 1.7447E 00   |
| 6.5000E 00 | -4.0125E-01     |               |    |              |         | 1.8165E 00 3.4494E 00   |
| 6.7500E 00 | 1.8610E-01      |               |    | +            |         | 2.9768E 00 5.5613E 00   |
| 7.0000E 00 | 1.0705E 00      |               |    |              |         | 3.7796E 00 -2.1747E 00  |
| 7.2500E 00 | 1.8063E 0C      |               |    |              |         | 1.7696E 00 -9.8139E 00  |
| 7.5000E 00 | 2.0137E 00      |               |    |              |         | 1.8361E-01 -3.1357E 00  |
| 7.7500E 00 | 1.9970E 00      |               |    |              |         | -2.1868E-01 -6.9013E-01 |
| 8.0000E 00 | 1.9278E 00      |               |    |              |         | -3.1531E-01 -2.1472E-01 |
| 8.2500E 00 | 1.8435E 00      |               |    |              |         | -3.5592E-01 -1.3607E-01 |
| 8.5000E 00 | 1.7504E 00      |               |    |              |         | -3.8979E-01 -1.4150E-01 |
| 8.7500E 00 | 1.6482E 00      |               |    |              |         | -4-2895E-01 -1-7555E-01 |
| 9.0000E 00 | 1.5349E 00      |               |    |              |         | -4.7959E-01 -2.3427E-01 |
| 9.2500E 00 | 1.4068E 00      |               |    |              |         | -5.4923E-01 -3.3123E-01 |
| 9.5000E 00 | 1.2577E 00      |               |    |              |         | -6.5109E-01 -5.0014E-01 |
| 9.7500E 00 | 1.0765E 00      |               |    |              | -       | -8.1150E-01 -8.1869E-01 |
| 1.0000E 01 | 8.42465-01      |               |    |              |         | -1.0878E 00 -1.4740E 00 |
| 1.00005 01 | 0.42405-01      |               |    |              |         | -1940105 00 -1941405 00 |

Fig. 2.18 Printer-plot output for solution of Van der Pol equation E = 2.0.

PARAMETER, CONSTANT, INCON. These data statements are used for assigning numerical values. Only the first five letters are required to signify their use. Thus it is not necessary to write PARAMETER in full since PARAM is acceptable. This also applies to many other CSMP statements. For example, PRTPLOT may be used rather than PRTPLT.

Regarding PARAMETER, CONSTANT, and INCON; at least one blank must follow the label card while the remaining entries must have the general format

| SOLUTION   | OF THE VAN DE | R POL EQUATI | ON |              | PAGE 1  |             |               |
|------------|---------------|--------------|----|--------------|---------|-------------|---------------|
|            | м             | INIMUM       | x  | VERSUS TIME  | MAXIM   | IM          |               |
|            |               | 1975 00      | Ê  | = 5.0000E 01 | 2.0174E |             |               |
| TIME       | x             | 1            | -  |              | I       | XD          | XDD           |
| J . U      | 2.00005 00    |              |    |              |         | 0.0         | -2.0000E 00   |
| 2.50JUE-01 | 1.9967E 00    |              |    |              | +       | -1.3368E-02 | 2-2-58455-04  |
| 2.JOUJE-01 | 1.99345 CC    |              |    |              | +       | -1.3156E-0  | 2 -3.7365E-02 |
| 7.5003E-01 | 1.9900E 00    |              |    |              | +       | -1.3320E-02 | 2 -1.8507E-02 |
| 1.0000E 00 | 1.9866E 00    |              |    |              |         | -1.3462E-0  | 2 -3.1214E-03 |
| 1.2500E UU | 1.98335 00    |              |    |              |         | -1.3293E-0  | 2 -3.3574E-02 |
| 1.500JE 00 | 1.9799E 00    |              |    |              |         | -1.3544E-0  | 2 -2.4862E-03 |
| 1.75008 00 | 1.9765E 00    |              |    |              |         | -1.3564E-0  | 2 -5.3825E-03 |
| 2.000UE 00 | 1.9731E 00    |              |    |              |         | -1.3620E-02 | 2 -2,9764E-03 |
| 2.2500E 00 | 1.9696E 00    |              |    |              |         | -1.3643E-0  | 2 -5.4636E-03 |
| 2.500UE 00 | 1.9662E OC    |              |    |              |         | -1.3708E-0  | 2 -1.8091E-03 |
| 2.750JE 00 | 1.9628F 00    |              |    |              |         | -1.3756E-0  | 2 -8.8120E-04 |
| 3.0000E 00 | 1.9593E 0C    |              |    |              |         | -1.3802E-0  | 2 -1.8787E-04 |
| 3.2500E 00 | 1.9559E 00    |              |    |              |         | -1.3831E-0  | 2 -2.0018E-03 |
| 3.50008 00 | 1.9524E 00    |              |    |              |         | -1.3870E-0  | 2 -2.4099E-03 |
| 3.7500E 00 | 1.94895 CC    |              |    |              |         | -1.3918E-0  | 2 -1.6050E-03 |
| 4.0000E 00 | 1.9454E 00    |              |    |              |         | -1.3961E-02 | 2 -1.5526E-03 |
| 4.2300E 00 | 1.9419E OC    |              |    |              |         | -1.3978E-0  | 2 -5.24526-03 |
| 4.500JE UU | 1.9384E 00    |              |    |              |         | -1.4058E-0  | 2 -2.2030E-04 |
| 4.7500E 00 | 1.9349E 00    |              |    |              |         |             | 2 -4.2686E-03 |
| 5.0000E 00 | 1.93135 00    |              |    |              |         |             | 2 -2.8706E-04 |
| 5.2500E 00 | 1.9278E 00    |              |    |              |         |             | 2 -4.9400E-04 |
| 5.5000E 00 | 1.9242E OC    |              |    |              |         | -l.4235E-0  | 2 -5.8270E-04 |
| 5.7500E 00 | 1.9206E 00    |              |    |              |         |             | 2 -2.1666E-02 |
| 0.0000E JJ | 1.9171E CO    |              |    |              |         |             | 2 -2.6703E-04 |
| 6.25002 UU | 1.91355 OC    |              |    |              |         |             | 2 -7.7343E-03 |
| 6.5000E 00 | 1.90995 00    |              |    |              |         |             | 2 -2.0790E-04 |
| 6.7500E 00 | 1.9062E CC    |              |    |              |         |             | 2 -2.0504E-04 |
| 7.0000E 00 | 1.90265 00    |              |    |              |         |             | 2 -2.0504E-04 |
| 7.2500E 00 | 1.8990E 00    |              |    |              |         |             | 2 -7.9346E-03 |
| 7.5000E 00 | 1.89535 00    |              |    |              |         |             | 2 -9.2669E-03 |
| 7.7500E 00 | 1.8917E 00    |              |    |              |         |             | 2 -2.1172E-04 |
| 8.0000E 00 | 1.88805 CC    |              |    |              |         |             | 2 -6.0024E-03 |
| 8,2500E 00 | 1.8843E 00    |              |    |              |         |             | -4.5366E-03   |
| 8.5000E 00 | 1.8806E 00    |              |    |              |         |             | 2 -2.4033E-03 |
| 8.7500E 00 | 1.8769E OC    |              |    |              |         |             | 2 -2.2888E-04 |
| 9.000UE 00 | 1.8731E CO    |              |    |              |         |             | 2 -5.0983E-03 |
| 9.2500E 00 | 1.8694E CO    |              |    |              |         |             | 2 -2.4109E-03 |
| 9.5000E OU | 1.8656E 00    |              |    |              |         |             | 2 -1.5574E-03 |
| 9.7500E 00 | 1.8618E 00    |              |    |              |         |             | 2 -3.0708E-03 |
| 1.00008 01 | 1.8581E OC    |              |    |              | +       | -1.5145E-0  | 2 -1.0271E-03 |

# Fig. 2.19 Printer-plot output for solution of Van der Pol equation E = 50.

of variable name, equal sign, and numerical assignment. Additional assignments are made on the same card by placing a comma after the numerical value. Any number of assignments may appear on a card. Up to eight continuation cards are allowable by using three consecutive periods at the end of the card. Valid applications are

> PARAMETER AX = 6.0, MW = 2.0, TAU = 1.0, ...RHO = 0.1, GAMMA = 6.2E - 03PARAM EDGE = 3.2, START = 6.4, LAST = -0.5INCON ICX1 = 0.115, ICX2 = 0.0CONST ALPHA = 1.35, BETA = -6.134CONSTANT X = 5.6, Y = -45.78

where all of these cards are used in the same program. The results of the simulation would have been unchanged by using

> CONSTANT AX = 6.0, MW = 2.0, TAU = 1.0, ...RHO = 0.1, GAMMA = 6.2E - 03, ICX1 = 0.115, ...ICX2 = 0.0, ALPHA = 1.35, BETA = -6.134, ...X = 5.6, Y = -45.78, EDGE = 3.2, START = 6.4, ...LAST = -0.5

In the above, CONSTANT could be replaced by either INCON or PARAMETER.

Calculations are not allowed in a data statement. An example of an invalid statement is shown below.

CONSTANT X = 5.8, Y = 
$$\frac{4.2/3.14}{\hat{1}}$$
 Illegal operation

As illustrated in Example 2.3, an attractive feature of these data statements is their capability of making sequential runs. A typical statement is

INCON ICX1 = 
$$(0.0, 2.0, -1.2, 6.0)$$
, ICX2 = 2.3

The program will make four simulation runs in which ICX1 is assigned the values appearing in the parentheses in the order given from left to right. The value of ICX2 = 2.3 is used for each run. As a slight modification one may use

PARAMETER ICX1 = (0.0, 3\*0.2, 1.4, 2\*2.0)

which will result in seven simulation runs with the values of ICX1 being 0.0, 0.2, 0.4, 0.6, 1.4, 2.0, 4.0. A maximum of fifty runs can be made in any sequence.

Only one variable can be used to make sequential runs. Examples of *invalid* data statements which attempt to make sequential runs using two variables for two different programs are

PARAMETER X = (2.0, 5.0, 9.0), Y = (3.0, 4.0, 7.0) CONSTANT X = (2.0, 5.0, 9.0) PARAMETER Y = (3.0, 4.0, 7.0)

## Example 2.4 Transient Temperature Response

In some simulations it is necessary to use functional relationships that are contained in tabular or graphic form. Fig. 2.20 shows an example of a graphic relationship between

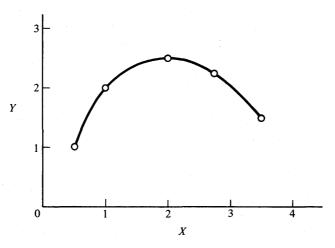


Fig. 2.20 Graphic relationship between X and Y.

X and Y that can be represented by using a FUNCTION statement. Points on the curve of Fig. 2.20 are entered on a FUNCTION card as illustrated below.

FUNCTION F = 
$$(0.5, 1.0), (1.0, 2.0), (2.0, 2.5), (2.75, 2.25), (3.5, 1.5)$$
  
Function name Dependent variable (Y)

The symbol F represents the chosen name of this particular function but any other valid symbol can be used. The independent variable for each point is always listed first starting with the smallest algebraic value. This variable must monotonically increase to assure that the slope is neither infinite nor the function multivalued. Increment size of the independent variable may be unequal as shown in the above example. Parentheses can be used to group the coordinates of each point but are not required. Commas must separate *all* numbers. The list of values can be extended to additional cards by the use of three consecutive periods (...). There are no specific restrictions on the number of points per function.

The two types of statements which use the data contained on the previous FUNC-TION card are

$$Y = AFGEN(F, X)$$
$$Y = NLFGEN(F, X)$$

where Y is the dependent variable (ordinate) and X is the independent variable (abscissa).

The AFGEN statement provides linear interpolation between consecutive data points. In effect, the curve is represented by a series of straight-line segments. The more closely spaced the points, the more accurate the representation of the function.

NLFGEN uses a Lagrange quadratic interpolation between points. Consequently, the NLFGEN element cannot accurately represent functions containing abrupt changes. An example of this is shown by Fig. 2.21.

Notice that the error in using the NLFGEN statement is greatest where the data points are widely separated and where the curve changes abruptly.

Both AFGEN and NLFGEN functions can be treated as ordinary variables and, consequently, included as part of structure statements. An example is

$$Z = 3.5*AFGEN(F, X)/(3.8 - NLFGEN(L, TIME))$$

If the value of the input variable is outside the specified range of the function, a diagnostic message is printed and the simulation proceeds without interruption. The value returned by AFGEN or NLFGEN is either the first or last dependent variable in the FUNCTION statement. For example, if the input value of X in the graphical relationship of Fig. 2.20 were 4.0, the output would be 1.5. In a similar manner, the output would be 1.0 for all input values less than 0.5.

This example illustrates the simulation of the transient temperature response of a small hot copper cylinder which is quenched in water. Special emphasis is placed on the use of the FUNCTION statement in conjunction with the AFGEN function.

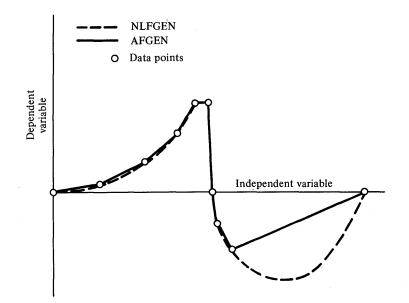


Fig. 2.21 Comparison of curve fit using AFGEN and NLFGEN functions.

Figure 2.22 defines the physical setup of the problem.

Applying the basic law of heat conduction and assuming uniform cylinder temperature and constant water temperature yields

$$TDOT = T = H*AREA*(TA - T)/(RO*C*V)$$
(2.9)

$$\mathbf{T} = \int_{0}^{t} \dot{\mathbf{T}} dt + \mathbf{TINITL}$$
 (2.10)

where

T = temperature of cylinder

 $TA = temperature of water, 530^{\circ}R$ 


 $TINITL = initial temperature of cylinder, 1960^{\circ}R$ 


AREA = surface area of cylinder =  $\pi (D^2/2 + DL)$ 

 $RO = density of copper, 559 lb/ft^3$ 

- C =specific heat of copper, 0.0915 Btu/lb-°R
- V = volume of cylinder =  $\pi D^2 L/4$
- D = diameter of cylinder, 0.02 ft
- L = length of cylinder, 0.1 ft
- H = overall heat transfer coefficient, a function of temperature as shown in Table 2.4.

Data for the heat transfer coefficient is taken from Table 2.4 and entered into the program on a FUNCTION statement called HBOIL.

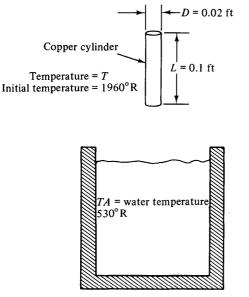

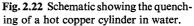



Boiling Heat Transfer Coefficient as a Function of Temperature

| Temperature<br>(°R) | Heat Transfer Coefficient<br>(Btu/ft <sup>2</sup> -hr-°R) |
|---------------------|---|
| 672.1               | 114   |
| 673.0               | 278   |
| 687.0               | 667   |
| 702.0               | 3680  |
| 737.0               | 13200   |
| 822.0               | 3680  |
| 1082                | 880   |
| 1672                | 880   |
| 2672                | 1140  |

Notice that this program contains all three segments: Initial, Dynamic, and Terminal. The use of the three segments is not required for this particular program, but is included in order to show a logical classification of the structure statements. The Initial segment contains both the FUNCTION statement and the CONSTANT card which are used to specify the parameters of the system, Since the calculations used to determine AREA and V are only required once, they are included in the Initial segment.

In the Dynamic segment, an AFGEN statement is used to specify H, a FORTRAN type statement is used to calculate TDOT, and the INTGRL function is used to integrate TDOT to obtain T.


The run is terminated either by reaching the finish time (FINTIM) or by the control of the FINISH card.

FINISH. The FINISH label allows the user to terminate a run prior to the time as specified by FINTIM. A run can be ended when any dependent variable first crosses or reaches a given bound. In the program of Fig. 2.23, the run will terminate when T reaches or crosses the value of 682°R, or when TIME reaches FINTIM. If more than one FINISH card is included, only the last card is considered. A single FINISH statement can contain a maximum of ten terminating conditions. Continuation to successive cards is permitted.

```
QUENCHING OF A HOT COPPER CYLINDER
LABEL
INITIAL
      CONSTANT RO = 559.0, C = 0.0915, TA = 530.0, L = 0.1, D = 0.02,...
      TINITL = 1960.0. PI = 3.14159
    THE FOLLOWING VALUES LISTED ON THE FUNCTION CARD ARE THE HEAT TRANSFER
   COEFFICIENT AS A FUNCTION OF TEMPERATURE
FUNCTION HBDIL = (672.1,114.0),(673.0,278.0),(687.0,667.0),
                                                                       ...
                  (702.0,3680.0), (737.0,13200.0), (822.0,3680.0),
                                                                       ...
                  (1082.0,880.0),(1672.0,880.0),(2672.0,1140.0)
      AREA = PI*(D*D/2.0 + D*L)
      V = PI*D*D*L/4.0
DYNAMIC
      H = AFGEN(HBOIL,T)
      TDOT = H*AREA*(TA - T)/(RO*C*V)
      T = INTGRL(TINITL, TDOT)
TERMINAL
      TIMER FINTIM = 0.006. OUTDEL = 0.00001
      FINISH T = 682.0
      PRTPLT T (H)
END
STOP
ENDJOB
```

Fig. 2.23 Program to calculate the transient temperature of a copper cylinder.

The FINISH statement

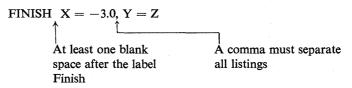

shows two conditions for ending the run. The first condition (X = -3.0) will terminate the run when X first reaches or crosses -3.0. The second requirement (Y = Z) will end the simulation when Y = Z, or when Y - Z first changes sign. The run will be terminated when either of the conditions are met.

Since the FINISH conditions are checked at each integration interval, the run may be terminated at a time that is not a multiple of PRDEL or OUTDEL. If this happens, printing will occur at the time when the FINISH condition is met.

Figure 2.24 shows the PRTPLT output for the time history of the temperature

| QUENCHING  | OF A HOT COPP | ER CYLINDER |   |            | PAGE | 1         |         |    |
|------------|---------------|-------------|---|------------|------|-----------|---------|----|
|            | MI            | NIMUM       | т | VERSUS TIM | E    | MAXIMUM   |         |    |
|            |               | 907E 02     | • |            |      | .9600E 03 |         |    |
| TIME       | T             | I           |   |            |      | I         | н       |    |
| 0.0        | 1.96005 03    |             |   |            |      | +         | 9.5488E | 02 |
| 1.0000E-05 | 1.9029E 03    |             |   |            |      | +         | 9.4003E | 02 |
| 2.00005-05 | 1.8489E 03    |             |   |            |      | +         | 9.2599E | 02 |
| 3.0000E-05 | 1.7978E 03    |             |   |            | +    |           | 9.1270E | 02 |
| 4.0000E-05 | 1.7493E 03    |             |   |            | +    |           | 9.0010E | 02 |
| 5.0000E-05 | 1.7033E 03    |             |   |            | +    |           | 8.8814E | 02 |
| 6.000005   | 1.6596E 03    |             |   |            | +    |           | 8.8000E | 02 |
| 7.00005-05 | 1.6176E 03    |             |   |            | •    |           | 8.8000E | 02 |
| 8.00005-05 | 1.5772E 03    |             |   |            | -+   |           | 8.8000E | 02 |
| 9.0000E-05 | 1.5383E 03    |             |   | +          | •    |           | 8.8000E | 02 |
| 1.0000E-04 | 1.50095 03    |             |   | +          |      |           | 8.8000E | 02 |
| 1.1000E-04 | 1.4648E 03    |             |   | +          |      |           | 8.8000E |    |
| 1.20005-04 | 1.4301E 03    |             |   | +          |      |           | 8.8000E | 02 |
| 1.30005-04 | 1.3967E 03    |             |   | +          |      |           | 8.8000E |    |
| 1.40005-04 | 1.3645E 03    |             |   |            |      |           | 8.8000E |    |
| 1.50005-04 | 1.3335E 03    |             |   | +          |      |           | 8.8000E |    |
| 1.6000E-04 | 1.3036E 03    |             |   | +          |      |           | 8.8000E |    |
| 1.7000E-04 | 1.2749E 03    |             |   | +          |      |           | 8.8000E |    |
| 1.8000F-04 | 1.2472E 03    |             |   | -+         |      |           | 8.8000E |    |
| 1.9000E-04 | 1.2206E 03    |             |   | +          |      |           | 8.8000E |    |
| 2.00005-04 | 1.1949E 03    |             | + | •          |      |           | 8.8000E |    |
| 2.1000F-04 | 1.1702E 03    |             | + |            |      |           | 8.8000E |    |
| 2.20005-04 | 1.1465E 03    |             | + |            |      |           | 8.8000E |    |
| 2.30005-04 | 1.1236E 03    |             | • |            |      |           | 8.8000E |    |
| 2.40005-04 | 1.1015E 03    |             | + |            |      |           | 8.8000E |    |
| 2.5000E-04 | 1.0802E 03    |             | + |            |      |           | 8.9888E |    |
| 2.6000F-04 | 1.0566E 03    |             |   |            |      |           | 1.1537E |    |
| 2.70005-04 | 1.0279E 03    |             | • |            |      |           | 1.4629E |    |
| 2.8000E-04 | 9.9394E 02    |             | • |            |      |           | 1.8283E |    |
| 2.90005-04 | 9.5509E 02    | +           | • |            |      |           | 2.2468E |    |
| 3.00005-04 | 9.1216E 02    | +           |   |            |      |           | 2.7090E |    |
| 3.10005-04 | 8.6658E 02    | +           |   |            |      |           | 3.1999E |    |
| 3.2000E-04 | 8.2011E 02    | +           |   |            |      |           | 3.89176 |    |
| 3.30005-04 | 7.3674E 02    | +           |   |            |      |           | 1.3130E |    |
| 3.4000E-04 | 6.93755 02    | +           |   |            |      |           | 2.0237E |    |
| 3.5000E-04 | 6.8613E 02    | +           |   |            |      |           | 6.4290E |    |
| 3.6000F-04 | 6.8224E 02    | +           |   |            |      |           | 5.3473E |    |
| 3.70005-04 | 6.7907E 02    | +           |   |            |      |           | 4.4004E | 02 |

Fig. 2.24 Printer-plot output for temperature of copper cylinder.

of the copper cylinder. Notice that the FINISH card controlled the termination of the program at TIME = 0.00037 hr.

## Example 2.5 Three-Stage Saturn Vehicle

For some types of simulations it is necessary to use conditional branching statements to control the sequence of calculations. An example of this type problem is the simulated launch of a three-stage Saturn rocket in which each stage requires different equations to describe the physical parameters. The FORTRAN IF statement can readily be used to insure that calculations are performed in proper order.

Figure 2.25 gives the significant system parameters and also shows the forces acting on the vehicle.

Applying Newton's second law and neglecting all minor effects and disturbances, the equations of motion for a rocket traveling in a radial direction from the center of the earth are

and

$$m\dot{V} = \dot{m}V_o - mg - \frac{1}{2}\rho C_d A V^2$$
(2.11)

$$ALT = \int_{o}^{t} V dt$$
 (2.12)

(Fig. 2.26) where m = mass of total rocket in slugsMASS V = velocity in ft/sec VEL  $\dot{V}$  = acceleration in ft/sec<sup>2</sup> ACC  $\dot{m} = \text{mass}$  flow rate of propellant in slug/sec (constant for each stage) MDOT  $V_o$  = outflow velocity of propellant relative to rocket in ft/sec VOUT g = acceleration of gravity which is given by G  $g = 32.17 \left[ \frac{r_e}{r_e + \text{ALT}} \right]^2$  $r_e$  = radius of earth in feet RADERH ALT = altitude of rocket in feetALT  $\rho$  = density of air in slug/ft<sup>3</sup> RO An approximate value of  $\rho$  is given by the  $\rho = 0.00238 \ e^{-ALT/24000}$  $C_d A$  = cross-sectional area of the rocket times the drag coefficient in ft<sup>2</sup> DRAG

While Eqs. (2.11) and (2.12) are valid for each stage, the parameters m,  $\dot{m}$ ,  $V_o$ , and  $C_dA$  will change for each burn.

Figure 2.26 shows the CSMP program listing for the simulation of the launch. All three segments (Initial, Dynamic, Terminal) are included in this program. The use of the three segments is good programming practice since it separates the different types of program statements.

The Initial segment is used to specify the constants in the program and makes a onetime calculation to find the radius of the earth RADERH in feet.

Since the parameters in Eq. (2.11) depend on the particular burn stage, FORTRAN IF statements are utilized to transfer control to the appropriate group of structure statements. To allow the use of logic branching statements, the first part of the Dynamic segment is changed to a nosort section.

By examining the program structure, one can make the following observations.

If the flight time TIME is less than the burn time of the first stage BURNT1, control is transferred to statement 1. The instantaneous mass MASS of the total moving rocket is calculated and the appropriate values for the propellant-mass-flow rate MDOT, dragcoefficient times cross-sectional area DRAG, and propellant-outflow velocity VOUT for the first stage are specified. Control is then transferred to statement 3 which is a FOR-

**Program Symbols** 

| Symbols                                    | Third stage   |   |
|--|---|---|
| MASS3<br>VOUT3<br>FLOW3<br>BURNT3<br>DRAG3 | Initial mass = 8137 slugs<br>Outflow velocity = 15250 ft/sec<br>Mass flow rate = 14.75 slugs/sec<br>Burn time = 479 sec<br>Drag coefficient times cross-<br>sectional area = 360 sq ft                  | Drag = $\frac{1}{2}\rho C_d A V^2$      |
| MASS2<br>VOUT2<br>FLOW2<br>BURNT2<br>DRAG2 | Second stage<br>Initial mass = 32205 slugs<br>Outflow velocity = 13805 ft/sec<br>Mass flow rate = 81.49 slugs/sec<br>Burn time = 359 sec<br>Drag coefficient times cross-<br>sectional area = 460 sq ft | Gravity = $mg$<br>Thrust = $\dot{m}V_o$ |
| MASS1<br>VOUT1<br>FLOW1<br>BURNT1<br>DRAG1 | First stage<br>Initial mass = 148820 slugs<br>Outflow velocity = 8060 ft/sec<br>Mass flow rate = 930 slugs/sec<br>Burn time = 150 sec<br>Drag coefficient times cross-<br>sectional area = 510 sq ft    |   |

Fig. 2.25 Saturn three-stage rocket.

TRAN CONTINUE statement. After the CONTINUE statement, the Dynamic segment is changed to a sort section. Calculations are then made for acceleration of gravity G, density of air RO, and acceleration of the rocket ACC. INTGRL statements are used to find the velocity VEL and altitude of the rocket ALT. The final two statements in the Dynamic segment are used to calculate the velocity in miles per hour MPH and the altitude in miles MILES. Control is then transferred back to the beginning of the Dynamic segment where the iterative procedure is repeated.

The final portion of the Dynamic segment was changed to a sort section to eliminate the possibility of having calculations performed in the wrong order.

The value of FINTIM is set equal to the total burn time of all three stages and will consequently terminate the program at the end of the third-stage burn.

#### CSMP S

```
SIMULATION OF THE LAUNCH OF A SATURN V THREE STAGE ROCKET
LABEL
INITIAL
      CONSTANT MASS1 = 148820.0, MASS2 = 32205.0, MASS3 = 8137.0,
      FLOW1 = 930.0, FLOW2 = 81.49, FLOW3 = 14.75, VOUT1 = 8060.0,
                                                                       ...
      VOUT2 = 13805.0, VOUT3 = 15250.0, DRAG1 = 510.0, DRAG2 = 460.0,...
      DRAG3 = 360.0, BURNT1 = 150.0, BURNT2 = 359.0
      RADERH = 3960.0*5280.0
DYNAMIC
   NOSOR T
      IF(TIME.LE.BURNTI) GO TO 1
      IF(TIME.LT.(BURNT1 + BURNT2)) GO TO 2
   CALCULATIONS FOR THIRD STAGE
      MASS = MASS3 - FLOW3*(TIME - BURNT1 - BURNT2)
      MDOT = FLOW3
      DRAG = DRAG3
      VOUT = VOUT3
      GO TO 3
  CALCULATIONS FOR FIRST STAGE
*
    1 MASS = MASS1 + MASS2 + MASS3 - FLOW1*TIME
      MDOT = FLOW1
      DRAG = DRAG1
      VOUT = VOUT1
      GO TO 3
  CALCULATIONS FOR SECOND STAGE
    2 MASS = MASS2 + MASS3 - FLOW2*(TIME - BURNT1)
      MDOT = FLOW2
      DRAG = DRAG2
      VOUT = VOUT2
    3 CONTINUE
   SORT
      G = 32.17*((RADERH/(RADERH + ALT))**2)
                                                                          GRAVITY
      R0 = 0.00238 \times EXP(-ALT/24000.0)
                                                                          DENSITY
      ACC = (MDOT*VOUT - MASS*G - 0.5*DRAG*RO*VEL*VEL)/MASS
      VEL = INTGRL(0.0, ACC)
      ALT = INTGRL(0.0,VEL)
      MPH = VEL*60.0/88.0
      MILES = ALT/5280.0
TERMINAL
      TIMER FINTIM = 988.0, PRDEL = 4.0, OUTDEL = 20.0
      PRINT MILES, MPH, ACC.G, RD
      PRTPLT MPH (MILES, ACC)
  THE FOLLOWING FOUR STATEMENTS ARE USED TO MAKE CALCULATIONS AFTER THE
  RUN IS COMPLETED AND TO PRINT THE RESULTS.
      FEET = MILES*5280.0
      WEIGHT = MASS*32.17
  100 FORMAT(2E20.5)
      WRITE(6,100) FEET, WEIGHT
END
STOP
ENDJOB
```

Fig. 2.26 Program to simulate the launch of a Saturn rocket.

Ordinary FORTRAN FORMAT and WRITE statements can be used in nosort sections. An example of this is shown by the last two statements in the Terminal segment. Since the statements in the Terminal segment are only executed at the end of the program, the final altitude in feet FEET and the final earth-weight of the rocket WEIGHT can be calculated and will be the last output of the program. A detailed discussion of the use of FORTRAN output statements is included in Chap. 3 in the section on data output.

The PRTPLT output showing the vehicle velocity profile is given in Fig. 2.27.

| SIMULATION OF | THE LAUNCH             | OF A SATURN V TH | REE STAG | E ROCKET    | PAGE | 1        |            |             |
|---------------|------------------------|------------------|----------|-------------|------|----------|------------|-------------|
|               | MIN                    | IMUM             | MPH      | VERSUS TIME |      | MAXIMUN  |            |             |
|               | 0.0                    |                  |          |             | 2.   | 4230E 04 |            |             |
| TIME          | мрн                    | I                |          |             |      | I        | MILES      | ACC         |
| 0.0 0         | •0                     | +                |          |             |      |          | 0.0        | 7.4564E 00  |
|               | .2966E 02              | +                |          |             |      |          | 3.3361E-01 | 1.1664E 01  |
|               | .2111E 02              | +                |          |             |      |          | 1.5549E 00 | 1.6553E 01  |
|               | .8673E U2              | -+               |          |             |      |          | 4.0380E 00 | 2.2716E 01  |
|               | .5297E 02              | -+               |          |             |      |          | 8.2590E 00 | 3.1601E 01  |
|               | .4688E 03              | +                |          |             |      |          | 1.4902E 01 | 4.4917E 01  |
|               | .2062E 03              | +                |          |             |      |          | 2.4987E 01 | 6.4539E 01  |
|               | .2793E 03              | +                |          |             |      |          | 4.0030E 01 | 9.5564E 01  |
|               | 9871E 03               | +                |          |             |      |          | 6.1217E 01 | -2.7380E 00 |
|               | .9603E 03              | +                |          |             |      |          | 8.3283E 01 | -1.1737E 00 |
|               | .9556E 03              | +                |          |             |      |          | 1.0526E 02 | 4.9306E-01  |
|               | .9743E U3              | +                |          |             |      |          | 1.2728E 02 | 2.2805E 00  |
|               | .0184E 03              | +                |          |             |      |          | 1.4947E 02 | 4.2094E 00  |
|               | .0898E 03              | +                |          |             |      |          | 1.7198E 02 | 6.3042E 00  |
|               | .1912E 03              | +                |          |             |      |          | 1.9496E 02 | 8.5945E 00  |
|               | .3252E 03              | +                |          |             |      |          | 2.1860E 02 | 1.1116E 01  |
|               | .4955E 03              | +                |          |             |      |          | 2.4309E 02 | 1.3913E 01  |
|               | .7062E 03              | +                |          |             |      |          | 2.6863E 02 | 1.7042E 01  |
|               | .9621E 03              | +                |          |             |      |          | 2.9546E 02 | 2.0571E 01  |
|               | .2694E 03              |                  |          |             |      |          | 3.2386E 02 | 2.4594E 01  |
|               | .6356E 03              |                  |          |             |      |          | 3.5412E 02 | 2.9229E 01  |
|               | .0701E 03              | +                |          |             |      |          | 3.8660E 02 | 3.4639E 01  |
|               | .5848E 03              |                  |          |             |      |          | 4.2171E 02 | 4.1048E 01  |
|               | .19555 03              |                  |          |             |      |          | 4.5994E 02 | 4.8776E 01  |
|               | •9231E 03              |                  | •        |             |      |          | 5.0187E 02 | 5.8299E 01  |
|               | •7969E 03              |                  |          |             |      |          | 5.4824E 02 |             |
|               | 2739E 03               |                  |          |             |      |          | 5.9908E 02 |             |
|               | -3385E 03              |                  |          |             |      |          | 6.5077E 02 |             |
|               | •4258E 03              |                  |          |             |      |          | 7.0288E 02 |             |
|               | .5368E 03              |                  |          |             |      |          | 7.5554E 02 |             |
|               | .6728E 03              |                  |          |             |      |          | 8.0889E 02 |             |
|               | .8352E 03              |                  |          |             |      |          | 8.6307E 02 |             |
|               |                        |                  | -        |             |      |          | 9.1822E 02 |             |
|               | .0026E 04              |                  |          |             |      |          | 9.7452E 02 |             |
|               | .0248E 04              |                  |          |             |      |          | 1.0321E 03 |             |
|               | .0788E 04              |                  |          |             |      |          | 1.0912E 03 |             |
|               |                        |                  |          |             |      |          | 1.1521E 03 |             |
|               | .1115E 04              |                  |          |             |      |          | 1.2148E 03 |             |
|               | .1900E 04              |                  |          | •           |      |          | 1.2797E 03 |             |
|               | .23685 04              |                  |          |             |      |          | 1.3471E 03 |             |
|               | .2595E 04              |                  |          |             |      |          | 1.4173E 03 |             |
|               | .3491E 04              |                  |          |             |      |          | 1.4905E 03 |             |
|               | .41658 04              |                  |          |             |      |          | 1.5673E 03 |             |
|               | .4930E 04              |                  |          |             |      |          | 1.6481E 03 |             |
|               | .5807E 04              |                  |          |             |      |          | 1.7334E 03 |             |
|               | .5807E 04              |                  |          |             |      |          | 1.8240E 03 |             |
|               |                        |                  |          |             |      |          | 1.9206E 03 |             |
|               | .7998E 04              |                  |          |             | • •  |          | 2.0243E 03 |             |
|               | .9397E 04<br>.1092E 04 |                  |          |             |      |          | 2.1366E 03 |             |
|               |                        |                  |          |             |      | +        | 2.2595E 03 |             |
|               | -3214E 04              |                  |          |             |      | +        | 2.3122E 03 |             |
| 9.8800 02 2   | •4230E 04              |                  |          |             |      | · - •    | CADIECC 03 |             |


Fig. 2.27 Printer-plot output for launch of Saturn rocket.


## Example 2.6 Control System with Compensation

A problem often encountered by the control engineer is to compensate a system so that both dynamic and steady state design specifications are met. This problem illustrates how a simple compensator can be added to a system in order to improve the transient response to a unit-step input while increasing the static-loop gain.

Consider the closed-loop configuration in Fig. 2.28. The system step response with a loop gain of 300/24 and without compensation is given in Fig. 2.29. We note that the response has excessive oscillation and a peak overshoot of 89%.

The system requirements are to increase the static-loop gain to 300/12 and design a compensator so that the overshoot for a step input is approximately 20% and the time to the first peak is equal to or less than 1 sec.

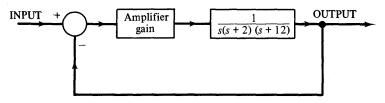

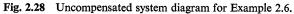

STEP RESPONSE FOR UNCOMPENSATED SYSTEM - EXAMPLE 216

PAGE 1

| TIME       OUTPUT       I       I         0.0       0.0       +         6.00005-02       8.8246E-03       +         1.2000E-01       5.8440E-02       -+         1.8000E-01       1.6470E-01      +         2.4000F-01       3.2761E-01      +         3.0000E-01       5.3782E-01      +         4.2000E-01       1.0368E      +         5.4000E-01       1.6136E      +         4.8000E-01       1.6977E      +         5.4000E-01       1.8894E      +         6.6000E-01       1.8894E      +         7.8000E-01       1.8834E      +         8.4C00E-01       1.8834E      +         9.6000E-01       1.64735E      +         9.6000E-01       1.6471E      +         1.0200E       00       1.2249E      +         1.0200E       00       1.2249E      + <td< th=""><th></th><th>MAXIM</th><th>OUTPUT VERSUS TIME</th><th>MINIMU</th><th></th></td<>   |   | MAXIM   | OUTPUT VERSUS TIME | MINIMU     |                 |
|--|---|---------|--------------------|------------|-----------------|
| $\begin{array}{cccccccccccccccccccccccccccccccccccc$   |   | 1.8894E |                    | 0.0        |                 |
| 6.0000E-02       8.8246E-03       +         1.2000E-01       5.8440E-02       -+         1.8000E-01       1.6470E-01      +         3.0000E-01       5.3782E-01      +         3.6000E-01       5.3782E-01      +         4.2000E-01       1.0368E 00      +         4.8000E-01       1.2876E 00      +         4.8000E-01       1.5136E 00      +         6.000E-01       1.6977E 00      +         6.600E-01       1.8261E 00      +         7.800E-01       1.8894E 00      +         7.800E-01       1.8894E 00      +         9.0000E-01       1.6735E CC      +         9.0000E-01       1.6735E CC      +         9.0000E-01       1.6471E 00      +         1.0200E 00       1.2649E 00      +         1.2600E 00       1.2649E 00      +         1.2600E 00       3.7874E-01      +         1.2600E 00       3.6374E-01      +   |   | 1       |                    |            |                 |
| 1.2000E-01 5.8440E-02 -+<br>1.8000E-01 1.6470E-01+<br>2.4000F-01 3.2761E-01+<br>3.0000E-01 5.3782E-01+<br>4.2000E-01 1.0368E 00+<br>4.8000E-01 1.2876E 00+<br>5.4000E-01 1.5136E 00+<br>6.0000E-01 1.6977E 00+<br>6.0000E-01 1.8894E 00+<br>7.8000E-01 1.8894E 00+<br>8.4C00E-01 1.8894E 00+<br>1.8000E-01 1.6475E 00+<br>1.0200E 00 1.2649E 00+<br>1.0200E 00 1.2649E 00+<br>1.2600E 00 1.2649E 00+<br>1.2600E 00 1.2649E 00+<br>1.2600E 00 3.7874E-01+<br>1.3200E 00 2.4353E-01+<br>1.3200E 00 2.4353E-01+<br>1.5600E 00 2.2703E-01+<br>1.6800E 00 4.9270E-01+<br>1.6800E 00+<br>1.6800E 00+<br>+<br>1.6800E 00+<br>+<br>1.6800E 00+<br>+<br>1.6800E 00+<br>+<br>1.6800E 00+<br>+<br>+   |   |         |                    |            |                 |
| 1.8000E-01 1.6470E-03+<br>2.4000E-01 3.2761E-01+<br>3.0000E-01 5.3782E-01+<br>4.2000E-01 1.0368E 00+<br>4.8000E-01 1.2876E 00+<br>5.4000E-01 1.6977E 00+<br>6.6000E-01 1.6977E 00+<br>7.200E-01 1.8894E 00+<br>7.200E-01 1.8894E 00+<br>8.4C00E-01 1.8834E 00+<br>8.4C00E-01 1.6735E C0+<br>9.0000E-01 1.6735E C0+<br>1.0200E 00 1.2649E 00+<br>1.0200E 00 1.2649E 00+<br>1.4400E 00 1.0245E 00+<br>1.2000E 00 1.0245E 00+<br>1.2600E 00 1.6835E-01+<br>1.3800E 00 1.6805E-01+<br>1.3800E 00 1.6805E-01+<br>1.5600E 00 2.1215E-01+<br>1.66200E 00 6.9587E-01+<br>1.6800E 00 6.9587E-01+<br>1.6800E 00 6.9587E-01+  |   |         |                    |            |                 |
| $\begin{array}{cccccccccccccccccccccccccccccccccccc$   |   |         |                    |            |                 |
| 3.0000E-01 5.3782E-01+<br>3.6000E-01 7.8032E-01+<br>4.2000E-01 1.0368E 00+<br>5.4000E-01 1.5136E 00+<br>5.4000E-01 1.6977E 00+<br>6.6000E-01 1.8261E 00+<br>7.2000E-01 1.8894E 00+<br>8.4000E-01 1.8894E 00+<br>8.4000E-01 1.8094E 00+<br>8.4000E-01 1.6735E 00+<br>9.6000E-01 1.6735E 00+<br>1.0200E 00 1.2649E 00+<br>1.0200E 00 1.2649E 00+<br>1.2000F 00 5.6374E-01+<br>1.2000F 00 3.7874E-01+<br>1.3200E 00 1.6805E-01+<br>1.3200E 00 1.6805E-01+<br>1.5000F 00 2.1215E-01+<br>1.6200E 00 3.2703E-01+<br>1.6200E 00 4.9270E-01+<br>1.6200E 00 4.9270E-01+<br>1.6200E 00 4.9270E-01+<br>1.6200E 00 4.9270E-01+<br>1.6200E 00 4.9270E-01+<br>1.6200E 00 4.9270E-01+   |   |         |                    |            |                 |
| 3.6000E-01       7.8032E-01      +         4.2000E-01       1.0368E 00      +         5.4000E-01       1.51365 00      +         6.0000E-01       1.6977E 0C      +         6.6000E-01       1.8261E 0C      +         7.200E-01       1.8894E 00      +         7.8000E-01       1.8894E 00      +         7.8000E-01       1.8834E 00      +         8.4000E-01       1.8834E 00      +         9.0000E-01       1.6735E 0C      +         9.0000E-01       1.6735E 0C      +         9.0000E-01       1.2649E 00      +         9.0000E-01       1.2649E 00      +         1.0200E 00       1.2649E 00      +         1.0200E 00       1.02455 00      +         1.400E 00       7.8462E-01      +         1.2600E 00       3.7874E-01      +         1.3200E 00       2.4358E-01      +         1.3200E 00       1.6305E-01      +         1.500F 00       2.1215E-01      +         1.500F 00       2.1215E-01      +         1.6200E 00       4.9270E-01   |   |         |                    |            |                 |
| $4.2000 \pm -01$ $1.0368 \pm 00$ + $4.8000 \pm -01$ $1.2876 \pm 00$ + $5.4000 \pm -01$ $1.5136 \pm 00$ + $6.000 \pm -01$ $1.6977 \pm 00$ + $6.000 \pm -01$ $1.8261 \pm 00$ + $7.200 \pm -01$ $1.8894 \pm 00$ + $7.8000 \pm -01$ $1.8834 \pm 00$ + $8.4000 \pm -01$ $1.8094 \pm 00$ + $9.0000 \pm -01$ $1.6735 \pm 00$ + $9.0000 \pm 00$ $1.2649 \pm 00$ + $1.0200 \pm 00$ $1.2649 \pm 00$ + $1.0200 \pm 00$ $1.0245 \pm 00$ + $1.2000 \pm 00$ $1.0245 \pm 01$ + $1.2000 \pm 00$ $2.4353 \pm 01$ + $1.3200 \pm 00$ $1.6305 \pm 01$ ++ $1.3800 \pm 00$ $1.6305 \pm 01$ ++  |   |         | +                  |            |                 |
| 1.2000E-01       1.2876E 00      +         5.4000E-01       1.5136E 00      +         6.0000E-01       1.6977E 0C      +         7.2000E-01       1.8261E 00      +         7.2000E-01       1.8894E 00      +         8.4000E-01       1.8894E 00      +         8.4000E-01       1.8894E 00      +         9.0000E-01       1.6735E 0C      +         9.0000E-01       1.6735E 0C      +         9.6000E-01       1.4871E 00      +         1.0200E 00       1.2649E 00      +         1.0200E 00       1.0245E 00      +         1.2000F 00       5.6374E-01      +         1.2000F 00       3.7874E-01      +         1.3200E 00       1.6805E-01      +         1.3200E 00       1.6805E-01      +         1.3200E 00       2.4353E-01      +         1.500F 00       2.1215E-01      +         1.500F 00       2.1215E-01      +         1.500F 00       3.2703E-01      +         1.6200E 00       6.9587E-01      +  |   |         | +                  | 7.8032E-01 | 3,60005-01      |
| 5.4000E-01       1.51365       00         6.0000E-01       1.6977E       00         7.8000E-01       1.8261E       00         7.8000E-01       1.8894E       00         7.8000E-01       1.8894E       00         8.400E-01       1.8894E       00         8.400E-01       1.8894E       00         9.0000E-01       1.6735E       00         9.0000E-01       1.6735E       00         1.0200E       00       1.2649E       00         1.0200E       00       1.2649E       00         1.0200E       00       1.2649E       00         1.0200E       00       1.2649E       00         1.0800E       00       1.0245E       00         1.1400E       00       7.8462E-C1      +         1.2600E       00       2.4358E-01      +         1.3200E       00       1.6305E-01      +         1.3200E       00       1.6305E-01      +         1.5600E       00       2.215E-01      +         1.5600E       00       2.2703E-01      +         1.6200E       00       4.9270E-01      +  |   |         |                    | 1.0368E 00 | 4.2000E-01      |
| 6.0000E-01       1.6977E 0C      +         6.600E-01       1.8261E 0C      +         7.8000E-01       1.8894E 00      +         8.4C00E-01       1.8094E 00      +         8.4C00E-01       1.8094E 00      +         9.0000E-01       1.6735E CC      +         9.0000E-01       1.6735E 0C      +         9.0000E-01       1.4871E 00      +         1.0200E 00       1.2649E 00      +         1.2000E 00       1.2649E 01      +         1.2000E 00       3.7874E-01      +         1.3200E 00       2.4353E-01      +         1.3200E 00       1.6305E-01      +         1.500F 00       2.1215E-01      +         1.500F 00       2.1215E-01      +         1.5600E 00       3.2703E-01      +         1.6200E 00       6.9587E-01      +         1.6800E 00       6.9587E-01  |   |         | +                  | 1.2876E 00 | 4.8000E-01      |
| 6.6C00E-01       1.8261E 0C  |   | +       | +                  | 1.51365 00 | 5.4000E-01      |
| 7.2000E-01       1.8894E 00      +         7.8000E-01       1.8094E 00      +         8.400E-01       1.8094E 00      +         9.0000E-01       1.6735E 00      +         9.0000E-01       1.6735E 00      +         1.0200E 00       1.2649E 00      +         1.0200E 00       1.0245E 00      +         1.400E 00       7.8462E-01      +         1.2600E 00       3.7874E-01      +         1.2600E 00       2.4353E-01      +         1.3200E 00       1.6805E-01      +         1.3800E 00       1.6805E-01      +         1.5000F 00       2.1215E-01      +         1.5600E 00       3.2703E-01      +         1.6800E 00       4.9270E-01      +         1.6800E 00       6.9587E-01      +  |   | +       |                    | 1.6977E 00 | 6.0000E-01      |
| 7.2000E-01       1.8894E 00      +         7.8000E-01       1.8094E 00      +         8.400E-01       1.8094E 00      +         9.0000E-01       1.6735E 00      +         9.0000E-01       1.6735E 00      +         1.0200E 00       1.2649E 00      +         1.0200E 00       1.0245E 00      +         1.400E 00       7.8462E-01      +         1.2600E 00       3.7874E-01      +         1.2600E 00       2.4353E-01      +         1.3200E 00       1.6805E-01      +         1.3800E 00       1.6805E-01      +         1.5000F 00       2.1215E-01      +         1.5600E 00       3.2703E-01      +         1.6800E 00       4.9270E-01      +         1.6800E 00       6.9587E-01      +  |   | +       |                    | 1.82615 00 | 6.6C00E-01      |
| 7.8000E-01       1.8834E 00  | , |         |                    | 1.8894= 00 |                 |
| 8.4C00E-01 1.8094E 00+<br>9.0000E-01 1.6735E C0+<br>1.0200E 00 1.2649E 00+<br>1.0200E 00 1.0245E 00+<br>1.1400E 00 7.8462E-C1+<br>1.2000E 00 5.6374E-01+<br>1.2600E 00 3.7874E-01+<br>1.3200E 00 1.6805E-01+<br>1.3200E 00 1.6805E-01+<br>1.5000E 00 2.1215E-01+<br>1.5600E 00 2.1215E-01+<br>1.6200E 00 4.9270E-01+<br>1.6800E 00 6.9587E-01+   |   | +       |                    |            |                 |
| 9.0000E-01       1.6735E CC      +         9.6000E-01       1.4871E 00      +         1.0200E 00       1.2649E CC      +         1.0800E 00       1.02455 00      +         1.1400F 00       7.8462E-C1      +         1.2000F 00       5.6374E-01      +         1.2600E 00       3.7874E-01      +         1.3200E 00       2.4353E-01      +         1.3800E 00       1.6805E-01      +         1.500F 00       2.1215E-01      +         1.500F 00       2.1215E-01      +         1.6200E 00       4.9270E-01      +         1.6200E 00       4.9270E-01      +         1.6800E 00       6.9587E-01      +  |   | +       |                    |            |                 |
| 9.6000E-01 1.4871E 00+<br>1.0200E 00 1.2649E 00+<br>1.0800E 00 1.0245E 00+<br>1.1400E 00 7.8462E-01+<br>1.2600E 00 5.6374E-01+<br>1.2600E 00 2.4353E-01+<br>1.3200E 00 2.4353E-01+<br>1.3800E 00 1.6805E-01+<br>1.4400E 00 1.5754E-01+<br>1.5600E 00 3.2703E-01+<br>1.5600E 00 3.2703E-01+<br>1.6800E 00 6.9587E-01+   |   | +       |                    |            |                 |
| 1.0200E 00<br>1.0245E 00<br>1.0245 |   | -+      | +                  |            | • • • • • • • • |
| 1.0200E 00       1.0245E 00      +         1.1400E 00       7.8462E-C1      +         1.2000F 00       5.6374E-01      +         1.2600E 00       3.7874E-01      +         1.3200E 00       2.4353E-01      +         1.3800E 00       1.6805E-01      +         1.5000F 00       2.1215E-01      +         1.5000F 00       2.1215E-01      +         1.5000F 00       3.2703E-01      +         1.6200E 00       4.9270E-01      +         1.6800E 00       6.9587E-01      +   |   |         | -                  |            |                 |
| 1.1400E 00 7.8462E-01+<br>1.2000E 00 5.6374E-01+<br>1.2600E 00 3.7874E-01+<br>1.3200E 00 2.4353E-01+<br>1.3800E 00 1.6805E-01+<br>1.4400E 00 1.5754E-01+<br>1.5000E 00 2.1215E-01+<br>1.5600E 00 3.2703E-01+<br>1.6200E 00 4.9270E-01+<br>1.6800E 00 6.9587E-01+   |   |         |                    |            |                 |
| 1.2000F 00 5.6374E-01+<br>1.2600E 00 3.7874E-01+<br>1.3200E 00 2.4353E-01+<br>1.3800E 00 1.6805E-01+<br>1.4400E 00 1.5754E-01+<br>1.5000F 00 2.1215E-01+<br>1.5600E 00 3.2703E-01+<br>1.6200E 00 4.9270E-01+<br>1.6800E 00 6.9587E-01+   |   |         |                    |            |                 |
| 1.2600E 00 3.7874E-01+<br>1.3200E 00 2.4353E-01+<br>1.3800E 00 1.6805E-01+<br>1.4400E 00 1.5754E-01+<br>1.5000F 00 2.1215E-01+<br>1.5600E 00 3.2703E-01+<br>1.6200E 00 4.9270E-01+<br>1.6800E 00 6.9587E-01+   |   |         | -                  |            |                 |
| 1.3200E 00 2.4353E-01+<br>1.3800E 00 1.6805E-01+<br>1.4400E 00 1.5754E-01+<br>1.5000F 00 2.1215E-01+<br>1.5600E 00 3.2703E-01+<br>1.6200E 00 4.9270E-01+<br>1.6800E 00 6.9587E-01+   |   |         | +                  |            |                 |
| 1.3800E 00 1.6805E-01+<br>1.4400E 00 1.5754E-01+<br>1.5000F 00 2.1215E-01+<br>1.5600E 00 3.2703E-01+<br>1.6200E 00 4.9270E-01+<br>1.6800E 00 6.9587E-01+   |   |         |                    |            |                 |
| 1.4400E 00 1.5754E-01+<br>1.5000F 00 2.1215E-01+<br>1.5600E 00 3.2703E-01+<br>1.6200E 00 4.9270E-01+<br>1.6800E 00 6.9587E-01+   |   |         |                    |            |                 |
| 1.5000F 00 2.1215E-01+<br>1.5600E 00 3.2703E-01+<br>1.6200E 00 4.9270E-01+<br>1.6800E 00 6.9587E-01+   |   |         |                    |            |                 |
| 1.5600E 00 3.2703E-01+<br>1.6200E 00 4.9270E-01+<br>1.6800E 00 6.9587E-01+   |   |         |                    |            |                 |
| 1.6200E 00 4.9270E-01+<br>1.6800E 00 6.9587E-01+   |   |         |                    |            | 1.5000F 00      |
| 1.6800E 00 6.9587E-01+   |   |         |                    | 3.2703E-01 | 1.5600E 00      |
|  |   |         | -+                 | 4.9270E-01 | 1.6200E 00      |
|  |   |         | +                  | 6.95875-01 | 1.6800E 00      |
| 1.7400E 00 9.2048E-01+   |   |         | +                  | 9.2048E-01 | 1.7400E 00      |
| 1.8000E 00 1.1490E CO+   |   |         | +                  | 1.1490E 00 | 1.8000E 00      |
| 1.8600E 00 1.3637E 00+   |   |         | +                  | 1.3637E 00 | 1.8600E 00      |
| 1.92005 00 1.54826 00+   |   | +       | +                  | 1.5482E 00 | 1.92005 00      |
| 1,9800E 00 1,6886E 00+   |   | +       |                    | 1.68865 00 |                 |
| 2.04005 00 1.77445 00  |   | +       |                    |            |                 |
| 2.1000E 00 1.7996E CC+   |   | +       |                    |            |                 |
| 2.1600 00 1.7628 00  |   | +       |                    |            |                 |
| 2.22005 00 1.66755 00  |   | +       |                    |            |                 |
|  |   | +       |                    |            |                 |
|  |   | •       |                    |            |                 |
| 2.4005 00 1.12825 00+  |   |         | •                  |            |                 |
|  |   |         |                    |            |                 |
|  |   |         |                    |            |                 |
|  |   |         |                    |            |                 |
| 2.5800E 00 5.2118E-01+   |   |         | · • •              |            |                 |
| 2.64005 00 3.77235-01+   |   |         |                    |            |                 |
| 2.7CCOE CO 2.8279E-01+   |   |         |                    |            |                 |
| 2.76005 00 2.44645-01+   |   |         |                    |            |                 |
| 2.8200E 00 2.6518E-01+   |   |         |                    |            |                 |
| 2.8800E 00 3.4222E-01+   |   |         |                    |            |                 |
| 2.9400E 00 4.6926E-01+   |   |         | +                  |            |                 |
| 3.0000E 00 6.35992-01+   |   |         | +                  | 6.35992-01 | 3.0000E 00      |


Fig. 2.29 Uncompensated system step response for Example 2-6.

Using classical design procedures, one can define a proposed compensator with a transfer function given by

$$G_c(s) = \frac{(s+2.2)(s+0.2)}{(s+8.0)(s+0.0275)}$$
(2.13)

The diagram in Fig. 2.30 includes this compensator as well as a block arrangement suitable for CSMP simulation. Figure 2.31 gives the program listing using the variable names as specified in Fig. 2.30. When compared with Example 2.2, one notes that the essential difference is the addition of the compensator,  $G_c(s)$ . The CSMP statement and formulation for a simple zero and pole (taken together) are summarized in Table 2.5.

#### Table 2.5

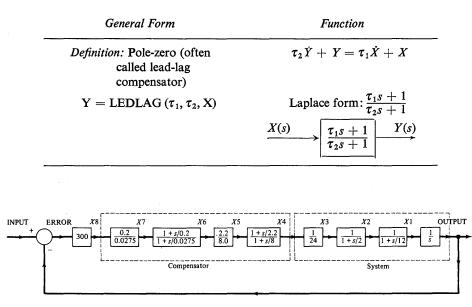

#### Formulation for a Lead-Lag Structure

Fig. 2.30 Diagram for programming compensated system of Example 2.6.

From a practical point of view, the LEDLAG formulation (as illustrated in this example) can be used for either a lead or lag compensator as defined in classical control theory.

The step response of the system with the compensator is shown in Fig. 2.32. We see that the problem specifications are met. One important reason for employing CSMP for a problem of this nature is that the graphic methods used in designing compensators do not generally yield a convenient method for determining the system step response. This is particularly true for higher-order systems.


```
INPUT = STEP(0.0)
ERROR = INPUT - CUTPUT
X8 = 300.0*ERROR
X7 = \{0.2/0.0275\} \times 8
X6 = LEDLAG(1.0/0.2, 1.0/0.0275, X7)
X5 = (2.2/8.0) * X6
X4 = LEDLAG(1.0/2.2,1.0/8.0,X5)
X3 = (1.0/24.0) * X4
X2 = REALPL(0.0, 1.0/2.0, X3)
X1 = REALPL(0.0, 1.0/12.0, X2)
OUTPUT = INTGRL(0,0,X1)
TIMER FINTIM = 6.0, OUTDEL = 0.12
PRTPLT OUTPUT
LABEL
         RESPONSE FOR COMPENSATED SYSTEM - EXAMPLE 2-6
END
STOP
ENDJOB
```

Fig. 2.31 CSMP program listing for Example 2.6.

RESPONSE FOR COMPENSATED SYSTEM - EXAMPLE 2-6

PAGE 1

|            |            | NIMUM OUTPUT VERSUS TIME MAXIMUM |
|------------|------------|----------------------------------|
|            | 0.0        | 1.2068E 00                       |
| TIME       | OUTPUT     | I                                |
| 0.0        | 0.0        | +                                |
| 1.2000E-01 | 4.9649E-02 |                                  |
| 2.4000E-01 | 2.4100E-01 | +                                |
| 3.6C00E-01 | 5.1065E-01 | +                                |
| 4.8000E-01 | 7.7689E-01 | +                                |
| 6.0000E-01 | 9.8866E-01 | ~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~   |
| 7.20C0E-01 | 1.1266E 00 |                                  |
| 8.4000E-01 | 1.1941E 00 |                                  |
| 9.6CC0E-01 | 1.20685 00 |                                  |
| 1.0800E 00 | 1.1846E 00 |                                  |
| 1.2000E 00 | 1.1458E 00 |                                  |
| 1.3200E 00 | 1.1045E 00 |                                  |
| 1.44005 00 | 1.0691E 00 |                                  |
| 1.56COE 00 | 1.0436E 00 |                                  |
| 1.6800E 00 | 1.0283E 00 |                                  |
| 1.8000E 00 | 1.0216E 00 |                                  |
| 1.9200E 00 | 1.0209E 00 |                                  |
| 2.0400E 00 | 1.0235E 0C |                                  |
| 2.1600E 00 | 1.0274E 00 |                                  |
| 2.2800E 00 | 1.0309E 00 |                                  |
| 2.4000E 00 | 1.0335E 00 | +                                |
| 2.5200E 00 | 1.0348E 00 |                                  |
| 2.6400E 00 | 1.0349E 00 |                                  |
| 2.76COE 00 | 1.0342E 00 |                                  |
| 2.8800E 00 | 1.0330E 00 |                                  |
| 3.0000E 00 | 1.0315E 00 | +                                |
| 3.1200E 00 | 1.0301E 00 | +                                |
| 3.2400E 00 | 1.0288E 00 |                                  |
|            | -          |                                  |

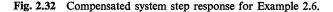

## Example 2.7 RLC Circuit Problem

The purpose of this example is to illustrate how CSMP can be used to simulate an electric circuit. A series RLC circuit is given in Fig. 2.33. Suppose it is desired to find the voltage across the capacitor in response to a pulse-train input of unit amplitude. There

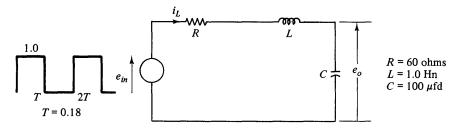


Fig. 2.33 Series RLC circuit.

are several approaches that can be used to determine the solution. Three methods will be considered here.

Method 1—Transfer Function. The transfer function between  $e_o(t)$  and  $e_{in}(t)$  can be expressed as:

$$\frac{E_o(s)}{E_{in}(s)} = \frac{\frac{1}{LC}}{s^2 + \left(\frac{R}{L}\right)s + \frac{1}{LC}}$$
(2.14)

This can easily be simulated by CSMP provided we know the nature of the roots of the characteristic equation. Two possibilities exist in that the roots can either be real or complex. If the roots are real we can solve the problem by applying REALPL twice. A function (CMPXPL) which requires only one program statement can be used for either real or complex roots. The solution using this function will be presented later in this example.

Method 2-State Variable Representation. The following equations can be written for the previous circuit.

$$e_{in}(t) = Ri(t) + L \frac{di(t)}{dt} + e_o(t)$$
 (2.15)

$$i(t) = \frac{C \, de_o(t)}{dt} \tag{2.16}$$

Rearranging yields

$$\dot{e}_o(t) = \frac{i(t)}{C} \tag{2.17}$$

$$\dot{i}(t) = -\frac{e_o(t)}{L} - \frac{Ri(t)}{L} + \frac{e_{in}(t)}{L}$$
(2.18)

These last two equations form a state-variable representation of the system where the states are  $e_o(t)$  and i(t).

Method 3—Direct Circuit Application. Kirchoff's law, applied directly to the RLC circuit, yields


$$e_{in}(t) = Ri(t) + L\frac{di(t)}{dt} + \frac{1}{C}\int_{0}^{t} i(t) dt$$
 (2.19)

A "graphical" representation for the solution of this equation is given later.

*Pulse Train Generation.* The input voltage given in Fig. 2.33 is a train of square waves which can be generated by using two standard CSMP functions. These two functions are IMPULS and PULSE and are defined in Tables 2.6 and 2.7.

## Table 2.6


## Formulation for an Impulse Generator†

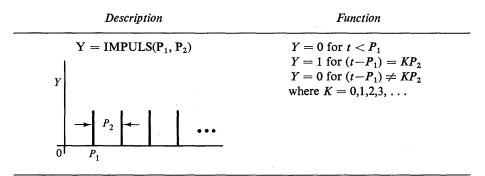


†This impulse function does not have the same properties as the well-known Dirac (impulse) function.

#### Table 2.7

## Formulation for Pulse Generator

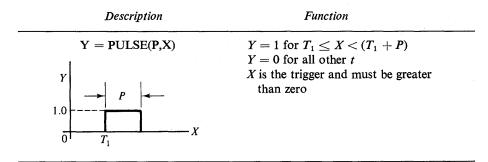

As an example, suppose the following pulse-train is desired.

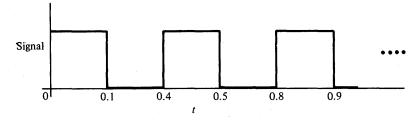

The trigger signal for the pulse will be

## FLASH = IMPULS(0.0,0.4)

where FLASH (a dummy variable) plays the role of X for the pulse function. The expres-

sion for the output pulse-train is then given by

SIGNAL = PULSE(0.1, FLASH)

With this preliminary background we return to the circuit problem and give a solution using each method described above.

Solution by Method 1. As a first step in this solution one should determine the particular values of  $\xi$  and  $\omega_n$  from Eq. (2.14) (the characteristic equation), which can be easily accomplished by comparing

$$s^2 + \frac{R}{L}s + \frac{1}{LC} = 0 (2.20)$$

with

$$s^2 + 2\xi\omega_n s + \omega_n^2 = 0 \tag{2.21}$$

Recall from linear system theory that if

 $\xi = 1$ ; the roots are real and equal (critical damped)

 $\xi > 1$ ; the roots are real and unequal (overdamped)

 $\xi < 1$ ; the roots are complex (underdamped)

Comparing coefficients in Eqs. (2.20) and (2.21) gives

$$\omega_n = \sqrt{1/LC} \tag{2.22}$$

$$\xi = \frac{R}{2\sqrt{L/C}} \tag{2.23}$$

Using the values of R, L, and C from Fig. 2.33 results in

$$\omega_n = 100.0, \quad \xi = 0.3$$
 (2.24)

which implies that the system has complex roots. Complex roots can be directly simulated by using the function defined in the Table 2.8, provided the roots are in the denominator of the transfer function. Roots in the denominator of a transfer function are called poles and thus for this case we refer to these roots as complex poles.

## Table 2.8

## Formulation for Complex Poles†

| General Form  | Function  |
|---|---|
| Definition: Complex poles<br>$Y = CMPXPL(IC1,IC2,\zeta,\omega_n,X)$<br>IC1 = Y(0) | $\ddot{y}(t) + 2\xi\omega_n\dot{y}(t) + \omega_n^2y(t) = x(t)$<br>Equivalent Laplace form |
| $IC2 = \dot{Y}(0)$<br>For any value of $\zeta$                                    | $\xrightarrow{X} \qquad \frac{1}{s^2 + 2\xi \omega_n s + \omega_n^2} \xrightarrow{Y}$     |

†The poles are not required to be complex to use CMPXPL. As noted in the table any value of  $\zeta$  is acceptable and thus the function can also be used when the poles are real.

Ch. 2

A diagram giving a block arrangement for simulating Eq. (2.20) is given in Fig. 2.34. The actual program listing of the simulation statements is given directly below the diagram in Fig. 2.35.

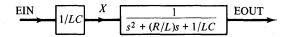


Fig. 2.34 Simulation diagram for RLC circuit (Method 1 solution).

```
* EXAMPLE PROBLEM FOR RLC NETWORK - EXAMPLE 2-7
PARAM L = 1.0, C = 0.0001, R = 60.0
TRIG = IMPULS(0.0,0.036)
EIN = PULSE(0.18,TRIG)
X = EIN*(1.0/(L*C))
EOUT = CMPXPL(0.0,0.0,R/(2.0*SQRT(L/C)),SQRT(1.0/(L*C)),X)
TIMER FINTIM = 0.4, OUTDEL = 0.008
PRTPLT EOUT(EIN)
LABEL PULSE TRAIN RESPONSE ACROSS CAPACITOR OF RLC NETWORK
PRTPLT EIN
LABEL PLOT SHOWING THE PULSE TRAIN TO RLC NETWORK
END
STOP
ENDJOB
```

Fig. 2.35 Program listing for RLC circuit (Method 1 solution).

For convenience, the circuit parameter values are listed on a PARAMETER card. This gives the added flexibility of changing the circuit values without repunching several problem statement cards.

The voltage response across the capacitor is shown by the printer-plot of Fig. 2.36 which gives the response for a time increment involving two input pulses.

Solution by Method 2. The program listing for the solution of Eqs. (2.17) and (2.18) is given in Fig. 2.37. An advantage of using this approach is that one is not required to determine the form of the roots for the circuit characteristic equation. Formulating the problem in this manner has the added advantage of giving the solution for the current in the circuit. This current response is given in Fig. 2.38.

The voltage  $e_o(t)$  is identical to the solution in method 1; therefore, another printer-plot for this variable is not given.

Solution by Method 3. The diagram in Fig. 2.39 presents one form of solution for Eq. (2.19). Anyone familiar with analog computer simulation recognizes that differentiation has a tendency to produce noise (spikes). However, this approach was selected here to stress the use of the derivative function in CSMP. This function is defined in Table 2.9.

## ULSE TRAIN RESPONSE ACROSS CAPACITOR OF RLC NETWORK

PAGE 1

| $\begin{array}{cccccccccccccccccccccccccccccccccccc$  |             |                    |             | EOUT | VERSUS  | TIME | MAXIMUM    |              |     |
|---|-------------|--------------------|-------------|------|---------|------|------------|--------------|-----|
| $ \begin{array}{cccccccccccccccccccccccccccccccccccc$   |             |                    |             |      |         |      | 1.3716E 00 | <b>C T N</b> |     |
| $\begin{array}{cccccccccccccccccccccccccccccccccccc$  |             |                    | 1           |      |         |      | 1          |              | • • |
| $\begin{array}{cccccccccccccccccccccccccccccccccccc$  |             |                    |             |      |         |      |            |              |     |
| 4:000E-02       1:2052E 00  |             |                    |             | +    |         |      |            |              |     |
| .:000E-02       1.2707E 00  |             |                    |             |      |         | -+   | •          |              |     |
| .0000E-02       1.2945E 00  |             |                    |             |      |         |      | +          |              |     |
| $\begin{array}{cccccccccccccccccccccccccccccccccccc$  |             |                    |             |      |         |      | +          |              |     |
| • COCCDE-02       8,3762E-01  |             |                    |             |      |         |      | +          |              |     |
| +000E-02       8.6384E-01   |             |                    |             |      |         | +    |            |              |     |
| 12001-02       8.8378E-01   |             |                    |             |      |         | +    |            |              |     |
| • 0C00E-02       • 0.5213E-01   |             |                    | *********** |      |         | +    |            |              |     |
| • BCODE-02       1.0175E 00   | -2000E-02   | 8.8378E-01         |             |      |         | +    |            | 1.0000E      | 00  |
| 0.0000-02       1.04955       00       1.00005       00         0.400E-01       1.04555       00       1.00005       00         1.200E-01       1.04555       00       1.00005       00         .2000E-01       9.9581E-01       1.00005       00         .2000E-01       9.8235E-01       1.00005       00         .2000E-01       9.8235E-01       1.00005       00         .4000E-01       9.8235E-01       1.00005       00         .4000E-01       9.8235E-01       1.00005       00         .4000E-01       9.0034E-01       1.00005       00         .6000E-01       1.00068       00       1.00005       00         .6600E-01       1.00038       00       1.00005       00         .6600E-01       1.00388       00       1.00005       00         .6600E-01       1.00388       00       1.00005       00         .6600E-01       1.00388       00       1.00005       00         .6000E-01      2350E-01   |             |                    |             |      |         | +    |            |              |     |
| $\begin{array}{cccccccccccccccccccccccccccccccccccc$  |             |                    |             |      |         | +    |            | 1.0000E      | 00  |
| $\begin{array}{cccccccccccccccccccccccccccccccccccc$  | •0000E-02   | <b>1.04</b> 95E 00 |             |      |         | +    |            | 1.0000E      | 00  |
| 12000E-01       3,9581E-01  | •0400E-01   | 1.04555 00         |             |      |         | +    |            | 1.0000E      | 00  |
| 280000       34,00000       1,000000       1,000000       1,000000       1,000000       1,000000       1,000000       0,000000       1,000000       0,000000       1,000000       0,000000       1,000000       0,000000       1,000000       0,000000       0,000000       0,000000       0,000000       0,000000       0,000000       0,000000       0,000000       0,000000       0,000000       0,000000       0,000000       0,000000       0,000000       0,0000000       0,0000000       0,0000000       0,0000000       0,0000000       0,0000000       0,0000000       0,0000000       0,0000000       0,0000000       0,0000000       0,0000000       0,0000000       0,0000000       0,0000000       0,0000000       0,0000000       0,00000000       0,00000000       0,00000000       0,00000000       0,00000000       0,0000000       0,00000000       0,00000000       0,00000000       0,00000000       0,00000000       0,00000000       0,000000000       0,0000000000000       0,00000000000000000000000000000000000  | 1200E-01    | 1.0211E 00         | *           |      |         | +    |            | 1.0000E      | 00  |
| 3:800E-01       9.8235E-01  | •2000E-01   | 9.9581E-01         |             |      |         | +    |            | 1.0000E      | 00  |
| • 4400E=01       9.9094E=01   | .2800E-01   | 9.8220E-01         |             |      |         | +    |            | 1.0000E      | 00  |
| .5200E-01       1.0006E 00  | •3600E-01   | 9.82355-01         |             |      |         | +    |            | 1.0000E      | 00  |
| .6CODE-01       1.0063E 00  | .4400E-01   | 9.9094E-01         |             |      |         | +    |            | 1.0000E      | 00  |
| .6C00E-01       1.0063E 00  | .5200E-01   | 1.0006E 00         |             |      |         | +    |            | 1.0000E      | 00  |
| .6800E-01       1.0068E       00       1.0000E       00         .7600E-01       1.0038E   | .6CODE-01   | 1.0063E 00         |             |      |         | +    |            |              |     |
| .7600E-01       1.0038E 00      +       1.0000E 00         .8400E-01       9.2917E-01      +       0.0         .9200E-01       4.8989E-02      +       0.0         .0800E-01       -3.2360E-01       -+       0.0         .1600E-01       -3.5677E-01       +       0.0         .2400E-01       -2.0539E-01      +       0.0         .2400E-01       -1.2740E-02      +       0.0         .4000E-01       1.3591E-01      +       0.0         .4000E-01       1.3591E-01      +       0.0         .4000E-01       1.3591E-01      +       0.0         .4000E-01       1.3591E-01      +       0.0         .4000E-01       1.2366E-02      +       0.0         .4800E-01       1.2366E-02      +       0.0         .7200E-01       -3.8451E-02      +       0.0         .8800E-01       -3.8451E-02      +       0.0         .8800E-01       -3.8451E-02      ++       0.0         .9600E-01       1.2821E-02      ++       0.0         .9600E-01       1.8267E-02      ++       0.0         .2000E-01<  |             | 1.0068E 00         |             |      |         | +    |            |              |     |
| 8400E-01       9.2917E-01      +       0.0         9200E-01       4.8999E-01      +       0.0         0.000E-01       -1.7989E-02      +       0.0         1.600E-01       -3.2360E-01       -+       0.0         1.600E-01       -3.5577E-01       +       0.0         .2400E-01       -2.0539E-01      +       0.0         .3200E-01       -1.2740E-02      +       0.0         .4800E-01       1.1261E-01      +       0.0         .4800E-01       1.3591E-01      ++       0.0         .5600E-01       8.4858E-02      ++       0.0         .5600E-01       8.4858E-02      ++       0.0         .6400E-01       1.2366E-02      ++       0.0         .6400E-01       -5.1376E-02      ++       0.0         .8600E-01       -5.4623E-02      ++       0.0         .8600E-01       -7.5722E-03      +       0.0         .200E-01       1.29267E-02      ++       0.0         .200E-01       1.29267E-02      ++       0.0         .200E-01       1.9755E-03      ++       0.0         .200E-0  |             |                    |             |      |         | +    |            |              |     |
| 9200E-01       4.8999E-01      +       0.0         0000E-01       -1.7989E-02      +       0.0         0.800E-01       -3.2360E-01       +       0.0         1600E-01       -3.5677E-01       +       0.0         ,2400E-01       -2.0539E-01      +       0.0         ,2400E-01       -1.2740E-02      +       0.0         ,3200E-01       1.1261E-01      +       0.0         ,4000E-01       1.3591E-01      +       0.0         ,4000E-01       1.3591E-01      +       0.0         ,6400E-01       1.2366E-02      +       0.0         ,6400E-01      3.8451E-02      +       0.0         ,7200E-01       -3.8451E-02      +       0.0         ,8800E-01       -3.4623E-02      +       0.0         ,8800E-01       -3.4623E-02      +       0.0         ,9600E-01       1.2821E-02      +       0.0         ,2000E-01       1.9267E-02      +       0.0         ,2000E-01       1.9267E-02      +       0.0         ,2000E-01       1.9267E-03      +       0.0         ,400E-03 </td <td>• • • • • •</td> <td></td> <td></td> <td></td> <td></td> <td>+</td> <td></td> <td></td> <td>••</td> | • • • • • • |                    |             |      |         | +    |            |              | ••  |
| .0000E-01       -1.7989E-02      +       0.0         .0800E-01       -3.2360E-01       -+       0.0         .1600E-01       -3.2360E-01       +       0.0         .2400E-01       -2.0539E-01      +       0.0         .3200E-01       -1.2740E-02      +       0.0         .3200E-01       -1.2740E-02      +       0.0         .4800E-01       1.1261E-01      +       0.0         .4800E-01       1.3591E-01      +       0.0         .5600E-01       8.4858E-02      +       0.0         .5600E-01       8.4858E-02      +       0.0         .7200E-01       -3.8451E-02      +       0.0         .7200E-01       -3.8451E-02      +       0.0         .8800E-01       -3.4623E-02      +       0.0         .8800E-01       -3.4623E-02      +       0.0         .9600E-01       1.8267E-02      +       0.0         .0400E-01       1.8267E-02      +       0.0         .2800E-01       3.9656E-03      +       0.0         .2800E-01       -1.9129E-03      +       0.0         .2800E-01 <td></td> <td></td> <td></td> <td></td> <td>-+</td> <td></td> <td></td> <td></td> <td></td>         |             |                    |             |      | -+      |      |            |              |     |
| 0800E-01       -3.2360E-01       -+       0.0         1600E-01       -3.5677E-01       +       0.0         2400E-01       -2.0539E-01      +       0.0         3200E-01       -1.2740E-02      +       0.0         4003E-01       1.1261E-01      +       0.0         4000E-01       1.3591E-01      +       0.0         5600E-01       8.4858E-02      +       0.0         5600E-01       1.2366E-02      +       0.0         5600E-01       -3.8451E-02      +       0.0         7200E-01       -3.8451E-02      +       0.0         8800E-01       -5.1376E-02      +       0.0         9600E-01       -7.5722E-03      +       0.0         9600E-01       1.2821E-02      +       0.0         1200E-01       1.2875E-02      +       0.0         2800E-01       -3.582E-03      +       0.0         2800E-01       -7.1634E-03      +       0.0         3600E-01       -5.5832E-03      +       0.0         5200E-01       -5.5832E-03      +       0.0         6800E-01       2.6182E-   |             |                    |             |      |         |      |            |              |     |
| 1600E-01       -3.5677E-01       +       0.0         2400E-01       -2.0539E-01      +       0.0         3200E-01       -1.2740E-02      +       0.0         ,4000E-01       1.1261E-01      +       0.0         ,4000E-01       1.3591E-01      +       0.0         ,4000E-01       1.3591E-01      +       0.0         ,6400E-01       1.3591E-02      +       0.0         ,6400E-01       1.2366E-02      +       0.0         ,7200E-01       -3.8451E-02      +       0.0         ,7200E-01       -5.1376E-02      +       0.0         ,8000E-01       -5.1376E-02      +       0.0         ,9600E-01       -7.5722E-03      +       0.0         ,9600E-01       1.2821E-02      +       0.0         ,1200E-01       1.9267E-02      +       0.0         ,2600E-01       1.9967E-03      +       0.0         ,2600E-01       -4.1406E-03      +       0.0         ,2600E-01       -5.5832E-03      +       0.0         ,3600E-01       -5.5832E-03      +       0.0         ,4400E-   |             |                    | -+          |      |         |      |            |              |     |
| ,2400E-01       -2.0539E-01      +       0.0         ,3200E-01       -1.2740E-02      +       0.0         ,4000E-01       1.1261E-01      +       0.0         ,4800E-01       1.3591E-01      +       0.0         ,6400E-01       1.3591E-01      +       0.0         ,6400E-01       1.2366E-02      +       0.0         ,6400E-01       1.2366E-02      +       0.0         ,6400E-01       -3.8451E-02      +       0.0         ,7200E-01       -3.8451E-02      ++       0.0         ,8000E-01       -5.1376E-02      ++       0.0         ,8000E-01       -7.5722E-03      ++       0.0         ,9600E-01       -7.5722E-03      ++       0.0         ,2000E-01       1.2821E-02      ++       0.0         ,2000E-01       1.9267E-02      ++       0.0         ,2000E-01       3.9656E-03      ++       0.0         ,2000E-01       -5.5822E-03      ++       0.0         ,4000E-01       -7.1634E-03      ++       0.0         ,6000E-01       -1.9129E-03      ++       0.0 <tr< td=""><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr<>              |             |                    |             |      |         |      |            |              |     |
| $\begin{array}{cccccccccccccccccccccccccccccccccccc$  |             |                    |             |      |         |      |            |              |     |
| .4000E-01       1.1261E-01      +       0.0         .4800E-01       1.3591E-01      +       0.0         .5600E-01       8.4858E-02      +       0.0         .6400E-01       1.2366E-02      +       0.0         .7200E-01       -3.8451E-02      +       0.0         .8000E-01       -5.1376E-02      +       0.0         .8000E-01       -3.4623E-02      +       0.0         .8800E-01       -3.4623E-02      +       0.0         .9600E-01       -7.5722E-03      +       0.0         .9600E-01       1.2821E-02      +       0.0         .1200E-01       1.9267E-02      +       0.0         .2000E-01       1.9267E-02      +       0.0         .2000E-01       1.9267E-02      +       0.0         .2000E-01       1.93975E-02      +       0.0         .2000E-01       1.9267E-03      +       0.0         .2000E-01       -5.5832E-03      +       0.0         .4000E-01       -1.9129E-03      +       0.0         .6800E-01       2.6182E-01      ++       0.0  |             |                    |             |      |         |      |            |              |     |
| ,4800E-01       1.3591E-01      +       0.0         ,5600E-01       8.4858E-02      +       0.0         ,6400E-01       1.2366E-02      +       0.0         ,7200E-01       -3.8451E-02      +       0.0         ,7200E-01       -3.8451E-02      +       0.0         ,8000E-01       -5.1376E-02      +       0.0         ,8000E-01       -3.4623E-02      +       0.0         ,9600E-01       -7.5722E-03      +       0.0         ,9600E-01       1.2821E-02      +       0.0         ,0400E-01       1.2821E-02      +       0.0         ,0400E-01       1.9267E-02      +       0.0         ,2000E-01       1.3975E-02      +       0.0         ,2800E-01       3.9656E-03      +       0.0         ,2800E-01       -4.1406E-03      +       0.0         ,4000E-01       -1.5322E-03      +       0.0         ,4000E-01       -1.9129E-03      +       0.0         ,6800E-01       2.6182E-01      +       0.0         ,6800E-01       2.6182E-01      +       0.0 <tr< td=""><td></td><td></td><td></td><td>-+</td><td></td><td></td><td></td><td></td><td></td></tr<>                        |             |                    |             | -+   |         |      |            |              |     |
| ,5600E-01       8.4858E-02      +       0.0         ,6400E-01       1.2366E-02      +       0.0         ,7200E-01       -3.8451E-02      +       0.0         ,8000E-01       -5.1376E-02      +       0.0         ,8000E-01       -3.4623E-02      +       0.0         ,9600E-01       -7.5722E-03      +       0.0         ,9600E-01       1.2821E-02      +       0.0         ,0400E-01       1.2821E-02      +       0.0         ,0400E-01       1.2821E-02      +       0.0         ,2000E-01       1.3975E-02      +       0.0         ,2800E-01       3.9656E-03      +       0.0         ,2800E-01       3.9656E-03      +       0.0         ,2800E-01       -4.406E-03      +       0.0         ,4400E-01       -7.1634E-03      +       0.0         ,6800E-01       -1.9129E-03      +       0.0         ,6800E-01       2.6182E-01      +       0.0         ,6800E-01       2.6182E-01      +       1.0000E 00         ,6800E-01       7.8072E-01      +       1.0000E 00     <   |             |                    |             |      |         |      |            |              |     |
| ,6400E-01       1.2366E-02      +       0.0         ,7200E-01       -3.8451E-02      +       0.0         ,8000E-01       -5.1376E-02      +       0.0         ,8000E-01       -3.4623E-02      +       0.0         ,9600E-01       -3.4623E-02      +       0.0         ,9600E-01       -3.4623E-02      +       0.0         ,9600E-01       1.2821E-02      +       0.0         ,0400E-01       1.2821E-02      +       0.0         ,2000E-01       1.9267E-02      +       0.0         ,2000E-01       1.3975E-02      +       0.0         ,2000E-01       1.3975E-03      +       0.0         ,2000E-01       -41406E-03      +       0.0         ,2600E-01       -41406E-03      +       0.0         ,200E-01       -5.5832E-03      +       0.0         ,6800E-01       2.6182E-01      +       0.0         ,6800E-01       2.6182E-01      +       1.0000E 00         ,7600E-01       7.8072E-01      +       1.0000E 00         ,9200E-01       1.3716E 00      +       1.0000E 00 <td></td> <td></td> <td></td> <td>-*</td> <td></td> <td></td> <td></td> <td></td> <td></td>               |             |                    |             | -*   |         |      |            |              |     |
| ,7200E-01       -3.8451E-02      +       0.0         ,8000E-01       -5.1376E-02      +       0.0         ,8000E-01       -3.4623E-02      +       0.0         ,9600E-01       -7.5722E-03      +       0.0         ,0400E-01       1.2821E-02      +       0.0         ,0400E-01       1.2821E-02      +       0.0         ,200E-01       1.9267E-02      +       0.0         ,200E-01       1.3975E-02      +       0.0         ,200E-01       3.9656E-03      +       0.0         ,2600E-01       -4.1406E-03      +       0.0         ,2600E-01       -4.1406E-03      +       0.0         ,2600E-01       -5.5832E-03      +       0.0         ,5200E-01       -5.5832E-03      +       0.0         ,6800E-01       2.6182E-01      +       0.0         ,6800E-01       2.6182E-01      +       1.0000E 00         ,8400E-01       1.2075E 00      +       1.0000E 00         ,9200E-01       1.3716E 00      +       1.0000E 00   |             |                    |             | -•   |         |      |            |              |     |
| 8000E-01       -5.1376E-02      +       0.0         8800E-01       -3.4623E-02      +       0.0         9600E-01       -7.5722E-03      +       0.0         0400E-01       1.2821E-02      +       0.0         1200E-01       1.9267E-02      +       0.0         2000E-01       1.9267E-02      +       0.0         2000E-01       1.9267E-02      +       0.0         2000E-01       1.9267E-02      +       0.0         2800E-01       3.9656E-03      +       0.0         2600E-01       -4.1406E-03      ++       0.0         4400E-01       -7.1634E-03      ++       0.0         5200E-01       -5.5832E-03      ++       0.0         6600E-01       -1.9129E-03      ++       0.0         6800E-01       2.6182E-01      ++       0.0         7600E-01       7.8072E-01      ++       1.0000E 00         7600E-01       7.8072E-01      ++       1.0000E 00         9200E-01       1.3716E 00      ++       1.0000E 00  |             |                    |             |      |         |      |            |              |     |
| 8800E-01       -3.4623E-02      +       0.0         9600E-01       -7.5722E-03      +       0.0         0400E-01       1.2821E-02      +       0.0         1200E-01       1.9267E-02      +       0.0         2000E-01       1.3975E-02      +       0.0         2800E-01       3.9656E-03      +       0.0         3600E-01       -4.1406E-03      +       0.0         4400E-01       -7.1634E-03      +       0.0         5200E-01       -5.5832E-03      +       0.0         6200E-01       -1.9129E-03      +       0.0         6800E-01       2.6182E-01      +       0.0         7600E-01       7.8072E-01      +       1.0000E 00         7600E-01       1.2075E 00      +       1.0000E 00         9200E-01       1.3716E 00      +       1.0000E 00  |             |                    |             |      |         |      |            |              |     |
| 9600E-01       -7.5722E-03      +       0.0         1200E-01       1.2821E-02      +       0.0         1200E-01       1.9267E-02      +       0.0         2000E-01       1.3975E-02      +       0.0         2800E-01       3.9656E-03      +       0.0         3600E-01       -4.1406E-03      +       0.0         4400E-01       -7.1634E-03      +       0.0         5200E-01       -5.5822E-03      +       0.0         6000E-01       -1.9129E-03      +       0.0         6800E-01       2.6182E-01      +       0.0         7600E-01       7.8072E-01      +       1.0000E 00         7600E-01       7.8072E-01      +       1.0000E 00         9200E-01       1.3716E 00      +       1.0000E 00  |             |                    | *****       |      |         |      |            |              |     |
| 0400E-01       1.2821E-02      +       0.0         1200E-01       1.9267E-02      +       0.0         2000E-01       1.3975E-02      +       0.0         2800E-01       3.9656E-03      +       0.0         3600E-01       -4.1406E-03      +       0.0         4400E-01       -7.1634E-03      +       0.0         5200E-01       -5.5832E-03      +       0.0         6000E-01       -1.9129E-03      +       0.0         6800E-01       2.6182E-01      +       0.0         7600E-01       7.8072E-01      +       1.0000E 00         7600E-01       1.2075E 00      +       1.0000E 00         9200E-01       1.3716E 00      +       1.0000E 00  |             |                    |             |      |         |      |            |              |     |
| 1200E-01       1.9267E-02      +       0.0         2000E-01       1.3975E-02      +       0.0         2800E-01       3.9656E-03      +       0.0         3600E-01       -4.1406E-03      +       0.0         3600E-01       -4.1406E-03      +       0.0         5200E-01       -5.5832E-03      +       0.0         6200E-01       -1.9129E-03      +       0.0         6800E-01       2.6182E-01      +       0.0         7600E-01       7.8072E-01      +       1.0000E 00         7600E-01       1.2075E 00      +       1.0000E 00         9200E-01       1.3716E 00      +       1.0000E 00   |             |                    |             |      |         |      |            |              |     |
| 2000E-01       1.3975E-02      +       0.0         2800E-01       3.9656E-03      +       0.0         3600E-01       -4.1406E-03      +       0.0         4400E-01       -7.1634E-03      +       0.0         5200E-01       -5.5832E-03      +       0.0         6C00E-01       -1.9129E-03      +       0.0         6800E-01       2.6182E-01      +       0.0         7600E-01       7.8072E-01      +       1.0000E 00         7600E-01       1.2075E 00      +       1.0000E 00         9200E-01       1.3716E 00      +       1.0000E 00  |             |                    |             |      |         |      |            |              |     |
| 2800E-01       3.9656E-03      +       0.0         3600E-01       -4.1406E-03      +       0.0         4400E-01       -7.1634E-03      +       0.0         5200E-01       -5.5832E-03      +       0.0         6600E-01       -1.9129E-03      +       0.0         6800E-01       2.6182E-01      +       0.0         7600E-01       7.8072E-01      +       1.0000E       00         8400E-01       1.2075E      +       1.0000E       00         9200E-01       1.3716E      +       1.0000E       00   |             |                    |             |      |         |      |            |              |     |
| 3600E-01       -4.1406E-03      +       0.0         4400E-01       -7.1634E-03      +       0.0         5200E-01       -5.5832E-03      +       0.0         6600E-01       -1.9129E-03      +       0.0         6800E-01       2.6182E-01      +       0.0         7600E-01       7.8072E-01      +       1.0000E 00         8400E-01       1.2075E 00      +       1.0000E 00         9200E-01       1.3716E 00      +       1.0000E 00  |             |                    |             |      |         |      |            |              |     |
| 4400E-01       -7.1634E-03      +       0.0         5200E-01       -5.5832E-03      +       0.0         6C00E-01       -1.9129E-03      +       0.0         6800E-01       2.6182E-01      +       0.0         7600E-01       7.8072E-01      +       1.0000E 00         8400E-01       1.2075E 00      +       1.0000E 00         9200E-01       1.3716E 00      +       1.0000E 00  |             |                    | +           |      |         |      |            |              |     |
| 5200E-01       -5.5822E-03      +       0.0         6000E-01       -1.9129E-03      +       0.0         6800E-01       2.6182E-01      +       1.0000E 00         7600E-01       7.8072E-01      +       1.0000E 00         7600E-01       1.2075E 00      +       1.0000E 00         9200E-01       1.3716E 00      +       1.0000E 00   |             |                    | +           |      |         |      |            |              |     |
| 6C00E-01       -1.9129E-03      +       0.0         6800E-01       2.6182E-01      +       1.0000E 00         7600E-01       7.8072E-01      +       1.0000E 00         8400E-01       1.2075E 00      +       1.0000E 00         9200E-01       1.3716E 00      +       1.0000E 00   |             |                    | +           |      |         |      |            |              |     |
| 6800E-01       2.6182E-01      +       1.0000E 00         7600E-01       7.8072E-01      +       1.0000E 00         8400E-01       1.2075E 00      +       1.0000E 00         9200E-01       1.3716E 00      +       1.0000E 00   |             |                    | +           |      |         |      |            |              |     |
| 7600E-01       7.8072E-01   |             |                    | +           |      |         |      |            |              | ~~  |
| 8400E-01 1.2075E 00+ 1.0000E 00<br>9200E-01 1.3716E 00  |             |                    |             | +    |         |      |            |              |     |
| 9200E-01 1.3716E 00 1.0000E 00  |             |                    |             |      |         | +    |            |              |     |
|   |             |                    |             |      |         |      | +          |              |     |
| 0000E-01 1.2941E 00 1.0000E 00  |             |                    |             |      | ******* |      | +          |              |     |
|   | 0000E-01    | 1.2941E 00         |             |      |         |      | +          | 1+0000E      | 00  |

Fig. 2.36 Computer solution for voltage across the capacitor (Method 1 solution).

## Table 2.9

## Formulation for Differentiation

| General Form                | Function                                |  |  |  |  |
|-----------------------------|---|--|--|--|--|
| Definition: Differentiation | $y(t) = \frac{dx(t)}{dt}$               |  |  |  |  |
| Y = DERIV(IC,X)             | Laplace form:                           |  |  |  |  |
| $IC = \dot{X}(0)$           | $X \rightarrow \boxed{s} \rightarrow Y$ |  |  |  |  |

The program listing for the simulation is given in Fig. 2.40 and is accompanied by the error message

SIMULATION INVOLVED AN ALGEBRAIC LOOP CONTAINING THE FOLLOWING ELEMENTS I X3 I

This statement means that the sort subprogram in CSMP cannot find an integration or other memory block<sup> $\dagger$ </sup> in the loop involving I – X3 – I. The program will not run in this case. To correct this situation, one must re-cast the problem so that every loop in the diagram contains a memory block or integration. Loops are not always obvious for a given set of equations unless one draws a block diagram or signal-flow graph.

SOLUTION TO RLC CIRCUIT USING STATE VARIABLE APPROACH PARAM L = 1.0, C = 0.0001, R = 60.0TRIG = IMPULS(0, 0, 0, 36)EIN = PULSE(0.18, TRIG) EODOT = I/C\* I IS THE CURRENT THROUGH THE INDUCTOR IDOT = (1.0/L)\*(-EC - I\*R + EIN)EO = INTGRL(0.0, EODOT)EO IS THE VOLTAGE ACROSS THE CAPACITOR I = INTGRL(0.0,IDCT) TIMER FINTIM = 0.4, DUTDEL = 0.008 PRTPLT EO(EIN) LABEL VOLTAGE ACROSS THE CAPACITOR - EXAMPLE 2-7 PRTPLT I(EIN) LABEL CURRENT THROUGH THE INDUCTOR - EXAMPLE 2-7 END STOP ENDJOB

Fig. 2.37 Program listing for RLC solution (Method 2).

<sup>†</sup>A discussion of memory functions is given in Chap. 3.


| CURRENT | THROUGH | THE | INDUCTOR | - | EXAMPLE | 2-7 |
|---------|---------|-----|----------|---|---------|-----|

PAGE 1

|             |                          | NIMUM<br>032E-03 | I        | VERSUS | TIME | MAXIMUM<br>6.4814E-03 |         |    |
|-------------|--------------------------|------------------|----------|--------|------|-----------------------|---------|----|
| TIME        | I                        | I                |          |        |      | I                     | EIN     |    |
| • 0         | 0.0                      |                  |          |        |      | •                     | 1.0000E | 00 |
| .0000E-03   | 5.69985-03               |                  |          |        |      | *                     | 1.0000E |    |
| .6000E-02   | 6.4814E-03               |                  |          |        |      |                       | 1.0000E |    |
| .4000E-02   | 3.8425E-03               |                  |          |        |      |                       |         |    |
| •2000E-02   | 3.5775E-04               |                  |          |        |      |                       | 1.0000E |    |
| .0000E-02   | -1.9717E-03              |                  |          |        |      |                       |         |    |
| .8000E-02   | -2.4636E-03              |                  |          |        |      |                       | 1.0000E |    |
| .6000E-02   | -1.5812E-03              |                  | +        |        |      |                       | 1.0000E |    |
| 4000E-02    | -2.7314E-04              |                  | +        |        |      |                       | 1.0000E |    |
| 2000E-02    | 6.6814E-04               |                  |          |        |      |                       | 1.0000E |    |
| -           |                          |                  |          |        |      |                       | 1.0000E |    |
| .0C00E-02   | 9.2889E-04<br>6.4277E-04 |                  |          | +      |      |                       | 1.0000E |    |
| • • • • • • |                          |                  |          | +      |      |                       | 1.0000E |    |
| .6000E-02   | 1.5598E-04               |                  |          | +      |      |                       | 1.0000E |    |
| ,04005-01   | -2.2049E-04              |                  |          | +      |      |                       | 1.0000E |    |
| .1200E-01   | -3.4729E-04              |                  |          |        |      |                       | 1.0000E |    |
| ,2000E-01   | -2.5846E-04              |                  |          | +      |      |                       | 1.0000E |    |
| ,2800E-01   | -7.8947E-05              | ~~~~~~~~         |          |        |      |                       | 1.0000E |    |
| ,3600E-01   | 7.0206E-05               |                  | ******** | +      |      |                       | 1.0000E |    |
| ,44C0E-01   | 1.2871E-04               |                  |          | +      |      |                       | 1.0000E |    |
| ,5200E-01   | 1.0291E-04               |                  |          | +      |      |                       | 1.0000E |    |
| ,6000E-01   | 3.7367E-05               | **               |          | +      |      |                       | 1.0000E |    |
| ,6800E-01   | -2.1201E-05              |                  |          | +      |      |                       | 1.0000E |    |
| ,7600E-01   | -4.7230E-05              |                  |          | +      |      |                       | 1.0000E |    |
| ,8400E-01   | -4.0583E-05              |                  |          | +      |      |                       | 1.0000E | 00 |
| ,9200E-01   | -5.6506E-03              | +                |          |        |      |                       | 0.0     |    |
| ,00C0E-01   | -6.5032E-03              | +                |          |        |      |                       | 0.0     |    |
| ,08C0E-01   | -3.8977E-03              | +                |          |        |      |                       | 0.0     |    |
| ,1600E-01   | -4.0707E-04              |                  |          | +      |      |                       | 0.0     |    |
| ,2400E-01   | 1.9498E-03               |                  |          |        | +    |                       | 0.0     |    |
| 3200E-01    | 2.4693E-03               |                  |          |        | -    |                       | 0.0     |    |
| ,4000E-01   | 1.6012E-03               |                  |          |        | •+   |                       | 0.0     |    |
| 48005-01    | 2.9236E-04               |                  |          | •      |      |                       | 0.0     |    |
| 5600E-01    | -6.5865E-04              |                  |          | •      |      |                       | 0.0     |    |
| .6400E-01   | -9.2999E-04              |                  |          | +      |      |                       | 0.0     |    |
| 72005-01    | -6.4989E-04              |                  |          | -+     |      |                       | 0.0     |    |
| 8000E-01    | -1.6339E-04              |                  |          | +      |      |                       | 0.0     |    |
| 8800E-01    | 2.1648E-04               |                  |          | •      |      |                       | 0.0     |    |
| 9600E-01    | 3.4731E-04               |                  |          | +      |      |                       | 0.0     |    |
| 0400E-01    | 2.6097E-04               | **********       |          | +      |      |                       | 0.0     |    |
| 1200E-01    | 8.1788E-05               |                  |          | +      |      |                       | 0.0     |    |
| 2000E-01    | -6.8531E-05              |                  |          | +      |      |                       | 0.0     |    |
| 2800E-01    | -1.2856E-04              |                  |          | +      |      |                       | 0.0     |    |
| 3600E-01    | -1.0378E-04              |                  |          | +      |      |                       | 0.0     |    |
| 4400E-01    | -3.8439E-05              |                  |          | +      |      |                       | 0.0     |    |
| 5200E-01    | 2.0526E-05               |                  |          | +      |      |                       | 0.0     |    |
| 6000E-C1    | 2.1380E-04               |                  |          | +      |      |                       | 1.0000E |    |
| 6800E-01    | 5.8070E-03               |                  |          |        |      | +                     | 1.0000E |    |
| 7600E-01    | 6.4711E-03               |                  |          |        |      | +                     | 1.0000E |    |
| 8400E-01    | 3.7644E-03               |                  |          |        | +    |                       | 1.0000E |    |
| 9200E-01    | 2.7532E-04               |                  |          | +      |      |                       | 1.0000E |    |
| 0000E-01    | -2.0171E-03              |                  | +        |        |      |                       | 1.0000E | 00 |

Fig. 2.38 Current response of RLC circuit (Method 2 solution).

Solution for:

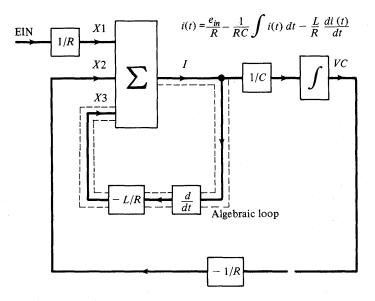



```
CCNSTANT L = 1.0, C = 0.0001, R = 60.0

TRIG = IMPULS(0.0,0.36)

EIN = PULSE(0.18, TRIG)

X1 = (EIN)/R

X2 = -VC

*VC IS THE VOLTAGE ACROSS THE CAPACITOR

X3 = (L/R)*DERIV(0.0,I)

I = X1 + X2 + X3

* I IS THE CURRENT IN THE CIRCUIT

VC = (1.0/R*C)*INTGRL(0.0,I)

TIMER FINTIM = 0.4, CUTDEL = 0.008

PRTPLT VC, I

LABEL SOLUTION FOR CIRCUIT USING DERIV - EXAMPLE 2-7

END

STOP
```

SIMULATION INVOLVES. AN ALGEBRAIC LOOP CONTAINING THE FOLLOWING ELEMENTS I X3 I

| OUTPUTS | I NPUT S | PARAMS | INTEGS + | MEM BLKS | FORTRAN | DATA CDS |
|---------|----------|--------|----------|----------|---------|----------|
| 12(500) | 35(1400) | 5(400) | 1+ 0=    | 1(300)   | 9(600)  | 5        |

## \*\*\*\*PROBLEM CAN NOT BE EXECUTED\*\*\*\*

Fig. 2.40 Program listing for RLC solution using DERIV function. Although the simulation will not run using the DERIV function, one should not interpret this to mean a loop cannot have a derivative term. To correct the present problem a solution for the capacitor voltage that has an integrator in each loop is given in Fig. 2.41. The program listing in Fig. 2.42 follows directly from the diagram and the simulation results are identical to those obtained by previous methods.

The objective of this example has been to demonstrate how CSMP can be used for the solution of an electric circuit. However, it should be noted that other specialized programs such as ECAP (Electric Circuit Analysis Program) are generally better suited for circuit analysis and design.

Solution for:

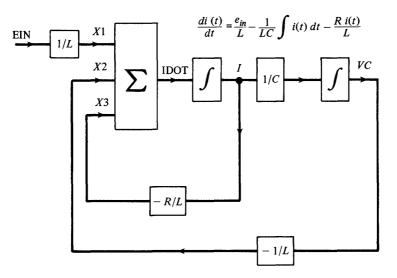


Fig. 2.41 Diagram for Method 3 solution of RLC circuit using all integrators.

```
CCNSTANT L = 1.0, C = 0.0001, R = 60.0
TRIG = IMPULS(0.0, 0.36)
EIN = PULSE(0.18, TRIG)
*VC IS THE VOLTAGE ACROSS THE CAPACITOR
* I IS THE CURRENT IN THE CIRCUIT
X1 = (EIN)/L
X2 = -VC/L
X3 = -(R/L)*I
IDDT = X1 + X2 + X3
VC =(1.0/C)*INTGRL(0.0,I)
I = INTGRL(0.0, IDOT)
TIMER FINTIM = 0.4, OUTDEL = 0.008
PRTPLT VC, I
LABEL RLC CIRCUIT USING INTGRL TERMS ONLY - EXAMPLE 2-7
END
STOP
ENDJOB
```

Fig. 2.42 Program listing for Method 3 using all integrator blocks.

## **Example 2.8** Temperature Control for a Chemical Process

A simplified diagram of a temperature-control system is shown in Fig. 2.43. Basically, this system regulates the temperature of a chemical material by passing it through a heat exchanger unit. An output-temperature sensor compares the process temperature to the desired set-point. Any difference between the measured and set-point signals is conditioned by a proportional-integral controller whose output makes correcting adjustments to the steam control valve.

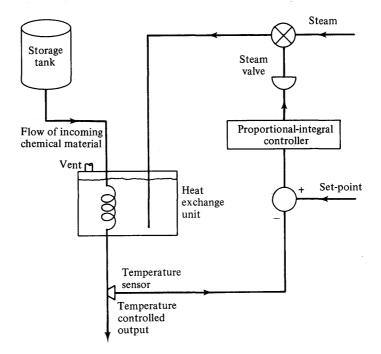


Fig. 2.43 Simplified diagram of a temperature control system.

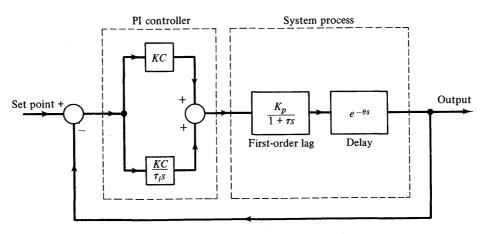


Fig. 2.44 Block diagram of temperature control system.

Figure 2.44 gives a block-diagram representation of the linearized system. If the output of the first-order lag is f(t), then an ideal delay of  $\theta$  units will produce  $f(t - \theta)$ . In terms of Laplace transforms this delay is expressed by  $e^{-\theta s}$  and so represented in the block diagram. The functional relationship for the delay block is given in Table 2.10.

#### Table 2.10

## Formulation for Ideal Delay

| General Form   | Function  |
|--|---|
| Definition: Ideal Delay  | $Y(t) = X(t - P) \ t \ge P$                                 |
| Y = DELAY(N, P, X)   | $Y(t) = 0 \qquad t < P$                                     |
| $\mathbf{P} = \mathbf{Delay}$ time                                 | Laplace form: $e^{-Ps}$                                     |
| N = Number of points sampled<br>during P (N must be an<br>integer) | $X(s) \longrightarrow \boxed{e^{-Ps}} \longrightarrow Y(s)$ |

The only thing likely to cause confusion is the number of points sampled during P. As noted in Table 2.10, N must be an integer and should not include a decimal (i.e., 21.0 is not allowed but 21 is). As a rule the value of N should be equal to the approximate number of integration steps expected during the delay time P.†

Slight modifications of the original block diagram are necessary before directly writing the simulation statements. One suitable, but not unique, representation is given in Fig. 2.45 where the gain constants have been isolated from the dynamic elements. As stated in a previous example, each block must have input and output variable assignments.

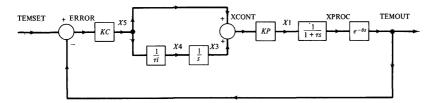


Fig. 2.45 Simulation diagram for Example 2.8.

The simulation program listing is shown in Fig. 2.46. The data statements PARA-METER, CONSTANT and INCON are used to assign numerical values to the specified variables. The use of PARAMETER KC = (1.8, 12.0) will cause the program to run first with KC = 1.8 and second with KC = 12.0. A complete description of PARA-METER, INCON and CONSTANT was given in Example 2.3. CHEMICAL PROCESS CONTROL

```
PARAMETER KC = (1.8,12.0), THETA = 19.0
CONSTANT KP = 6.45, TAU = 544.0, TAUI = 540.0
INCON ICX3 = 0.0,
                    ICRLPL = 0.0
TEMSET = STEP(0.0)
ERROR = TEMSET - TEMOUT
X5 = KC*ERROR
X4 = (1.0/TAUI) * X5
X3 = INTGRL(ICX3,X4)
XCONT = X5 + X3
X1 = (KP) * XCONT
XPROC = REALPL(ICRLPL, TAU, X1)
TEMOUT = DELAY(25, THETA, XPROC)
TIMER FINTIM = 200.0, OUTDEL = 4.0, PRDEL = 2.0
PRTPLT TEMOUT
      TEMPERATURE OF PROCESS OUTPUT - EXAMPLE 2-8
LABEL
PRTPLT XCONT
      OUTPUT OF PI CONTROLLER - EXAMPLE 2-8
LABEL
PRINT TEMOUT
END
STOP
ENDJOB
```

Fig. 2.46 CSMP program listing for the system in Fig. 2.45.

The control statements indicate that the simulation will run for 200 sec (FINTIM). Printer-plots will be made for TEMOUT and XCONT with each plotted point occurring every 4 sec (OUTDEL). In addition, the values of TEMOUT occurring every 2 sec (PRDEL) will be printed on separate pages from those of the printer-plots of TEMOUT.

The response of TEMOUT for KC = 1.8 and 12.0 is shown in Figs. 2.47 and 2.48, respectively. Not only is the requested plot LABEL given at the top of the output but the particular value of KC also appears. Whenever repeated runs occur, the run value of the variable parameter will be given at the top of all PRTPLT and PRINT pages.

We note that the printer-plot points of TEMOUT for KC = 1.8 are practically all the same. The reason for this is that the printer-plot points are quantized to always cover fifty printer spaces across the page. If a multiple-value parameter is used, the quantization is made over the range of the maximum and minimum values of the total data set. For this example, the largest value in the data set is 34.855 and the smallest value is -29.642. It is incidental that both values occur for KC = 12.0. The quantization step is therefore

Quantization step = 
$$\frac{34.855 + 29.652}{50} \doteq 1.29$$
 units (2.25)

The variation of TEMOUT for KC = 1.8 is from 0 to 1.0 (see Fig. 2.47) which is less than one quantization unit. The only reason the plotted output level changes for this case is that 0.0 is almost at a quantization step point and the addition of approximately 0.106 causes a level change.

One might look upon multiple-parameter value runs as having the disadvantage of possibly giving one or more obscured plots. This may be true, but, on the other hand, the plots are scaled to a common relative amplitude which is often a desired characteristic. Furthermore, it is always possible to rerun the simulation using a single-value parameter. Figure 2.49 shows the rerun of this problem for KC = 1.8 only.

The remaining printer-plots and printed output for XCONT and TEMOUT are omitted since they give the same general type of information as previously presented.

## TEMPERATURE OF PROCESS OUTPUT - EXAMPLE 2-8

## PAGE 1


|                          |                          |          |    |                | , AUL 1    |
|--------------------------|--------------------------|----------|----|----------------|------------|
|                          |                          | INIMUM   |    | UT VERSUS TIME | MAXIMUM    |
|                          | -2.0                     | 9642E 01 | КC | = 1.8000E 00   | 3.4855E 01 |
| TIME                     | TEMOUT                   | I        |    |                | I          |
| 0.0                      | 0.0                      |          |    | -+             |            |
| 4.0000E 00               | 0.0                      |          |    | -+             |            |
| 8.00COE 00               | 0.0                      |          |    | -+             |            |
| 1.2000E 01               | 0.0                      |          |    | -+             |            |
| 1.6000E 01               | 0.0                      |          |    | -+             |            |
| 2.00000 01               | 2.1342E-02               |          |    | -+             |            |
| 2.40COE 01               | 1.0671E-01               |          |    | +              |            |
| 2.8000E 01               | 1.92095-01               |          |    | +              |            |
| 3.2000E 01               | 2.7747E-01               |          |    | +              |            |
| 3.6000E 01               | 3.6285E-01               |          |    | +              |            |
| 4.00COE 01               | 4.4710E-01               |          |    |                |            |
| 4.4000E 01               | 5.2521E-01               |          |    | +              |            |
| 4.80COE 01               | 5.9603E-01               |          |    |                |            |
| 5.20C0E 01               | 6.5957E-01               |          |    | •              |            |
| 5.6CCOE 01               | 7.15828-01               |          |    |                |            |
| 6.0CCOE 01               | 7.6485E-01               |          |    | +              |            |
|                          | 8.0707E-01               |          |    | •              |            |
| 6.4000E 01               |                          |          |    |                |            |
| 6.8000E 01               | 8.4309E-01               |          |    |                |            |
| 7.2000E 01               | 8.7353E-01               |          |    |                |            |
| 7.6000E 01               | 8.9902E-01               |          |    | •              |            |
| 8.0CCOE 01               | 9.20165-01               |          |    |                |            |
| 8.4000E 01               | 9.3757E-01               |          |    | -              |            |
| 8.8CCOE 01               | 9.51765-01               |          |    |                |            |
| 9.2000E 01               | 9.6324E-01               |          |    | +              |            |
| 9.6000E 01               | 9.7244E-01               |          |    | +              |            |
| 1.0000E 02               | 9.7974E-01               |          |    |                |            |
| 1.04COE 02<br>1.08005 02 | 9.8548E-01<br>9.8994E-01 |          |    |                |            |
| 1.12COE 02               | 9.9337E-01               |          |    |                |            |
| 1.16COE 02               | 9.95965-01               |          |    |                |            |
| 1.2CODE 02               | 9.9789E-01               |          |    |                |            |
| 1.2400E 02               | 9.99295-01               |          |    | +              |            |
| 1.2800E 02               | 1.0003E 00               |          |    | +              |            |
| 1.3200E 02               | 1.0010E 00               |          |    |                |            |
| 1.36COE 02               | 1.0014E 00               |          |    | +              |            |
| 1.4000E 02               | 1.00175 00               |          |    |                |            |
|                          |                          |          |    | •              |            |
| 1.4400E 02<br>1.4800E 02 | 1.0018E 00<br>1.0018E 00 |          |    |                |            |
|                          |                          |          |    |                |            |
| 1.52COE 02               | 1.0018E 00               |          |    |                |            |
| 1.5600E 02               | 1.0018E 00               |          |    |                |            |
| 1.6000E 02               | 1.0017E 00               |          |    | •              |            |
| 1.6400E 02               | 1.0015E 00               |          |    |                |            |
| 1.6800E 02               | 1.0014E 00               |          |    |                |            |
| 1.7200E 02               | 1.0013E 00               |          |    | +              |            |
| 1.7600E 02               | 1.0012E 00               |          |    |                |            |
| 1.8000E 02               | 1.0011E 00               |          |    |                |            |
| 1.84002 02               | 1.0010E 00               |          |    |                |            |
| 1.88COE 02               | 1.0009E 00               |          |    |                |            |
| 1.92005 02               | 1.0009E 00               |          |    | •              |            |
| 1.96COE 02               | 1.0008E 00               |          |    |                |            |
| 2.0000E 02               | 1.0007E 00               |          |    |                |            |

Fig. 2.47 Printer-plot of TEMOUT for Example 2.8 (KC = 1.8).

TEMPERATURE OF PROCESS OUTPUT - EXAMPLE 2-8

PAGE 1

|            |             | NIMUM<br>642E 01 |        | RSUS TIME<br>• 2000E 01 | MAXIMUM<br>3.4855E 01 |
|------------|-------------|------------------|--------|-------------------------|-----------------------|
| TIME       | TEMOUT      | I                | KG - 1 | • 2000L 01              | I                     |
|            |             | 1                |        |                         | 1                     |
| 0.0        | 0.0         |                  | +      |                         |                       |
| 4.0000E 00 | 0.0         |                  | •      |                         |                       |
| 8.0000E 00 | 0.0         |                  | +      |                         |                       |
| 1.20COE 01 | 0.0         |                  | +      |                         |                       |
| 1.6000E 01 | 0.0         |                  | +      |                         |                       |
| 2.0000E 01 | 1.42285-01  |                  | +      |                         |                       |
| 2.4000E 01 | 7.11425-01  |                  | +      |                         |                       |
| 2.8000E 01 | 1.2806E 00  |                  | +      |                         |                       |
| 3.20005 01 | 1.8498E 00  |                  |        |                         |                       |
| 3.6000E 01 | 2.4190E 00  |                  | +      |                         |                       |
| 4.00005 01 | 2.9377E CO  |                  | +      |                         |                       |
| 4.4000E 01 | 3.1830E 00  |                  | +      |                         |                       |
| 4.8000E 01 | 3.1045E 00  |                  | +      |                         |                       |
| 5.2000E 01 | 2.7020E 00  |                  |        |                         |                       |
| 5.60005 01 | 1.9755E 00  |                  | +      |                         |                       |
| 6.0000E 01 | 9.44485-01  |                  | +      |                         |                       |
| 6.4C00E 01 | -2.6877E-01 |                  |        |                         |                       |
|            | -1.4835E 00 |                  | +      |                         |                       |
| 6.8C00E 01 |             |                  |        |                         |                       |
| 7.2000E 01 | -2.5153E 00 |                  |        |                         |                       |
| 7.6000E 01 | -3.1798E 00 |                  | +      |                         |                       |
| 8.0000E 01 | -3.3006E 00 |                  | +      |                         |                       |
| 8.40COE 01 | -2.7538E 00 |                  |        |                         |                       |
| 8.8000E 01 | -1.5125E 00 |                  | +      |                         |                       |
| 9.2000E 01 | 3.3142E-01  |                  | +      |                         |                       |
| 9.6000E 01 | 2.6321E 00  |                  | +      |                         |                       |
| 1.0C00E 02 | 5.0847E 00  |                  |        | •                       |                       |
| 1.0400E 02 | 7.3241E 00  |                  |        | · +                     |                       |
| 1.0800E 02 | 8.9245E 00  |                  |        | +                       |                       |
| 1.1200E 02 | 9.5744E 00  |                  |        | +                       |                       |
| 1.1600E 02 | 8.9782E 00  |                  |        | +                       |                       |
| 1.2000E 02 | 7.0053E 00  |                  |        |                         |                       |
| 1.2400E 02 | 3.7240E 00  |                  |        |                         |                       |
| 1.2800E 02 | -5.5492E-01 |                  | +      |                         |                       |
| 1.32COE 02 | -5.3826E 00 |                  | +      |                         |                       |
| 1.3600E 02 | -1.0056E 01 |                  |        |                         |                       |
| 1.4000E 02 | -1.38055 01 |                  |        |                         |                       |
| 1.4400E 02 | -1.5793E 01 |                  | •      |                         |                       |
|            |             |                  |        |                         |                       |
| 1.4800E 02 | -1.5532E 01 |                  |        |                         |                       |
| 1.5200E 02 | -1.2594E 01 |                  | •      |                         |                       |
| 1.5600E 02 | -7.0404E 00 |                  | •      |                         |                       |
| 1.6000E 02 | 8.8519E-01  |                  | +      |                         |                       |
| 1.6400E 02 | 1.0234E 01  |                  |        |                         |                       |
| 1.68COE 02 | 1.9771E 01  |                  |        | +                       |                       |
| 1.7200E 02 | 2.8025E 01  |                  |        |                         | +                     |
| 1.7600E 02 | 3.3331E 01  |                  |        |                         | +                     |
| 1.8CCOE 02 | 3.4549E 01  |                  |        |                         | +                     |
| 1.8400E 02 | 3.0642E 01  |                  |        |                         | +                     |
| 1.8800E 02 | 2.1323E 01  |                  |        | +                       |                       |
| 1.9200E 02 | 7.2223E 00  |                  |        | +                       |                       |
| 1.9600E 02 | -1.0552E 01 |                  | +      |                         |                       |
| 2.0000E 02 | -2.9642E 01 | +                |        |                         |                       |
|            |             |                  |        |                         |                       |

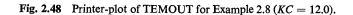

| TEMPERATURE | Ο <b>F</b> | PROCESS | OUTPUT |  | EXAMPLE | 2-8 |
|-------------|------------|---------|--------|--|---------|-----|
|-------------|------------|---------|--------|--|---------|-----|

| TEMPERATORE | . OI FROCE33 50 | TFO, LAM |        |             | FAGE                  |
|-------------|-----------------|----------|--------|-------------|-----------------------|
|             | ۳۱<br>0•0       | NIMUM    | TEMOUT | VERSUS TIME | MAXIMUM<br>1.0020F 00 |
| TIME        | TEMOUT          | I        |        |             | I                     |
| 0.0         | 0.0             | +        |        |             | -                     |
| 4.0000E 00  | 0.0             | +        |        |             |                       |
|             |                 | •        |        |             |                       |
| 8.0000E 00  | 0.0             | +        |        |             |                       |
| 1.2000E 01  | 0.0             | +        |        |             |                       |
| 1.6000E 01  | 0.0             | +        |        |             |                       |
| 2.0000E 01  | 2.1342E-02      | -+       |        |             |                       |
| 2.4000E 01  | 1.0671E-01      | +        |        |             |                       |
| 2.80COE 01  | 1.9209E-01      |          | +      |             |                       |
| 3.2000E 01  | 2.7747E-01      |          | +      |             |                       |
| 3.6000E 01  | 3.6282E-01      |          | +      |             |                       |
| 4.0000E 01  | 4.4672E-01      |          | +      |             |                       |
| 4.40005 01  | 5.2483E-01      |          |        | +           |                       |
| 4.8C00E 01  | 5.95658-01      |          |        |             |                       |
| -           |                 |          |        |             |                       |
| 5.2000E 01  | 6.5919E-01      |          |        |             |                       |
| 5.6000E 01  | 7.1544E-01      | ****     |        | +           |                       |
| 6.0000E 01  | 7.6451E-01      |          |        |             | •+                    |
| 6.4000E 01  | 8.0680E-01      |          |        |             | •===+                 |
| 6.8000E 01  | 8.4288E-01      |          |        |             | +                     |
| 7.2000E 01  | 8.7339E-01      |          |        |             | +                     |
| 7.6000E 01  | 8.9894E-01      | ~~~~~~   | *****  | ******      | +                     |
| 8.0000E 01  | 9.2015E-01      |          |        |             | +                     |
| 8.4000E 01  | 9.37605-01      |          |        |             | +                     |
| 8.8000E 01  | 9.5184E-01      |          |        | ******      | +                     |
| 9.2000E 01  | 9.6336E-01      |          |        |             | +                     |
| 9.6000E 01  | 9.7259E-01      |          |        |             | +                     |
| 1.0000E 02  | 9.7991E-01      |          |        |             | +                     |
| 1.0400E 02  | 9.8567E-01      |          |        |             | +                     |
| 1.0800E 02  | 9.9013E-01      |          |        |             | +                     |
| 1.12005 02  | 9.9356E-01      |          |        |             | +                     |
| 1.1600E 02  | 9.9615E-01      |          |        |             | +                     |
| 1.2000E 02  | 9.9807E-01      |          |        |             | +                     |
| 1.2400E 02  | 9.9946E-01      |          |        |             | +                     |
| 1.2800E 02  | 1.0005E 00      |          |        |             | +                     |
| 1.3200E 02  | 1.0011E 00      |          |        | *           | +                     |
| 1.3600E 02  | 1.0016E 00      |          |        |             | +                     |
| 1.4000E 02  | 1.0018E 00      |          |        |             | +                     |
| 1.4400E 02  | 1.00192 00      |          |        |             | +                     |
| 1.4800E 02  | 1.0020E 00      |          |        |             | +                     |
| 1.5200E 02  | 1.0019E 00      |          |        |             | +                     |
| 1.56005 02  | 1.0018E 00      |          |        |             |                       |
| 1.60COE 02  | 1.0017E 00      |          |        |             | +                     |
| 1.64005 02  | 1.0016E 00      |          |        |             | +                     |
| 1.68COE 02  | 1.0015E-00      |          |        |             | +                     |
| 1.7200E 02  | 1.0014E 00      |          |        |             | +                     |
| 1.7600E 02  | 1.00135 00      |          |        |             | +                     |
| 1.8000E 02  | 1.0011E 00      |          |        |             | +                     |
| 1.8400E 02  | 1.0010E 00      |          |        |             | +                     |
| 1.8800E 02  | 1.0010E 00      |          |        |             |                       |
| 1.9200E 02  | 1.0009E 00      |          |        |             | +                     |
| 1.9600E 02  | 1.0008E 00      |          |        |             | +                     |
| 2.0000E 02  | 1.0008E 00      |          |        |             | +                     |
|             |                 |          |        |             |                       |

Fig. 2.49 Plotted output of TEMOUT with KC = 1.8 and full-scale plotting.

## Example 2.9 Simulation of Gear Train Containing Backlash


The function generators shown in Appendix I are very useful for simulating nonlinear systems. An example of a system using a dead-space function is shown in Fig. 2.50.

This system represents a sinusoidal torque driving a flywheel through a set of gears having excessive backlash. The shaft, connecting gear 2 and the flywheel, is not rigid but has a spring constant of K = 4000 in-lb/radian. The contact force between gear teeth depends upon their relative position. Figure 2.51 shows the contact force as zero in the position where the teeth are not in contact and increasing in a linear manner after contact has been made.

The functional relationship between force and displacement can be simulated by a dead space (DEADSP) function generator.

## Table 2.11

#### Formulation of Dead Space Function

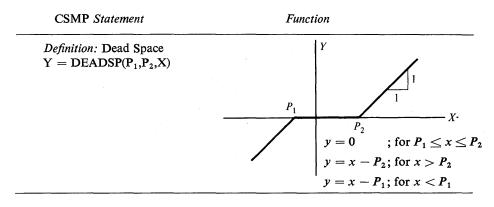

Using the force characteristics shown on Fig. 2.51, the following DEADSP function can be used to simulate the contact force between gear teeth.

F = KG\*DEADSP(-0.1, 0.1, R1\*THETA1 - R2\*THETA2)

where R1\*THETA1 - R2\*THETA2 = relative movement between gear teeth. The equations for the angular accelerations of the gears and flywheel are:

$$\dot{\omega}_1 = WD1 = (T*SIN(W*TIME) - R1*F)/I1$$
 (2.26)

$$\dot{\omega}_2 = WD2 = (R2*F + K*(THETA3 - THETA2))/I2$$
 (2.27)

$$\dot{\omega}_3 = WD3 = K*(THETA2 - THETA3)/I3$$
 (2.28)

In the program of Fig. 2.52, the angular accelerations are calculated by ordinary FORTRAN statements. INTGRL functions are used to integrate angular accelerations and velocities to obtain angular velocities and angular displacements, respectively. All initial conditions are assumed to be zero.

It is often desirable to know the maximum and minimum values of variables during a run. The RANGE statement can be used for this purpose. In this example, it is used to list the maximums and minimums for 10 variables.

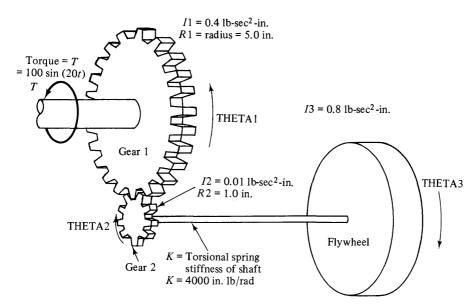


Fig. 2.50 Schematic of gear train system.

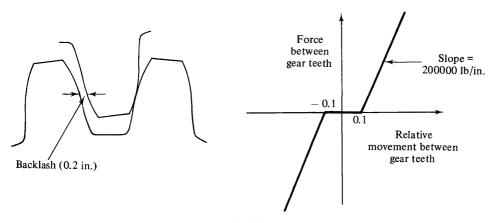


Fig. 2.51 Backlash in gear teeth.

RANGE. The RANGE card allows the user to obtain both the maximum and minimum values of specified variables that occur during the run. Included with the maximum and minimum values are the times at which the values occurred. The times of maximum and minimum do not necessarily occur at a multiple of PRDEL or OUTDEL. An example of the output from the RANGE statement for this problem is shown in Fig. 2.53.

RANGE F, WD1, WD2, WD3, W1, W2, W3, THETA1, THETA2, THETA3

```
TITLE
        SIMULATION OF THE DYNAMICS OF A GEAR TRAIN CONTAINING BACKLASH
   CONSTANT II = 0.4, I2 = 0.01, I3 = 0.8, R1 = 5.0, R2 = 1.0,
   KG = 200000.0, K = 4000.0, T = 100.0, W = 20.0
   F = KG * DEADSP(-0.1, 0.1, R1*THETA1 - R2*THETA2)
   WD1 = (T * SIN(W*TIME) - R1 * F)/I1
   WD2 = (R2 * F + K * (THETA3 - THETA2))/I2
   WD3 = K * (THETA2 - THETA3)/I3
   W1 = INTGRL(0.0, WD1)
   W2 = INTGRL(0.0, WD2)
   W3 = INTGRL(0.0, WD3)
   THETA1 = INTGRL(0.0, W1)
   THETA2 = INTGRL(0.0, W2)
   THETA3 = INTGRL (0.0, W3)
   PRINT F, WC1, WD2, WD3, W1, W2, W3, THETA1, THETA2, THETA3
   RANGE F. WD1. WD2, WD3, W1, W2, W3, THETA1, THETA2, THETA3
TIMER FINTIM = 0.5, PRDEL = 0.005
END
STOP
ENDJOB
```

Fig. 2.52 Program for gear train simulation.

PROBLEM DURATION 0.0

TO 5.0000E-01

| VARIABLE | MINIMUM     | TIME       | MAXIMUM    | TIME       |
|----------|-------------|------------|------------|------------|
| F        | -9.2400E 02 | 2.7134E-01 | 9.4110E 02 | 4.1301E-01 |
| WD1      | -1.1534E 04 | 4.1301E-01 | 1.1361E 04 | 2.7134E-01 |
| WD2      | -9.2923E 04 | 2.7134E-01 | 8.8692E 04 | 4.1301E-01 |
| WD 3     | -1.7390E 02 | 2.2181E-01 | 1.8759E 02 | 3.8948E-01 |
| W1       | -3.0321E 00 | 2.1984E-01 | 3.2531E 00 | 3.8741E-01 |
| W2       | -1.8832E 01 | 3.6290E-01 | 2.0539E 01 | 1.8764E-01 |
| W3       | -2.7485E-01 | 3.1375E-01 | 2.7382E 00 | 4.6904E-01 |
| THETA1   | 0.0         | 0.0        | 1.3119E-01 | 4.5464E-01 |
| THETA2   | -4.2604E-03 | 3.7764E-02 | 6.5328E-01 | 4.9929E-01 |
| THETA3   | 0.0         | 0.0        | 6.3820E-01 | 5.0000E-01 |

Fig. 2.53 Example of output from a range statement.

Only one RANGE statement can be used, but this statement can contain up to 100 variables by using continuation cards.

Since more than eight variables are requested in the PRINT statement, the "equations format" as shown in Fig. 2.54 is automatically selected. Two TITLE cards are used to obtain two lines of heading on each page of output.

#### Example 2.10 Beam Deflection Problem

There exists a large class of engineering problems where it is necessary to use a trial and error solution. Two-point boundary-value problems generally fall within this class. The CSMP program has a feature for handling this type of problem and can be illustrated with the following cantilever-beam example.

This problem can be simply stated: find the deflection and stress of a thin steel cantilever beam of varying thickness with a 30 lb weight hung on the end. Figure 2.55 gives the basic configuration of the problem along with beam measurements.

The thin tapered beam will have a large deflection and consequently a large slope. For this reason, the exact equation for the radius of curvature is used in the following differential equation for beam deflection.

| SIMU   | LAT | ION OF THE DY | NAMICS OF              | A GEAR TRAIN CO                     | TAINING B                | ACKLASH                                 | RKS       | INTEGRATION                   |                  |                           |
|--------|-----|---------------|------------------------|-------------------------------------|--------------------------|---|-----------|-------------------------------|------------------|---------------------------|
| T I ME | •   | 0.0           | F ±<br>W1 =<br>Theta2= | 0.0<br>0.0<br>0.0                   | WD1 =<br>W2 =<br>Theta3= |   | WD2<br>W3 | ≖ 0.0<br>≖ 0.0                | WD3 =<br>Thetal= |                           |
| T IME  | *   | 5.0000E-03    | ₩1 =                   | 0.0<br>6.2448E-02<br>0.0            | WD1 =<br>W2 =<br>THETA3= |   | WD2<br>W3 | = 0.0<br>= 0.0                | WD3 ≖<br>Theta1≖ | 0.0<br>1.0411E-04         |
| T I ME | =   | 1.0000E-02    | F =<br>₩1 =<br>THETA2≭ | 2.4917E-01                          | WD1 =<br>W2 =<br>ThetA3= |   | WD2<br>W3 | = 0.0<br>= 0.0                | WD3 =<br>Theta1= | 0.0<br>8.3166E-04         |
| TIME   | *   | 1.5000E-02    | F =<br>W1 =<br>Theta2= | 5.5829E-01                          | WD1 =<br>W2 ∓<br>ThetA3= |   | WD2<br>W3 | = 0.0<br>= 0.0                | WD3 =<br>Theta1= | 0.0<br>2.7999E-03         |
| T IME  | =   | 2.0000E-02    | F =<br>W1 =<br>THETA2= | 9.8673E-01                          |                          | 9.7354E 01<br>0.0<br>0.0                | WD2<br>W3 | = 0.0<br>= 0.0                | WD3 =<br>Theta1= | 0.0<br>6.6135E-03         |
| T I ME | =   | 2.5000E-02    |                        | 0.0<br>1.5302E 00<br>0.0            |                          | 1.1986E 02<br>0.0<br>0.0                | WD2<br>W3 | = 0.0<br>= 0.0                | WD3 =<br>Thetal= | 0.0<br>1.2859E-02         |
| TIME   | =   | 3.0000E-02    |                        |                                     | ₩2 ≭                     | 1.4116E 02<br>1.1544E 01<br>4.1982E-06  | WD2<br>W3 | ≠ -3.5422E 03<br>≖ 1.6570E-02 |                  | 4.4277E 01<br>2.0949E-02  |
| TIME   | *   | 3.5000E-02    |                        | 0.0<br>-9.4938E-01<br>1.8021E-02    | ₩2 ≖                     | 1.6105E 02<br>-4.0249E 00<br>1.1190E-03 | WD2<br>W3 | = -6.7610E 03<br>= 4.3920E-01 |                  | 8.4512E 01<br>2.1422E-02  |
| TIME   | =   | 4.0000E-02    |                        | 0.0<br>-1.2725E 00<br>1.6512E-03    | W2 =                     | 1.7934E 02<br>4.6252E 00<br>3.5723E-03  | WD2<br>W3 | = 7.6842E 02<br>= 4.4856E-01  |                  | -9.6052E 00<br>1.5725E-02 |
| TIME   | *   | 4.5000E-02    |                        | 0.0<br>-3.3377E-01<br>7.6850E-03    | W2 =                     | 1.9583E 02<br>-3.6696E 00<br>6.0287E-03 | WD2<br>W3 | = -6.6252E 02<br>= 5.5224E-01 |                  | 8.2815E 00<br>1.1675E-02  |
| T IME  | 3   | 5.0000E-02    |                        | 0.0<br>6.8258E-01<br>7.1776E-03     | W2 =                     | 2.1037E 02<br>4.7077E 00<br>8.5669E-03  | WD2<br>W3 | = 5.5572E 02<br>= 4.4753E-01  |                  | -6.9464E 00<br>1.2517E-02 |
| T [ ME | =   | 5.5000E-02    |                        | 0.0<br>1.7664E 00<br>1.2157E-02     | ₩2 ≠                     | 2.2280E 02<br>-3.7386E 00<br>1.1037E-02 | WD2<br>W3 | = -4.4811E 02<br>= 5.5310E-01 |                  | 5.6014E 00<br>1.8613E-02  |
| TIME   | -   | 6.0000E-02    | W1 =                   | 0.0<br>9.2847E-01<br>3.4727E-02     | W2 =                     | 2.3301E 02<br>-2.6537E 00<br>1.3933E-02 | WD2<br>W3 | = -8.3174E 03<br>= 7.3739E-01 |                  | 1.0397E 02<br>2.3806E-02  |
| TIME   | =   | 6.5000E-02    | F =<br>Wl =<br>Theta2= | 0.0<br>- 7.2547E- 01<br>2.6572E- 02 | W2 =                     | 2.4089E 02<br>-8.4676E 00<br>1.8542E-02 | WD2<br>W3 | = -3.2118E 03<br>= 1.0940E 00 |                  | 4.0147E 01<br>2.1541E-02  |

Fig. 2.54 Output from gear train simulation.

$$\frac{\frac{d^2 y}{dx^2}}{\left[1 + \left(\frac{dy}{dx}\right)^2\right]^{3/2}} = \frac{M}{EI}$$
(2.29)

Symbols program (Fig. 2.56)

))

where M = bending moment in beam FORCE\*(LO - X) E = Young's Modulus (30 × 10<sup>6</sup>psi) Ε I =Moment of inertia  $= \frac{1}{12}$ wt<sup>3</sup> I w = width of beam (1.0 in) WIDTH t = thickness of beam Т y = deflection of beam Y  $\frac{dy}{dx}$  = slope of beam ΥP  $\frac{d^2y}{dx^2} = \frac{M}{EI} \left[ 1 + \left(\frac{dy}{dx}\right)^2 \right]^{3/2}$ YPP

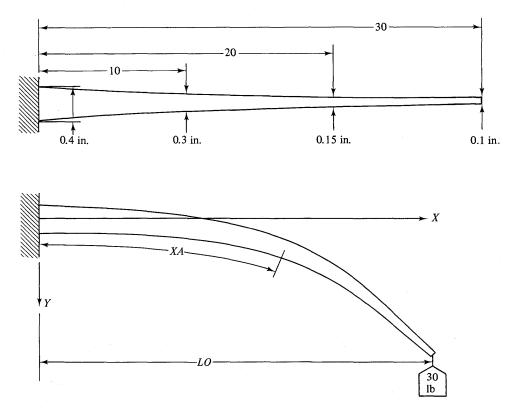


Fig. 2.55 Cantilever beam.

Notice that in Eq. (2.29), the independent variable X is the position in the horizontal direction. This is the first example in which the independent variable has not been time (TIME). This detail can easily be handled by renaming the independent variable using the control statement RENAME. A listing of the program in Fig. 2.56 shows an application of this statement.

RANAME. The RENAME statement can be used to change the symbol for any of the six reserved names (DELT, DELMIN, FINTIM, OUTDEL, PRDEL, and TIME), as shown below:

#### RENAME TIME = X

In this example, the symbol X will be used in place of the reserve word TIME. The independent variable listed in all PRINT and PRTPLT outputs will be the variable X. Successive renaming on the same card must be separated by a comma. No continuation cards (...) are allowed with RENAME; however, several RE-NAME cards may be used.

The only requirement for the location of the RENAME card is that it must be placed before the TIMER statement.

```
LABEL LARGE DEFLECTION OF A CANTILEVER BEAM
      RENAME TIME = X
INITIAL
      CONSTANT L= 30.0, WIDTH = 1.0, E = 10.0E6, FORCE = 30.0, LO = 26.0
      FUNCTION THICK = (0.0, 0.4), (10.0, 0.3), (20.0, 0.15), (30.0, 0.1)
DYNAMIC
      C = SQRT(1:0 + YP*YP)
      XA = INTGRL(C.C.C)
      T = NLFGEN(THICK, XA)
      I = WIDTH*T*T*T/12.0
      YPP = FORCE*(LO - X)*C*C*C/(E*I)
      YP = INTGRL(0.0, YPP)
      Y = INTGRL(0.0, YP)
      STRESS = FORCE*(LO - X)*T/(2.0*I)
TERMINAL
      TIMER FINTIM = 30.0
      FINISH XA = L
      IF(ABS(X - LC).LT.0.3) GO TO 1
      LO = LO + 0.2*(X - LO)
      CALL RERUN
    1 CONTINUE
    THE FOLLOWING END CARD RESETS THE INITIAL CONDITIONS AND INITIATES
¥
      ANOTHER RUN USING A VALUE OF OUTDEL = 0.6.
END
      TIMER OUTDEL = 0.6
      PRTPLT Y (STRESS, XA, YP)
END
STOP
ENDJOB
```



Since the beam is curved, the X coordinate is not equal to the distance as measured along the center line of the beam. The distance from the base along the beam is given by

$$XA = \int_{o}^{x} \left[ 1.0 + \left(\frac{dy}{dx}\right)^{2} \right]^{1/2} dx$$
 (2.30)

CSMP statements for the above expression are

C = SQRT(1.0 + YP\*YP)XA = INTGRL(0.0, C)

The value of XA must be used as the argument of the nonlinear function-generator statement to calculate the thickness of the beam.

T = NLFGEN(THICK, XA)

Since the beam is curved in its final deflected shape, the exact horizontal LO position of the end of the beam is not known. An initial estimate of 26 in. is made on a CONSTANT card. With this initial estimate the values of y, dy/dx,  $d^2y/dx^2$  and stress are calculated as

$$\frac{d^2y}{dx^2} = \text{YPP} = \text{FORCE}*(\text{LO} - \text{X})*\text{C}*\text{C}*\text{C}/(\text{E}*\text{I})$$
(2.31)

$$\frac{dy}{dx} = \int_{a}^{x} \frac{d^2y}{dx^2} dx = YP = INTGRL(0.0, YPP)$$
(2.32)

$$y = \int_{o}^{x} \frac{dy}{dx} dx = Y = INTGRL(0.0, YP)$$
(2.33)

$$\sigma = \frac{mt}{2I} = \text{STRESS} = \text{FORCE}*(\text{LO} - \text{X})*\text{T}/(2.0*\text{I})$$
(2.34)

The calculations in the Dynamic segment continue until the distance integrated along the beam XA is equal to the total length L. At this point the first run is terminated by the following FINISH statement:

#### FINISH XA = L

The FINISH statement terminates a run when the variable XA reaches or first crosses the specified bound L. At this point the actual horizontal position of the end of the beam X is compared with the first estimate LO. If the first estimate for the horizontal location of the end of the beam is not sufficiently close (less than 0.3 in.) to the calculated value, additional runs will be required until this criterion is satisfied. The CALL RERUN feature is used to solve this trial and error problem.

CALL RERUN. The CALL RERUN statement must be placed in the Terminal segment to recycle the program through additional runs with new parameters. All constants used in succeeding runs will have the same values as specified in the Initial segment unless otherwise specified in the Terminal segment. The program listing of Fig. 2.56 illustrates the use of the CALL RERUN statement.

After the first run is terminated by the FINISH statement, the difference between the actual horizontal position of the end of the beam X is compared with the initial guess LO. If the absolute difference is greater than or equal to 0.3 in., a new estimate for LO is calculated and, the CALL RERUN statement will recycle the program using the new estimate for LO and all other constants as specified in the Initial segment.

Successive runs will occur until the absolute difference between the actual horizontal position and the estimate is within the desired range. When this occurs, the FORTRAN IF statement will transfer the execution to the CONTINUE statement which bypasses the CALL RERUN card.

In this example, the CONTINUE card is used as a FORTRAN statement. If the statement number were not included, the CONTINUE card would have been executed as a CSMP statement. A detailed explanation of the CSMP CON-TINUE card is given in Chap. 3.

Notice that there is no output statement before the first END card. This means that there will be no output until the final run is completed. If output is desired at the end of each iterative run, PRINT, or PRTPLT statements should be placed before the first END card. The first END card is used after a CALL RERUN statement to reset the independent variable X to zero, and to initiate another run. The use of the END statement for making multiple runs is covered in Chap. 3. The PRTPLT output for the final run is shown in Fig. 2.57.

One of the most important statements for trial and error solution is the algo-

| LARGE DEFLE | CTION OF A CAN | TILEVER BEAM |   |          | PAGE | 1      |           |            |            |
|-------------|----------------|--------------|---|----------|------|--------|-----------|------------|------------|
|             | M T            | NIMUM        | Y | VERSUS V |      | XIMUM  |           |            |            |
|             | 0.0            |              | T | VERSUS X |      | 06E 01 |           |            |            |
| x           | Y 0.5          | ΄ τ          |   |          | 1.20 | I      | STRESS    | XA         | YP         |
| 0.0         | 0.0            | +            |   |          |      |        | .9250E 04 | 0.0        | 0.0        |
| 6.0000E-01  | 2.6519E-03     | +            |   |          |      |        | .9452E 04 | 6.0001E-01 | 8.87256-03 |
| 1.2000E 00  | 1.06875-02     | +            |   |          |      |        | .9653E 04 | 1.2001E 00 | 1.7945E-02 |
| 1.8000E 03  | 2.4228E-02     | •            |   |          |      |        | 9852E 04  | 1.8002E 00 | 2.72265-02 |
| 2.4000E 00  | 4.34028-02     | +            |   |          |      |        | .0048E 04 | 2.4005E 00 | 3.6724E-02 |
| 3.0000E 00  | 6.8342E-02     | +            |   |          |      |        | .0243E 04 | 3.0010E 00 | 4.6448E-02 |
| 3.60000 00  | 9.9186E-02     | +            |   |          |      |        | .0434E 04 | 3.6018E 00 | 5.6408E-02 |
| 4.2000E 00  | 1.36085-01     | +            |   |          |      |        | .0622E 04 | 4.2030E 00 | 6.6615E-02 |
| 4.8000E 00  | 1.7918E-01     | +            |   |          |      |        | .0806E 04 | 4.8045E 00 | 7.7079E-02 |
| 5.40002 00  | 2.2863E-01     | +            |   |          |      |        | .0985E 04 | 5.4066E 00 | 8.7813E-02 |
| 6.0000E 00  | 2.8461E-01     | -+           |   |          |      |        | 1159E 04  | 6.0092E 00 | 9.8829E-02 |
| 5.6000E 00  |                |              |   |          |      |        | .1326E 04 | 6.6124E 00 | 1.1014E-01 |
| 7.200UE 00  | 4.1684E-01     | -+           |   |          |      | 3      | .1486E 04 | 7.2164E 00 | 1.2176E-01 |
| 7.8000E 00  | 4.9346E-01     | -+           |   |          |      | 3      | .1638E 04 | 7.8213E 00 | 1.3371E-01 |
| 8.4000E 00  | 5.7736E-01     | +            |   |          |      | -      | .1780E 04 | 8.42725 00 | 1.4600E-01 |
| 9.0000E 00  | 6.6874E-01     | +            |   |          |      | 3      | .1912E 04 | 9.0341E 00 | 1.5865E-01 |
| 9.60305 00  | 7.6782E-01     | +            |   |          |      | 3      | .2031E 04 | 9.6422E 00 | 1.7168E-01 |
| 1.0200E 01  | 8.7484E-01     | +            |   |          |      | 2      | 2277E 04  | 1.0252E 01 | 1.8513E-01 |
| 1.0800E 01  | 9.9010E-01     | +            |   |          |      | 3      | .2751E 04 | 1.0863E 01 | 1.9919E-01 |
| 1.1400E 01  | 1.114CE CC     | +            |   |          |      | 3      | .3279E 04 | 1.1475E 01 | 2.1399E-01 |
| 1.2000E 01  | 1.24705 00     | +            |   |          |      | 3      | .3866E 04 | 1.2090E 01 | 2.2962E-01 |
| 1.260JE 01  | 1.3897E 00     | +            |   |          |      | 3      | .4520E 04 | 1.2707E 01 | 2.4622E-01 |
| 1.3200E 01  | 1.5427E 0C     | +            |   |          |      | 3      | .5249E 04 | 1.3326E 01 | 2.6391E-01 |
| 1.3800E 01  | 1.7067E 00     | +            |   |          |      | 3      | .6066E 04 | 1.3948E 01 | 2.8289E-01 |
| 1.4400E 01  | 1.8825E 00     | +            |   |          |      | 3      | .6984E 04 | 1.4573E 01 | 3.0337E-01 |
| 1.5000E 01  | 2.0711E 00     | +            |   |          |      | 3      | .8019E 04 | 1.5202E 01 | 3.2562E-01 |
| 1.560UE 01  | 2.2737E 00     | +            |   |          |      | 3      | .9194E 04 | 1.5835E 01 | 3.5001E-01 |
| 1.6200E 01  | 2.4916E 00     | +            |   |          |      | 4      | .0538E 04 | 1.6474E 01 | 3.7698E-01 |
| 1.6800E 01  | 2.7267E 00     | +            |   |          |      | 4      | .2089E 04 | 1.7118E 01 | 4.0717E-01 |
| 1.7400E 01  | 2.9810E 00     | +            |   |          |      | 4      | .3898E 04 | 1.7770E 01 | 4.4142E-01 |
| 1.8000E 01  | 3.2574E 00     |              | + |          |      | 4      | .6041E 04 | 1.8430E 01 | 4.8093E-01 |
| 1.8000E 01  | 3.5595E 00     |              | + |          |      | 4      | .8625E 04 | 1.9102E 01 | 5.2752E-01 |
| 1.920JE 01  | 3.89245 00     |              | + |          |      | 5      | .1818E 04 | 1.9788E 01 | 5.8402E-01 |
| 1.9800E 01  | 4.2630E 00     |              | + |          |      | 5      | .2945E 04 | 2.0494E 01 | 6.5323E-01 |
| 2.0400E 01  | 4.6785E 00     |              | + |          |      | 5      | .2539E 04 | 2.1224E 01 | 7.3370E-01 |
| 2.1000E 01  | 5.14625 00     |              | + |          |      | 5      | .1556E 04 | 2.1984E 01 | 8.2803E-01 |
| 2.1600E 01  | 5.6757E 00     |              | + |          |      | 4      | .9863E 04 | 2.2785E 01 | 9.4020E-01 |
| 2.2200ë 01  | 6.2791E 00     |              |   | -+       |      | 4      | .7302E 04 | 2.3636E 01 | 1.0757E 00 |
| 2.2800E 01  | 6.9728E 00     |              |   |          |      | 4      | .3680E 04 | 2.4553E 01 | 1.2422E 00 |
| 2.3400E 01  | 7.7780E 00     |              |   | +        |      | 3      | .8772E 04 | 2.5553E 01 | 1.4495E 00 |
| 2.4000E 01  | 8.7224E 00     |              |   | (        | •    | 3      | .2331E 04 | 2.6677E 01 | 1.7075E 00 |
| 2.4600E 01  | 9.8371E 00     |              |   |          | +    | 2      | .4167E 04 | 2.7943E 01 | 2.0147E 00 |
| 2.520JE 01  | 1.1142E 01     |              |   |          | +    | 1      | .4345E 04 | 2.9379E 01 | 2.3267E 00 |
| 2.5800E 01  | 1.2606E 01     |              |   |          |      | -+ 3   | .6008E 03 | 3.0961E 01 | 2.5207E 00 |

Fig. 2.57 PRTPLT output for deflection of beam.

rithm used in the terminal segment to recalculate LO. The calculation that was used in this example is

$$LO = LO + 0.2*(X - LO)$$
 (2.35)

This statement is not meant to be the optimum algorithm for calculating the new estimate for LO. It is only a calculation that yielded desired results. Extreme care should be used in choosing algorithms for recalculating new estimates of parameters. These calculations can affect not only the number of iterative runs but can often make the difference between a convergent or divergent solution.

#### Example 2.11 Stress Analysis of Cam-Follower System

In all of the previous examples, some form of numerical integration was performed. This example illustrates the use of CSMP to make a sequence of calculations where no integration is conducted. Other computer languages such as FORTRAN and BASIC could be used for this particular type of problem but CSMP has the advantage of particular capabilities such as FUNCTION and PRTPLT.

The problem is to calculate the contact stress between a cam and roller-follower at  $2^{\circ}$  cam increments. A schematic of the physical system is shown in Fig. 2.58.

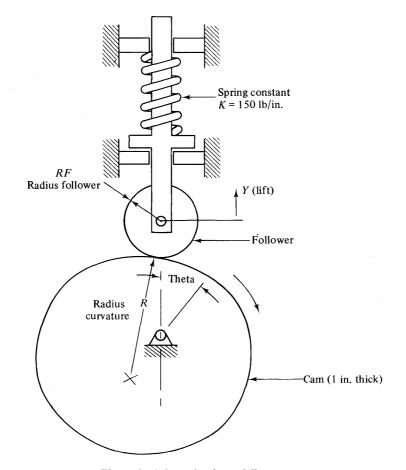


Fig. 2.58 Schematic of cam-follower system.

The stress is a function of the angular position of the cam, consequently, the independent variable is THETA. The first statement of the program of Fig. 2.59 uses the RENAME card to change the symbol for the independent variable from TIME to THETA.

The maximum compressive contact stress for a 1 in. thick steel cam and roller-follower is given by the Hertz formula.

$$STRESS = 2291 \sqrt{\frac{F(R+RF)}{R*RF}} \text{ (psi)}$$
(2.36)

where R = radius of curvature of cam profile at the point of contact (in.)

RF = radius of roller-follower (in.)

F = radial load (lb)

```
RENAME TIME = THETA
LABEL
        CALCULATION OF CONTRACT STRESS BETWEEN CAM AND FOLLOWER
      CONSTANT RF = 0.75, K = 150.0, YI = 0.25
      FUNCTION LIFT = {0.0,0.0}, {30.0,0.0937}, {60.0,0.375}, {90.0,0.75},...
     ,(120.0,1.125),(150.0,1.406),(180.0,1.5),(210.0,1.5),
      (240.0,1.357),(270.0,0.9818),(300.0,0.375),(330.0,0.1433),
                                                                        . . .
      (360.0.0.0)
      FUNCTION RADCUV = (0.0,2.0),(30.0,2.4),(60.0,2.5),(90.0,2.75),...
      (120.0,3.0),(150.0,3.3),(180.0,3.5),(210.0,3.5),(240.0,2.95),
      (270.0,2.8),(300.0,2.6),(330.0,2.5),(360.0,2.0)
      Y = NLFGEN(LIFT, THETA)
      F = K * \{Y + YI\}
      R = NLFGEN(RADCUV, THETA)
      STRESS = 2291.0*SURT(F*(R + RF)/(R*RF))
      PRTPLT STRESS (F.R.Y)
      TIMER FINTIM = 360.0, OUTDEL = 2.0
END
STOP
ENDJOB
```

Fig. 2.59 Program to calculate contact stress between cam and follower.

The radius of curvature of the cam surface is measured from the drawing of the cam at  $30^{\circ}$  increments and this information is included in the following FUNCTION statement.

FUNCTION RADCUV =  $(0.0,2,0),(30.0,2.4),(60.0,2.5),(90.0,2.75), \dots$ (120.0,3.0),(150.0,3.3),(180.0,3.5),(210.0,3.5),(240.0,2.95), ... (270.0,2.8),(300.0,2.6),(330.0,2.5),(360.0,2.0)

To simplify the calculation of force, the cam is assumed to be rotating at a speed where the inertial forces can be neglected. A static analysis which neglects the pressure angle yields the following expression for the force between the cam and follower.

$$F = K(Y + YI) \tag{2.37}$$

where Y =lift of follower

YI = initial compression of spring

The lift Y is also a function of THETA and is measured from the drawing at  $30^{\circ}$  increments. This information is included in the following FUNCTION statement.

FUNCTION LIFT =  $(0.0,0.0),(30.0,0.0937),(60.0,0.375),(90.0,0.75),\ldots$  $(120.0,1.125),(150.0,1.406),(180.0,1.5),(210.0,1.5),\ldots$  $(240.0,1.357),(270.0,0.9818),(300.0,0.375),(330.0,0.1433),\ldots$ 

Since both the radius of curvature of the cam and the lift are represented by smooth curves, the NLFGEN function-generating element is used to calculate values for R and Y.

The TIMER card controls the increment and range of calculations. In this example, FINTIM was set equal to 360.0 which corresponds to a carn rotation of one revolution. A value of OUTDEL = 2.0 forces the calculations to be performed and print-plotted at  $2^{\circ}$  increments. One page of the printer-plot output is shown in Fig. 2.60. Note the maximum and minimum values for the print-plot variable STRESS are always included in the PRTPLT output.

|                    | MINIMUM<br>1.8996E 04 | STRESS VERSUS THETA | MAXIMUM<br>4.7359E 04    |                      |    |
|--------------------|-----------------------|---------------------|--------------------------|----------------------|----|
|                    |                       |                     |                          |                      |    |
| THETA STRESS       | I                     |                     | I F                      | R Y                  |    |
| 0.0 1.8996E        |                       |                     | 3.7500E 01               | 2.0000E 00 0.0       |    |
| 2.0000E 00 1.9197E |                       |                     | 3.8437E 01               | 2.0267E 00 6.2467E-  | 03 |
| 4.0000E 00 1.9396E |                       |                     | 3.9374E 01               | 2.0533E 00 1.2493E-  | 02 |
| 6.0000E 00 1.9592E | 04 -+                 |                     | 4.0311E 01               | 2.0800E 00 1.8740E-  | 02 |
| 8.0000E 00 1.9785E | 04 -+                 |                     | 4.1248E 01               | 2.1067E 00 2.4987E-  | 02 |
| 1.0000E 01 1.9975E | 04 -+                 |                     | 4.2185E 01               | 2.1333E 00 3.1233E-  | 02 |
| 1.2000E 01 2.0163E | 04+                   |                     | 4.3122E 01               | 2.1600E 00 3.7480E-  | 02 |
| 1.4000E 01 2.0349E |                       |                     | 4.4059E 01               | 2.1867E 00 4.3727E-  |    |
| 1.6000E 01 2.0533E |                       |                     | 4.4996E 01               | 2.2133E 00 4.9973E-  |    |
| 1.8000E 01 2.0714E |                       |                     | 4.5933E 01               | 2.2400E 00 5.6220E-  |    |
| 2.0000E 01 2.0894E |                       |                     | 4.6870E 01               | 2.2667E 00 6.2467E-  |    |
|                    | 04+                   |                     | 4.7807E 01               | 2.2933E 00 6.8713E-  |    |
|                    | •••                   |                     |                          | 2.3200E 00 7.4960E-  |    |
| 2.40005 01 2.1246E |                       |                     | 4.8744E 01               |                      |    |
| 2.6000E 01 2.1420E |                       |                     | 4.9681E 01               | 2.3467E 00 8.1207E-  |    |
|                    | 04+                   |                     |                          | 2.3733E 00 8.7453E-  |    |
| 3.0000E 01 2.1761E |                       |                     | 5.1555E 01               | 2.4000E 00 9.3700E-  |    |
| 3.2000E 01 2.2149E |                       |                     | 5.3492E 01               | 2.4160E 00 1.0662E-  |    |
| 3.4000E 01 2.2556E |                       |                     | 5.5555E 01               | 2.4307E 00 1.2037E-  |    |
| 3.6000F 01 2.2981E | 04+                   |                     | 5.7743E 01               | 2.4440E 00 1.3495E-  | 01 |
| 3.8000E 01 2.3423E | 04+                   |                     | 6.0055E 01               | 2.4560E 00 1.5037E-  | 01 |
| 4.0000E 01 2.3881E | 04+                   |                     | 6.2493E 01               | 2.4667E 00 1.6662E-  | 01 |
|                    | 04+                   |                     | 6.5056E 01               | 2.4760E 00 1.8371E-  | 01 |
| 4.4000E 01 2.4844E | 04+                   |                     | 6.7744E 01               | 2.4840E 00 2.0163E-  | 01 |
|                    | 04+                   |                     | 7.0557E 01               | 2.4907E 00 2.2038E-  | 01 |
| 4.8000F 01 2.5863E |                       |                     | 7.3495E 01               | 2.4960E 00 2.3997E-  |    |
| 5.0000E 01 2.6391E | •••                   |                     | 7.6558E 01               | 2.5000E 00 2.6039E-  |    |
| 5.2000E 01 2.6932E | •••                   |                     | 7.9746E 01               | 2.5027E 00 2.8164E-  |    |
| 5.4000F 01 2.7484E |                       |                     | 8.3060E 01               | 2.5040E 00 3.0373E-  |    |
| 5.6000E 01 2.8047E | •••                   |                     | 8.6498E 01               | 2.5040E 00 3.2665E-  |    |
| 5.8000E 01 2.8621E |                       |                     | 9.0061E 01               | 2.5027E 00 3.5041E-  |    |
|                    |                       | -•.                 | 0.37505 01               | 2.5000E 00 3.7500E-  |    |
|                    |                       | +                   | 9.3750E 01<br>9.7063E 01 | 2.5120E 00 3.9708E-  |    |
|                    | • •                   | ·•                  | 9.7083E 01               |                      |    |
| 6.4000E 01 3.0194E |                       | +                   | 1.0044E 02               | 2.5247E 00 4.1959E-  |    |
| 6.6000F 01 3.0688E | •••                   | +                   | 1.0388E 02               | 2.5380E 00 4.4250E-  |    |
| 6.8000E 01 3.1181E |                       | +                   | 1.0738E 02               | 2.5520E 00 4.6584E-  |    |
| 7.0000E 01 3.1674E |                       | +                   | 1.1094E 02               | 2.5667E 00 4.8959E-0 |    |
| 7.2000E 01 3.2166E |                       |                     | 1.1456E 02               | 2.5820E 00 5.1376E-  |    |
| 7.4000F 01 3.2657E |                       | +                   | 1.1825E 02               | 2.5980E 00 5.3834E-0 | 01 |
| 7.6000E 01 3.3147E | 04                    | +                   | 1.2200E 02               | 2.6147E 00 5.6334E-  | 01 |
| 7.8000E 01 3.3636E | 04                    | +                   | 1.2581E 02               | 2.6320E 00 5.8876E+0 | 01 |
| 8.0000F 01 3.4124E | 04                    |                     | 1.2969E 02               | 2.6500E 00 6.1459E-  | 01 |
| 8.2000E 01 3.4612E | 04                    | +                   | 1.3363E 02               | 2.6687E 00 6.4084E-0 | 01 |
| 8.4000E 01 3.5098E | 04                    |                     | 1.3763E 02               | 2.6880E 00 6.6750E-0 | 01 |
| 8.6000E 01 3.5584E | 04                    |                     | 1.4169E 02               | 2.7080E 00 6.9459E-0 | 01 |
| 8.8000E 01 3.6068E |                       | +                   | 1.4581E 02               | 2.7287E 00 7.2208E-  |    |
| 9.0000E 01 3.6552E |                       | +                   | 1.5000E 02               | 2.7500E 00 7.5000E-0 |    |
| 9.2000E 01 3.6982E |                       |                     | 1.5375E 02               | 2.7667E 00 7.7500E-  |    |
| 9.4000E 01 3.7406E | ••                    | +                   | 1.5750E 02               | 2.7833E 00 8.000CE-  |    |
| 9.6000E 01 3.7825E | • ·                   |                     | 1.6125E 02               | 2.8000E 00 8.2500E-  |    |
|                    | ••                    |                     | 1.6500E 02               | 2.8167E 00 8.5000E-0 |    |
| 9.8000E 01 3.8238E | • •                   |                     | 1.6875E 02               | 2.8333E 00 8.7500E-  |    |
| 1.0000E 02 3.8647E | 04                    |                     | 1.08/36 02               | 2.03332 00 0.19002-0 | •  |

PAGE 1

Fig. 2.60 Printer-plot output for contact stress.

#### REFERENCES

- 1. System/360 Continuous System Modeling Program User's Manual GH20-0367-4, Program Number 360A-CX-16X, IBM Data Processing Division, White Plains, N.Y.
- 2. System/360 Continuous System Modeling Program, Operations Guide, Program Number 360A-CX-16X, IBM Data Processing Division, White Plains, N.Y.
- 3. Continuous System Modeling Program III (CSMP III) Operations Guide, Program Number 5734-XS9, SH19-7002-1, IBM Data Processing Division, White Plains, N.Y.
- 4. MCCRACKEN, DANIEL D., A Guide To Fortran IV Programming 2nd ed. New York: John Wiley and Sons, Inc.

## PROBLEMS

1 Write a CSMP program for solving the following nonlinear differential equation:

10

$$\frac{d^2x}{dt^2} + 25(1.0 + 0.1x^2)x = 0$$

subject to the initial conditions,

$$x(0) = 3.0$$
  
 $\dot{x}(0) = 0.0$ 

Answer:†


$$x(t) = 2.9531$$
 at TIME = 1.0

2 A high-temperature oven is heated by an electrical element supplying 12,000 BTU/hr. The heat loss from the oven by convection and radiation is calculated to be the following.

$$q_{1oss} = 2 \times 10^{-8} (T_o^4 - T_a^4) + 8.0 (T_o - T_a) \text{ BTU/hr}$$

If the initial temperature is  $530^{\circ}$ R (70°F), determine the oven temperature at 0.05 hr, 0.1 hr, 0.3 hr, and 0.5 hr. The differential equation for this transient heat transfer problem is

$$C_t \dot{T}_o = q_{\text{supplied}} - q_{\text{loss}}$$
  
 $C_t = \text{thermal capacitance, 24 BTU/°R}$ 

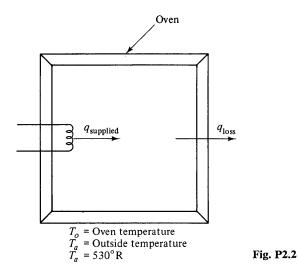


Answer:

At TIME = 
$$0.5 \text{ hr}$$
,  $T_o = 723.6^{\circ} \text{R}$ 

<sup>†</sup>Answers are given to the problems at particular discrete times. If the programs are written correctly then the solutions should agree at the designated value of TIME.

3 Given the system shown in Fig. P2.3, if the input is a unit-step (STEP(0.0)), write a program to find the printer-plot of the output. Use a FINTIM of 1.3 and an OUT-DEL of 0.026.

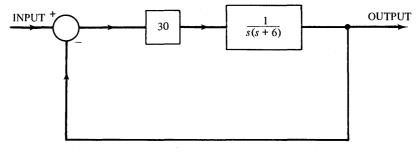



Answer:

Output = 0.81395 at TIME = 0.364

4 The period of vibration of a pendulum for small angles is

$$2\pi\sqrt{\frac{L}{g}}$$
.

 $L\ddot{\theta} + g\sin(\theta) = 0$ 

Using the capability of a PARAMETER card to make sequential runs, compare the periods of oscillation of a pendulum which has initial angles of  $5^{\circ}$ ,  $20^{\circ}$ ,  $45^{\circ}$ ,  $90^{\circ}$ , and  $135^{\circ}$ . The equation of motion for the pendulum is

$$L$$

$$L$$

$$\theta$$

$$m = mass$$
Fig. P2.4

Answer:

5° period =  $6.286\sqrt{L/g}$ 20° period =  $6.331\sqrt{L/g}$ 45° period =  $6.534\sqrt{L/g}$ 90° period =  $7.416\sqrt{L/g}$ 135° period =  $9.600\sqrt{L/g}$  5 A system is represented by the vector differential equation,

$$\dot{x} = Ax + bu$$

in which

$$x = \begin{bmatrix} x_1(t) \\ x_2(t) \\ x_3(t) \end{bmatrix} \qquad A = \begin{bmatrix} 0 & 1 & 0 \\ 0 & -10 & 1 \\ -16 & 0 & -2 \end{bmatrix} \qquad b = \begin{bmatrix} 0 \\ 0 \\ 16 \end{bmatrix} \qquad u = \text{unit-step}$$

Use CSMP to find  $x_1(t)$ ,  $x_2(t)$ , and  $x_3(t)$ .

Answer:

At TIME = 
$$1.9$$
:  $x_1(t) = 0.793$ 

6 The differential equation for the motion of the base of an unbalanced electric motor is shown below.

$$M\ddot{x} + c\dot{x} + kx = me\omega^2 \sin(\omega t)$$

$$M = 0.1 \text{ lb-sec}^2/\text{in}$$

$$c = 1.2 \text{ lb-sec/in}$$

$$k = 800 \text{ lb/in}$$

$$me = 0.009 \text{ lb-sec}^2$$

Assuming the system is initially at rest, find the time-history of the motion of the base. The motor speed increases according to the following formula.

$$ω = 120π(1 - e^{-t/4})$$
  
Unbalanced electric motor  
 $k/2$   $c$   $k/2$   
Fig. P2.6

Answer:

When 
$$\omega = 90$$
 rad/sec,  $x = 0.067$  in.

7 The system diagram of a process having time delay is shown in Fig. P-2.7 Find the unit-step response of the system. Compare your results with those given in Fig. 2.14 which is the step response of the system above without delay. Use FINTIM = 8.0, and OUTDEL = 0.16.

Ch. 2

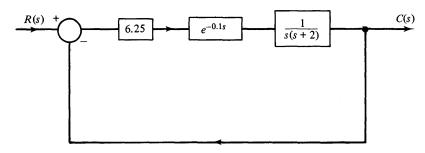


Fig. P2.7

Answer:


- Using N = 20 in the DELAY Function gives c(t) = 1.4116 at TIME = 1.44
- 8 Determine the time-history for the water level in each of the three tanks. Initially the water level in all tanks is 10ft. The cross-sectional areas of the tanks are shown below.

$$A_1 = 4 \text{ ft}^2$$
$$A_2 = 8 \text{ ft}^2$$
$$A_3 = 12 \text{ ft}^2$$

The general equation describing the height of water is

$$A_i H_i = q_{\rm in} - q_{\rm out}$$

The flow through an orifice is given below.

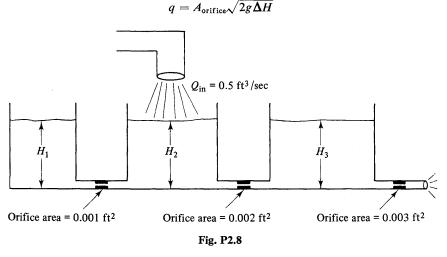

Answer:

At TIME = 50 sec: 
$$H_1 = 10.11$$
 ft  
 $H_2 = 12.95$  ft  
 $H_3 = 9.76$  ft

**9** A space vehicle is reentering the earth's atmosphere. In the position shown, the vehicle is 200,000 ft from the surface of the earth and the speed is 25,000 mph. The aerodynamic drag is:

$$f_{\rm total} = 0.5 A C_d \rho V^2$$

where A = cross sectional area of vehicle = 80 ft<sup>2</sup>

$$C_d = \text{drag coefficient} = 0.55$$
  


$$\rho = 0.00238 \ e^{-h/24000} \quad (\text{slug/ft}^3)$$
  

$$h = \text{altitude in feet}$$

The equations of motion in cylindrical coordinates are shown below.

$$m(\ddot{r} - r\dot{ heta}^2) = f_{
m drag \ radial} - mg$$
  
 $m(r\ddot{ heta} + 2\dot{r}\dot{ heta}) = -f_{
m drag \ tangential}$ 

(a) Using this information, how fast does the vehicle strike the earth? (b) What is the total distance traveled by the vehicle? *Hint:*  $s = \int_{a}^{t} v \, dt$  (c) How much energy is dissipated in aerodynamic drag? *Hint:* Energy  $= \int_{a}^{t} \text{force } \frac{ds}{dt} dt$ 

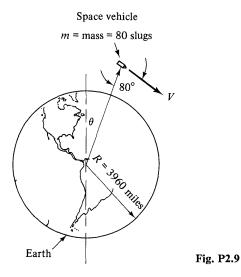

Answer:

(a) 224 ft/sec (b) 779,000 ft (c) 
$$5.43 \times 10^{10}$$
 ft-lb

10 The block diagram of a system containing amplifier saturation is given in Fig. P2.10. Use the function generator  $Y = \text{LIMIT}(P_1, P_2, X)$  given in Appendix I to find the response of the system if r(t) = R(s) = 3.5u(t) where u(t) is a unit-step starting at t = 0. Select FINTIM = 4.0, OUTDEL = 0.08, and obtain the printer-plot output of c(t).

Ch. 2

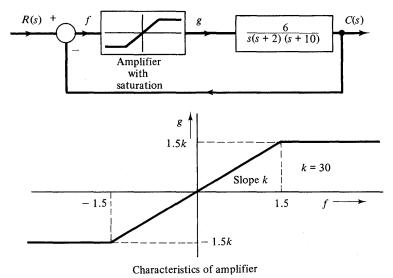


Fig. P2.10


Answer:

At TIME = 1.28 c(t) = 5.2106

11 To test the impact characteristics of neoprene, a 36.6 lb weight is dropped on a doughnut-shaped specimen. The velocity at impact is 52.7 in/sec. The acceleration of the weight was measured to be the following:

| Time<br>(sec) | Acceleration<br>(g's) | $1 \text{ g} = 386 \text{ in/sec}^2$ |
|---------------|-----------------------|--------------------------------------|
| 0             | 0                     | -                                    |
| 0.002         | -13.0                 |                                      |
| 0.003         | -23.0                 |                                      |
| 0.004         | -32.0                 |                                      |
| 0.005         | -35.0                 |                                      |
| 0.006         | -34.0                 |                                      |
| 0.007         | -33.0                 |                                      |
| 0.008         | -24.0                 |                                      |
| 0.01          | -11.0                 |                                      |
| 0.012         | 0                     |                                      |
| 0.015         | 1.0                   |                                      |

Using the AFGEN function to represent data taken from this test, determine the time-history of the velocity and displacement of the top surface of the neoprene. Also determine the energy absorbed by the neoprene.

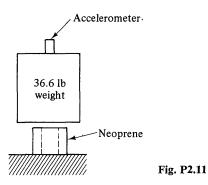

Answer:

at TIME = 0.0075 secs displacement = 0.208 in. velocity = -15.0 in/sec

12 An automobile passes over a triangular bump at a speed of 20 ft/sec. Determine the maximum pitch and vertical motion of the center of gravity. Neglect the deflection of the tires and the effects of the unsprung mass. The automobile has the following parameters.

Weight = 4200 lb

Spring constants = front: 120 lb/in., rear: 180 lb/in.

Damping coefficients = front: 10 lb-sec/in., rear: 12.0 lb-sec/in.

Pitch moment of inertia =  $40,000 \text{ lb-sec}^2/\text{in}$ .

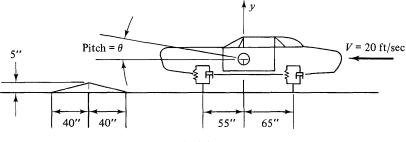


Fig. P2.12

*Hint:*  $I_{\ddot{\theta}} = \Sigma$  torques due to springs and shock absorbers about center of gravity

 $m\ddot{y} = \Sigma$  forces due to spring and shock absorbers.

Answer:

$$y_{\rm max} = 2.09 \text{ in.}; \theta_{\rm max} = 1.84^{\circ}$$

13 Same as the above problem, except the shock absorbers are more realistically represented by having different linear damping coefficients in the compression and rebound directions.

Damping coefficients = front: compression 6.0 lb-sec/in.; rebound 14.0 lb-sec/in. rear: compression 8.0 lb-sec/in.; rebound 18.0 lb-sec/in.

Answer:

$$y_{ t max} = 1.588$$
 in.,  $oldsymbol{ heta}_{ t max} = 1.395^\circ$ 

14 A block diagram model of a position control system with tachometer feedback is given in Fig. P2.14.

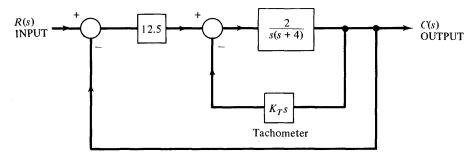


Fig. P2.14

Let R(s) correspond to a unit-step [i.e., INPUT = STEP(0.0)] and find c(t) for values of  $K_T = 0.1$ , 1.5, 4.0. Use the PARAMETER card for running multiple values of  $K_T$ . Specify FINTIM = 5.0, and OUTDEL = 0.1 for the printer-plot of the output. Also specify that ERROR and INPUT are listed on the same page which gives the printer-plot of the output. Use a LABEL card with your choice of wording for the title of the printer-plot output.

Answer:

$$c(t) = 1.2329$$
 at TIME = 0.7  $K_T = 1.0$   
 $c(t) = 1.0468$  at TIME = 0.9  $K_T = 1.5$   
 $c(t) = 0.9919$  at TIME = 1.9  $K_T = 4.0$ 

15 The following Blasius equation is a transformed equation describing the laminar boundary layer on a flat plate.

$$\frac{d^3f}{d\eta^3} + \frac{d^2f}{d\eta^2}f = 0$$

Based on previous experience, the following boundary conditions will yield a satisfactory solution.

$$f(\eta = 0) = \frac{df}{d\eta}(\eta = 0) = 0 \qquad \frac{df}{d\eta}(\eta = 3) = 2$$

Using a trial and error solution determine the value of

$$\frac{d^2f}{d\eta^2}(\eta=0)$$

Answer:

$$\frac{d^2f}{d\eta^2}(\eta=0)=1.328$$

## 16 Solve the following set of differential equations.

 $\begin{aligned} 3\ddot{x}_1 + \ddot{x}_2 + 5\dot{x}_1^3 + 10x_1 &= 10 + e^{-t} \\ \ddot{x}_1 + 4\ddot{x}_2 + 25\dot{x}_2 + 4x_2^3 &= 0 \\ x_1(0) &= x_2(0) = 0 \\ \dot{x}_1(0) &= 2 \qquad \dot{x}_2(0) = 7 \end{aligned}$ 

where Answer:

At TIME = 
$$1.0 x_1 = 1.276$$

17 The diagram below represents an experimentally measured water temperature increase in a steam generating boiler due to a step input of fuel. The fuel is natural

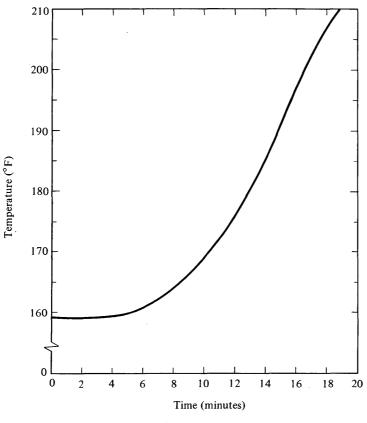


Fig. P2.17

Ch. 2

gas and the step input level is 10,000 ft<sup>3</sup>/hr. The heat content of the gas is approximately 1000 Btu/ft<sup>3</sup>. A proposed model for matching the temperature increase (over the range t = 0 to t = 19 min) due to the step input of fuel is given by

$$\frac{T(s)}{U(s)} = \frac{K_2 \epsilon^{-\tau_d s}}{s(1+\tau_1 s)(1+\tau_2 s)}$$

where T has units of °F,  $K_2$  has units of °F/ft<sup>3</sup>, U(input) is in ft<sup>3</sup>/min, and  $\tau_d$ ,  $\tau_1$ ,  $\tau_2$  have units of minutes. Use CSMP to assist you in determining appropriate values for  $K_2$ ,  $\tau_d$ ,  $\tau_1$ , and  $\tau_2$ .

Answers:

$$K_2 = 0.04 \,^{\circ}\text{F/ft}^3$$
,  $\tau_d = 4 \, \text{min}$ ,  $\tau_1 = 2 \, \text{min}$ ,  $\tau_2 = 5 \, \text{min}$ 

18 A red hot cylindrical piece of iron is brought from a heat treating furnace and is allowed to cool in still air. Energy is removed from the piece by both convection and radiation. Assuming the iron remains at a uniform temperature, the following equation can be used to describe the transient temperature.


$$mc\frac{dT}{dt} = hA(T_a - T) + A\epsilon\sigma(T_a^4 - T^4)$$

where:  $T_a = 545^{\circ}R$ , m = 161.7 lbm,  $c = 0.13 \text{ Btu-lbm/}^{\circ}R$ 

A = 3.01 ft<sup>2</sup>,  $h = 0.18(T - T_a)^{0.33}$  Btu/ft<sup>2</sup>-hr (assuming turbulence flow over piece)

 $\epsilon = 0.95, \qquad \sigma = 0.1714 \times 10^{-8} \text{ Btu/hr-ft}^{2-\circ} \text{R}^{4}$ 

Use the FINISH card to determine how long it takes for the piece to cool from  $1910^{\circ}$ R to  $1300^{\circ}$ R.

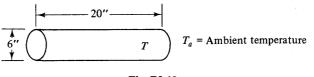



Answer:

#### 0.378 hours

19 The following equations describe the angular recoil of a hand gun. The assumption is made that the gun is loosely held so that no external moment is applied to the gun. The restraining force vector passes through the center of mass. The parameters for a 38 caliber pistol are shown below.


Bullet weight = w = 0.0207 pounds

Moment of inertia about center of mass = I = 0.0105 lb-in.-sec<sup>2</sup>

d = 0.9 inches

Cross-sectional area of bullet = A = 0.1 in.<sup>2</sup>

Find the angular recoil of the hand gun and muzzle velocity for the following description of barrel pressure.

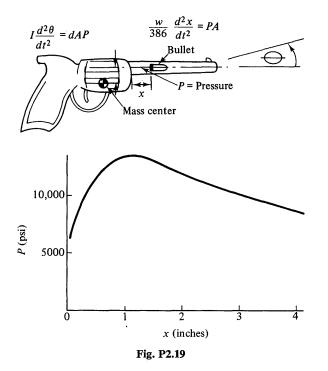

Answer:

At 
$$x = 3.962$$
 in.,  $\theta = 0.018212$  radians,  
and  $x = 12600$  in./sec

Closed form solution:

$$\theta = xwd/(386I)$$

í

20 An automobile engine has a stroke of 3.70 in. and a connecting rod length of 5.84 in. as shown in Fig. P2.20. The following is an expression for the exact acceleration of the piston for a constant engine speed.

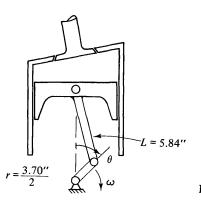


Fig. P2.20

$$a = -\omega^2 \Big[ \mathbf{R} \cos \theta + \mathbf{R}^2 (\mathbf{L}^2 - \mathbf{R}^2 \sin^2 \theta)^{-1/2} \cos 2\theta \\ + \frac{\mathbf{R}^4}{4} (\mathbf{L}^2 - \mathbf{R}^2 \sin^2 \theta)^{-3/2} \sin^2 2\theta \Big]$$

Use the above equation to calculate the acceleration of the piston for an engine speed of 4800 rpm ( $\omega = 160 \pi$  rad/sec) at three degree increments during one complete revolution of the crankshaft.

$$a_{max} = 3.355 \times 10^{5} \text{ in/sec}^{2} \text{ at } 141^{\circ}$$
  
 $a_{min} = -6.155 \times 10^{5} \text{ in/sec}^{2} \text{ at } 0^{\circ}$ 

# **3** ADVANCED FEATURES OF CSMP

The preceding chapter introduced the basic concepts and features that allow the reader to begin using CSMP. In this chapter, additional programming capabilities are described which permit considerable flexibility in the simulation of complex systems. The presentation is divided into five distinct areas: integration methods, data statements, translation control statements, data output, and subprograms. Each section is essentially a separate entity and consequently the material can be covered in any order.

Since integration is normally a pivotal point in most simulations, the first section concentrates on the various numerical integration routines available in CSMP.

## **Integration Methods**

One of the most attractive features of CSMP is that the user seldom needs to become involved in specifying either the type or any of the details of the numerical integration method. For those who wish to specify the integration technique, there are five fixed-step and two variable-step methods available. CSMP III provides two additional techniques which are described in Chap. 5. If none of the seven methods are suitable, the user can supply his own integration subroutine. The following paragraphs describe the relative advantages and disadvantages of variable and fixed-step integration methods, error requirements, and give guidelines for choosing the best integration method.

## Variable-Step Integration Methods

When the integration method is not specified, a variable-step Runge-Kutta method (CSMP name: RKS) is automatically used. This method is generally a good choice for most problems and is used in the example problems in Chap. 2. It is a sophisticated method that has the advantage of automatically adjusting the time increment of integration to meet the demands of the dynamic conditions of the simulation. Thus, the user is virtually assured a satisfactory solution.

The second variable-step integration technique is the fifth-order, predictorcorrector, Milne method (MILNE). This method is specified by including the following CSMP statement in the program.

#### METHOD MILNE

The MILNE method is similar to the RKS integration technique in that it uses rather sophisticated numerical algorithms and adjusts the step-size to meet changing conditions. MILNE integration has essentially the same advantages and disadvantages as the RKS technique. Generally, one will not know prior to the run which integration method will give the best simulation results. While the RKS method may give best results for one problem, the MILNE method may perform best for another type of problem.

Both methods have the disadvantage of sometimes using an extremely small integration step-size which results in excessive computer time. The step-size is controlled by algorithms which provide estimates of integration error.

#### Integration Error Requirements

In both variable-step methods, the absolute value of the estimated integration error (ABSERR) and the relative magnitude of the estimated error (RELERR) are compared with user-specified error-bounds. The step-size is then adjusted to meet the desired error criteria. The error limit of the absolute error dominates for large values of integrator output while the relative error is more important for small values of output. A detailed mathematical description of all integration methods and error criteria is contained in Appendix III.

If error-bounds are not specified, a value of 0.0001 is automatically used for both the absolute and relative errors for all RKS and MILNE integration. The user can specify either or both the relative and absolute errors for each integrator by using the RELERR and ABSERR statements. Examples of both statements are shown below.

> RELERR X = 0.0002, Y = 5.0E-5, Z = 0.0005 ABSERR X = 0.0003, Y = 7.5E-5

The first statement sets the relative error for the X, Y, and Z integrators to the values shown. In the second statement, the absolute errors for only the X and Y integrators are changed as indicated.

The use of the RELERR and ABSERR cards enables the user to specify the

allowable error for each separate integrator which, in effect, governs the size of the integration step. Computer time can be more efficiently used since step-size and computer time are directly related.

It is quite difficult to determine the exact quantitative effect that the relative and absolute errors have on step-size and solution accuracy. In order to show the relationship of error-bound to solution accuracy for one particular problem, the following second-order linear equation is solved using the variable-step Runge-Kutta method for values of relative and absolute error that ranged from 0.00005 to 0.1. The particular problem is the harmonic oscillator,

$$\ddot{v} + 4\pi^2 y = 0 \tag{3.1}$$

with initial conditions of y(0) = 1.0,  $\dot{y}(0) = 0$ 

A plot of the exact solution for y(t) is given in Fig. 3.1. To illustrate the effect of ABSERR and RELERR error bounds, the exact solution is compared to the Runge-Kutta numerical solution.

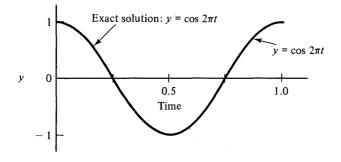


Fig. 3.1 Plot of the exact solution of  $\dot{y}(t) + 4\pi^2 y(t) = 0$ , with y(0) = 1,  $\dot{y}(0) = 0$ .

Table 3.1 contains a summary of the average absolute difference between the exact solution and numerical solution as a function of error-bound. The number of integration steps is also listed. The information in this table should not be directly applied to all problems but it does illustrate how error-bounds affect the accuracy of solution for one particular problem. Round-off errors in the numerical calculations limit the maximum accuracy of the solution. Consequently, the solution error cannot be expected to continue to become smaller indefinitely for increasingly smaller values of error-bound.

In some problems the error-bounds and the dynamics of the simulation do not control the integration step-size. Since the solution must be calculated at each output interval the integration step-size must be equal to or less than the magnitude of either PRDEL or OUTDEL. This means that for small output-intervals the step-size is determined by the print interval. For this condition the error-bound has no effect on the step size. In the numerical solution of Eq. (3.1), which generated the data contained in Table 3.1, the print interval was made sufficiently large to not affect the integration step-size.

| Table 3.1 | Та | bl | е | 3. | 1 |
|-----------|----|----|---|----|---|
|-----------|----|----|---|----|---|

| Error-bound<br>ABSERR<br>and<br>RELERR | Average Absolute<br>Difference between<br>Numerical and Exact<br>Solutions | Number of<br>Integration<br>Steps |
|--|--|-----------------------------------|
| 0.00005                                | 5.48 × 10 <sup>-6</sup>  | 29                                |
| 0.0001                                 | $7.06	imes10^{-5}$   | 23                                |
| 0.0002                                 | $7.95	imes10^{-5}$   | 23                                |
| 0.0005                                 | $1.01 	imes 10^{-4}$   | 20                                |
| 0.001                                  | $8.87	imes10^{-5}$   | 20                                |
| 0.002                                  | $5.88	imes10^{-4}$   | 18                                |
| 0.004                                  | $4.89	imes10^{-4}$   | 17                                |
| 0.005                                  | $4.89	imes10^{-4}$   | 17                                |
| 0.01                                   | $4.89	imes10^{-4}$   | 17                                |
| 0.02                                   | $1.69	imes10^{-3}$   | 15                                |
| 0.1                                    | $1.69	imes10^{-3}$   | 15                                |

## Solution Error of Eq. (3.1) Using RKS as a Function of ABSERR and RELERR.

As previously stated, it is not necessary to specify the integration step-size for either the RKS or MILNE integration methods. The first integration step is automatically set equal to  $\frac{1}{16}$  of PRDEL or OUTDEL, whichever is smaller. If the user wishes to use a different value for the first step-size, this can be accomplished by specifying a value for DELT on the timer card. The definition of the DELT specification is as follows:

DELT. The value of DELT is the integration interval or step-size of the independent variable. If DELT is specified, it is automatically adjusted if necessary to be a submultiple of PRDEL or OUTDEL. If neither PRDEL or OUTDEL has been specified, DELT is adjusted to be a submultiple of FINTIM/100. When DELT is not specified, the first integration step is  $\frac{1}{16}$  of the smaller value of PRDEL or OUTDEL. For either of the variable-step integration methods there is no need to specify a value for DELT unless the user feels that the first step-size ( $\frac{1}{16}$  of smaller value of PRDEL or OUTDEL) is too large. When using a fixed-step integration method, the value of DELT should be carefully selected. Guidelines for choosing a value are discussed later.

For some problems, the error requirements and the dynamics of the solution may demand an extremely small step-size. A lower limit can be placed on the integration step-size by specifying a value for DELMIN on the timer card.

DELMIN. The value assigned to DELMIN on the timer card specifies the minimum allowable integration interval for the variable-step integration methods. If DELMIN is not specified, it is taken as FINTIM  $\times 10^{-7}$ . The following timer card shows a typical application where DELMIN is included.

TIMER FINTIM = 8.0, PRDEL = 0.2, DELMIN = 2.0E-8

If either of the variable-step integration methods attempts to use a value of DELT smaller than DELMIN, the run is terminated at that point with the appropriate message.

## Fixed-Step Integration Methods

There are five fixed-interval integration techniques ranging from the sophisticated Runge-Kutta to an extremely simple rectangular integration. A listing of the five fixed-step methods in the order of decreasing complexity is given below.

| CSMP Name | Method                         |
|-----------|--------------------------------|
| RKSFX     | Fourth-order Runge-Kutta with  |
|           | fixed interval                 |
| SIMP      | Simpson's Rule integration     |
| TRAPZ     | Trapezoidal integration        |
| ADAMS     | Adams-Second Order             |
| RECT      | <b>Rectangular</b> integration |

## Summary of Fixed-Step Integration Methods

The integration technique is specified by the use of the METHOD card with the appropriate CSMP integration name. An example of specifying the trapezoidal method is shown below.

## METHOD TRAPZ

Since these methods all use a fixed-integration interval, the value of DELT should be carefully chosen. Information for choosing a value for DELT is discussed in the following section.

## Choosing the Integration Method

When specifying an integration method one must be concerned with obtaining sufficient accuracy without using excessive computing time. Generally, the selection of the best integration is an extremely complex decision. For problems that are not extremely complex or do not require a large amount of computer time, either the variable-step Runge-Kutta or Milne methods are probably the best choice. The error-bound can be specified to meet the desired accuracy and the step-size is then automatically adjusted to the changing dynamic conditions of the problem.

The solution of Eq. (3.1) by both the Milne and the variable-step Runge-Kutta methods were compared to the exact solution given in Fig. 3.1. The stepsizes on the first set of runs were entirely controlled by the default error-bound of 0.0001. In the second set of runs the error-bounds were not changed, but 100 lines of output were specified. From the results shown in Table 3.2, notice that the

#### Table 3.2

|                                | Integration<br>Method | Average Absolute<br>Difference between<br>Numerical and Exact<br>Solutions of Eq. 3.1 | Number of<br>Integration<br>Steps |
|--------------------------------|-----------------------|---|-----------------------------------|
| First set of runs,             | Variable-step         |   |                                   |
| default error bound of 0.0001, | Runge-Kutta           | $7.06 \times 10^{-5}$   | 23                                |
| 2 lines of output              | Milne                 | $1.08 \times 10^{-5}$   | 58                                |
| Second set of runs,            | Variable-step         |   |                                   |
| default error bound of 0.0001, | Runge-Kutta           | 4.86 × 10 <sup>-6</sup>   | 104                               |
| 100 lines of output            | Milne                 | $6.56	imes10^{-6}$  | 112                               |

## Comparison of Numerical Solutions Using The Variable-Step Milne and Runge-Kutta Methods

smaller output interval of the second set of runs forced the integration step-size to be smaller and consequently reduced the error.

For certain types of problems, fixed-step integration methods may give better results. The following is a listing of three situations where fixed-step methods should be considered.

- 1. In some types of problems where sudden changes or discontinuities occur, the variable-step methods may demand an integration step which is smaller than the minimum allowed (DELMIN). If this occurs the run is terminated at that point. The user then has the choice of increasing the error requirements (RELERR and ABSERR), decreasing DELMIN, or using one of the fixed-step methods.
- 2. If the output interval is very small, the maximum step-size is constrained by the output and there is no need to use a sophisticated, time-consuming integration technique. For this situation a simple fixed-step method should be used.
- 3. When using elements such as IMPULS (Example 2.7) which involve critical time-sequencing relationships, it is good practice to use a fixed-step method that is a submultiple of the desired pulse interval.

The big problem in using a fixed-step method is choosing the proper integration step-size. DELT should be chosen such that it is sufficiently small to insure an accurate solution and not too small to result in excessive run time. There is no exact procedure for determining the proper step-size prior to making a simulation run. The dynamic response of the system determines the necessary step size. The faster the response, the smaller should be the integration interval. It is advisable to make the first choice of DELT sufficiently small to ensure an accurate solution. The step-size is probably too large if a smaller integration interval results in a significantly different answer.

In order to provide an estimate on how integration error is affected by stepsize, the numerical solution of Eq. (3.1) was compared with the exact solution shown in Fig. 3.1. This was done for all five fixed-step integration methods using a step-size that ranged from 10 to 10,000 integration steps per cycle of the cosine function. The average absolute difference between the exact solution and the numerical solution is plotted in Fig. 3.2 as a function of step-size for the five integration methods.

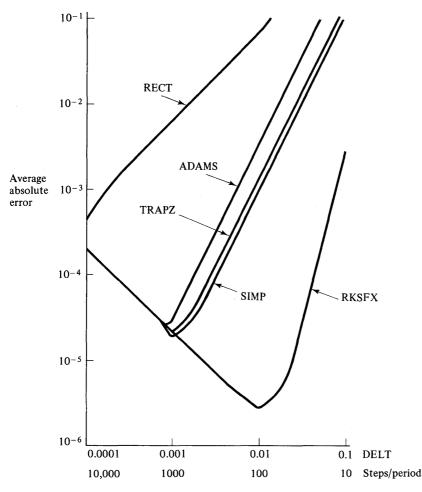


Fig. 3.2 Average absolute error as a function of step-size and integration method.

The results shown in Fig. 3.2 are only intended to show the relative accuracy of the various methods as a function of step-size. The curves also illustrate that a small integration interval does not necessarily give the greatest accuracy. If the frequency content of the solution can be estimated, Fig. 3.2 can be helpful in estimating the appropriate step-size.

As previously mentioned, the various integration methods are greatly different in complexity and consequently require different amounts of computing time. In order to provide an estimate on computing time for the five fixed-step methods, a program was run in which 10,000 integration steps were performed. The computer time required for only the numerical integration, using an IBM 360 Model 65 computer, is listed below.

| Time in Seconds |  |
|-----------------|--|
| 3.578           |  |
| 2.513           |  |
| 1.647           |  |
| 1.198           |  |
| 0.982           |  |
|                 |  |

In many problems the most time-consuming portion of the simulation is not the result of the numerical integration, but is due to the calculations required at each integration step. The number of times that all statements in the Dynamic segment are executed for each integration step depends upon the method. Table 3.3 contains this information for all seven methods.

If the problem requires a large number of calculations for each integration step, a savings in computer time may result if a smaller step-size is used in conjunction with a less sophisticated integration method.

| Integration<br>Method | Number of Times that all<br>Statements in the Dynamic<br>Segment are Executed for<br>Each Integration Step |
|-----------------------|--|
| RKSFX & RKS           | 4  |
| SIMP                  | 3  |
| MILNE                 | 2  |
| TRAPZ                 | 2  |
| ADAMS                 | 1  |
| RECT                  | 1 .  |

Table 3.3

## The Variable KEEP

The CSMP variable KEEP is used to indicate when the numerical technique has reached the end of an integration step. KEEP is set equal to 1 when a valid integration step has been completed. For intermediate steps and for trial steps of the variable-step methods, KEEP equals 0. The KEEP variable was used in programs which calculated the average absolute error between the numerical and exact solution of Eq. (3.1).

An example of a program using Simpson's integration rule with a step-size of 0.001 seconds is shown in Fig. 3.3.

```
TITLE PROGRAM TO CALCULATE THE AVERAGE ABSOLUTE ERROR OF EQUATION 3-1
INITIAL
CONSTANT PI = 3.14159, SUM = 0.0, COUNT = 0.0
DYNAMIC
    THE FOLLOWING 3 CARDS ARE USED TO SOLVE EQUATION 3.1, WHERE-
  YDD = SECOND DERIVATIVE OF Y WITH RESPECT TO TIME
* YD = FIRST DERIVATIVE OF Y WITH RESPECT TO TIME
YDD = -4.0*PI*PI*Y
YD = INTGRL(0.0, YDD)
Y = INTGRL(1.0, YD)
* THE FOLLOWING NOSORT SECTION IS REQUIRED TO USE THE "IF" STATEMENT
NOSORT
* KEEP IS EQUAL TO 1 WHEN THE END OF A VALID INTEGRATION STEP IS REACHED
IF(KEEP. EQ .1) GO TO 1
GO TO 2
1 SUM = SUM + ABS(Y - COS(2.0*PI*TIME))
COUNT = COUNT + 1.0
AAER = SUM/COUNT
2 CONTINUE
TERMINAL
TIMER FINTIM = 1.0, PRDEL = 0.1, DELT = 0.001
METHOD SIMP
PRINT Y, SUN, COUNT, AAER
END
STOP
ENDJOB
```

Fig. 3.3 Program to calculate the average absolute error of Eq. 3.1.

In the program of Fig. 3.3, the variable KEEP was used to indicate when a valid integration step was reached. When KEEP equals 1, the variable SUM increases by the absolute difference between the numerical solution Y and the exact solution,  $\cos(2.0*\pi*TIME)$ . Also the number of valid integration steps is recorded by the variable COUNT. The quotient, SUM/COUNT is equal to the average absolute error AAER.

Table 3.3 shows that for Simpson's integration, statements in the Dynamic segment are executed three times at each integration step. This means that KEEP is equal to 1 every third time the program cycles through the Dynamic segment.

## Changing Integration Technique and Output Interval During a Run

CSMP offers the user the flexibility of changing integration methods, stepsize, error requirements, and output-interval during a simulation run. The CSMP CONTINUE statement is used for this purpose. (In CSMP III, the END CON-TINUE is used.) A brief description of the CONTINUE statement follows, while a detailed explanation is included in this chapter in the section on translation control statements.

A problem which illustrates the need to change step-size and output-interval is the simulation of the impact of two railroad freight cars. A small step-size is required during impact period because of the high forces and rapidly changing conditions. A much larger step-size and output-interval can be used for the postimpact motion.

#### Example 3.1

In this example it is desired to calculate the forces, accelerations, and deflections during the impact of two railroad cars. The motion after impact is also desired. Car number one is moving from left to right with a velocity of 8 ft/sec. It strikes and is coupled to a second car that is initially stationary. The impact first occurs at t = 0. The couplers are assumed to be connected to both cars by a linear-spring and damper. A constant rolling-resistance force opposing motion is also included. Figure 3.4 illustrates the simplified problem and gives the appropriate parameters.

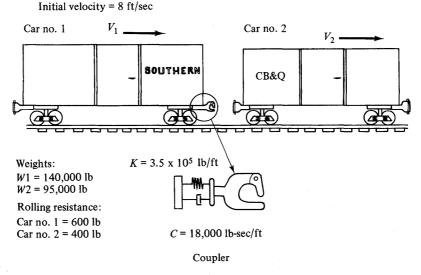


Fig. 3.4 Impacting freight cars.

Using Newton's second law, the equations describing the motion of the two freight cars are derived as follows.

FORCE = 
$$K*(X2 - X1)/2.0 + C*(V2 - V1)/2.0$$
 (3.2)

$$\dot{V}_1 = [FORCE - 600.0*SIGN(V1)]/W1/32.17$$
 (3.3)

$$V_2 = [-FORCE - 400.0*SIGN(V_2)]/W_2/32.17$$
 (3.4)

| Symbols | Used in   | CSMP   |
|---------|-----------|--------|
| Progra  | am of Fig | 7. 3.5 |

cars.

| FORCE       | Force between cars.   |
|-------------|---|
| K           | Spring constant of coupler spring, $3.5 \times 10^5$ lb/ft. |
| С           | Damping constant of coupler, 18,000 lb-sec/ft.              |
| ACC1 & ACC2 | Accelerations of cars 1 & 2, respectively.                  |
| V1 & V2     | Velocities of cars 1 & 2, respectively.                     |
| X1 & X2     | Displacements of cars 1 & 2, respectively.                  |
| W1 & W2     | Weights of cars 1 & 2, respectively.                        |
|             |   |

Prior to running the program, it was estimated that the impact would occur in less than 1.0 sec. Therefore, FINTIM on the first TIMER card was set equal to 1.0 and the output-interval was chosen to be 0.02. For the post-impact motion FINTIM was set equal to 21.0 with an output-interval of 2.0. For illustration purposes, the fixed-step Runge-

```
TITLE SIMULATION OF THE IMPACT OF TWO RAILROAD CARS.
                                                            THE OUTPUT
       INTERVAL AND INTEGRATION TECHNIQUE ARE CHANGED DURING THE RUN.
TITLE
 CONSTANT K = 3.5E5, C = 18000.0, W1 = 140000.0, W2 = 95000.0
 FORCE = K*(X2 - X1)/2.0 + C*(V2 - V1)/2.0
 ACC1 = (FORCE - 600.0*SIGN(1.0,V1))/(W1/32.17)
 ACC2 = (-FORCE - 400*SIGN(1.0,V2))/(w2/32.17)
 V1 = INTGRL(8.0,ACC1)
 V2 = INTGRL(0.0, ACC2)
  X1 = INTGRL(0.0.V1)
 X2 = INTGRL(0.0.V2)
 DEFLCT = X1 - X2
 PRINT FORCE, ACC1, ACC2, V1, V2, X1, X2, DEFLCT
  METHOD RKSFX
  TIMER FINTIM = 1.0, PRDEL = 0.025, DELT = 0.0005
  THE FOLLOWING CONTINUE CARD ALLOWS THE DUTPUT INTERVAL AND THE
¥
  INTEGRATION TECHNIQUE TO BE CHANGED DURING THE RUN. THE CHANGES ARE MADE
*
*
  AFTER 1.0 SECONDS, WHICH IS THE FINTIM TIME ON THE ABOVE TIMER CARD.
 CONTINUE
  METHOD MILNE
  RELERR V1 = 0.0005, V2 = 0.0005, X1 = 0.0005, X2 = 0.0005
  ABSERR V1 = 0.0005, V2 = 0.0005, X1 = 0.0005, X2 = 0.0005
  TIMER FINTIM = 21.0, PRDEL = 2.0
END
STOP
ENDJOB
             Fig. 3.5 Program for the simulation of the impact of two freight
```

Kutta method (RKSFX) with a step-size of DELT = 0.0005 sec was used for the impact period and the variable-step Milne (MILNE) method was used for the motion after impact. Also for illustration purposes, the relative and absolute errors for all integrators of the Milne integration were set equal to 0.0005.

The program for simulating this system is shown in Fig. 3.5. One notes the use of the CONTINUE card to change the output-interval and integration technique. The CONTINUE card permits these changes without resetting the independent variable TIME.

The output for this simulation is contained in Figs. 3.6 and 3.7.

|  | CT OF TWO RAILROAD CARS.<br>ION TECHNIQUE ARE CHANGED | THE OUTPUT<br>DURING THE RUN.  | RKSFX INTEGRATION                                    |   |
|--|---|--|--|---|
| 2.5000E-02 -9.3825E 04   |   | V1 V2<br>8.0000E 00 0.0<br>7.5164E 00 7.0417E-                                       | X1 X2<br>0.0 0.0<br>01 1.9422E-01 8.4171E-03         | DEFLCT<br>0.0<br>1.8580E-01                             |
| 5.0000E-02 -1.0758E 05<br>7.5000E-02 -1.1344E 05<br>1.0000E-01 -1.1201E 05                           | 5 -2.6205E 01 3.8279E 01                              | 6.9306E 00 1.5590E<br>6.2886E 00 2.4966E<br>5.6343E 00 3.4523E                       | 00 5.4027E-01 8.7054E-02                             | 3.3850E-01<br>4.5322E-01<br>5.2785E-01                  |
| 1.2500E-01 -1.0425E 05<br>1.5000E-01 -9.1367E 04<br>1.7500E-01 -7.4724E 04                           | -2.1133E 01 3.0804E 01<br>-1.7308E 01 2.5169E 01      | 5.0069E 00 4.3684E<br>4.4394E 00 5.1961E<br>3.9574E 00 5.8979E                       | 00 9.4013E-01 3.7912E-01<br>00 1.0449E 00 5.1808E-01 | 5.6288E-01<br>5.6102E-01<br>5.2680E-01                  |
| 2.0000E-01 -5.5740E 04<br>2.2500E-01 -3.5798E 04<br>2.5000E-01 -1.6171E 04                           | -8.3637E 00 1.1987E 01<br>-3.8538E 00 5.3407E 00      | 3.5784E 00 6.4479E<br>3.3119E 00 6.8322E<br>3.1596E 00 7.0481E                       | 00 1.2247E 00 8.3909E-01<br>00 1.3053E 00 1.0129E 00 | 4.6609E-01<br>3.8560E-01<br>2.9239E-01                  |
| 2.7500E-01 2.0343E 03<br>3.0000E-01 1.7936E 04<br>3.2500E-01 3.0889E 04<br>3.5000E-01 4.0493E 04     | 3.9837E 00 -6.2093E 00<br>6.9599E 00 -1.0595E 01      | 3.1164E 00 7.1032E<br>3.1716E 00 7.0134E<br>3.3099E 00 6.8010E<br>3.5131E 00 6.4930E | 00 1.4619E 00 1.3668E 00<br>00 1.5428E 00 1.5397E 00 | 1.9341E-01<br>9.5084E-02<br>3.0394E-03<br>-7.8133E-02   |
| 3.7500E-01 4.6593E 04<br>4.0000E-01 4.9257E 04<br>4.2500E-01 4.8741E 04                              | 1.0569E 01 -1.5913E 01<br>1.1181E 01 -1.6815E 01      | 3.7614E 00 6.1185E<br>4.0349E 00 5.7070E<br>4.3143E 00 5.2867E                       | 00 1.7187E 00 1.8638E 00<br>00 1.8161E 00 2.0116E 00 | -1.4503E-01<br>-1.9547E-01<br>-2.2851E-01               |
| 4.5000E-01 4.5458E 04<br>4.7500E-01 3.9929E 04<br>5.0000E-01 3.2746E 04                              | 9.0372E 00 -1.3657E 01                                | 4.5826E 00 4.8828E<br>4.8254E 00 4.5166E<br>5.0313E 00 4.2046E                       | 00 2.1494E 00 2.3934E 00                             | -2.4432E-01<br>-2.4405E-01<br>-2.2964E-01               |
| 5.2500E-01 2.4525E 04<br>5.5000E-01 1.5867E 04<br>5.7500E-01 7.3274E 03                              | 3.5080E 00 -5.5084E 00<br>1.5459E 00 -2.6167E 00      | 5.1927E 00 3.9582E<br>5.3053E 00 3.7837E<br>5.3682E 00 3.6824E                       | 00 2.5318E 00 2.7007E 00<br>00 2.6653E 00 2.7939E 00 | -2.0363E-01<br>-1.6892E-01<br>-1.2857E-01               |
| 6.0000E-01 -6.1086E 02<br>6.2500E-01 -7.5608E 03<br>6.5000E-01 -1.3237E 04<br>6.7500E-01 -1.7463E 04 | -1.8752E 00 2.4249E 00<br>-3.1796E 00 4.3471E 00      | 5.3837E 00 3.6512E<br>5.3562E 00 3.6832E<br>5.2923E 00 3.7688E<br>5.1999E 00 3.8964E | 00 2.9341E 00 2.9769E 00<br>00 3.0672E 00 3.0699E 00 | -8.5610E-02<br>-4.2837E-02<br>-2.7132E-03<br>3.2749E-02 |
| 7.0000E-01 -2.0169E 04<br>7.2500E-01 -2.1378E 04<br>7.5000E-01 -2.1201E 04                           | -4.7723E 00 6.6943E 00<br>-5.0502E 00 7.1038E 00      | 5.0877E 00 4.0533E<br>4.9642E 00 4.2268E<br>4.8378E 00 4.4045E                       | 00 3.3270E 00 3.2650E 00<br>00 3.4527E 00 3.3684E 00 | 6.2055E-02<br>8.4238E-02<br>9.8867E-02                  |
| 7.7500E-01 -1.9813E 04<br>8.0000E-01 -1.7442E 04<br>8.2500F-01 -1.4342E 04                           | -4.6907E 00 6.5740E 00<br>-4.1458E 00 5.7709E 00      | 4.7160E 00 4.5755E<br>4.6051E 00 4.7304E<br>4.5100E 00 4.8620E                       | 00 3.6945E 00 3.5885E 00<br>00 3.8110E 00 3.7049E 00 | 1.0600E-01<br>1.0611E-01<br>1.0005E-01                  |
| 8.5000F-01 -1.0781E 04<br>8.7500E-01 -7.0223E 03<br>9.0000E-01 -3.3066E 03                           | -1.7515E 00 2.2425E 00<br>-8.9769E-01 9.8428E-01      | 4.4342E 00 4.9651E<br>4.3796E 00 5.0371E<br>4.3465E 00 5.0773E                       | 00 4.1467E 00 4.0728E 00<br>00 4.2557E 00 4.1992E 00 | 8.8911E-02<br>7.3943E-02<br>5.6479E-02                  |
| 9.2500E-01 1.5599E 02<br>9.5000E-01 3.1927E 03<br>9.7500E-01 5.6803E 03<br>1.0000E 00 7.5395E 03     | 1.1674E 00 -2.0590E 00                                | 4.3342E 00 5.0870E<br>4.3406E 00 5.0691E<br>4.3629E 00 5.0277E<br>4.3977E 00 4.9679E | 00 4.4725E 00 4.4533E 00<br>00 4.5813E 00 4.5795E 00 | 3.7826E-02<br>1.9222E-02<br>1.7319E-03<br>-1.3760E-02   |
|  |   |  |  |   |

Fig. 3.6 Motion of railroad cars during impact.

| SIMULATION OF THE IMP<br>INTERVAL AND INTEGRA  |  |   |  | MILNE  | INTEGRATION   |  |
|--|--|---|--|--|---|--|
| TIME FORCE<br>1.0000E 00 7.5395E 0             | ACC1 ACC<br>1.5946E 00 -2.66<br>1.1.1922E-01 -1.65<br>2.1.7230E-01 -8.4<br>2.2.0288E-01 -3.96<br>1.1.898E-01 -5.66<br>1.1.4669E-01 -1.22<br>2.2.7116E-01 6.00<br>2.3.4002E-01 1.65 | 2 V1<br>866E 00 4.3977E<br>294E-01 4.3517E<br>720E-02 4.0830E<br>568E-02 3.8152E<br>563E-02 3.5452E<br>466E-01 3.2848E<br>578E-02 2.9512E | V2<br>00 4.9679E<br>00 4.3583E<br>00 4.0768E<br>00 3.7941E<br>00 3.5146E<br>00 3.2209E<br>00 3.0351E<br>00 2.7052E | 00 1.3679E<br>00 2.2113E<br>00 2.9999E<br>00 3.7338E<br>00 4.4127E<br>00 5.0375E<br>00 5.6069E | 01 1.3679E<br>01 2.2113E<br>01 2.99999E<br>01 3.7338E<br>01 4.4130E<br>01 5.0367E<br>01 5.6065E | DEFLCT<br>00 -1.3760E-02<br>01 -1.2207E-04<br>01 5.3406E-04<br>01 5.3406E-04<br>01 -2.7466E-04<br>01 -3.0670E-03<br>01 7.6294E-03<br>01 -3.503E-03<br>01 -3.5095E-04 |
| 1.9000E 01 -1.9237E 0<br>2.1000E 01 -1.9237E 0 | 2 -3.6630E-02 -2.84  | 65E-01 2.1639E  | 00 2.1631E   | 00 6.5814E   | 01 6.5817E  | 01 -2.5635E-03<br>01 0.0   |

Fig. 3.7 Post-impact motion of railroad cars.

In summary, choosing the best integration method is quite complicated, both from a theoretical and a practical point of view. No absolute set of guidelines can be written that will insure the optimum method is used for all problems. The user should be prepared to experiment in order to obtain the best method with regard to run-time and accuracy. It should be emphasized that either of the variablestep integration methods using the default error-bounds will give satisfactory solutions for the vast majority of problems. The additional computing time that may result when using this approach is usually considerably less expensive than the time the user would spend in choosing an optimum method. However, for complicated problems that will require a large amount of computing time, the user can justify spending time in deciding which method will give the best results.

#### **User-Supplied Integration Method**

In the event that none of these seven integration methods satisfies the user's requirements, an additional centralized integration method can be added to CSMP. The complete integration routine is entered into the program as a FORTRAN subroutine named CENTRL. The method is specified using the statement,

## METHOD CENTRL

#### Example 3.2

To illustrate a program that employs a user-supplied integration technique, the following linear, first-order differential equation will be solved.

$$\frac{d(\text{CASH})}{dt} = \text{INTRST*CASH}$$
(3.5)

Initial condition: CASH(t = 0) =\$1000.

Equation (3.5) governs the present value of a bank account where the money is continuously compounded. This method of compounding is used by many banks and savings and loan associations. The initial amount in the account is \$1,000.00.

CASH = present value of bank account INTRST = yearly interest rate = 0.065 (6.5%) t =time in years

The user supplied integration method is the CSMP Simpson method. Note that the only reason for using the CENTRL integration feature in this problem is to demonstrate its use.

Figure 3.8 shows a listing of the entire program. The comment cards are supplied to assist the reader to interpret the program. The IBM System Manual<sup>(1)</sup> as well as the section on subprograms should be used as a reference for this procedure. Most of the information contained in Fig. 3.8 was taken from the IBM System Manual.

Figure 3.9 gives the output for the program for a time period of 50 years. The accuracy of the numerical integration can be compared with Eq. (3.6) which is the analytical solution to Eq. (3.5).

$$CASH = 1000e^{0.065t}$$
 (3.6)

PROGRAM TO ILLUSTRATE THE METHOD OF PROVIDING A USER-SUPPLIED \* INTEGRATION TECHNIQUE TO THE PROGRAM. IN THIS EXAMPLE, THE CSMP SIMPSON METHOD IS USED. \* LABEL HISTORY OF \$1000 BANK ACCOUNT, 6.5 CONTINUOUSLY COMPUND INTEREST RENAME TIME = YEARS CONSTANT INTRST = 0.065 CASH = INTGRL(1000.0, INTRST\*CASH ) TIMER FINTIM = 50.0, OUTDEL = 1.0, DELT = 0.05 PRTPLT CASH METHOD CENTRL END STOP THE FOLLOWING IS THE FORTRAN SUBROUTINE "CENTRL" С SUBROUTINE CENTRL THE FOLLOWING 2 COMMON AND 5 EQUIVALENCE CARDS ARE REQUIRED FOR ALL C. С INTEGRATION METHODS. COMMON DDUM1(64),C(8000),NALARM,KPOINT,DDUM2(16),RANGE(400),H,KEEP COMMON DDUM3(1214), IFLAG(50), FAM(50), NOINTG, NOS YMB, SYMB(1) EQUIVALENCE (IFLAG(16), ISTEP), (IFLAG(19), DTIME), (IFLAG(40), ISTORE) EQUIVALENCE (IFLAG(18), ISTART), (IFLAG(10), IFIRST) EQUIVALENCE (C(1),TIME),(C(2),DELT),(C(3),DELMIN) EQUIVALENCE (C(4), FINTIM), (C(5), PRDEL), (C(6), OUTDEL) EQUIVALENCE (DDUM3(492), TNEXT), (DDUM2(10), KREL), (DDUM2(11), KABS) NOINTG IS THE NUMBER OF INTEGRATORS С С IS THE DYNAMIC STORAGE ARRAY FOR THE EXECUTION PHASE C. H IS THE HIGHEST FREQUENCY DUTPUT SAMPLE RATE С DELT HAS BEEN MODIFIED TO BE A SUBMULTIPLE OF H С С TNEXT IS THE TIME OF THE NEXT OUTPUT POINT С С START OF PROGRAM IF CENTRL IS AN ERROR TESTING INTEGRATION METHOD, SET NALARM TO С ONE WHEN ERROR TEST FAILS IN ORDER TO STOP RUN. С С ISTART IS SET TO ZERO BY AN END OR CONTIN CARD TO START THE CASE С ISTEP IS SET TO ZERO TO INITIALIZE STATUS ISTEP=0 ISTORE IS THE NUMBER OF LOCATIONS USED IN THE C ARRAY С ISTORE=KPOINT+3\*NOINTG GO TO 3000 С 2000 CONTINUE С FOR SPECIAL INTEGRATION, USER MUST INSERT HIS CODING HERE С AT THIS POINT VALUES ARE AVAILABLE FOR TIME ZERO. (Y, YDOT, YIC) С INTEGRATOR OUTPUTS ARE LOCATED IN C(N+6) FOR N=1 TO NOINTG INTEGRATOR INPUTS ARE LOCATED IN C(N+6+NOINTG) FOR N=1 TO NOINTG С С INTEGRATOR INITIAL CONDITIONS IN C(N+6+2NOINTG) FOR N=1 TO NOINTG С С HISTORY OF OUTPUTS MUST BE STORED IN USER DIMENSIONED ARRAY OR С UPPER LOCATIONS OF C ARRAY С EXAMPLE FOR K HISTORY POINTS (REPLACE ARGUMENTS WITH CONSTANTS) C С DIMENSION CHYS(K,1) С EQUIVALENCE(C(8000-300\*K+1), CHYS(1)) IN THE SIMPSON INTEGRATION METHOD, THERE ARE 3 HISTORY POINTS, K = 3 С EQUIVALENCE (C(7101), CHYS(1)) DIMENSION CHYS(3,1),CY(1) THE FOLLOWING IS THE CSMP SIMPSON INTEGRATION METHOD. С EQUIVALENCE (C(7),CY(1)) EQUIVALENCE (DDUM2(13), TLAST) С HISTORY IS STORED AS FOLLOWS C С CHYS(J,I)=PAST VALUES AS REQUIRED WHERE J VARIES FROM 1 TO K HISTORY POINTS AND С С WHERE I VARIES FROM 301-NOINTG TO 300 c

Fig. 3.8 Program illustrating the use of CENTRL.

```
Ch. 3
```

```
00 2010 II=1,NOINTG
      I=301-II
      J=NOINTG+II
      CHYS(1,I)=CY(II)
      CHYS(2,I)=CY(J)
 2010 CY(II)=.5*DELT*CY(J)+CY(II)
      DTIME=DTIME+1.
      TIME=DTIME*.5*DELT+TLAST
      ISTART=1
      KEEP=0
      CALL UPDATE
      DO 2020 II=1,NOINTG
      I=301-II
      J=NOINTG+II
      CHYS(3,I)=CY(J)
 2020 CY(II)=.5*DELT*CY(J)+CY(II)
      DTIME=DTIME+1.
      TIME=DTIME*.5*DELT+TLAST
      CALL UPDATE
      DO 2030 II=1,NOINTG
      I=301-II
      J=NOINTG+II
 2030 CY(II)=CHYS(1,I)+.5*DELT*(CHYS(2,I)+4.*CHYS(3,I)+CY(J))/3.
2040 CONTINUE
С
      KEEP IS SET TO IDENTIFY POINT TO STORE
      KEEP = 1
      CALL UPDATE
 3000 CONTINUE
C
      STATUS CHECKS FOR VARIABLE RANGES AND DUTPUT TIMES
      CALL STATUS
      IFIRST IS SET TO 4 TO INDICATE THE END OF A CASE
C
      IF(IFIRST-4)2000,4000,4000
 4000 RETURN
      END
ENDJOB
```

Fig. 3.8 (Continued)

## **Data Statements**

Three of the most useful and commonly used data statements are CON-STANT, PARAMETER, and INCON. These three statements are completely equivalent in CSMP and they were previously defined and used in Chap. 2. It should be pointed out that these data statements cannot be used for assigning values to subscripted variables. As in FORTRAN, subscripted variables require special consideration. Following are descriptions of how data statements using subscripted variables are used in CSMP programs.

## Subscripted Variables

Subscripted variables provide a procedure for handling large arrays of related data as are frequently found in systems represented by simultaneous equations. Any valid symbol, except those which start with the letters I, J, K, L, M, or N,

| HISTORY            | ٥F | \$1000 BANK        | ACCOUNT, | 6.5 | CONTINUD | JSLY COM | 1POUND | INTERST | PAGE | 1         |
|--------------------|----|--------------------|----------|-----|----------|----------|--------|---------|------|-----------|
|                    |    |                    | MINIMU   | м   |          | CASH     | VERSUS | YEARS   |      | MAXIMUM   |
|                    |    |                    | 1.0000E  | 03  |          |          |        |         | 2    | .5786E 04 |
| YEARS              |    | CASH               | I        |     |          |          |        |         |      | I         |
| 0.0                |    | 1.0000E            |          |     |          |          |        |         |      |           |
| 1.0000E            |    | 1.0672E            |          |     |          |          |        |         |      |           |
| 2.0000E            |    | 1.1388E            |          |     |          |          |        |         |      |           |
| 3.0000E            |    | 1.2153E            |          |     |          |          |        |         |      |           |
| 4.0000E<br>5.0000E | 00 | 1.2969E<br>1.3840E |          |     |          |          |        |         |      |           |
| 6.0000E            |    | 1.4770E            |          |     |          |          |        |         |      |           |
|                    | 00 | 1.5762E            |          |     |          |          |        |         |      |           |
| 8.0000E            |    | 1.6820E            |          |     |          |          |        |         |      |           |
|                    | 00 | 1.7950E            |          |     |          |          |        |         |      |           |
|                    | 01 | 1.9155E            |          |     |          |          |        |         |      |           |
| 1.1000E            | 01 | 2.0441E            |          |     |          |          |        |         |      |           |
| 1.2000E            | 01 | 2.1814E            | 03+      |     |          |          |        |         |      |           |
| 1.3000E            | 01 | 2.3279E            | 03+      |     |          |          |        |         |      |           |
| 1.4000E            | 01 | 2.4843E            | 03+      |     |          |          |        |         |      |           |
| 1.5000E            | 01 | 2.6511E            | 03       | +   |          |          |        |         |      |           |
| 1.6000E            | 01 | 2.8291E            |          | +   |          |          |        |         |      |           |
|                    | 01 | 3.0191E            |          | -+  |          |          |        |         |      |           |
| 1.8000E            |    | 3.2219E            |          | -+  |          |          |        |         |      |           |
| 1.9000E            |    | 3.4383E            |          | -+  |          |          |        |         |      |           |
|                    | 01 | 3.6692E            |          | +   |          |          |        |         |      |           |
| 2.1000E<br>2.2000E |    | 3.9156E<br>4.1785E |          | +   |          |          |        |         |      |           |
|                    | 01 | 4.4591E            |          | +   |          |          |        |         |      |           |
| 2.4000E            |    | 4.7586E            |          |     | +        |          |        |         |      |           |
|                    | 01 | 5.0781E            |          |     | -+       |          |        |         |      |           |
|                    | 01 | 5.4191E            |          |     | -+       |          |        |         |      |           |
| 2.7000F            | 01 | 5.7830E            |          |     | +        |          |        |         |      |           |
| 2.8000E            | 01 | 6.1714E            | 03       |     | +        |          |        |         |      |           |
| 2.9000E            | 01 | 6.5858E            | 03       |     | +        |          |        |         |      |           |
| 3.0000E            | 01 | 7.U280E            | 03       |     | +        |          |        |         |      |           |
|                    | 01 | 7.5000E            |          |     | +        |          |        |         |      |           |
| 3.2000E            | 01 | 8.0036E            |          |     | +        |          |        |         |      |           |
| 3.3000E            |    | 8.5411E            |          |     | +        |          |        |         |      |           |
| -                  | 01 | 9.1147E            |          |     |          | +        |        |         |      |           |
| 3.5000E            |    | 9.7268E            |          |     |          | -+       |        |         |      |           |
| 3.6000E<br>3.7000E | 01 | 1.0380E<br>1.1077E |          |     |          |          |        |         |      |           |
| 3.8000E            |    | 1.1821E            |          |     |          |          |        |         |      |           |
| 3.9000E            |    | 1.2615E            |          |     |          |          | •      |         |      |           |
| 4.0000E            |    | 1.3462E            |          |     |          |          | +      |         |      |           |
|                    | õī | 1.4366E            |          |     |          |          | +      |         |      |           |
| 4.2000E            | _  | 1.5331E            |          |     |          |          | +      |         |      |           |
| 4.3000E            |    | 1.6360E            |          |     |          |          |        | +       |      |           |
| 4.4000E            | 01 | 1.7459E            | 04       |     |          |          |        | +       |      |           |
| 4.50005            | 01 | 1.8632E            | 04       |     |          |          |        | +       |      |           |
| 4.6000E            |    | 1.9883E            |          |     |          |          |        | +       |      |           |
|                    | 01 | 2.1218E            |          |     |          |          |        |         | +    |           |
| 4.8000E            |    | 2.2643E            |          |     | ****     |          |        |         | +    |           |
| 4.9000E            |    | 2.4164E            |          |     |          |          |        |         |      | -+        |
| 5.0000E            | 01 | 2.5786E            | 04       |     |          |          |        |         |      | +         |

Fig. 3.9 Output for program of Fig. 3.8.

| Valid        | Invalid      |                                      |
|--------------|--------------|--------------------------------------|
| A(3)         | JP(8)        | (Invalid first symbol)               |
| COUNT(5,7,6) | ABCDEFG(4,2) | (Excessive characters)               |
| ZP123(7,2,8) | 4X(9)        | (First character cannot be a number) |
|              |              |                                      |

may be subscripted. Examples of both valid and invalid subscripted variables are:


As in FORTRAN, it is necessary to specify the following information before using subscripted variables.

- 1. What variables are subscripted.
- 2. How many subscripts there are for each subscripted variable.
- 3. The maximum size for each subscript.

This information can be specified by using either the DIMENSION or STOR-AGE statements.

## DIMENSION Statement

Subscripted variables larger than one dimensional arrays [e.g. X(3, 5) Y(3, 7, 5)] must be listed on a DIMENSION card. The DIMENSION statement is handled exactly as in FORTRAN with the exception being that a virgule (/) must appear in the first column. The virgule indicates that the DIMENSION instruction is a FORTRAN specification statement (discussed below). An example of a valid statement is shown below.

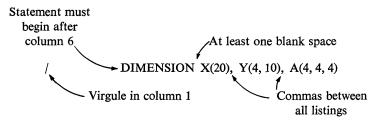

The compiler will assign 20 spaces to the one-dimensional array named X,  $40(4 \times 10)$  spaces to the two-dimensional array Y, and 64 ( $4 \times 4 \times 4$ ) spaces to the three-dimensional array A. The user should not attempt to use a subscript larger than the maximum size as specified in the DIMENSION statement. Also, subscripts must never be smaller than 1. This means that negative numbers and zero cannot be used as subscripts. A seven-dimensional array, which is the limit of FORTRAN IV (Level G), is the largest that can be used in a CSMP program. The DIMENSION statement should be placed at the beginning of the program since it must appear before any subscripted variables are used.

-- - -

## FORTRAN Specification Cards

Cards containing a virgule (/) in column 1 are called FORTRAN specification cards. These cards are treated exactly as FORTRAN statements and consequently must follow a somewhat different format than usual CSMP statements. The following rules must be followed when using FORTRAN specification cards.

- 1. All FORTRAN specification cards must contain a virgule (/) in column 1.
- 2. Statements must be contained in columns 7–72.
- 3. A maximum of 10 FORTRAN specification cards are permitted in any one program.
- 4. Continuation cards are permitted and must contain a nonzero character in column 6 and a virgule in column 1.

The following DIMENSION statement illustrates the continuation of a FOR-TRAN specification instruction.

> DIMENSION X(9), Y(8), Z(7, 8, 8), Q(6, 6), RT(3, 3, 3, 3) Nonzero character in column 6 for all continuation cards Virgule in column 1 for all cards of FORTRAN specification statements

## STORAGE Statement

One-dimensional arrays [e.g. X(5), Y(78)] can be handled by using the CSMP STORAGE statement. This card is used similarly to the DIMENSION statement, the exceptions being that it can only be used for one-dimensional arrays and that it is not a FORTRAN specification card. An example of a valid statement is

At least one blank space is necessary STORAGE Z(90), Y(75), X(5)

The symbols following the STORAGE label represent subscripted variables with the appropriate number of storage locations contained within parentheses. A STORAGE statement may be continued to additional cards by using either three consecutive periods or multiple STORAGE cards. All STORAGE statements should be placed at the beginning of the program since they must appear before any subscripted variables are used. DIMENSION and STORAGE statements may be used in the same program.

Subscripted variables are subject to certain restrictions in CSMP programs. Special care must be taken to observe the following rules.

- 1 All subscripted variables must be declared in either a DIMENSION or STORAGE statement.
- 2 Subscripted variables cannot appear to the left of an equal sign except in a nosort section or within a PROCEDURE function. The use and definition of a PROCEDURE function is covered later in this chapter. Examples of statements that are *only* allowed in nosort sections or in PROCEDURE functions are:

$$Y(5) = SIN(3.0*TIME)$$
  
 $Y(1) = 3.14159*Q(3)$ 

Examples of statements allowed in *all* sections of the program are:

Z = 4.0\*X(4) + COS(Y(2)) Q = AFGEN(ABC, X(6))P = INTGRL(8.7, Y(3))

3 The output of an INTGRL function cannot be a subscripted variable. Thus, the following statement type is *not allowed* anywhere in the program.

$$X(2) = INTGRL(2.3, Y)$$

4 Subscripted variables cannot be used in PRINT or PRTPLT statements. (This is not the case in CSMP III). In order to obtain a PRINT or PRTPLT output of subscripted variables, it is first necessary to set the dimensioned variables equal to nonsubscripted variables. This is illustrated in following examples.

# Assigning Values to Subscripted Variables

There are three convenient methods for assigning values to subscripted variables.

1 The CSMP "TABLE" statement.

- 2 The FORTRAN "DATA" statement.
- 3 The FORTRAN "READ" statement.

A description of the use of these three statements along with a method of declaring variables as integers follows.

TABLE Statement: Subscripted variables that are listed on a STORAGE card may be assigned values using the TABLE statement. This is a CSMP data statement which allows values to be assigned to *one-dimensional* subscripted variables. The use of the TABLE card is similar to the other data statements (CON-STANT, PARAMETER, and INCON) the exception being that the TABLE

statement can only be used for one-dimensional subscripted variables. In addition to the usual way of assigning values, the K\*n form can be used to assign K consecutive variables the value n. The following is an example of a valid statement.

TABLE X(1) = 22.56, X(9) = -0.891, X(3 - 6) = 4\*6.74, Y(1) = 3.14

In the above example X(1), X(9), and Y(1) are assigned the values shown. X(3), X(4), X(5), and X(6) are all set equal to 6.74. All variables contained in a TABLE statement must be listed on a STORAGE card. TABLE statements may be continued to additional cards by using either three consecutive periods or multiple TABLE statements may be used.

DATA Statement: The FORTRAN DATA statement provides an additional means for assigning values to subscripted variables. The DATA card is a FOR-TRAN specification statement and must contain a virgule in column 1. Only subscripted variables should appear on a DATA card and these variables *must be listed* in a DIMENSION statement. Subscripted variables that are listed in a FORTRAN EQUIVALENCE statement must not appear on a DATA card. An example of a DATA and appropriate DIMENSION statement is

| 1 | DIMEN | SION   | Y(3, 2) |
|---|-------|--------|---------|
| 1 | DATA  | Y/6*3. | .14/    |

The above DATA statement assigns a value of 3.14 to all six variables of the twodimensional array.

The order in which numerical values are assigned to a two-dimensional array is illustrated by the following statements.

| 1 | DIMEN | SION    | Y(3, 2) |        |         |
|---|-------|---------|---------|--------|---------|
| 1 | DATA  | Y/7.45, | 2*5.89, | -4.32, | 2*3.33/ |

These statements will assign the numerical values of

| Y(1, 1) = 7.45 | Y(1, 2) = - | -4.32 |
|----------------|-------------|-------|
| Y(2, 1) = 5.89 | Y(2, 2) =   | 3.33  |
| Y(3, 1) = 5.89 | Y(3, 2) =   | 3.33  |

A single DATA statement can also be used to assign values to more than one subscripted variable. For example,

/ DIMENSION X(3, 2, 2), Y(2) / DATA X/4\*4.27, -7.16, 3\*12.81, 4\*0.71/, Y/2\*87.3/

The above card assigns the values,

X(1, 1, 1) = 4.27X(1, 2, 1) = 4.27X(1, 1, 2) = 12.81X(1, 2, 2) = 0.71X(2, 1, 1) = 4.27X(2, 2, 1) = -7.16X(2, 1, 2) = 12.81X(2, 2, 2) = 0.71X(3, 1, 1) = 4.27X(3, 2, 1) = 12.81X(3, 1, 2) = 0.71X(3, 2, 2) = 0.71Y(1) = 87.3Y(2) = 87.3Y(2) = 87.3

A more comprehensive description of DATA statements can be found in many books on FORTRAN.<sup>(2-5)</sup>

FIXED Statement: When using subscripted variables, it is often necessary to use variables as integers for such purposes as indexing. Variables are specified as integers by the use of the FIXED statement. This instruction allows the user to declare selected variables as integers (fixed-point numbers). As previously stated, all variables in CSMP are automatically treated as real numbers (floating-point) unless otherwise specified. Consequently, any valid symbol that is to be treated as an integer must be included on a FIXED card. The following is an example of a valid FIXED statement.

> FIXED I, A, Y6, J At least one blank space

Continuation cards (...) or multiple FIXED cards may be used if necessary.

It should be remembered that integer variables cannot be used in either PRINT or PRTPLT statements. If the output of an integer variable is desired, it should first be set equal to a real variable. The following two statements could be used to print the value of the integer variable I.

Z = I (This statement *must* be in the Dynamic segment.) PRINT Z

READ Statement: The convenience and flexibility of the FORTRAN statement, READ (5, XYZ) can be used in CSMP programs to assign values to variables. The READ card must appear in a nosort section. It is usually placed in the Initial segment since this segment is only executed once at the beginning of the simulation. However, the READ statement can also be included in a nosort section of the Dynamic segment. The user should be aware that all statements in the Dynamic segment are executed from one to four times for each integration step. The exact number of executions depends upon the integration method and is given in Table 3.3. When using a READ instruction for nonsubscripted variables, the variable must appear somewhere else in the program before it can be included in a PRINT or PRTPLT statement.

A FORTRAN FORMAT statement must be used in conjunction with a READ card. The FORMAT card specifies the form in which numerical values are listed on data cards. The FORMAT card must be contained in a nosort section and any continuation cards must have a \$ in card column 6. A detailed explanation on the use of READ and FORMAT statements can be found in books on FOR-TRAN.<sup>(2-5)</sup>

Numerical values used with the READ statements are contained on data cards. These cards must be placed between the labels DATA and ENDDATA. The DATA card must immediately follow the END card. The ENDDATA label follows the last data card and it must be punched in card columns 1–7. In CSMP III, the labels INPUT and ENDINPUT are used in place of DATA and ENDDATA. It should be noted that this DATA card is a CSMP statement and is different from the FORTRAN DATA statement that was previously described. Portions of three programs which use READ and FIXED statements are shown below.

```
INITIAL
 STORAGE X(4)
 FIXED J
 NOSORT
 100 FORMAT(2F10.0)
 READ(5, 100) (X(J), J = 1, 4)
 DYNAMIC
         Statements defining the run.
 END
 DATA
19.
                    24.
9.
                    47.
ENDDATA
STOP
ENDJOB
```

INITIAL 1 DIMENSION Y(2, 3) FIXED K, J NOSORT 50 FORMAT(3F14.2) READ(5, 50)((Y(K, J), J = 1,3), K = 1, 2)DYNAMIC Statements defining the run. END DATA 13.42 3.56 -67.800.78 3.34 32.56 **ENDDATA** STOP **ENDJOB** 

**INITIAL** NOSORT READ(5,999) P, Q, R, S 999 FORMAT(4E12.3) DYNAMIC Statements defining the run. END DATA 0.543E4 0.400E7 0.643E-4 0.484E3 **ENDDATA** STOP **ENDJOB** 102

# Specification Form of INTGRL Statement

To facilitate the integration of subscripted variables, the *specification* or array form of the INTGRL statement can be used. This form of the INTGRL statement allows the use of subscripted variables as inputs, outputs, and initial conditions. The general form of the statement is

ZE = INTGRL(XOE, XE, N)

where ZE = output of the integration

 $XOE = initial \ condition$ 

XE = integrand

N = number of elements in the integrator array, N must be a literal integer constant

In order to use the above specification form of the INTGRL statement for an array of 20 in S/360 CSMP, the program must begin with DIMENSION and EQUIVALENCE cards.

The above cards are not required when using CSMP III. See Chap. 5 for a detailed explanation and examples.

It is not permissible to use a STORAGE card to declare the subscripted variables that appear in the array form of INTGRL statements.

In conjunction with the above DIMENSION and EQUIVALENCE statements, the expression

ZE = INTGRL(XOE, XE, 20)

will integrate 20 variables, namely

$$Z(1) = \int_{0}^{t} X(1) dt + XO(1)$$
$$Z(2) = \int_{0}^{t} X(2) dt + XO(2)$$
$$\vdots$$
$$Z(20) = \int_{0}^{t} X(20) dt + XO(20)$$

An example illustrating the use of subscripted variables with the specification form of the INTGRL statement is the following transient heat transfer problem.

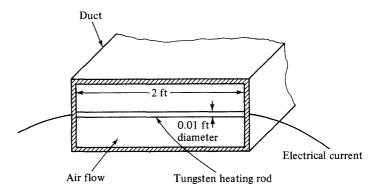


Fig. 3.10 Cross-section of tungsten heating rod in duct.

#### Example 3.3

Consider air flowing in a duct across a tungsten heating element. As electric current supplies energy at a uniform rate per unit-volume to the wire, energy is being removed from the circular heating element by radiation, convection, and conduction. The problem is to find the transient temperature distribution along the rod after the current is turned on. The temperature distribution of the rod is described by a partial differential equation having time and distance as the independent variables. Since partial differential equations cannot be directly solved using CSMP, a common method of solution is to divide the tungsten element into a number of small equal-sized elements. Each element is assumed to

```
q_{\text{radiation}} = ES(T^{4}(i) - TA^{4})A_{s}
q_{\text{convection}} = H(T(i) - TA)A_{s}
q_{\text{radiation}} q_{\text{convection}}
q_{\text{conduction}} = KA_{c}(T(i) - T(i+1))/L
T(i-1)
T(i)
T(i-1)
T(i)
T(i+1)
T(i+1)
T(i)
T(i+1)
T(i+1)
T(i)
T(i+1)
```

 $q_{\text{conduction}} = KA_c (T (i - 1) - T(i))/L$ 

L = 0.1 ftDIA = 0.01 ft  $A_c$  = cross-sectional area =  $\frac{\pi}{4}$  (DIA)<sup>2</sup>  $A_s$  = surface area =  $\pi \cdot L \cdot \text{DIA}$ TA = air temperature, = 530°R T(i) = temperature of *i*<sup>th</sup> element

Fig. 3.11 Heat flow from *i*th element.

have a uniform temperature. This method transforms a continuous system into a *lumped* system which is represented by a set of ordinary differential equations. The accuracy of the simulation improves as the element size decreases.

In this example, the heating element is divided into 20 equal-sized elements, each 0.1 ft long and 0.01 ft in diameter. The elements are sequentially numbered left to right.

Figure 3.11 shows the heat flow for the *i*th element. An energy balance on this element yields the following equation.

$$\frac{dT(i)}{dt} = [\mathbf{K} \cdot \mathbf{AC}(\mathbf{T}(i-1) - 2.0\mathbf{T}(i) + \mathbf{T}(i+1))/\mathbf{L} - \mathbf{ES} \cdot \mathbf{AS}(\mathbf{T}(i)^4 - \mathbf{TA}^4) - \mathbf{H} \cdot \mathbf{AS}(\mathbf{T}(i) - \mathbf{TA}) + \mathbf{QELEC} \cdot \mathbf{AC} \cdot \mathbf{L}]/(\mathbf{RO} \cdot \mathbf{C} \cdot \mathbf{AC} \cdot \mathbf{L})$$
(3.7)

where T(i) = temperature of *i*th element,  $^{\circ}R$ 

- K = thermal conductivity, 94.0 Btu/hr-ft-°R
- $AC = cross-sectional area of tungsten rod, ft^2$
- $ES = Stefan-Boltzmann \ constant \ times \ surface \ emissivity, \\ 8.5 \times 10^{-10} \ Btu/hr-ft^{2_o}R^4$
- $TA = air temperatures in duct, 530^{\circ}R$ 
  - $H = heat \ transfer \ coefficient \ for \ forced \ convection, \\ 25.0 \ Btu/hr-ft^{2_\circ}R$
- $AS = surface area of element, ft^2$
- $RO = density of tungsten, 1208 lbm/ft^3$ 
  - C =specific heat of tungsten, 0.032 Btu/lbm°R
- QELEC = electrical energy supplied per unit-volume,  $6.0 \times 10^{6}$ (Btu/hr-ft<sup>3</sup>)

In the first equation of the array (i = 1), the T(i - 1) term must be set equal to the temperature of the left wall. In the same manner, the T(i + 1) term of the last equation (i = 20) must be set equal to the temperature of the right side wall.

The program for simulating this system is shown in Fig. 3.12.

There are several points which should be discussed regarding the program.

1. Note that it is necessary to use the DIMENSION and EQUIVALENCE statements to specify the subscripted variables used with the specification form of the INTGRL statement. These relationships are given below.

| Subscripted variables                        | EQUIVALENCE variables |
|--|-----------------------|
| T(i) = temperature of <i>i</i> th element    | TE                    |
| TI(i) = initial temperature of ith element   | TIE                   |
| $\mathrm{TD}(i) = \frac{d\mathrm{T}(i)}{dt}$ | TDE                   |

```
TITLE
          THE USE OF SUBSCRIPTED VARIABLES TO SOLVE A HEAT TRANSFER
  TITLE
          PROBLEM
  INITIAL
      DIMENSION T(20), TI(20),
                                  TD(20)
      EQUIVALENCE ( TF,T(1) ), (TIE,TI(1) ), (TDE, TD(L) )
   FIXED
             RO = 1208.0, C = 0.032, K = 94.0, H = 25.0, ES = 8.5E-10...
   CONSTANT
   , DIA = 0.01, L = 0.1, TA = 530.0, TWALL = 530.0, QELEC = 6.0E6
   AC = 3.14159*DIA*DIA/4.0
   AS = 3.14159*DIA*L
NOSORT
   DO 2 I = 1,20
    2 TI(I) = 530.0
 DYNAMIC
 NOSORT
   TD(1) = (K*AC*(TWALL - 2.0*T(1) + T(2))/L - ES*AS*(T(1)**4
   TA**4) - H*AS*(T(1) - TA) + QELEC*AC*L)/(RO*C*AC*L)
   TD(20) = (K*4C*(T(19) - 2.0*T(20) + TWALL)/L - ES*AS*(T(20)**4 -
                                                                       . . .
     TA**4) - H*AS*(T(20) - TA) + QELEC*AC*L)/(RO*C*AC*L)
   DO 1 I = 2,19
  TD(I) = (K*AC*(T(I-1) - 2.0*T(I) + T(I+1))/L - ES*AS*(T(I)**4 -
                                                                       . . .
   TA**4) - H*AS*(T(I) - TA) + QELEC*AC*L)/(RD*C*AC*L)
 SORT
    THE FOLLOWING IS THE SPECIFICATION FORM OF THE INTGRL STATEMENT. IT IS
    USED TO INTEGRATE ARRAYS.
   TE = INTGRL(TIE, TDE, 20)
    SUBSCRIPTED VARIABLES CAN NOT BE INCLUDED IN PRINT OR PRTPLT STATEMENTS.
*
    CONSEQUENTLY, IT IS NECESSARY TO INTRODUCE THE FOLLOWING FOUR VARIABLES
*
    FOR OUTPUT PURPOSES.
   T1 = T(1)
   T5 = T(5)
   T10 = T(10)
   T17 = T(17)
   PRINT T1. T5. T10. T17
   TIMER FINTIM = 0.018,
                           PRDEL = 0.0006
END
STOP
ENDJOB
```

Fig. 3.12 Program to simulate temperature of tungsten rod.

- 2 The last portion of the Initial segment is changed to a nosort section to allow a DO loop to be used to set all values of initial temperatures TI(i) equal to 530°R. All calculations for initial conditions that are used in INTGRL statements must be performed in the Initial segment. Because TI(i) must be declared in a DIMENSION statement and not in a STORAGE statement, a TABLE card cannot be used to initialize the values of TI(i). Also, since TI(i) is contained in an EQUIVALENCE statement, a DATA card cannot be used to specify the initial values for TI(i).
- 3 The first portion of the Dynamic segment is changed to a nosort section to allow subscripted variables to appear on the left-hand side of the equal sign and also to permit the use of the DO loop.
- 4 If the INTGRL statement were written as

#### TE = INTGRL(530.0, TDE, 20)

only the first term of the array T(1) would have the initial value of 530.0. All of the

remaining terms would have initial value of zero. For this reason it is necessary to include the array TI(i) for nonzero initial conditions.

5 Since subscripted variables cannot be used in S/360 CSMP PRINT or PRTPLT statements, it is necessary to set all subscripted variables desired as output equal to nonsubscripted variables. In this example, the subscripted variables T(1), T(5), T(10), and T(17) are set equal to new variables for output purposes.

The resulting output for this simulation is shown in Fig. 3.13.

| THE USE    | OF SUBSCRIP | TED VARIABLES | TO SOLVE A | HEAT TRANSFER | RKS | INTEGRATION |
|------------|-------------|---------------|------------|---------------|-----|-------------|
| PROBLEM    |             |               |            |               |     |             |
| TIME       | Ť1          | T 5           | T10        | T17           |     |             |
| 0.0        | 5.3000E 02  | 5.3000E 02    | 5.3000E 02 | 5.3000E 02    |     |             |
| 6.0000E-04 | 6.1053E 02  | 2 6.1610E 02  | 6.1610E 02 | 6.1610E 02    |     |             |
| 1.2000E-03 | 6.7098E 02  | 6.8947E 02    | 6.8947E 02 | 6.8946E 02    |     |             |
| 1.8000E-03 | 7.1705E 02  | 7.5185E 02    | 7.5185E 02 | 7.5182E 02    |     |             |
| 2.4000E-03 | 7.5261F 02  | 8.0478E 02    | 8.0479E 02 | 8.0469E 02    |     |             |
| 3.0000F-03 | 7.8035E 02  | 8.4960E 02    | 3.4963E 02 | 8.4939E 02    |     |             |
| 3.6000E-03 | 8.0216E 02  | 8.8747E 02    | 8.8752E 02 | 8.8709E 02    |     |             |
| 4.2000E-03 | 8.1944E 02  | 9.1939E 02    | 9.1950E 02 | 9.1879E 02    |     |             |
| 4.8000E-03 | 8.3320E 02  | 9.4626E 02    | 9.4643E 02 | 9.4538E 02    |     |             |
| 5.40008-03 | 8.4421E 02  | 9.6882E 02    | 9.6908E 02 | 9.6765E 02    |     |             |
| 5.0000E-03 | 8.5305E 02  | 9.8775E 02    | 9.8811E 02 | 9.8624E 02    |     |             |
| 6-6000F-03 | 8-6018E 02  | 1.0036E 03    | 1.0041E 03 | 1.0018E 03    |     |             |

| 3.0000F-03 | 7.8035E | 02 | 8.4960E | 02 | 3.4963E | 02  | 8.4939E | 02 |
|------------|---------|----|---------|----|---------|-----|---------|----|
| 3.6000E-03 | 8.0216E | 02 | 8.8747E | 02 | 8.8752E | 02  | 8.8709E | 02 |
| 4.2000E-03 | 8.1944F | 02 | 9.1939E | 02 | 9.1950E | 02  | 9.1879E | 02 |
| 4.8000E-03 | 8.3320E | 02 | 9.4626E | 02 | 9.4643E | 02  | 9.4538E | 02 |
| 5.40008-03 | 8.4421E | 02 | 9.6882E | 02 | 9.6908E | 02  | 9.6765E | 02 |
| 6.0000E-03 | 8.5305E | 02 | 9.8775E | 02 | 9.8811E | 02  | 9.8624E | 02 |
| 6.6000E-03 | 8.6018E | 02 | 1.0036E | 03 | 1.0041E | 03  | 1.0018E | 03 |
| 7.2000E-03 | 8.6593E | 02 | 1.0168E | 03 | 1.0175E | 03  | 1.0147E | 03 |
| 7.8000F-03 | 8.7059E | 02 | 1.0279E | 03 | 1.0287E | 03  | 1.0254E | 03 |
| 8.4000E-03 | 8.7437E | 02 | 1.0371E | 03 | 1.0380E | 03  | 1.0343E | 03 |
| 9.0000E-03 | 8.7745E | 02 | 1.0448E | 03 | 1.0459E | 03  | 1.0417E | 03 |
| 9.6000E-03 | 8.7994E | 02 | 1.0512E | 03 | 1.0524E | 03  | 1.0479E | 03 |
| 1.02008-02 | 8.8198E | 02 | 1.0566E | 03 | 1.0579E | 03  | 1.0530E | 03 |
| 1.0800E-02 | 8.8364E | 02 | 1.0610E | 03 | 1.0625E | 03  | 1.0572E | 03 |
| 1.1400E-02 | 8.8500E | 02 | 1.0647E | 03 | 1.0663E | 03  | 1.0607E | 03 |
| 1.2000F-02 | 8.8611E | 02 | 1.0678E | 03 | 1.0695E | 03  | 1.0636E | 03 |
| 1.2600E-02 | 8.8701E | 02 | 1.0703E | 03 | 1.0721E | 03  | 1.0660E | 03 |
| 1.3200F-02 | 8.8775E | 02 | 1.0724E | 03 | 1.0743E | 03  | 1.0680E | 03 |
| 1.38008-02 | 8.8836E | 02 | 1.0742E | 03 | 1.0762E | 03  | 1.U696E | 03 |
| 1.4400E-02 | 8.8886E | 02 | 1.0756E | 03 | 1.0777E | 03  | 1.0710E | 03 |
| 1.5000E-02 | 8.8927E | 02 | 1.0768E | 03 | 1.0790E | 03  | 1.0721E | 03 |
| 1.5600E-02 | 8.8960E | 02 | 1.0778E | 03 | 1.0801E | 03  | 1.0730E | 03 |
| 1.6200E-02 | 8.8988E | 02 | 1.0787E | 03 | 1.0810E | 03  | 1.0738E | 03 |
| 1.6800E-02 | 8.9010E | 02 | 1.0794E | 03 | 1.0817E | 03  | 1.0744E | 03 |
| 1.7400F-02 | 8.9029E | 02 | 1.0799E | 03 | 1.0824E | 0.3 | 1.0750E | 03 |
| 1.8000E-02 | 8.9044E | 02 | 1.0804E | 03 | 1.0829E | 03  | 1.0754E | 03 |
|            |         |    |         |    |         |     |         |    |


Fig. 3.13 Output of program of Fig. 3.12.

The specification form of the INTGRL statement cannot be used for direct doubleintegration of arrays. For example, an acceleration array which is integrated into a velocity array cannot be directly integrated into a displacement array. The following example illustrates the correct procedure for performing double-integration of arrays.

### Example 3.4

Consider the system of Fig. 3.14 which shows five uncoupled spring-mass units. The entire mass assembly is moving to the right with a common velocity of 50 ft/sec. The base strikes and then sticks to an immovable rigid surface. The problem is to find the resulting motion of all five masses after impact.

0 6 L ı 2

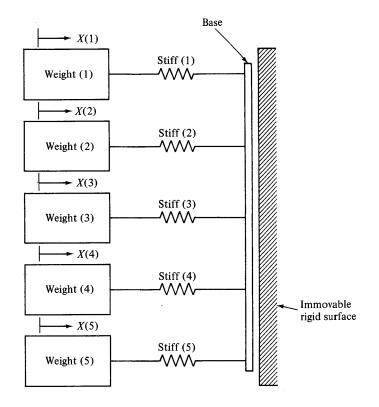

Initial velocity of all masses = 50 ft/sec

Fig. 3.14 Spring-mass system.

Using Newton's second law, the acceleration of the *i*th mass can be written as

$$A(i) = \frac{-\text{STIFF}(i)*X(i)}{\text{WEIGHT}(i)/32.17}$$
(3.8)


where STIFF(i) is the stiffness of the spring connected to the *i*th mass.

The program for calculating the system dynamics is shown in Fig. 3.15.

In the program, WEIGHT(i) and STIFF(i) are declared as subscripted variables by a STORAGE statement. This allows a TABLE card to be used to specify the values for WEIGHT(i) and STIFF(i).

Note that the entire Dynamic segment is changed to a nosort section. This assures that all statements will be executed in the exact order in which they appear in the program. The acceleration array A(J) is calculated and then integrated to obtain the velocity array V(J). It is not permissible to directly integrate this velocity array to obtain the displacement array. An intermediate array must be set equal to the velocity array. This is accomplished by the program statements

```
TITLE PROGRAM TO CALCULATE THE DYNAMICS OF A MECHANICAL SYSTEM USING
TITLE SUBSCRIPTED VARIABLES.
INITIAL
      DIMENSION X(5), V(5), A(5), V1(5), VELI(5)
1
     EQUIVALENCE ( XE, X(1) ), (VE, V(1) ), (AE, A(1) )
1 , (VIE, V1(1) ), (VELIE, VELI(1) )
1
  STORAGE WEIGHT(5), STIFF(5)
TABLE WEIGHT(1-2) = 2*13.6, WEIGHT(3) = 18.9, WEIGHT(4-5) = 2*11.5,...
 STIFF(1) = 135.0, STIFF(2-3) = 2*180.0, STIFF(4-5) = 2*320.0
  FIXED J
NOSORT
  00 3 J = 1.5
  3 VELI(J) = 50.0
DYNAMIC
NOSORT
  00 \ 1 \ J = 1.5
 1 A(J) = -STIFF(J)*X(J)/(WEIGHT(J)/32.17)
  VE = INTGRL(VELIE, AE, 5)
    CSMP DOES NOT PERMIT DIRECT DOUBLE INTEGRATION OF ARRAYS WHEN USING THE
    SPECIFICATION FORM OF THE INTGRE STATEMENT.
                                                     CONSEQUENTLY, THE FOLLOWING
×
    TWO STATEMENTS ARE USED TO GENERATE THE ARRAY VI(J) WHICH CAN BE
*
    INTEGRATED TO FIND X(J).
  DO 2 J = 1.5
 2 V1(J) = V(J)
  XE = INTGRL(0.0,V1E,5)
  X1 = X(1)
  X2 = X(2)
  X3 = X(3)
  X4 = X(4)
  X5 = X(5)
TERMINAL
  TIMER FINTIM = 0.6, PRDEL = 0.02
  PRINT X1, X2, X3, X4, X5
END
STOP
ENDJOB
```

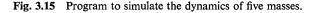

The VI(J) array can now be integrated to obtain the displacement array. Since the VI(i) array is used in the specification form of an INTGRL statement, it must be included in the EQUIVALENCE statement. The output for this program is given in Fig. 3.16.

## **OVERLAY Statement**

The FUNCTION statement which was defined in Example 2.4 is considered a data statement. It is used for specifying pairs of x-y coordinates for the function generating elements AFGEN and NLFGEN. When making more than one run, the OVERLAY statement can be used to change previously specified x-y values contained in FUNCTION statements. An example of an OVERLAY card is

OVERLAY TORQUE = 0.0, 4.5, 3.0, 7.8, 6.0, 11.9, 10.0, 19.0

In this example, the FUNCTION defined as TORQUE will take on the new x-y values for the second run as given in the OVERLAY statement.

The format for an OVERLAY statement is the same as for a FUNCTION card with the following exceptions.

```
Ch. 3
```

TIME X2 X3 X4 X5 X 1 0.0 0.0 0.0 0.0 0.0 0.0 2.0000E-02 9.7884E-01 9.7185E-01 9.7970E-01 9.4138E-01 9.4138E-01 4.0000E-02 1.8340E 00 1.7805E 00 1.8405E 00 1.5556E 00 1.5556E 00 2.4781E 00 1.6293E 00 6.0000E-02 2.4573E 00 2.2902E 00 1.6293E 00 8.0000E-02 2.4154E 00 2.8151E 00 1.1368E 00 2.7701E 00 1.1368F 00 1.0000E-01 2.7329E 00 2.1350E 00 2.8106E 00 2.4938E-01 2.4938E-01 1.2000E-01 2.3502E 00 1.4961E 00 2.4651E 00 -7.2470E-01 -7.2470E-01 1.4000E-01 1.6705E 00 6.0608E-01 1.8207E 00 -1.4469E 00 -1.4469E 00 7.7975E-01 -3.8576E-01 9.5533F-01 -1.6664E 00 -1.6664E 00 1.6000F-01 1.8000E-01 -2.0958E-01 -1.3128E 00 -2.5886E-02 -1.3069E 00 -1.3069E 00 2.0000E-01 -1.1724E 00 -2.0194E 00 -1.0040E 00 -4.9320E-01 -4-9320F-01 2.2000E-01 -1.9871E 00 -2.3870E 00 -1.8602E 00 4.9181E-01 4.9181E-01 2.4000E-01 -2.5506E 00 -2.3538E 00 -2.4909E 00 1.3059E 00 1.3059E 00 2.6000E-01 -2.7918E 00 -1.9253E 00 -2.8194E 00 1.6663E 00 1.6663E 00 2.8000E-01 -2.6802E 00 -1.1736E 00 -2.8058E 00 1.4476E CO 1.4476E 00 3.0000E-01 -2.2299E 00 -2.2487E-01 -2.4520E 00 7.2596E-01 7.2596E-01 3.2000E-01 -1.4977E 00 7.6164E-01 -1.8006E 00 -2.4791E-01 -2.4791E-01 3.4000E-01 -5.7630E-01 1.6203E 00 -9.3091E-01 -1.1356E 00 -1.1356E 00 4.1796E-01 3.6000E-01 2.2068E 00 5.1754E-02 -1.6288E 00 -1.6288E 00 3.8000E-01 1.3594E 00 2.4229E 00 1.0281E 00 -1.5559E 00 -1.5559E 00 4.00008-01 2.1290E 00 2.2321E 00 1.8798E 00 -9.4239E-01 -9.4239E-01 4.2000E-01 2.6296E 00 1.6665E 00 2.5034E 00 -1.4542E-03 -1.4542E-03 2.8234E 00 4.4000E-01 8.2117E-01 9.3996E-01 2.7978E 00 9.3996E-01 4.6000E-01 2.6125E 00 -1.6207E-01 2.8008E 00 1.5548E 00 1.5548E 00 2.4386F 00 4.8000E-01 2.0970E 00 -1.1181E 00 1.6293E 00 1.6293E 00 5.0000F-01 1.3165E 00 -1.8864E 00 1.7805E 00 1.1377E 00 1.1377E 00 5.20005-01 3.6959E-01 -2.3380E 00 9.06395-01 2.5082E-01 2-5082E-01 5.4000E-01 -6.2400E-01 -2.3970E 00 -7.7623E-02 -7.2322E-01 -7.2322E-01 5.6000E-01 -1.5387E 00 -2.0535E 00 -1.0522E 00 -1.4459E 00 -1.4459E 00 5.8000E-01 -2.2590E 00 -1.3653E 00 -1.8992E 00 -1.6663E 00 -1.66663E 00 6.0000E-01 -2.6938E 00 -4.4777E-01 -2.5158E 00 -1.3075E 00 -1.3075E 00

Fig. 3.16 Output from program of Fig. 3.15.

- 1 The label OVERLAY is used in place of the label FUNCTION.
- 2 The number of x-y data pairs in an OVERLAY statement must not be more than the number of x-y pairs in the original FUNCTION statement.
- 3 Parentheses must not be used in OVERLAY statements to separate pairs of data.

A simple example which illustrates the use of an OVERLAY statement is the problem of calculating the volumetric flow of blood pumped by the human heart for two different pressure profiles.

#### Example 3.5

Figure 3.17 shows two time-histories of ventricular pressure in the human heart. Profile No. 1 represents a strong heart beat while profile No. 2 corresponds to a more average heart. An expression which approximates the flow rate of blood pumped by the heart is

$$FLOW = \frac{P}{575.0}$$
(3.9)

INTEGRATION

RKS

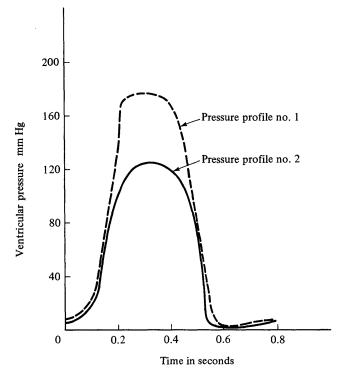


Fig. 3.17 Time-history of pressure in pumping chamber of the human heart.

where FLOW = volumetric flow rate in l/sec

 $\mathbf{P} =$ ventricular pressure in mm-Hg

A single integration of FLOW with respect to time yields the total amount of blood that has flowed from the heart during one beat.

$$VOLUME = \int_0^t FLOW \, dt \tag{3.10}$$

Figure 3.18 shows the program for solving for the total flow for both pressure profiles. Data representing the first time-history of pressure is entered on the FUNCTION card with the label PRESS. The OVERLAY statement contains the data for the second pressure profile used for the function PRESS in the second run. Figure 3.19 contains the PRTPLT output resulting from the first pressure profile and Fig. 3.20 shows the output for the second time-history of pressure. Notice in the program of Fig. 3.18 that the OVERLAY statement appears immediately after the first END card. The END card permits the simulation to accept new data and control statements for another run. Note also that the END card sets the independent variable (TIME) to zero and resets all initial conditions. A detailed discussion on the use of the END statement is contained in the following section on translation control statements.

```
LABEL BLOOD FLOW PROBLEM TO ILLUSTRATE THE USE OF AN OVERLAY STATEMENT.
  FUNCTION PRESS = (0.0, 8.0), (0.05, 12.0), (0.1, 21.0), (0.15, 80.0),
                                                                         ...
   (0.2, 140.0), (0.25, 174.0), (0.28, 178.0), (0.3, 177.0), (0.32, 176.0),
                                                                         ...
   (0.35, 175.0), (0.4, 165.0), (0.45, 138.0), (0.5, 86.0), (0.55, 19.0),
                                                                         ...
   (0.6, 3.0), (0.62, 3.5), (0.64, 4.0), (0.67, 5.0), (0.7, 6.0), (0.8, 8.0)
  P = NLFGEN(PRESS,TIME)
  FLOW = P/575.0
  VOLUME = INTGRL(0.0,FLOW)
  PRTPLT VOLUME (P,FLOW)
  TIMER FINTIM = 0.8, OUTDEL = 0.04
     THE FOLLOWING END CARD RESETS THE INITIAL CONDITIONS, RESETS TIME TO ZERO,
*
   PREVIOUSLY DEFINED FUNCTION TO THE VALUES SHOWN.
*
  ANOTHER RUN.
                   THE OVERLAY STATEMENT CHANGES THE DATA CONTAINED IN THE
  END
  OVERLAY PRESS = 0.0,5.0, 0.05,8.0, 0.1,18.0, 0.15,63.0, 0.2,100.0, ...
   0.25,120.0, 0.3,124.0, 0.35,124.0, 0.4,120.0, 0.5,65.0, 0.54,6.0, ...
   0.56,4.0, 0.58,2.0, 0.59,2.0, 0.61,2.2, 0.65,2.5, 0.7,3.0, 0.8,5.0
  END
  STOP
  ENDJOB
```

Fig. 3.18 Program to calculate blood flow and to illustrate the use of an OVERLAY statement.

BLOOD FLOW PROBLEM TO ILLUSTRATE THE USE OF AN OVERLAY STATEMENT. PAGE 1

|            |            | NIMUM | VOLUME VERSUS TIME | MAXIMUM    |            |            |
|------------|------------|-------|--------------------|------------|------------|------------|
|            | 0.0        |       |                    | 1.0574E-01 |            |            |
| TINE       | VOLUME     | T     |                    | I          | P          | FLOW       |
| 0.0        | 0.0        | +     |                    |            | 8.0000E 00 | 1.3913E-02 |
| 4.0000E-02 | 6.6782E-04 | +     |                    |            | 1.1200E 01 | 1.9478E-02 |
| 8.0000E-02 | 1.61165-03 | +     |                    |            | 1.6800E 01 | 2.9217E-02 |
| 1.2000E-01 | 3.2800E-03 | -+    |                    |            | 3.8600F 01 | 6.7130E-02 |
| 1.6000E-01 | 7.8047E-03 | +     |                    |            | 9.1920F 01 | 1.5986E-01 |
| 2.0000E-01 | 1.5868E-02 | +     |                    |            | 1.4000E 02 | 2.4348F-01 |
| 2.4000E-01 | 2.6722E-02 |       | +                  |            | 1.6928E 02 | 2.9440E-01 |
| 2.8000E-01 | 3.8947E-02 |       | +                  |            | 1.7800E 02 | 3.0957E-01 |
| 3.2000E-01 | 5.1268E-02 |       | +                  |            | 1.7600E 02 | 3.0609E-01 |
| 3.6000E-01 | 6.3458E-02 |       | +                  |            | 1.73835 02 | 3.02325-01 |
| 4.0000E-01 | 7.5282E-02 |       | +                  |            | 1.6500E 02 | 2.8696E-01 |
| 4.4000E-01 | 8.6120E-02 |       |                    | +          | 1.4476E 02 | 2.5176E-01 |
| 4.8000E-01 | 9.5085E-02 |       |                    | +          | 1.0980E 02 | 1.9096E-01 |
| 5.2000E-01 | 1.0107E-01 |       |                    |            | 6.1000E 01 | 1.0609E-01 |
| 5.6000E-01 | 1.0342E-01 |       |                    | +          | 1.1720E 01 | 2.0383E-02 |
| 6.0000E-01 | 1.0374E-01 |       |                    | +          | 3.0000E 00 | 5.2173E-03 |
| 6.4000E-01 | 1.0398E-01 |       |                    | +          | 4.0000E 00 | 6.9565E-03 |
| 6.8000E-01 | 1.0430E-01 |       |                    |            | 5.3333E 00 | 9.2754E-03 |
| 7.2000E-01 | 1.0471E-01 |       |                    | +          | 6.5641E 00 | 1.1416E-02 |
| 7.6000E-01 | 1.0520E-01 |       |                    |            | 7.4461E 00 | 1.2950E-02 |
| 8.0000E-01 | 1.0574E-01 |       |                    | +          | 8.0000E 00 | 1.3913E-02 |
|            |            |       |                    |            |            |            |

Fig. 3.19 Blood flow for pressure-pulse.

## **Translation Control Statements**

Translation control statements specify how structure statements are to be treated. They also are used for run control purposes. For example, the INITIAL, DYNAMIC, and TERMINAL statements, which were defined in Chap. 2, are translation control statements. They specify how groups of structure statements are to be handled. The END and CONTINUE statements, which have previously

|            | M1         | INTHUM | VOLUME VERS | US TIME | MAXIMUM    |         |    |            |
|------------|------------|--------|-------------|---------|------------|---------|----|------------|
|            | 0.0        | )      |             |         | 7.4928E-02 |         |    |            |
| TIME       | VOLUME     | I      |             |         | 1          | P       |    | FLOW       |
| 0.0        | 0.0        | +      |             |         |            | 5.0000E | 00 | 8.6957E-03 |
| 4.0000E-02 | 4.3130E-04 | +      |             |         |            | 7.4000E | 00 | 1.28705-02 |
| 8.0000E-02 | 1.1042E-03 | +      |             |         |            | 1.3160E | 01 | 2.2887E-02 |
| 1.2000E-01 | 2.4927E-03 | -+     |             |         |            | 3.1800E | 01 | 5.5304E-02 |
| 1.6000E-01 | 6.0895E-03 | +      |             |         |            | 7.10405 | 01 | 1.23555-01 |
| 2.0000E-01 | l.2068E-02 | +      |             |         |            | 1.0000E | 20 | 1.7391E-01 |
| 2.4000E-01 | 1.9692E-02 |        | •           |         |            | 1.17365 | 02 | 2.04105-01 |
| 2.8000E-01 | 2.8155E-02 |        | +           |         |            | 1.2432E | 02 | 2.1621E-01 |
| 3.2000E-01 | 3.6804E-02 |        |             |         |            | 1.24485 | 02 | 2.16495-01 |
| 3.6000E-01 | 4.5445E-02 |        |             | +       |            | 1.2352E | 02 | 2.1482E-01 |
| 4.0000E-01 | 5.3930E-02 |        |             |         |            | 1.20005 | 02 | 2.0870F-01 |
| 4.4000E-01 | 6.1833E-02 |        |             |         |            | 1.0552E | 02 | 1.8351E-01 |
| 4.8000E-01 | 6.8379E-02 |        |             |         |            | 8.1013E | 01 | 1.4089E-01 |
| 5.2000E-01 | 7.2734E-02 |        |             |         | +          | 3.81435 | 01 | 6.63365-02 |
| 5.5000E-01 | 7.3638E-02 |        |             |         |            | 4.0000E | 00 | 6.9564E-03 |
| 6.0000E-01 | 7.3812E-02 |        |             |         | +          | 2.0667E | 00 | 3.5942F-03 |
| 6.4000E-01 | 7.3971E-02 |        |             |         |            | 2.4375E | 00 | 4-23915-03 |
| 6.8000E-01 | 7.4151E-02 |        |             |         | +          | 2.7833E | 00 | 4.8406E-03 |
| 7.2000E-01 | 7.4361E-02 |        |             |         |            | 3.2933E | 00 | 5.72755-03 |
| 7.6000E-01 | 7.4615E-02 |        |             |         |            | 4.0400E | 00 | 7.0261F-03 |
| 8.0000E-01 | 7.4928E-02 |        |             |         | +          | 5.0000F | 00 | 8.6956F-03 |

BLOOD FLOW PROBLEM TO ILLUSTRATE THE USE OF AN OVERLAY STATEMENT. PAGE 1

Fig. 3.20 Blood flow for pressure-pulse.

been used and briefly described, can be used for run-control purposes and consequently are also translation control statements.

This section is concerned with the following six statements and how they can be used for changing data and output statements for sequential runs, resetting integration methods and error requirements, and other special features pertaining to run control techniques.

> END RESET CONTINUE STOP ENDJOB ENDJOB STACK

## END

The END card must appear at least once in every program. For programs where control and data statements are not changed and only one run is desired, the END card simply appears immediately after the last structural statement. All examples in Chap. 2, with the exception of Example 2.10, illustrated this use of the END statement.

The END card can be used to permit the simulation to accept new data and control statements for sequential runs as illustrated in this chapter in the program of Fig. 3.18. When the END card is not followed immediately by a STOP card, another run is automatically initiated incorporating the changes that follow the END card. At the start of the new run, the initial conditions are automatically reset and the independent variable (TIME) is set to zero. The following simple example program illustrates how this is accomplished.

```
INCON YO = 2.0

Y = INTGRL(YO, V)

END

INCON YO = 7.5

END

STOP

ENDJOB
```

In the above example, the initial value for Y in the first run is 2.0. For the second run the initial value of Y is 7.5.

#### Example 3.6

Several important points can be illustrated by incorporating an extra END card in the program in Fig. 3.3. Figure 3.21 shows this program where an END card has been added to provide one additional run. The first run of the program is identical to the original program in Fig. 3.3. In the second run, the integration method, output, and timer variables are changed as specified by the cards following the first END statement.

Note that SUM and COUNT are set equal to zero for the second run. This is necessary even though these variables were originally set equal to zero in the Initial segment. If they are not reset to zero, the final values of SUM and COUNT in the first run will be used as the starting values in the second run.

For the variables that appear on the TIMER card, it is only necessary to specify changes. In this problem, DELT is the only timer variable that changes for the second run.

The two pages of output from the program in Fig. 3.21 is shown in Fig. 3.22.

All changes that were made for the second run, in the previous example, nullified the corresponding instruction specified in the first run. Not all statements, however, will cancel previous instructions. The following is a list of the statements that when used for an additional run will completely nullify the corresponding instructions of previous runs.

FINISH METHOD PREPARE PRINT TITLE

The following is a list of five additive instructions. These statements do not nullify previous ones, but simply provide additional instructions.

ABSERR & RELERR LABEL PRTPLT RANGE

INTEGRATION

```
TITLE PROGRAM TO CALCULATE THE AVERAGE ABSOLUTE ERROR OF EQUATION 3.1
INITIAL
CONSTANT PI = 3.14159. SUM = 0.0. COUNT = 0.0
DYNAMIC
   THE FULLOWING 3 CARDS ARE USED TO SOLVE EQUATION 3.1, WHERE-
  YDD = SECOND DERIVATIVE OF Y WITH RESPECT TO TIME
  YD = FIRST DERIVATIVE OF Y WITH RESPECT TO TIME
YDD = -4.0*PI*PI*Y
YD = INTGRL(0.0, YDD)
Y = INTGRL(1.0, YD)
* THE FOLLOWING NOSORT SECTION IS REQUIRED TO USE THE "IF" STATEMENT
NOSORT
* KEEP IS EQUAL TO 1 WHEN THE END OF A VALID INTEGRATION STEP IS REACHED.
IF(KEEP. EQ .1) GO TO 1
GD TJ 2
1 SUM = SUM + ABS(Y - COS(2.0*PI*TIME))
COUNT = COUNT + 1.0
AAER = SUM/COUNT
2 CONTINUE
TERMINAL
TIMER FINTIM = 1.0, PRDEL = 0.1, DELT = 0.001
METHOD SIMP
PRINT Y, SUM, COUNT, AAER
  THE FULLOWING "END" CARD RESETS THE INITIAL CONDITIONS AND SETS THE
  INDEPENDENT VARIABLE (TIME) TO ZERO AND INITIATES ANOTHER RUN USING THE
±
  CHANGES THAT FOLLOW THE END CARD.
*
END
   PRINT Y, YD, YDD, SUM, COUNT, AAER
   TIMER DELT = 0.004
   CONSTANT SUM = 0.0, COUNT = 0.0
   METHOD TRAPZ
END
STOP
ENDJOB
```

Fig. 3.21 Program to illustrate the use of END statement.

| PROGRAM TO | CALCULATE TH | E AVERAGE A | BSOLUTE ERROR | OF EQUATION | 3.1 SIMP |  |
|------------|--------------|-------------|---------------|-------------|----------|--|
| TIME       | Y            | SUM         | COUNT         | AAER        |          |  |
| 0.0        | 1.0000E 00   | 0.0         | 1.0000E 00    | 0.0         |          |  |
| 1.0000E-01 | 8.0902E-01   | 1.3816E-04  | 1.0100E 02    | 1.3680E-06  |          |  |
| 2.0000F-01 | 3.0902E-01   | 4.0048E-04  | 2.0100E 02    | 1.9925E-06  |          |  |
| 3.0000E-01 | -3.0901E-01  | 5.8232E-04  | 3.0100E 02    | 1.9346E-06  |          |  |
| 4.0000E-01 | -8.0900E-01  | 1.7282E-03  | 4.0100E 02    | 4.3098E-06  |          |  |
| 5.0000E-01 | -9.99978-01  | 4.1801E-03  | 5.0100E 02    | 8.3434E-06  |          |  |
| 6.0000E-01 | -8.0899E-01  | 7.4814E-03  | 6.0100E 02    | 1.2448E-05  |          |  |
| 7.0000E-01 | -3.0900E-01  | 1.0343E-02  | 7.0100E 02    | 1.4755E-05  |          |  |
| 8.0000E-01 | 3.0900E-01   | 1.1399E-02  | 8.0100E 02    | 1.4231E-05  |          |  |
| 9.0000F-01 | 8.0897E-01   | 1.3523E-02  | 9.0100E 02    | 1.5009E-05  |          |  |
| 1.0000E 00 | 9.9994E-01   | 1.8603E-02  | 1.0010E 03    | 1.8585E-05  |          |  |

Fig. 3.22 Output of program of Fig. 3.21.

| PROGRAM TO | CALCULATE  | THE AVERAGE   | ABSOLUTE E | ERROR | OF EQUATION | 3.1     | TRAPZ     | INTEGRATION |
|------------|------------|---------------|------------|-------|-------------|---------|-----------|-------------|
| TIME       | Y          | YD            | YDD        |       | SUM         | COUNT   | AAER      |             |
| 0.0        | 1.0000E 0  | 0.0           | -3.9478    | E 01  | 0.0         | 1.0000E | 00 0.0    |             |
| 1.0000E-01 | 8.0898E-0  | )1 -3.6935E 0 | 0 -3.1937  | 01    | 3.4213E-04  | 2.6000E | 01 1.3159 | E-05        |
| 2.0000E-01 | 3.0889E-0  | )1 -5.9759E 0 | 0 -1.2195  | E 01  | 2.3875E-03  | 5.1000E | 01 4.6813 | E-05        |
| 3.0000E-01 | -3.0920E-0 | 01 -5.9753E 0 | 0 1.2207   | E 01  | 6.4546E-03  | 7.6000E | 01 8.4929 | E-05        |
| 4.0000E-01 | -8.0917E-0 | 01 -3.6918E 0 | 0 3.1945   | E 01  | 1.0940E-02  | 1.0100E | 02 1.0832 | E-04        |
| 5.0000E-01 | -1.0000E ( | 0 2.0339E-0   | 3 3.9478   | E 01  | 1.2990E-02  | 1.2600E | 02 1.0309 | E-04        |
| 6.0000E-01 | -8.0879E-0 | 1 3.6951E 0   | 0 3.1930   | 01    | 1.5985E-02  | 1.5100E | 02 1.0586 | E-04        |
| 7.0000E-01 | -3.0859E-0 | 01 5.9765E 0  | 0 1.2182   | E 01  | 2.4672E-02  | 1.7600E | 02 1.4018 | E-04        |
| 8.0000E-01 | 3.0951E-0  | 01 5.9746E 0  | 0 -1.2219  | F 01  | 3.6836E-02  | 2.0100E | 02 1.8326 | E-04        |
| 9.0000E-01 | 8.0936E-0  | 01 3.6902E 0  | 0 -3.1952  | 01    | 4.7795E-02  | 2.2600E | 02 2.1148 | E-04        |
| 1.0000E 00 | 1.0000E (  | 0 -4.0638E-0  | 3 -3.9478  | E 01  | 5.2229E-02  | 2.5100E | 02 2.0808 | E-04        |

Fig. 3.22 (Continued)

As an example, consider a program having the following structure.

Main body of program

For the first run of the above example program, the following occurs:

- 1 A, B, and C are printed at the interval specified on the timer card.
- 2 A printer-plot of the variable X will be made with the heading: OUTPUT OF "X" INTEGRATOR.
- 3 A printer-plot of the variable Y will be made with the heading: OUTPUT OF "Y" INTEGRATOR.
- 4 The maximum and minimum values of X are listed by the RANGE statement.

5 Absolute errors of 0.001 and 0.003 will be used for the X and Y integrators, respectively.

For the second run, the following occurs:

- 1 The variable C is printed at the interval specified on the only timer card.
- 2 As in the first run, printer-plots will be made for X and Y with the same headings.
- 3 An additional printer-plot of the variable Z will be made with the heading: OUT-PUT OF "Z" INTEGRATOR.
- 4 The maximum and minimum values of X, Y, and Z are listed by the RANGE statements.
- 5 Absolute errors of 0.001, 0.005, and 0.0004 will be used for the X, Y, and Z integrators, respectively.

In this example PRTPLT, LABEL, RANGE, and ABSERR are the additive statements.

It may be necessary in some simulations to eliminate certain control statements in going from one run to another. For this purpose the RESET card should be used.

## RESET

This statement allows the user to nullify certain control instructions used in previous runs.

The RESET card can be used for the following statements.

ABSERR & RELERR FINISH LABEL PREPARE PRINT PRTPLT RANGE

The RESET card should be placed immediately after the END or CONTINUE card to insure its proper use. RESET PRTPLT will nullify all previous PRTPLT and LABEL instructions. RESET LABEL nullifies only LABEL statements. A card containing only RESET on it will nullify all previous LABEL, PRTPLT, PREPARE, PRINT, and RANGE instructions.


A TITLE statement cannot be nullified by using a RESET card. The use of a TITLE instruction after an END or CONTINUE card will nullify the previous TITLE card.

The following example illustrates the use of the END and RESET statements along with the multiple run capability of a PARAMETER card. This example also shows the use of a CSMP random number generator.

#### Example 3.7

Random number signal sources can be very useful in simulating problems associated with many fields, including Industrial Engineering. An example of a typical problem involves determining the random distribution of the stiffness of a coil spring that is manufactured in high volume. The wire diameter and inside diameter of the spring are random variables that can best be described by a Gaussian distribution having a mean and standard deviation. The stiffness of a coil spring which is shown in Fig. 3.23 depends on the wire size and inside diameter of the coil as expressed by

$$K = \frac{G*DW^4}{8(DI+DW)^3N}$$
(3.11)

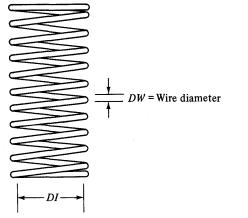

DI = inside diameter of spring

Fig. 3.23 Coil spring.

where

N = number of active coils = 10

DW = diameter of wire

DI = inside diameter of spring coil

In addition, the following program parameter definitions are used.

MEANI = mean inside diameter of spring = 1.000 in.

SIGMAI = standard deviation of inside diameter of spring: 0.001, 0.002, and 0.005 in.

G = modulus of elasticity for steel in shear = 11,500,000 psi

MEANW = mean wire diameter = 0.100 in.

SIGMAW = standard deviation of wire diameter: 0.00033, 0.0006, 0.0015 in.

Since there are three different standard deviations for both the wire size and inside spring diameter, a total of nine runs will be required to simulate all combinations.

CSMP has signal sources which provide random numbers from two distributions. These are the Gaussian and the uniform distributions. For the Gaussian distribution, the statement

$$X = GAUSS(N, M, S)$$

gives a signal having a normal distribution

where N = any odd integer (used as a seed value); in CSMP III use any integer

M = mean value

 $\mathbf{S} = \mathbf{standard} \ \mathbf{deviation}$ 

Only at each valid integration step (when KEEP = 1) does the GAUSS signal source provide a number. It is not activated during trial or immediate integration steps.

A uniform random number distribution between 0 and 1 can be provided by the following RNDGEN function.

$$X = RNDGEN(N)$$

where N is any *odd* integer which is also used as a seed value. When using two or more random-number signal sources, each statement should use a different seed value.

Using the GAUSS signal source, the following CSMP statements can be used to describe the random numbers representing the wire and inside spring diameters.

$$DW = GAUSS(1, MEANW, SIGMAW)$$
$$DI = GAUSS(3, MEANI, SIGMAI)$$

The standard deviation of the stiffness can be expressed by the following formula.

SIGMAK = 
$$\sqrt{\frac{n \sum_{i=1}^{n} K_i^2 - (\sum_{i=1}^{n} K_i)^2}{n(n-1)}}$$
 (3.12)

where  $K_i$  = stiffness of *i*th spring

n = number of springs in sample

Using the above expressions for the random variables DW and DI, and Eq. (3.12) for the standard deviation of the spring stiffness, a program for simulating production runs for all nine combinations of standard deviations of wire and inside diameters is shown in Fig. 3.24. Note the method used in this program to reset COUNT, SUMK, and SUMK2 to zero. This procedure should be used when using the multiple-run capability of a PARAMETER card. The output for the very last run (SIGNAW = 0.0015, SIGMAI = 0.005), which involves a simulation of 3000 springs, is given in Fig. 3.25.

### CONTINUE

The CONTINUE card can be used to change data or control statements without resetting initial conditions or the independent variable (TIME). It is used in place of the END card. When the program encounters a CONTINUE statement, it will accept the changes in control and data statements that follow this card. The program will then continue from the point where the previous run was ended. The CONTINUE statement provides, in effect, an interrupt point where changes in control and data statements can be made. The program in Fig. 3.5 illustrates the use of the CONTINUE card to change integration methods, integration error requirements, and timer variables during the run.

In CSMP III, the END CONTINUE label is used in place of CONTINUE. When using the CONTINUE card, the following rules must be followed.

Ch. 3

```
TITLE PROGRAM TO SIMULATE THE VARIANCE IN THE STIFFNESS IN THE HIGH
TITLE VOLUME PRODUCTION OF A COIL SPRING.
  RENAME TIME = NUMBER
  PARAMETER SIGMAW = (0.00033, 0.0006, 0.0015)
  CONSTANT COUNT = 0.0, SUMK = 0.0, SUMK2 = 0.0, MEANW = 0.1,
                                                                         ...
    MEANI = 1.0, SIGMAI = 0.001, N = 10.0, G = 11.566
 DW = GAUSS(1, MEANW, SIGMAW)
DI = GAUSS(1, MEANI, SIGMAI)
  K = G*(DW**+4)/(8.0*((DW + DI)**3)*N)
NOSORT
    THE FOLLOWING 5 CARDS ARE USED TO RESET COUNT, SUMK, AND SUMK2 TO ZERO
    AT THE BEGINNING OF EACH RUN.
  IF (NUMBER.NE.0.0) GO TO 2
  COUNT = 0.0
  SUMK = 0.0
  SUMK2 = 0.0
2 CONTINUE
  IF(KEEP.NE.1)
                 GO TO L
  COUNT = COUNT + 1.0
  SUMK = SUMK + K
  SUMK2 = SUMK2 + K*K
    THE FOLLOWING "IF" STATEMENT IS USED TO AVOID DIVIDING BY ZERO
* IN THE CALCULATION OF THE STANDARD DEVIATION (SIGMAK)
  IF(COUNT.LT. (PRDEL - 2.0) ) GO TO 1
 SIGMAK = SQRT ((COUNT*SUMK2 - SUMK*SUMK)/(COUNT*(COUNT - 1.0)))
  MEANK = SUMK/COUNT
1 CONTINUE
 PRINT SIGMAK, MEANK
RANGE K, DW, DI, SIGMAK, MEANK
TIMER FINTIM = 5000.0, DELT = 1.0, PRDEL = 100.0
  METHOD RECT
  END
 RESET RANGE
  RANGE K. DW. DI
 CONSTANT SIGMAI
                    = 0.002
  TIMER FINTIM = 3000.0, PRDEL = 200.0
 PRINT SIGMAK, MEANK, K, DW, DI
  END
  CONSTANT SIGMAI = 0.005
  END
  STOP
  ENDJOB
```

Fig. 3.24 Program to simulate the production of a coil spring.

- 1 The multiple run capability of the PARAMETER, CONSTANT, or INCON statements must not be used in a run where a CONTINUE card is used.
- 2 A program containing a TERMINAL segment should not be used with a CONTINUE statement.
- 3 A new value for FINTIM should be specified on a timer card for every use of a CONTINUE card. If a CONTINUE statement is initiated by a FINISH card, the output (PRDEL and OUTDEL) will be incremented from the time at which the FINISH condition was encountered.
- 4 The FORTRAN CONTINUE statement is distinguished from the CSMP CONTINUE card by a statement number. Figure 3.24 illustrates the use

PROGRAM TO SIMULATE THE VARIANCE IN THE STIFFNESS IN THE HIGH VOLUME PRODUCTION OF A COIL SPRING.

INTGRE NOT USED

SIGMAW= 1.5000E-03

| NUMBER SIGMAK MEANK K DW                          | DI                |
|---|-------------------|
| 0.0 3.0245E-01 1.0796E 01 9.3799E 00 9.515        | 50E-02 9.8383E-01 |
| 2.0000E 02 6.1168E-01 1.0836E 01 1.0007E 01 9.783 | 35E-02 9.9805E-01 |
| 4.0000E 02 6.4029E-01 1.0804E 01 1.1095E 01 1.007 | 75E-01 1.0003E 00 |
| 6.0000E 02 6.4603E-01 1.0787E 01 1.2347E 01 1.032 | 24E-01 9.9448E-01 |
| 8.0000E 02 6.3315E-01 1.0804E 01 1.1378E 01 1.016 | 65E-01 1.0033E 00 |
| 1.0000E 03 6.3632E-01 1.0797E 01 1.1053E 01 1.013 | 33E-01 1.0095E 00 |
| 1.2000E 03 6.2593E-01 1.0797E 01 1.0664E 01 1.001 | LOE-01 1.0061E 00 |
| 1.4000E 03 6.2863E-01 1.0797E 01 1.1533E 01 1.018 | 33E-01 1.0007E 00 |
| 1.6000E 03 6.3020E-01 1.0798E 01 1.0704E 01 9.985 | 53E-02 1.0013E 00 |
| 1.8000E 03 6.2993E-01 1.0804E 01 1.0589E 01 9.951 | L2E-02 1.0006E 00 |
| 2.0000E 03 6.2875E-01 1.0804E 01 1.1122E 01 1.001 | 15E-01 9.9135E-01 |
| 2.2000E 03 6.2451E-01 1.0811E 01 1.0604E 01 9.961 | L7E-02 1.0015E 00 |
| 2.4000E 03 6.2795E-01 1.0810E 01 1.0789E 01 1.002 | 25E-01 1.0038E 00 |
| 2.6000E 03 6.2814E-01 1.0805E 01 1.0583E 01 9.989 | 97E-02 1.0061E 00 |
| 2.8000E 03 6.2734E-01 1.0805E 01 1.0528E 01 9.939 | 99E-02 1.0011E 00 |
| 3.0000E 03 6.2547E-01 1.0804E 01 1.0589E 01 9.960 | 00E-02 1.0018E 00 |

## Range Output

PROBLEM DURATION 0.0

TO 3.0000E 03

| VARIABLE | MINIMUM    | NUMBER     | MAXIMUM    | NUMBER     |
|----------|------------|------------|------------|------------|
| к        | 8.6505E 00 | 3.8300E 02 | 1.2991E 01 | 2.4100E 03 |
| DW       | 9.4510E-02 | 3.8300E 02 | 1.0530E-01 | 1.6500E 02 |
| 10       | 9.7930E-01 | 2.0200E 02 | 1.0220E 00 | 5.65COE 02 |

Print Output

Fig. 3.25 Output of Fig. 3.24 for last run.

of the FORTRAN CONTINUE card. It can only be used in a nosort section or within a PROCEDURE function with a statement number.

An example of a complicated program which makes use of several END, RESET, and CSMP CONTINUE statements follows.

## Main body of program

| 1st portion | (CONSTANT Q = $-13.5$ , R = 9.0, S = $11.0$           |
|-------------|---|
| of 1st run  | LABEL PRINTER-PLOT OF "X"                             |
|             | PRTPLT X  |
|             | TIMER FINTIM = 1.0, OUTDEL = $0.02$                   |
|             | CONTINUE  |
| 2nd portion | ( RESET PRTPLT  |
| of 1st run  | TIMER FINTIM = 1.1, DELT = $0.0005$ , PRDEL = $0.001$ |
|             | METHOD ADAMS  |
|             | CONSTANT $Q = -17.0, R = 8.0$                         |
|             | PRINT X, Y  |
|             | CONTINUE  |
| 3rd portion | (TIMER FINTIM = 2.4, PRDEL = $0.02$                   |
| of 1st run  | METHOD RKS  |
|             | PRTPLT Y  |
|             | LABEL $Y = DISTANCE$                                  |
|             | CONTINUE  |
| 4th portion | (RELERR $Z = 0.00002$                                 |
| of 1st run  | TIMER FINTIM = $3.8$                                  |
|             | FINISH $Y = 100.0$                                    |
|             | END   |
| 2nd, 3rd, & | ( RÈSET   |
| 4th runs    | <b>PARAMETER S</b> = $(12.0, 12.3, 12.7)$             |
|             | PRTPLT X,Y  |
|             | TIMER FINTIM = $2.0$                                  |
|             | FINISH $Y = 126.0$                                    |
|             | END   |
|             | STOP  |
|             | ENDJOB  |
|             |   |

The above example program makes two complete runs. In the first run, the CONTINUE card is used three times to make changes in parameters, output, and integration method. The following is a summary of the first run.

1 The first portion of the first run, which ends at FINTIM = 1.0, uses the following parameters and timer variables.

$$Q = -13.5$$
$$R = 9.0$$
$$S = 11.0$$
$$OUTDEL = 0.02$$

A printer-plot of the variable X is made with the following heading: PRIN-TER-PLOT OF "X". Since the integration method is not specified, the variable-step Runge-Kutta method is used.

2 The second portion of the first run terminates at FINTIM = 1.1. The following parameters and timer variables are changed to the values shown.

$$Q = -17.0$$
  
 $R = 8.0$   
DELT = 0.0005  
PRDEL = 0.001

Adams integration is used. The RESET PRTPLT card nullifies the previous PRTPLT and LABEL statements and the only output is given by the PRINT X,Y statement.

- 3 The third portion of the first run ends at FINTIM = 2.4. There are no changes in parameter values and the integration method is changed back to variable-step Runge-Kutta (RKS). The output includes the previous PRINT X,Y statement and the additional PRTPLT Y card with the following heading: Y = DISTANCE.
- 4 For the fourth and last portion of the first run, the run will terminate at a time of 3.8, or when the variable Y first reaches the value of 100.0. The relative error for the Z integrator is changed from the usual value of 0.0001 to 0.00002. All PRINT and PRTPLT outputs remain the same as in the third portion.

The first END card indicates the completion of the first run. All initial conditions are reset to the original values and the independent variable (TIME) is set to zero. The multiple run capability of a PARAMETER card is used to make three additional runs using the specified values of the parameter S. Note that because of the use of the multiple run PARAMETER card, a CONTINUE statement cannot be used in this portion of the program. The RESET card nullifies the previous PRTPLT, RELERR, LABEL, PRINT, and FINISH statements. Consequently, the only output will be printer-plots of the variables X and Y. The output interval will be the value of OUTDEL as specified in the first portion of the first run. The STOP and ENDJOB cards have been used without explanation in all programs. Their use is described as follows.

## STOP

The STOP card must follow the last END card to signify the completion of the last run. It is also used to separate any user-supplied FORTRAN subprogram from the CSMP program. All subprograms must follow the STOP card.

### **ENDJOB**

This card is used to signify the end of a job. In all previous programs, which have not included FORTRAN subroutines, the ENDJOB statement follows the STOP card. When FORTRAN subroutines are used, the ENDJOB must follow them. This is illustrated in the section in this chapter on subprograms. ENDJOB is one of five statements that must begin in card column 1. The other statements are: COMMON, COMMON MEN, ENDDATA, and ENDJOB STACK.

## ENDJOB STACK

This statement, when used in place of the ENDJOB card, allows another CSMP job to directly follow. However, most computer installations prohibit the practice of "stacking runs". It is recommended that the user check with the computer installation before using the ENDJOB STACK statement. The ENDJOB label must begin in card column 1 and STACK must begin in column 9. A blank card should follow the ENDJOB STACK card.

#### **Data Output**

The majority of CSMP output is ordinarily handled by the five output statements: PRINT, PRTPLT, RANGE, TITLE, and LABEL. The user, however, has a wide range of other methods for printing data. These include the use of FORTRAN output statements, a DEBUG subroutine that provides output of all variables, a PREPARE statement that is used to allow plotting of variables on offline X-Y plotters, and a DECK statement that returns a punched deck of the program. CSMP III provides additional output capabilities that are covered in Chap. 5. This section describes the use of the four types of output that are available in both S/360 CSMP and CSMP III.

## FORTRAN Output

The entire output capability of FORTRAN, with the exception of the PUNCH instruction, is available to the CSMP user. This includes the use of FORTRAN WRITE, PRINT, and FORMAT statements. Methods of using these output instructions are similar to those in FORTRAN. The primary restriction is that all FORTRAN output statements must be contained in nosort sections or in PRO-CEDURE functions. A summary of general rules follows later in this section. The reader should refer to specialized texts on FORTRAN, because of the generality and complexity of FORTRAN output statements.<sup>(2-5)</sup>

It is not obvious when it is desirable or necessary to use FORTRAN output capabilities. Some typical situations are listed as follows.

1 It may be necessary to print values from either the Initial or Terminal segments. These values would be printed only one time at the beginning or

end of the run. CSMP PRINT or PRTPLT statements cannot be used for this purpose. Consequently, the only choice is to use FORTRAN output statements.

- 2 Subscripted variables and integers cannot be used in PRINT and PRTPLT statements in S/360 CSMP. FORTRAN output statements can be used for these types of variables.
- 3 A maximum of fifty variables (including TIME) can be included in a S/360 CSMP PRINT statement. Essentially any number of variables can be incorporated in FORTRAN output statements.
- 4 The user has no control over output format when using PRINT and PRTPLT statements. Conversely, the format flexibility of FORTRAN offers considerable freedom in the style of output data.
- 5 CSMP PRINT and PRTPLT statements are executed at regular intervals as specified on the TIMER card. With the proper use of FORTRAN logical control and output statements, it is possible to have output at any point and at any interval during the run.
- 6 Since integration must be performed at each PRINT and PRTPLT interval, CSMP output statements usually affect the integration interval of variablestep methods. FORTRAN output instructions do not affect the integration step-size and as a result FORTRAN WRITE statements can be used to monitor each step in variable-step integration.

Statements in the Initial and Terminal segments are executed only once during a run. Consequently, FORTRAN output instructions can be utilized in these two segments with no special consideration other than being used in nosort sections or PROCEDURE functions. However, when FORTRAN output statements are used in the Dynamic segment, special care must be used. For example, depending upon the integration method, FORTRAN output instructions are executed up to four times for each integration step (see Table 3.3) and for each trial integration step if a variable step method is used. To provide FORTRAN output only at the end of valid integration steps, the following type of statement is recommended.

```
IF(KEEP. EQ. 1) WRITE(6,100) X,Y,Z
```

The above will print the values of X,Y, and Z using FORMAT number 100 at each valid integration step.

The following is a summary of some general rules for using FORTRAN output statements.

- 1 All FORTRAN output and FORMAT statements must be in nosort sections or PROCEDURE functions.
- 2 Continuation cards used with FORTRAN output and FORMAT statements *must* contain a \$ in card column 6.

3 FORTRAN output instructions in the Initial and Terminal segments are executed only one time. Statements in the Dynamic segment are printed up to four times for each integration step. It is recommended that the following use of the IF statement be employed to provide output only at the end of valid integration steps.

## IF(KEEP. EQ. 1) WRITE(6,100) X, Y, Z

4 The FORTRAN PRINT statement can be used in a CSMP program as part of a logical IF statement. For example, the following FORTRAN PRINT statement is valid.

#### IF(TIME. GT. 1.9) PRINT 100, X, Y, Z

The following PRINT instruction cannot be used.

## PRINT 100, X, Y, Z

It should be pointed out that the FORTRAN PRINT statement offers no advantages over the FORTRAN WRITE instruction. For this reason, it is recommended that the FORTRAN PRINT statement not be used.

- 5 FORTRAN FORMAT instructions can be located in any nosort section or procedure function of the program. The most logical location is in a nosort section of the Initial segment.
- 6 The FORTRAN PUNCH instruction cannot be used in a CSMP program. If punched output on data cards is desired, the user should employ a FOR-TRAN WRITE statement. In a FORTRAN program, the following statement provides punch output.

### WRITE(7,100) X, Y, Z

The above statement is not valid in a CSMP program. Unit number 7 is a work data set used by the CSMP system. The user should specify in JCL cards that another unit number be set in reserve for punched output. This unit number is then used in the WRITE instruction to provide punched output.

The following orbital mechanics problem is used to illustrate the use of FORTRAN output statements in all three segments.

### Example 3.8

This problem involves the two-dimensional motion of a space vehicle in an orbit that passes over both the North and South Poles. In the initial condition, the vehicle is in a circular orbit at an altitude of 300,000 m. At the start of the simulation, rockets on the space vehicle are ignited for 120 sec which provide a thrust in the tangential direction. At the end of the 120 sec rocket burn, the only force acting on the vehicle is gravity.

To eliminate the problem of programming the effect of variable vehicle mass, it is assumed that the thrust of the rockets provides a constant acceleration of  $4.905 \text{ m/sec}^2$  (0.5 g). A cylindrical coordinate system, as shown in Fig. 3.26, is ideally suited to describe the two-dimensional motion.

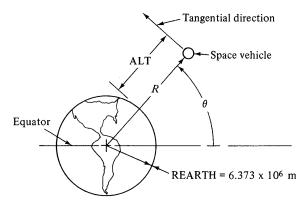


Fig. 3.26 Cylindrical coordinates of a space vehicle in a polar orbit.

The nonlinear equation set is

$$\ddot{r} = r\omega^2 - g \tag{3.13}$$

$$\dot{\omega} = \frac{(A - 2\dot{r}\omega)}{r} \tag{3.14}$$

$$\theta = \frac{180}{\pi} \int_0^t \omega \, dt \tag{3.15}$$

Program symbols

| where | r = radius from cente  | R   |   |  |  |  |  |
|-------|--|---|---|--|--|--|--|
|       | $oldsymbol{	heta}=$ angular position,  | heta= angular position, deg   |   |  |  |  |  |
|       | $\omega = angular velocity, n$   | OMEGA   |   |  |  |  |  |
|       | $g = 	ext{acceleration of grad} $<br>$3.983 	imes 10^{14}/	ext{r}^2, 	ext{ t}$ | cceleration of gravity,<br>.983 $	imes$ 10 <sup>14</sup> /r <sup>2</sup> , m/sec <sup>2</sup> |   |  |  |  |  |
|       | A = acceleration result  | ting from rocket thrust, m/sec <sup>2</sup>   | Α |  |  |  |  |
|       | <i>A</i> = 4.905   | TIME $\ge$ 120.0 sec  |   |  |  |  |  |
|       | A = 0  | TIME > 120.0 sec  |   |  |  |  |  |

The program, shown in Fig. 3.27, which simulates the motion of the space vehicle is divided into the three segments. In the Initial segment the initial radius RO and initial angular velocity OMEGAO are calculated. The angular velocity of a satellite in a circular orbit is given by Eq. (3.16).

$$OMEGAO = \sqrt{\frac{g}{r}} \quad (rad/sec) \tag{3.16}$$

Note that a FORTRAN WRITE statement is used with an appropriate FORMAT card to print the velocity in the circular orbit in mph. A WRITE instruction is also included in the Initial segment to provide a heading for output from the Dynamic segment.

In the Dynamic segment, a logical IF statement is used in the first nosort section to assign the proper value of A. A sort section is then used to calculate  $\ddot{r}$  (RDD) and  $\dot{\omega}$ 

```
LABEL
      PROGRAM TO CALCULATE THE ORBIT OF SATELLITE.
INITIAL
  CONSTANT REARTH = 6.373E6, C = 3.983E14, ALTO = 300000.0
  RO = REARTH + ALTO
  G = C/(RO*RO)
  OMEGAO = SQRT(G/RO)
  VEL = OMEGAO*RO
  MPH = VEL/0.44704
NOSORT
  100 FORMAT(1H1,26HINITIAL VELOCITY IN MPH = ,F10.0)
  101 FORMAT(4E28.6)
  102 FORMAT(2F25.2)
  103 FORMAT(1H1,12X,21HFINAL VELOCITY IN MPH,7X,23HFINAL ALTITUDE IN MI
     $1.FS)
  104 FORMAT(/,16X, 'ALTITUDE IN METERS', 10X, 'ANGLE IN DEGREES', 12X, 'VELO
     SCITY IN METERS/SEC*,6X, TIME IN SECONDS*)
  WRITE(6,100) MPH
  WRITE(6,104)
DYNAMIC
NOSORT
  A = 0.0
  IF(TIME.LE.120.0)
                     A = 4.905
SORT
  G = C/(R*R)
  RDD = R*OMEGA*OMEGA - G
  OMEGAD = (A - 2.0*RD*OMEGA)/R
  RD = INTGRL(0.0,RDD)
  R = INTGRL(RO, RD)
  OMEGA = INTGRL (OMEGAO, OMEGAD)
  ANGLE = (180.0/3.14159)*INTGRL(0.0,OMEGA)
NOSORT
  ALT = R - REARTH
  VEL = SQRT(RD*RD + (R*OMEGA)**2)
  IF(TIME.GT.120.0) GO TO 1
  IF(KEEP.EQ.1) WRITE(6,101) ALT, ANGLE, VEL, TIME
  1 CONTINUE
TERMINAL
  TIMER
        FINTIM = 9500.0, DUTDEL = 120.0
  ABSERR R = 1.0
  FINISH ANGLE = 360.0
  PRTPLT ALT (ANGLE, VEL, G)
  MPH = VEL/0.44704
  MILES = ALT/1609.344
  WRITE(6,103)
  WRITE(6,102) MPH, MILES
END
STOP
ENDJOB
```

Fig. 3.27 Program to simulate the motion of a space vehicle and to demonstrate the use of FORTRAN output statements.

(OMEGAD) and integrations are performed to calculate  $\dot{r}$  (RD), r,  $\omega$  (OMEGA), and  $\theta$  (THETA). The Dynamic section is changed back to a nosort section to allow the use of a FORTRAN WRITE statement. The WRITE statement is executed at each valid integration step during the first 120.0 sec of the simulation. This WRITE statement does not affect the step-size of the variable interval integration methods. Notice that the value of OUTDEL is equal to 120.0. This means an integration step must be performed at TIME = 120.0 sec which insures the program will simulate the total burn of the rockets. Also note that the allowable absolute error for the R integrator is increased to 1.0. The default absolute error of 0.0001 provides tighter control than necessary for very large output of the R integrator.

The output from the FORTRAN WRITE and FORMAT instructions is given in Fig. 3.28.

|   |   | output from initial segment  |  |
|---|---|--|--|
| INITIAL VELOCITY IN MPH = 172   | 282   |  |  |
| ALTITUDE IN METERS<br>0.300000E 06<br>0.300000F 06<br>0.300020E 06<br>0.300273E 06<br>0.30325F 06 | ANGLE IN DEGREES<br>0.0<br>0.498699E 00<br>0.150320E 01<br>0.354057E 01<br>0.826137E 01 | VELOCITY IN METERS/SEC<br>0.772577E 04<br>0.776255E 04<br>0.783610E 04<br>0.798296E 04<br>0.831070E 04 | TIME IN SECONDS<br>0.0<br>0.750000E 01<br>0.225000E 02<br>0.525000E 02<br>0.120000E 03 |
| ***SIMULATION HALTED*** ANGL  | E = 3.6595E 02  | Output from  | Dynamic Segment  |

FINAL VELOCITY IN MPH FINAL ALTITUDE IN MILES 18650.59 Output from Terminal Segment

Fig 3.28 Output from FORTRAN statements in Fig. 3.27.

Note that the first two lines of Fig. 3.28 were initiated in the Initial segment. The following five lines which describe the motion during the 120.0 sec rocket burn period were printed by the WRITE statement in the Dynamic segment. Since all integration steps are printed and the FORTRAN WRITE statement does not affect the integration step size of the variable-step Runge-Kutta method, the progress of the numerical integration can be monitored. Note that the first integration step is 7.5 sec which is  $\frac{1}{16}$  of the output interval. In the second step the integration interval is increased to 15.0 sec, and for the third step the interval is 30.0 secs. For the fourth and last integration step during the rocket burn, a step size of 67.5 sec is used. The final velocity and altitude which was printed from the Terminal segment is shown in the last two lines of Fig. 3.28.

The time-history of the altitude is shown by the PRTPLT output of Fig. 3.29.

Note that the FORTRAN output statements had absolutely no effect on the PRTPLT output. This is not the case if both FORTRAN WRITE and PRINT statements are used in the Dynamic segment of the same program. FORTRAN and PRINT output statements are printed in the order in which they are generated. Consequently, FORTRAN and PRINT outputs are mixed together and can be confusing to read. Consider the example of using the following PRINT statement used with a PRDEL of 15.0 in the program of Fig. 3.27.

### PRINT ALT, ANGLE, VEL, G

The portion of the mixed output is shown in Fig. 3.30.

## **DEBUG Subroutine**

It is often useful when developing or checking out new programs to know the values of all variables. The DEBUG subroutine can be used for this purpose. It will print the current values of all nonsubscripted variables at each successive integration step. Any diagnostic messages that may appear are printed at the point where they occur. The subroutine is called by the following statement.

CALL DEBUG(N, T)

| PROGRAM | тο | CALCULATE | THE | ORBIT | OF | SATELLITE. |
|---------|----|-----------|-----|-------|----|------------|
|         |    |           |     |       |    |            |

PAGE 1

| $\begin{array}{c c c c c c c c c c c c c c c c c c c $  |            |         |           | NIMUM           | ALT | VERSUS | TIME | MAXIMUM |         |    |            |             |
|---|------------|---------|-----------|-----------------|-----|--------|------|---------|---------|----|------------|-------------|
| 0.0       3.00000 05       +       0.0       7.72366 03       8.447E 00       8.42146 00       8.1337E 03       8.4810E 00         2.40000 02       3.23387 05       +       1.60325 01       8.1337E 03       8.4810E 00         2.40000 02       3.23387 05       +       3.66326 01       8.2371E 03       8.4810E 00         0.0000 02       5.03665 05      +       3.6632E 01       8.2371E 00       8.4271E 00         0.0000 02       5.09735 05      +       4.9848 01       8.0272E 00       8.1408 00       0.82716 00         0.4000 02       7.0318E 05      +       5.7500 01       7.7182E 03       7.49495 00       0.81276 00         1.2000 03       1.2051 05      +       8.1118 01       7.49495 00       0.74995 00       7.7182E 03       7.49495 00       7.7182E 00  |            |         | 3.0       |                 |     |        |      |         |         |    |            |             |
| 12000 02       3.0338 05       +       8.26146 00       8.3107 03       8.3577 00         3.4000 02       3.4294 00       -+       2.5306 01       8.4095 03       8.7736 00         3.6000 02       3.4294 00      +       3.5640 01       8.4095 03       8.7736 00         3.6000 02       5.7735 05      +       3.5640 01       8.4295 03       8.7736 00         7.2000 02       5.7775 05      +       5.7550 01       7.4934 01       8.6272 03       8.16495 03         7.2000 02       6.2508 05      +       5.7550 01       7.4934 00       7.4936 03       7.4936 03         9.6000 02       6.2508 05      +       7.2306 01       7.4936 03       7.49495 03       7.49495 03         1.4000 03       1.35027 06      +       7.2306 01       7.4352 03       6.4991 03         1.4000 03       1.36027 03       1.5007 03       1.5007 03       1.5007 03       1.5007 03       1.5007 03       1.5007 03       1.5007 03       1.5007 03       1.5007 03       1.5007 03       1.5007 03       1.5007 03       1.6107 03       6.4138 00         1.40000 03       1.6778 04        1.20494 02       6.4138 00       6.4138 00         1.40000 03   |            |         |           |                 |     |        |      | I       |         |    |            |             |
| 2.44000 02 3.2387E 05 +<br>4.8000 02 4.25.26 05<br>4.8000 02 4.25.26 05<br>5.0000 02 7.0538F 05<br>5.0200 03 9.5208F 05<br>5.0200 03 9.5208F 05<br>5.0200 03 9.5208F 05<br>5.0200 03 7.5208F 05<br>5.0200 03 7.5208F 05<br>5.0200 03 1.2208F 05<br>5.0200 03 1.2208F 05<br>5.0200 03 1.2208F 05<br>5.0200 03 1.2208F 05   |            |         |           |                 |     |        |      |         |         | 00 |            |             |
| 3. +0000       02       3. +0495       05      +       3. 36045       01       5. +736E       03       6. +775E       03       7. +475E       03       7.+475E <td< td=""><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></td<>                      |            |         |           |                 |     |        |      |         |         |    |            |             |
| 3. 1200E 03 2. 8419E 06   |            |         | 05        | +               |     |        |      |         |         |    |            |             |
| 3. 1200E 03 2. 8810E 06   |            |         | 05        |                 |     |        |      |         |         |    |            |             |
| 3. 1200E 03 2. 8810E 06   |            |         | 05        |                 |     |        |      |         |         |    |            |             |
| 3. 1200E 03 2. 8419E 06   |            |         | 05        |                 |     |        |      |         |         |    |            |             |
| 3. 1200E 03 2. 8810E 06   |            |         | 05        |                 |     |        |      |         |         |    |            |             |
| 3. 1200E 03 2. 8810E 06   |            |         | 05        |                 |     |        |      |         |         |    |            |             |
| 3. 1200E 03 2. 8810E 06   |            |         | 05        | +               |     |        |      |         |         |    |            |             |
| 3. 1200E 03 2. 8810E 06   |            |         | 06        | +               |     |        |      |         |         |    |            |             |
| 3. 1200E 03 2. 8810E 06   |            |         | 06        |                 | -+  |        |      |         |         |    |            |             |
| 3. 1200E 03 2. 8419E 06   |            |         | 06        |                 | +   |        |      |         | 9.2620E | 01 |            |             |
| 3. 1200E 03 2. 8810E 06   |            |         | <b>U6</b> |                 | +   |        |      |         |         |    |            |             |
| 3. 1200E 03 2. 8810E 06   |            | 1.6479E | 06        |                 |     | +      |      |         | 1.0494E | 02 |            | 6.1910E 00  |
| 3. 1200E 03 2. 8810E 06   | 1.8000E 03 | 1.7854E | 06        |                 |     | +      |      |         | 1.1079E | 02 | 6.9137E 03 | 5.9840E 00  |
| 3. 1200E 03 2. 8810E 06   | 1.9200E 03 | 1.9189E | 06        |                 |     |        | •    |         | 1.1645E | 02 | 6.7991E 03 | 5.7929E 00  |
| 3. 1200E 03 2. 8810E 06   | 2.0400E 03 | 2.0472E | 06        |                 |     |        | +    |         | 1.2193E | 02 | 6.6906E 03 | 5.6177E 00  |
| 3. 1200E 03 2. 8810E 06   | 2.1600E 03 | 2.1693E | 06        |                 |     |        | +    |         |         |    |            | 5.4583E 00  |
| 3. 1200E 03 2. 8810E 06   | 2.2800E 03 | 2•2843E | 06        |                 |     |        | +    |         | 1.3242E | 02 | 6.4941E 03 | 5.3142E 00  |
| 3. 1200E 03 2. 8810E 06   |            |         | 06        |                 |     |        | +    |         |         |    |            |             |
| 3. 1200E 03 2. 8810E 06   |            |         | 06        |                 |     |        | +    |         |         |    |            |             |
| 3. 1200E 03 2. 8810E 06   |            |         | 06        |                 |     |        |      | -+      |         |    |            |             |
| 3. 1200E 03 2. 8810E 06   |            |         | 06        |                 |     |        |      | +       |         |    |            |             |
| 3. 1200E 03 2. 8810E 06   |            |         | 06        |                 |     |        |      | +       |         |    |            |             |
| 3.2 200E 03       2.8816E 06  |            |         | 06        | *************** |     |        |      | +       |         |    |            |             |
| 3. 36000 0 3       2.91055 0 6  |            |         |           |                 |     |        |      | +       |         |    |            |             |
| 3. 4000E       03       2. 9285E       06   |            |         |           |                 |     |        |      |         |         |    |            |             |
| 3. 60000 0 3 2. 9398 0 6  |            |         |           |                 |     |        |      |         |         |    |            |             |
| 3. 7200E       03       2. 9320E       06   |            |         |           |                 |     |        |      |         |         |    |            |             |
| 3. 84000       03       2.0174E       06  |            |         |           |                 |     |        |      |         |         |    |            |             |
| 3.9600E       03       2.8920E       06   |            |         |           |                 |     |        |      |         |         |    |            |             |
| 4.0800E 03       2.8558E 06   |            |         |           |                 |     |        |      |         |         |    |            |             |
| 4:2000E       03       2:8090E       06   |            |         |           |                 |     |        |      |         |         |    |            |             |
| 4.3200E 03       2.7518E 06   |            |         |           |                 |     |        |      | +       |         |    |            |             |
| 4.400E 03       2.6844E 06  |            |         |           |                 |     |        |      | +       |         |    |            |             |
| 4.5600E 03       2.6070E 06   |            |         |           |                 |     |        |      |         |         |    |            |             |
| 5.5200E 03       1.6923E 06      +       2.6134E 02       6.9947E 03       6.1230E 00         5.6400E 03       1.528E 0.6      +       2.6152E 02       7.1179E 03       6.3405E 00         5.7600E 03       1.4115E 06      +       2.7372E 02       7.2449E 03       6.5727E 00         5.8800E 03       1.2701E 06      +       2.8015E 02       7.3744E 03       6.8182E 00         6.0000E 03       1.1304E 06      +       2.8015E 02       7.5048E 03       7.0744E 00         6.1200E 03       9.9439E 05      +       2.9374E 02       7.604E 03       7.0744E 00         6.2200E 03       8.6422E 05      +       3.0035E 02       7.604E 03       7.604E 00         6.3600E 03       7.4218E 05      +       3.0835E 02       7.9336E 03       8.1201E 00         6.4600E 03       6.3193E 05      +       3.2037E 02       8.1815E 03       8.3539E 00         6.4800E 03       6.3193E 05      +       3.2037E 02       8.1815E 03       8.3539E 00         6.4800E 03       3.9196 05       -++       3.4038E 02       8.2513E 03       8.7289E 00         6.8400E 03       3.9196 05       -++       3.4038E 02       8.3017E 03       8.7289E 00 <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td>-+</td> <td></td> <td></td> <td></td> <td></td>  |            |         |           |                 |     |        |      | -+      |         |    |            |             |
| 5.5200E 03       1.6923E 06      +       2.6134E 02       6.9947E 03       6.1230E 00         5.6400E 03       1.528E 0.6      +       2.6152E 02       7.1179E 03       6.3405E 00         5.7600E 03       1.4115E 06      +       2.7372E 02       7.2449E 03       6.5727E 00         5.8800E 03       1.2701E 06      +       2.8015E 02       7.3744E 03       6.8182E 00         6.0000E 03       1.1304E 06      +       2.8015E 02       7.5048E 03       7.0744E 00         6.1200E 03       9.9439E 05      +       2.9374E 02       7.604E 03       7.0744E 00         6.2200E 03       8.6422E 05      +       3.0035E 02       7.604E 03       7.604E 00         6.3600E 03       7.4218E 05      +       3.0835E 02       7.9336E 03       8.1201E 00         6.4600E 03       6.3193E 05      +       3.2037E 02       8.1815E 03       8.3539E 00         6.4800E 03       6.3193E 05      +       3.2037E 02       8.1815E 03       8.3539E 00         6.4800E 03       3.9196 05       -++       3.4038E 02       8.2513E 03       8.7289E 00         6.8400E 03       3.9196 05       -++       3.4038E 02       8.3017E 03       8.7289E 00 <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td>+</td> <td></td> <td></td> <td></td> <td></td>   |            |         |           |                 |     |        |      | +       |         |    |            |             |
| 5.5200E 03       1.6923E 06   | 4.8000E 03 | 2.4242E | 06        |                 |     |        | +    |         | 2.2933E | 02 | 6.3804E 03 | 5.1466E 00  |
| 5.5200E 03       1.6923E 06      +       2.6134E 02       6.9947E 03       6.1230E 00         5.6400E 03       1.528E 0.6      +       2.6152E 02       7.1179E 03       6.3405E 00         5.7600E 03       1.4115E 06      +       2.7372E 02       7.2449E 03       6.5727E 00         5.8800E 03       1.2701E 06      +       2.8015E 02       7.3744E 03       6.8182E 00         6.0000E 03       1.1304E 06      +       2.8015E 02       7.5048E 03       7.0744E 00         6.1200E 03       9.9439E 05      +       2.9374E 02       7.604E 03       7.0744E 00         6.2200E 03       8.6422E 05      +       3.0035E 02       7.604E 03       7.604E 00         6.3600E 03       7.4218E 05      +       3.0835E 02       7.9336E 03       8.1201E 00         6.4600E 03       6.3193E 05      +       3.2037E 02       8.1815E 03       8.3539E 00         6.4800E 03       6.3193E 05      +       3.2037E 02       8.1815E 03       8.3539E 00         6.4800E 03       3.9196 05       -++       3.4038E 02       8.2513E 03       8.7289E 00         6.8400E 03       3.9196 05       -++       3.4038E 02       8.3017E 03       8.7289E 00 <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td>+</td> <td></td> <td></td> <td></td> <td></td> <td></td>   |            |         |           |                 |     |        | +    |         |         |    |            |             |
| 5.5200E 03       1.6923E 06      +       2.6134E 02       6.9947E 03       6.1230E 00         5.6400E 03       1.528E 0.6      +       2.6152E 02       7.1179E 03       6.3405E 00         5.7600E 03       1.4115E 06      +       2.7372E 02       7.2449E 03       6.5727E 00         5.8800E 03       1.2701E 06      +       2.8015E 02       7.3744E 03       6.8182E 00         6.0000E 03       1.1304E 06      +       2.8015E 02       7.5048E 03       7.0744E 00         6.1200E 03       9.9439E 05      +       2.9374E 02       7.604E 03       7.0744E 00         6.2200E 03       8.6422E 05      +       3.0035E 02       7.604E 03       7.604E 00         6.3600E 03       7.4218E 05      +       3.0835E 02       7.9336E 03       8.1201E 00         6.4600E 03       6.3193E 05      +       3.2037E 02       8.1815E 03       8.3539E 00         6.4800E 03       6.3193E 05      +       3.2037E 02       8.1815E 03       8.3539E 00         6.4800E 03       3.9196 05       -++       3.4038E 02       8.2513E 03       8.7289E 00         6.8400E 03       3.9196 05       -++       3.4038E 02       8.3017E 03       8.7289E 00 <td>5.0400E 03</td> <td>2.2070E</td> <td>06</td> <td></td> <td></td> <td></td> <td>+</td> <td></td> <td>2.3946E</td> <td>02</td> <td>6.5576E 03</td> <td>5.4105E 00</td> | 5.0400E 03 | 2.2070E | 06        |                 |     |        | +    |         | 2.3946E | 02 | 6.5576E 03 | 5.4105E 00  |
| 5.5200E 03       1.6923E 06      +       2.6134E 02       6.9947E 03       6.1230E 00         5.6400E 03       1.528E 0.6      +       2.6152E 02       7.1179E 03       6.3405E 00         5.7600E 03       1.4115E 06      +       2.7372E 02       7.2449E 03       6.5727E 00         5.8800E 03       1.2701E 06      +       2.8015E 02       7.3744E 03       6.8182E 00         6.0000E 03       1.1304E 06      +       2.8015E 02       7.5048E 03       7.0744E 00         6.1200E 03       9.9439E 05      +       2.9374E 02       7.604E 03       7.0744E 00         6.2200E 03       8.6422E 05      +       3.0035E 02       7.604E 03       7.604E 00         6.3600E 03       7.4218E 05      +       3.0835E 02       7.9336E 03       8.1201E 00         6.4600E 03       6.3193E 05      +       3.2037E 02       8.1815E 03       8.3539E 00         6.4800E 03       6.3193E 05      +       3.2037E 02       8.1815E 03       8.3539E 00         6.4800E 03       3.9196 05       -++       3.4038E 02       8.2513E 03       8.7289E 00         6.8400E 03       3.9196 05       -++       3.4038E 02       8.3017E 03       8.7289E 00 <td>5.1600E 03</td> <td>2.0870E</td> <td>06</td> <td></td> <td></td> <td></td> <td>+</td> <td></td> <td>2.4473E</td> <td>02</td> <td>6.6571E 03</td> <td>5.5649E 00</td> | 5.1600E 03 | 2.0870E | 06        |                 |     |        | +    |         | 2.4473E | 02 | 6.6571E 03 | 5.5649E 00  |
| 5.5200E 03       1.6923E 06      +       2.6134E 02       6.9947E 03       6.1230E 00         5.6400E 03       1.528E 0.6      +       2.6152E 02       7.1179E 03       6.3405E 00         5.7600E 03       1.4115E 06      +       2.7372E 02       7.2449E 03       6.5727E 00         5.8800E 03       1.2701E 06      +       2.8015E 02       7.3744E 03       6.8182E 00         6.0000E 03       1.1304E 06      +       2.8015E 02       7.5048E 03       7.0744E 00         6.1200E 03       9.9439E 05      +       2.9374E 02       7.604E 03       7.0744E 00         6.2200E 03       8.6422E 05      +       3.0035E 02       7.604E 03       7.604E 00         6.3600E 03       7.4218E 05      +       3.0835E 02       7.9336E 03       8.1201E 00         6.4600E 03       6.3193E 05      +       3.2037E 02       8.1815E 03       8.3539E 00         6.4800E 03       6.3193E 05      +       3.2037E 02       8.1815E 03       8.3539E 00         6.4800E 03       3.9196 05       -++       3.4038E 02       8.2513E 03       8.7289E 00         6.8400E 03       3.9196 05       -++       3.4038E 02       8.3017E 03       8.7289E 00 <td></td> <td>1.9606E</td> <td>06</td> <td></td> <td></td> <td></td> <td>-+</td> <td></td> <td>2.5016E</td> <td>02</td> <td>6.7636E 03</td> <td>5.7350E 00</td>          |            | 1.9606E | 06        |                 |     |        | -+   |         | 2.5016E | 02 | 6.7636E 03 | 5.7350E 00  |
| 5.5200E 03       1.6923E 06   | 5.4000E 03 | 1.8287E | 06        |                 |     | +      |      |         | 2•5575E | 02 | 6.8763E 03 | 5.9211E 00  |
| 6.7200E 03 4.4835E 05+ 3.3207E 02 8.1815E 03 8.5598E 00<br>6.8400E 03 3.8195E 05 -+ 3.4038E 02 8.2513E 03 8.7289E 00<br>6.9400E 03 3.3449E 05 + 3.4885E 02 8.3017E 03 8.8529E 00  |            |         |           |                 |     | +      |      |         |         |    |            |             |
| 6.7200E 03 4.4835E 05+ 3.3207E 02 8.1815E 03 8.5598E 00<br>6.8400E 03 3.8195E 05 -+ 3.4038E 02 8.2513E 03 8.7289E 00<br>6.9400E 03 3.3449E 05 + 3.4885E 02 8.3017E 03 8.8529E 00  |            |         |           |                 |     | •      |      |         |         |    |            |             |
| 6.7200E 03 4.4835E 05+ 3.3207E 02 8.1815E 03 8.5598E 00<br>6.8400E 03 3.8195E 05 -+ 3.4038E 02 8.2513E 03 8.7289E 00<br>6.9400E 03 3.3449E 05 + 3.4885E 02 8.3017E 03 8.8529E 00  |            |         |           |                 | +   |        |      |         |         |    |            |             |
| 6.7200E 03 4.4835E 05+ 3.3207E 02 8.1815E 03 8.5598E 00<br>6.8400E 03 3.8195E 05 -+ 3.4038E 02 8.2513E 03 8.7289E 00<br>6.9400E 03 3.3449E 05 + 3.4885E 02 8.3017E 03 8.8529E 00  |            |         |           |                 | +   |        |      |         |         |    |            |             |
| 6.7200E 03 4.4835E 05+ 3.3207E 02 8.1815E 03 8.5598E 00<br>6.8400E 03 3.8195E 05 -+ 3.4038E 02 8.2513E 03 8.7289E 00<br>6.9400E 03 3.3449E 05 + 3.4885E 02 8.3017E 03 8.8529E 00  |            |         |           | +               |     |        |      |         |         |    |            |             |
| 6.7200E 03 4.4835E 05+ 3.3207E 02 8.1815E 03 8.5598E 00<br>6.8400E 03 3.8195E 05 -+ 3.4038E 02 8.2513E 03 8.7289E 00<br>6.9400E 03 3.3449E 05 + 3.4885E 02 8.3017E 03 8.8529E 00  |            |         |           |                 |     |        |      |         |         |    |            |             |
| 6.7200E 03 4.4835E 05+ 3.3207E 02 8.1815E 03 8.5598E 00<br>6.8400E 03 3.8195E 05 -+ 3.4038E 02 8.2513E 03 8.7289E 00<br>6.9400E 03 3.3449E 05 + 3.4885E 02 8.3017E 03 8.8529E 00  |            |         |           |                 |     |        |      |         |         |    |            |             |
| 6.7200E 03 4.4835E 05+ 3.3207E 02 8.1815E 03 8.5598E 00<br>6.8400E 03 3.8195E 05 -+ 3.4038E 02 8.2513E 03 8.7289E 00<br>6.9400E 03 3.3449E 05 + 3.4885E 02 8.3017E 03 8.8529E 00  |            |         |           |                 |     |        |      |         |         |    |            |             |
| 6.7200E 03 4.4835E 05+ 3.3207E 02 8.1815E 03 8.5598E 00<br>6.8400E 03 3.8195E 05 -+ 3.4038E 02 8.2513E 03 8.7289E 00<br>6.9400E 03 3.3449E 05 + 3.4885E 02 8.3017E 03 8.8529E 00  |            |         |           |                 |     |        |      |         |         |    |            |             |
| 6.8400E         03         3.8196E         05         -+         3.4038E         02         8.2513E         03         8.7289E         00           6.9600E         03         3.3449E         05         +         3.4883E         02         8.3017E         03         8.8529E         00  |            |         |           |                 |     |        |      |         |         |    |            |             |
| 6.9600E 03 3.3449E 05 + 3.4883E 02 8.3017E 03 8.8529E 00  |            |         |           |                 |     |        |      |         |         |    |            |             |
|   |            |         |           |                 |     |        |      |         |         |    |            |             |
|   |            |         |           |                 |     |        |      |         |         |    |            |             |
| 7.2000E 03 3.0099E 05 + 3.6595E 02 8.3376E 03 8.9420E 00  |            |         |           |                 |     |        |      |         |         |    |            |             |
|   |            |         |           |                 |     |        |      |         |         |    |            | 0. FALOL 00 |

Fig. 3.29 PRTPLT output for the program of Fig. 3.27.

N is equal to the number of outputs. An output, which includes a listing of the values of all variables, is printed for all trial and intermediate integration steps as well as for valid steps. N must be an integer constant. The output will begin at TIME = T or at the first integration step after TIME = T.

The DEBUG subroutine can only be called from nosort sections or PRO-CEDURE functions. It is recommended that DEBUG be called at the end of the Dynamic section. This insures that all computations of the dynamic simulation are completed before DEBUG is called. DEBUG may not be called from the Ter-

| TIME<br>0.0 | E      | ALT<br>3.0000E 05 | ANGLE      | VEL G<br>7.7258E 03 8.9447E | 00             |                               |           |
|-------------|--------|-------------------|------------|-----------------------------|----------------|-------------------------------|-----------|
|             |        | 0.300000E         | 06         | 0.622078E-01                | 0.773036E      | 04 0.93                       | 7500E 00  |
|             |        | 0.30000E          | 06         | 0.186734E 00                | 0.773956E      | 04 0.28                       | 1250E 01  |
|             |        | 0.300000E         | 06         | 0.436232E 00                | 0.775795E      | 04 0.65                       | 6250E 01  |
|             |        | 0.300005E         | 06         | 0.999766E 00                | 0.7799326      | 04 0.15                       | 0000E 02  |
| 1.500       | 0E 01  | 3.0001E 05        | 9.9977E-01 | 7.7993E 03 8.9446E          | 00             |                               |           |
|             |        | 0.300049E         | 06         | 0.200900E 01                | 0.787284E      | 04 0.30                       | 0000E 02  |
| 3.000       | 0E 01  | 3.00058 05        | 2.0090E 00 | 7.8728E 03 8.9445E          | 00             |                               |           |
|             |        | 0.300171E         | 06         | 0.302769E 01                | 0.794628E      | 04 0.45                       | 0000E 02  |
| 4.500       | 00E 01 | 3.0017E 05        | 3.0277E 00 | 7.9463E 03 8.9442E          | 00             |                               |           |
|             |        | 0.300409E         | 06         | 0.405579E 01                | 0.801958E      | 04 0.60                       | 0000E 02  |
| 6.000       | 0E 01  | 3.0041E 05        | 4.0558E 00 | 8.0196E 03 8.9436E          | 00             |                               |           |
|             |        | • 0.300803E       | 06         | 0.509327E 01                | 0.809271E      | 04 0.75                       | 0000E 02  |
| 7.500       | 0E 01  | 3.0080E 05        | 5.0933E 00 | 8.0927E 03 8.9425E          | 00             |                               |           |
|             |        | 0.301393E         | 06         | 0.614008E 01                | 0.816564E      | 04 0.90                       | 0000E 02  |
| 9.000       | 0E 01  | 3.0139E 05        | 6.1401E 00 | 8.1656E 03 8.9409E          | 00             |                               |           |
|             |        | 0.302219E         | 06         | 0.719613E 01                | 0.823830E      | 04 0.10                       | 5000E 03  |
| 1.050       | OE 02  | 3.0222E 05        | 7.1961E 00 | 8.2383E 03 8.9387E          | 00             |                               |           |
|             |        | 0.303321E         | 06         | 0.826135E 01                | 0.831068E      | 04 0.12                       | 0000E 03  |
| 1.200       | OE 02  | 3.0332E 05        | 8.2614E 00 | 8.3107E 03 8.9358E          | 00             | N,                            |           |
| 1.350       | OE 02  | 3.0474E 05        | 9.3317E 00 | 8.3153E 03 8.9320E          | 00             | <b>\</b>                      |           |
| 1.500       | 0E 02  | 3.0647E 05        | 1.0402E 01 | 8.3134E 03 8.9273E          | 00             | \<br>\                        |           |
| 1.650       | 0E 02  | 3.0852E 05        | 1.1471E 01 | 8.3112E 03 8.9218E          |                | <b>Output from FORTRAN St</b> | tatements |
| 1.800       | OE 02  | 3.1089E 05        | 1.2539E 01 | 8.3087E 03 8.9155E          | 00_            | - ··· <b>·</b>                |           |
| 1.950       | OE 02  | 3.1358E 05        | 1.3607E 01 | 8.3058E 03 8.9084E          | 00             |                               |           |
| 2.100       | 0E 02  | 3.1658E 05        | 1.4674E 01 | 8.3026E 03 8.9004E          | 00             |                               |           |
| 2.250       | OE 02  | 3.1990E 05        | 1.5740E 01 | 8.2990E 03 8.8915E          | 00 Output from | m PRINT Statement             |           |
| 2.400       | OE 02  | 3.2353E 05        | 1.6804E 01 | 8.2951E 03 8.8819E          | 00             |                               |           |
| 2.550       | OE 02  | 3.2747E 05        | 1.7868E 01 | 8.2909E 03 8.8715E          | 00             |                               |           |
| 2.700       | 0E 02  | 3.3172E 05        | 1.8930E 01 | 8.2863E 03 8.8602E          | 00             |                               |           |
| 2.850       | 0E 02  | 3.3628E 05        | 1.9991E 01 | 8.2814E 03 8.8482E          | 00             |                               |           |
|             |        |                   |            |                             |                |                               |           |

RKS

INTEGRATION

Fig. 3.30 Example of mixed FORTRAN and CSMP output.

C SMP

minal segment since this segment is not executed until the end of the run. Logical control instructions can be used with DEBUG but they should not be used to "branch around" the CALL DEBUG statement at TIME = 0. The DEBUG subroutine can be used several times in one program.

Figure 3.31 shows a DEBUG statement added to the program of Example 3.8, which simulated the motion of a space vehicle. To simplify the program, all FORTRAN output statements are removed.

```
LABEL PROGRAM TO CALCULATE THE ORBIT OF SATELLITE USING CALL DEBUG
INITIAL
  CONSTANT REARTH = 6.373E6, C = 3.983E14, ALTO = 300000.0
  RO = REARTH + ALTO
  G = C/(RO*RO)
 OMEGAO = SQRT(G/RO)
DYNAMIC
NOSORT
  A = 0.0
  IF(TIME.LE.120.0) A = 4.905
SORT
  G = C/(R*R)
  RDD = R*OMEGA*OMEGA - G
  OMEGAD = (A - 2.0*RD*DMEGA)/R
  RD = INTGRL(0.0.RDD)
  R = INTGRL(RO,RD)
 OMEGA = INTGRL(OMEGAD, OMEGAD)
  ANGLE = (180.0/3.14159) * INTGRL(0.0, OMEGA)
NOSORT
  ALT = R - REARTH
  VEL = SQRT(RD*RD + (R*OMEGA)**2)
     THE FOLLOWING DEBUG STATEMENT WILL PRINT THE VALUE OF ALL VARIABLES USED
★ IN THE PROGRAM FOR 4 ITERATIONS. THE DUTPUT WILL START AT TIME = 1600,
  OR ON THE FIRST INTEGRATION STEP AFTER TIME = 1600.
  CALL DEBUG(4,1600.0)
TERMINAL
 TIMER FINTIM = 9500.0; DUTDEL = 120.0
ABSERR R = 1.0
  FINISH ANGLE = 360.0
 PRTPLT ALT (ANGLE, VEL, G)
END
STOP
ENDJOB
```

Fig. 3.31 Program to illustrate the use of CALL DEBUG.

The DEBUG output is shown in Fig. 3.32. Note that the first output occurred at TIME = 1620.0 which is the first integration step after TIME = 1600.0. Since KEEP was equal to 0 in all four DEBUG printings, none of the outputs represent a valid integration step. The six-digit symbols beginning with ZZ are generated by the CSMP program.

## PREPARE

If the user's computer installation has offline plotting facilities, data generated by CSMP programs can be plotted on offline X-Y plotters. The PREPARE statement allows the user to specify up to forty-nine variables for offline plotting pur-

RKS

INTEGRATION

| Came |              |          |            |                     | 1.1.0      |            |                      |
|------|--------------|----------|------------|---------------------|------------|------------|----------------------|
|      | DEBUG OUTPUT | KEEP= 0  |            |                     |            |            |                      |
| TIME | = 1.6200E 03 | DELT =   | 1.2000E 02 | DELMIN= 9.5000E-04  | FINTIM=    | 9.4800E 03 | PRDEL = 0.0          |
|      |              | OUTDEL = | 1.2000E 02 | RD = 1.1693E 03     | R =        | 7.9510E 06 | OMEGA = 8.8021E-04   |
|      |              | ZZ0005=  | 1.7793E 00 | RDD = -1.4011E-01   | Z Z 0008 = | 1.1727E 03 | OMEGAD= -2.5890E-07  |
|      |              | ZZ0009=  | 8.8810E-04 | ZZ0002= 0.0         | R0 =       | 6.6730E 06 | OMEGA0= 1.1578E-03   |
|      |              | ZZ0006=  | 0.0        | REARTH= 6.3730E 06  | C =        | 3.9829E 14 | ALTO = 3.0000E 05    |
|      |              | G =      | 6.3003E 00 | A = 0.0             | ANGLE =    | 1.0195E 02 | ALT = 1.5780E 06     |
|      |              | VEL =    | 7.0955E 03 | 220007= 0.0         |            |            |                      |
|      | DEBUG DUTPUT | KEEP= 0  |            |                     |            |            |                      |
| TIME | = 1.6200E 03 |          | 1.2000E 02 | DELMIN= 9.5000E-04  | FINTIM=    | 9.4800E 03 | PRDEL = 0.0          |
|      |              |          | 1.2000E 02 | RD = 1.1693E 03     |            | 7.9510E 06 | DMEGA = 8.8020E-04   |
|      |              |          | 1.7793E 00 | RDD = -1.4012E-01   |            | 1.1693E 03 | OMEGAD = -2.5889E-07 |
|      |              |          | 8.8021E-04 | ZZ0002= 0.0         | R0 =       | 6.6730E 06 | OMEGA0= 1.1578E-03   |
|      |              | ZZ0006=  | 0.0        | REARTH= 6.3730E 06  | C =        | 3.9829E 14 | ALTO = 3.0000E 05    |
|      |              |          | 6.3002E 00 | A = 0.0             |            | 1.0195E 02 | ALT = 1.5780E06      |
|      |              | VEL =    | 7.0955E 03 | ZZ0007= 0.0         |            |            |                      |
|      |              |          |            |                     |            |            |                      |
| TIME |              | KEEP= 0  | 1.2000E 02 | DELMIN= 9.5000E-04  | CINTIN-    | 9.4800E 03 | PRDEL = 0.0          |
| LINC | = 1.6500E 03 |          | 1.2000E 02 | RD = 1.1651E 03     |            | 7.9861E 06 | OMEGA = 8.7244E-04   |
|      |              |          | 1.8057E 00 | RD = -1.6642E-01    |            | 1.1693E 03 | OMEGAD= -2.5456E-07  |
|      |              |          | 8.8020E-04 | ZZ0002 = 0.0        |            | 6.6730E 06 | OMEGAD= -2.5458E-07  |
|      |              | ZZ0009=  | 0.0        | REARTH= 6.3730E 06  |            | 3.9829E 14 | ALTO = 3.0000E05     |
|      |              |          | 6.2450E 00 | A = 0.0             |            | 1.0346E 02 | ALT = 1.6131E 06     |
|      |              |          | 7.0641E 03 | ZZ0007= 0.0         | ANGLE -    | 1.03402 02 | ACT - 1.01512 00     |
|      |              | VEL =    | 1.00415 05 |                     |            |            |                      |
|      |              | KEEP= 0  |            |                     |            |            |                      |
| TIME | = 1.6500E 03 |          | 1.2000E 02 | DELMIN= 9.5000E-04  |            | 9.4800E 03 | PRDEL = 0.0          |
|      |              |          | 1.2000E 02 | RD = 1.1643E 03     |            | 7.9860E 06 | OMEGA = 8.7257E-04   |
|      |              |          | 1.8055E 00 | RDD = -1.6491E-01   |            | 1.1651E 03 | OMEGAD= -2.5443E-07  |
|      |              |          | 8.7244E-04 | ZZ0002= 0.0         |            | 6.6730E 06 | OMEGA0= 1.1578E-03   |
|      |              | ZZ0006=  | 0.0        | REAR TH= 6.3730E 06 |            | 3.9829E 14 | ALTO = 3.0000E 05    |
|      |              | G =      | 6.2452E 00 | A = 0.0             | ANGLE =    | 1.0344E 02 | ALT = 1.6130E 06     |
|      |              | VEL =    | 7.0649E 03 | 220007= 0.0         |            |            |                      |
|      |              |          |            |                     |            |            |                      |

\*\*\*SIMULATION HALTED\*\*\* ANGLE = 3.6595E 02

Fig. 3.32 DEBUG output form program of Fig. 3.31.

poses. Its use for preparing the variables X, Y, and Z for plotting is illustrated below.

## PREPARE X, Y, Z

Using the PREPARE card is similar to using the PRINT statement; the similarities are listed below.

- 1 The CSMP continuation device (...) may be used for continuation of the PREPARE statement to additional cards.
- 2 Only one PREPARE statement should be used.
- 3 The independent variable TIME is automatically included.
- 4 The heading contained in TITLE statements is specified in the data set generated by the PREPARE card and is available to the X-Y plotting programs.
- 5 The output interval is specified by the timer variable OUTDEL. Note, the output interval for the PRINT statement is PRDEL.

The data from the PREPARE card is generated on the I/O device specified as number 15. Depending upon the computer operating system, this data will either be stored on a disk-storage device or on magnetic tape.

CSMP

The simulation of the dynamic response of a pneumatic piston-cylinder system illustrates the use of the PREPARE statement.

#### Example 3.9

A common engineering problem involves simulating the response of a piston driven by pressurized air flowing into a cylinder. This is a reasonably complex problem since it involves the fluid- and thermodynamics of a compressible fluid. Figure 3.33 shows a drawing of the system where air is flowing at a subsonic velocity through a small orifice to the cylinder.

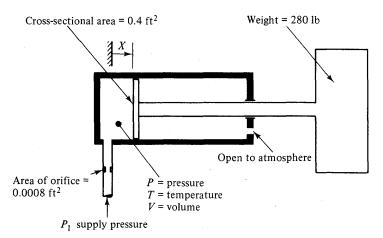


Fig. 3.33 Piston cylinder system.

The mass flow rate for subsonic velocity of an ideal gas, without losses, through an orifice is

$$\dot{m} = C \left[ \left( \frac{P}{P_1} \right)^{2/\gamma} - \left( \frac{P}{P_1} \right)^{(\gamma+1)/\gamma} \right]^{1/2}$$
(3.17)

where 
$$C = A_1 P_1 \sqrt{\frac{2g_c \gamma}{(\gamma - 1)RT_1}}$$
 (3.18)

An energy balance on the air in the adiabatic cylinder yields the following expression for the time rate of change of cylinder air temperature.

$$\dot{T} = \frac{\left(-\frac{PA\dot{X}}{J} + \dot{m}c_{p}T_{1} - \dot{m}c_{v}T\right)}{c_{v}m}$$
(3.19)  
$$T(0) = T_{c}$$

The volume inside the cylinder is

$$V = V_o + A \cdot X \tag{3.20}$$

Assuming thermodynamic equilibrium, the perfect gas law can be used to solve for the cylinder pressure.

$$P = \frac{m \cdot R \cdot T}{V} \tag{3.21}$$

(2 22)

| $X = \frac{1}{\text{WEIGHT}/g_c}$   | (3.22)                                  |
|---|---|
|   | Symbols Used in<br>Program of Fig. 3.34 |
| where $A_1$ = area of orifice, 0.0008 ft <sup>2</sup>                           | A1                                      |
| $P_1 = \text{supply pressure, 3900.0 lbf/ft}^2$                                 | <b>P</b> 1                              |
| $T_1$ = temperature of incoming air, 560°R                                      | <b>T1</b>                               |
| R = gas constant, 53.35  ft-lbf/lbm-°R  | R                                       |
| X = movement of piston, ft  | Х                                       |
| $\gamma$ = ratio of specific heats, 1.4   | GAMMA                                   |
| A = area of piston, 0.4 ft <sup>2</sup>   | Α                                       |
| $c_p$ = specific heat of air at constant<br>pressure, 0.24 Btu/lbm-°R           | СР                                      |
| $c_v = 	ext{specific heat of air at constant} \ 	ext{volume, 0.171 Btu/lbm-°R}$ | CV                                      |
| $T_o$ = initial temperature of air in cylinder, 530°R                           | ТО                                      |
| $P_o = \text{atmospheric pressure, 2116.8 lbf/ft}^3$                            | РО                                      |
| $M_o$ = initial mass of air in cylinder   | МО                                      |
| $V_o$ = initial volume of cylinder, 0.06 ft <sup>3</sup>                        | VO                                      |
| $g_c = 32.17$ lbm-ft/lbf-sec <sup>2</sup>                                       | GC                                      |
| WEIGHT = weight of piston and attached mass, $280.0$ lbm                        | WEIGHT                                  |
| J = 778 ft-lbf/Btu  | J                                       |

Newton's second law can be used to calculate the acceleration of the piston

 $\ddot{v} = A(P - P_o)$ 

Equations (3.17), (3.19), and (3.22) are contained in the program of Fig. 3.34 and are integrated to determine the response.

The PREPARE card in the program of Fig. 3.34 is used to generate a data set for the offline plotting of the variables X, XD, and XDD.

Once the data set is generated, the user must supply a program to interface directly with the plotter. In this example the velocity XD and acceleration XDD are plotted as a function of displacement X. The interfacing program that was used at the University of Tennessee for a CALCOMP 763 plotter is shown in Fig. 3.35. It should be noted that each computer installation will require its own interfacing program.

Figure 3.36 shows the PRINT output from the program of Fig. 3.34. Figure 3.37 is the resulting offline X-Y plot.

## DECK

In simulation studies it is often necessary to make several runs from the same program changing only parameters and output statements. Computer time can be

```
INITIAL
TITLE PROGRAM TO STUDY THE DYNAMICS OF A PNEUMATIC PISTON-CYLINDER
TITLE AND TO ILLUSTRATE THE USE OF THE PREPARE STATEMENT.
  CONSTANT P1 = 3900.0, T1 = 560.0, A1 = 0.0008, P0 = 2116.8,
                                                                          . . .
  TO = 530.0, VO = 0.06, A = 0.4, WEIGHT = 280.0, CP = 0.24,
                                                                          ...
  CV = 0.171, R = 53.35, J = 778.0, GAMMA = 1.4, GC = 32.17
  MO = PO \neq VO / (R \neq TO)
  C = A1*P1*SQRT(2.0*GC*GAMMA/(R*T1*(GAMMA - 1.0)))
DYNAMIC
  MD = C*SQRT((P/P1)**(2.0/GAMMA) - (P/P1)**((GAMMA + 1.0)/GAMMA))
  V = VO + A * X
  TD = (-P*A*XD/J + MD*CP*T1 - MD*CV*T)/(M*CV)
  P_{i} = M * R * T / V
  XDD = (P - PO) * A/(WEIGHT/GC)
     M = INTGRL(MC,MD)
     T = INTGRL(T0,TD)
     XD = INTGRL(0.0, XDD)
  X = INTGRL(C.C.XD)
PRINT X, XD, XDC, T, TD, M, MD, P
  FINISH X = 1.0
  TIMER FINTIM = 5.0, PRDEL = 0.01, CUTDEL = 0.005
      THE FOLLOWING PREPARE CARD IS USED TO GENERATE A DATA SET THAT
* CAN BE USED FOR OFF LINE PLOTTING OF THE VARIABLES X, XD, AND XDD.
  PREPARE X. XD. XDD
END
STUP
ENDJOB
          Fig. 3.34 Program to simulate the response of a pneumatic piston
```

cylinder system and to illustrate the use of the PREPARE statement.

saved in this situation by making a punched card deck of the translated CSMP program. An understanding of the inner workings of the CSMP program is obviously not necessary for successfully programming. However, the following brief description of the CSMP program will enable the reader to better understand the advantages of using a translated punched deck. For the reader who is interested in more detail, the CSMP System Manual<sup>(1)</sup> is recommended.

Once the user's program is read into the computer, the CSMP program begins to build the subroutine UPDATE. This is called the translation phase. In generating UPDATE, three primary tasks are accomplished.

- 1 The statements in the sort sections are placed in the proper order.
- 2 The proper transfer of control for the various segments and sections is established.
- 3 Common statements are established to make the proper variables available between UPDATE and the CSMP modules.

In the next step, the FORTRAN G compiler is invoked and the linkage editor then links UPDATE with the various CSMP execution modules. Control is then passed to MAIN which is the main or calling program. During the execution of the program, MAIN calls the appropriate subroutine to perform the necessary opera-

```
// EXEC FORTGCLG.GOREG=96K
//FORT.SYSIN DD *
      DIMENSION IBUF (664)
      DIMENSION TIME(1000), X(1000), Y(1000), Z(1000), XDOT(1000)
      DIMENSION ICODE(20), ICODE1(20)
      DO 5 I = 1, 11
      READ (8,80) DUMMY
      CONTINUE
  80 FORMAT (A4)
      READ (5.60) ICODE
      READ (5.60) ICODE1
  60 FORMAT ( 2044 )
      NOPTS = 110
      DO 10 I = 1,NOPTS
      READ (8, END=20) TIME(1), X(1), Y(1), Z(1)
  10 CONTINUE
  20 CALL PLOTS (IBUF,664,60.0)
      CALL ZIPOFF
YAXIS = 9.0
      XAXIS = 10.0
      DO 100 J = 1,3
      NPTS = NOPTS
      NPTS = NPTS / J
      NST = NPTS * J + 1
      NDEL = NPTS * J + J + 1
      CALL SCALE (TIME, XAXIS, NPTS, J)
      CALL SCALE (X, XAXIS, NPTS, J)
      CALL SCALE (Y, YAXIS, NPTS, J)
      CALL SCALE (Z, YAXIS, NPTS, J)
      CALL SYMBOL (7.0,9.03,0.14,10,0.0,-1)
      CALL SYMBOL (7.5,9.0,0.14, ICODE,0.0,80)
      CALL SYMBOL (7.0,8.7,0.14,01,0.0,-1)
      CALL SYMBOL (7.5,8.64,0.14, ICODE1,0.0,80)
      CALL AXIS (-0.75,0.0,3HXDD,+3,YAXIS,90.0,Z(NST),Z(NDEL))
      CALL AXIS (0.0,0.0,2HXD,+2,YAXIS,90.0,Y(NST),Y(NDEL))
      CALL AXIS (0.0,0.0,1HX,-1,XAXIS,0.0,X(NST),X(NDEL))
      CALL FLINE (X,Y,NPTS, J,+1,10)
      CALL FLINE (X,Z,NPTS, J,+1,01)
      CALL PLOT (15.0.0.0.-3)
  100 CONTINUE
      CALL PLOT (0.0,0.0,999)
      NSTOP = NOPTS
      WRITE (6,63) (TIME(L), X(L), Y(L), Z(L), L=1, NSTOP)
  63 FORMAT (1H ,4(E14.6,5X))
      STOP
      END
//GO.PLOTTAPE DD SYSCUT=P
//GO.FT08F001 DD DSN=PLOTTER,DCB=(RECFM=VS)LRECL=255,BLKSIZE=2550),
// UNIT=2400, DISP=(OLD, KEEP), LABEL=(, SL,, IN), VOL=SER=002330
//GO.SYSIN DD
XD (VELOCITY)
XDD (ACCELERATION)
/*
        Fig. 3.35 Program used at The University of Tennessee to inter-
```

face between the data set generated by the PREPARE card and a CALCOMP 763 plotter.

tion; integration, printing, plotting, initialization, etc. This total operation of the CSMP program is quite complicated. A strong background in all areas of programming is required if the process is to be understood.

When the label DECK is included in a program with the appropriate JCL (job control language) cards, a punched card deck is made. The deck includes the CSMP subroutine UPDATE and all user-supplied subroutines, a listing of sym-

PROGRAM TO STUDY THE DYNAMICS OF A PNEUMATIC PISTON-CYLINDER AND TO ILLUSTRATE THE USE OF THE PREPARE STATEMENT.

| TIME                | x           | XC         | X DD        | T          | TD          | м          | MD         | P .        |
|---------------------|-------------|------------|-------------|------------|-------------|------------|------------|------------|
| 0.0                 | 0.0         | c.o        | -1.0098E-04 | 5.3000E 02 | 3.9930E 03  | 4.49188-03 | 7.0071E-02 | 2.1168F 03 |
| 1.5000E-02          | 1.2369E-03  | 2.4369E-01 | 3.1264E 01  | 5.7555E 02 | 2.0834E 03  | 5.5107E-03 | 6.4301E-02 | 2.79715 03 |
| 3.0000E-02          | 9.2445E-03  | 8.68538-01 | 4.9013E 01  | 5.9341F 02 | 3.7445E 02  | 6.4049E-03 | 5.56275-02 | 3.18335 03 |
| 4.5000E-02          | 2.7946E-02  | 1.62605 00 | 4.9603E 01  | 5.9023E 02 | -6.6606E 02 | 7.2246E-03 | 5.5247E-02 | 3.1961E 03 |
| 6.0000E-02          | 5.7628E-02  | 2.3086E 00 | 4.0511E 01  | 5.7696E 02 | -1.0122E 03 | 8.0899E-03 | 6.0393E-02 | 2.9983E 03 |
| 7.5000E-02          | 9.6383E-02  | 2.8258E 00 | 2.8966E 01  | 5.61785 02 | -9.7191E 02 | 9.0332E-03 | 6.5095E-02 | 2.74715 03 |
| 9.0000E-02          | 1.4167E-01  | 3.1826E 00 | 1.8363E 01  | 5.4847F 02 | -7.9159E 02 | 1.0033E-02 | 6.7948E-02 | 2.5164E 03 |
| 1.0500E-01          | 1.9114E-01  | 3.3905E CO | 9.6998E 00  | 5.3812E 02 | -5.9082E 02 | 1.1065E-02 | 6.9372F-02 | 2.32795 03 |
| 1.2000E-01          | 2.4282E-01  | 3.4834E 00 | 2.9908E 00  | 5.3063E 02 | -4.1209E 02 | 1.2110E-02 | 6.9953E-02 | 2.18195 03 |
| 1.3500E-01          | 2.9520E-01  | 3.4886E 00 | -2.0441E 00 | 5.25595 02 | -2.6475E 02 | 1.3161E-02 | 7.01026-02 | 2.0723E 03 |
| 1.5000E+01          | 3.4715E-01  | 3.4289E 00 | -5.7183E CO | 5.2254E 02 | -1.46765 02 | 1.4212E-02 | 7.0057E-02 | 1.99248 03 |
| 1.6500É-01          | 3.9783E-01  | 3.32255 00 | -8.3020E 00 | 5.21075 02 | -5.3236E 01 | 1.5262E-02 | 6.99485-02 | 1.93625 03 |
| 1.8000E-01          | 4.4667E-01  |            | -1.0010E 01 | 5.20845 02 | 2.0588E 01  | 1.6311E-02 | 6.9841E-02 | 1.8990E 03 |
| 1.9500E-01          | 4.9326E-01  |            | -1.1009E 01 | 5.2160E 02 | 7.8645E 01  | 1.7358E-02 | 6.97655-02 | 1.87725 03 |
| 2.1000E-01          | 5.3738E-01  |            | -1.1430E 01 | 5.23146 02 | 1.23968 02  | 1.8404E-02 | 6.9731E-02 | 1.86815 03 |
| 2.2500E-01          | 5.7895E-01  |            | -1.1376E 01 | 5.2527E 02 | 1.5877E 02  | 1.9450E-02 | 6.9735E-02 | 1.8693E 03 |
| 2.4000E-01          | 6.1796E-01  |            | -1.0930E 01 | 5.2785E 02 | 1.84755 02  | 2.0496E-02 | 6.9772E-02 | 1.8790 03  |
| 2.5500E-01          | 6.5452E-01  |            | -1.0165E 01 | 5.30775 02 | 2.03115 02  | 2.1543E-02 | 6.9830E-02 | 1.89565 03 |
| 2 <b>.7</b> 000E-01 | 6.8879E-01  |            | -9.1415E 00 | 5.33915 02 | 2.1479E 02  | 2.2591E-02 | 6.9899E-02 | 1.91795 03 |
| 2.8500E-01          | 7.2102E-01  |            | -7.9167E 00 | 5.37185 02 | 2.2051E U2  | 2.3640E-02 | 6.99688-02 | 1.9445E 03 |
| 3.0000E-01          | 7.5146E-01  |            | -6.5430E 00 | 5.4050E 02 | 2.2086E 02  | 2.4690E-02 | 7.00295-02 | 1.9744F 03 |
| 3.1500E+01          | 7.8043E-01  |            | -5.0702E 00 | 5.4378F 02 | 2.1637E 02  | 2.5741E-02 | 7.0074E-02 | 2.0065E 03 |
| 3.3000c-01          | 8.0827E-01  |            | -3.5463E 00 | 5.46975 02 | 2.0755E 02  | 2.6792E-02 | 7.0099E-02 | 2.03965 03 |
| 3.4500E-01          | 8.3530E-01  |            | -2.0170E 00 | 5.4999E 02 | 1.9490E 02  | 2.7843E-0? | 7.01025-02 | 2.07295 03 |
| 3.60002-01          | 8.6189E-01  |            | -5.2546E-01 | 5.52805 02 | 1.7898E 02  | 2.8895E-02 | 7.0083F-02 | 2.1054E C3 |
| 3.7500E-01          | 8.8835E-01  | 1.7673E 00 | 8.88646-01  | 5.55348 02 | 1.6039E 02  | 2.9946E-02 | 7.0045E-02 | 2.1361E 03 |
| 3.9000E-01          | 9.1501E-01  | 1.79C6E 00 | 2.1899E CO  | 5.5760F 02 | 1.3975E 02  | 3.0996E-02 | 6.9993E-02 | 2.1645F 03 |
| 4.0500E-01          | 9.4216E-01  | 1.8323E 00 | 3.3486E CO  | 5.5953E 02 | 1.1772E 02  | 3.2046E-02 | 6.9933F-02 | 2.1897E 03 |
| 4.2000E-01          | 9.7006E-01  | 1.8902E 00 | 4.3415E 00  | 5.61125 02 | 9.4977E OL  | 3.3094E-02 | 6.9872E-02 | 2.2113E 03 |
| 4.3500E-01          | 9.9893E-01  | 1.9616E 00 | 5.1519E 00  | 5.6237E 02 | 7.2167E 01  | 3.4142E-02 | 6.98145-02 | 2.2289E 03 |
| ***SIMULATIO        | N HALTED*** | x =        | 1.0063E 00  |            |             |            |            |            |
| 4.3875E-01          | 1.0063E 00  | 1.9813E 00 | 5.32485 00  | 5.6263E 02 | 6.6527E 01  | 3,4403E-02 | 6.9801E-02 | 2.23275 03 |

RKS

INTEGRATION

Fig. 3.36 PRINT output from the simulation of the piston cylinder system.

bols used in the execution phase, and all data, execution, and output statements. When the translated deck is used for initiating a run, generating the subroutine UPDATE is not necessary and consequently, computer time is saved.

Any of the data, execution, and output control statements can be changed in the translated deck. Minor modifications can even be made in the structure statements of the translated punched deck. A complete discussion of the use of translated decks is included in the CSMP System Manual.<sup>(1)</sup>

Figure 3.38 shows the deck statement inserted in the program of Example 3.9. A listing of the resulting punched card deck is shown in Fig. 3.39. Included in this listing are the JCL cards that are required at The University of Tennessee's computing center to make additional runs.

Additional runs can be made by changing the data, execution, and output control statements that appear at the end of the punched deck. It is suggested that the user contact the computer installation to determine the required JCL cards.

## **User Defined Functions and Subroutines**

Functions most often encountered in digital simulations have been programmed as a fundamental part of CSMP. Several of these functional blocks were

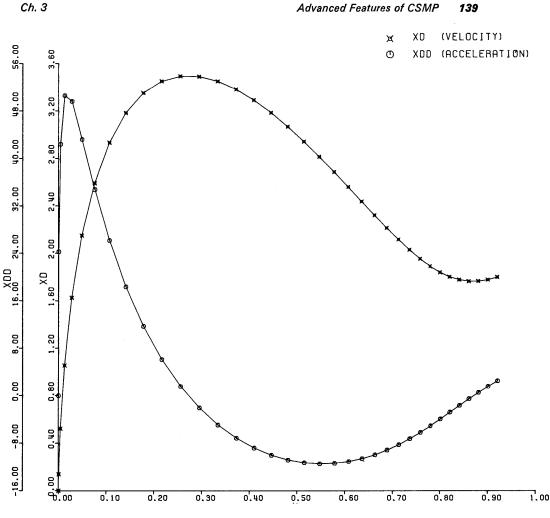


Fig. 3.37 Offline X-Y plot of piston response.

presented in Chap. 2 and the remaining ones are given in Appendix I. Such functions are typically of the form Y = REALPL(IC, P, X). It is impossible to foresee the various types of relationships that might be needed in every situation and thus an all-encompassing set of expressions cannot be pre-programmed. Also, the storage requirements for including such flexibility would soon become completely unreasonable. Having recognized this, CSMP was written so that users could easily develop their own functions relative to a particular problem or even to a given discipline. Such capability is available through the use of MACRO, PRO-CEDURE, and standard FORTRAN subprograms.

The purpose of this section is to present basic guidelines for developing and using extended functional capabilities. The MACRO type function will be intro-

```
TITLE PROGRAM TO STUDY THE DYNAMICS OF A PNEUMATIC PISTON-CYLINDER
TITLE AND TO ILLUSTRATE THE USE OF THE DECK STATEMENT
INITIAL
  CONSTANT P1 = 3900.0, T1 = 560.0, A1 = 0.0008, P0 = 2116.8,
                                                                        ...
  TO = 530.0, VO = 0.06, A = 0.4, WEIGHT = 280.0, CP = 0.24,
                                                                        ...
  CV = 0.171, R = 53.35, J = 778.0, GAMMA = 1.4, GC = 32.17
  MO = PO \neq VO/(R \neq TO)
  C = A1*P1*SQRT(2.0*GC*GAMMA/(R*T1*(GAMMA - 1.0)))
DYNAMIC
  MD = C*SQRT((P/P1)**(2.0/GAMMA) - (P/P1)**((GAMMA + 1.0)/GAMMA))
  V = VO + A + X
  TD = \{-P*A*XD/J + MD*CP*T1 - MD*CV*T\}/\{M*CV\}
  P = M * R * T / V
  XDD = (P - PO) * A/(WEIGHT/GC)
     M = INTGRL(MO,MD)
     T = INTGRL(TO,TD)
     XD = INTGRL(0.0.XDD)
     X = INTGRL(0.0, XD)
  PRINT X. XD. XDD. T. TD. M. MD. P
  FINISH X = 1.0
  TIMER FINTIM = 5.0, PRDEL = 0.015
     THE FOLLOWING DECK STATEMENT WHEN USED WITH THE PROPER JCL CARDS
    WILL RETURN A PUNCHED CARD DECK OF THE TRANSLATED PROGRAM.
   DECK
END
S TOP
ENDJOB
          Fig. 3.38 Program to simulate the response of a pneumatic
```

piston cylinder system and to illustrate the use of the DECK statement.

duced first and will be followed by the PROCEDURE and FORTRAN subprograms. As usual, example programs are given which illustrate the use of these functions in a complete simulation.

## MACRO FUNCTIONS

In many respects a macro function can be compared to a FORTRAN subroutine although they are definitely not the same. As a simple illustration suppose the following set of equations is used within the body of a more comprehensive simulation.

$$Ax(t) + By(t) = f_1(t)$$
 (3.23)

$$C_x(t) + D_y(t) = f_2(t)$$
 (3.24)

We assume that A, B, C, and D are fixed parameters while  $f_1(t)$  and  $f_2(t)$  are time varying functions defined elsewhere in the simulation. The problem is to solve for x(t) and y(t). A matrix form of solution is

$$\begin{bmatrix} x(t) \\ y(t) \end{bmatrix} = \begin{bmatrix} A & B \\ C & D \end{bmatrix}^{-1} \begin{bmatrix} f_1(t) \\ f_2(t) \end{bmatrix}$$
(3.25)

SUBROUTINE UPDATE COMMON ZZ9901 (5) . 129901 . Z29902 . 129902 . Z29903 . I Z9903 . Z29991 (54) COMMON TIME 1.DELT .DELMIN, FINTIM, PRDEL , OUTDEL, M • T • XD • X , X D D .ZZ0307.MO .TD •T0 ,ZZ0004,ZZ0006,P1 1.MD 1.71 • vo .PO .WEIGHT,CP •A1 • A •CV • R .GAMMA .GC ۰۷ • P 1.1 . ( COMMON ZZ9992(7966),NALARM,IZ9993,ZZ9994(417),KEEP,ZZ9995(489) \$,120000,229996(824),129997,129998,229999( 81) RF AI м 1.40 • MO · . . . GD TD(39995+39996+39997+39998)+120000 SYSTEM SEGMENT OF MODEL r. 39995 CONTINUE 129993= -35 129997= 4 129998= 34 READ(5,39990)(ZZ99999(IZ9999),IZ9999=1, 81) 39990 FORMAT(18A4) IZ9901= 310019 IZ9902= 340032 129903= 81 GD TD 39999 INITIAL SEGMENT OF MODEL 39996 CONTINUE MO = PO \* VO / (R \* TO)C=A1\*P1\*SQRT(2.0\*GC\*GAMMA/(R\*T1\*(GAMMA-1.0))) GD TO 39999 С DYNAMIC SEGMENT OF MODEL 39997 CONTINUE V=V0+A\*X P=M\*R\*T/V MD=C\*SQRT((P/P1)\*\*(2.0/GAMMA)-(P/P1)\*\*((GAMMA+1.0)/GAMMA)) С =INTGRL (MO .MD TD = (-P\*A\*XD/J+MD\*CP\*T1-MD\*CV\*T)/(M\*CV) C т =INTGRL (10 • TD ) XDD=(P-PO)\*A/(WEIGHT/GC) ,XDD С XÐ =INTGRL (ZZ0004 C =INTGRL 1770006 х • XD ١ ZZ0007=XD GO TO 39999 C. TERMINAL SEGMENT OF MODEL 39998 CONTINUE 39999 CONTINUE RETURN END //LKED.SYSLIB DD // 00 // DD DSN=UTCC.APPLIB.DISP=SHR //LKED.SYSIN DD DSN=UTCC.PAPMLIB(LKEDCSMP).DISP=SHR JCL cards added to //GO.FT13F001 DD UNIT=WORK, SPACE=(CYL,(1.1)), the punched deck // DCB=(RECFM=VBS,LRECL=200,BLKSIZE=1004) //GO.FT14F001 DD UNIT=WORK, SPACE=(CYL, (1,1)), // DCB=(RECFM=VBS,LRECL=200,BLKSIZE=1004) //GD.SYSIN DD \* TIME DELT DELMINFINTIMPROEL CUTDELM Т XD х MD TD SYMB 1 ZZ0007M0 τo ZZ0004ZZ0006P1 τ1 P0 vo SYMB 2 XDD A 1 Α SYMB WEIGHTCP CV R J GAMMA GC C v ρ 3 SYMB 4 SYMB 5 These data, execution, and output control statements can be changed. TITLE PROGRAM TO STUDY THE DYNAMICS OF A PNEUMATIC PISTON-CYLINDER TITLE AND TO ILLUSTRATE THE USE OF THE DECK STATEMENT CONSTANT P1 = 3900.0, T1 = 560.0, A1 = 0.0008, P0 = 2116.8, TO = 530.0, VO = 0.06, A = 0.4, WEIGHT = 280.0, CP = 0.24, CV = 0.171, R = 53.35, J = 778.0, GAMMA = 1.4, GC = 32.17PRINT X. XD. XDD. T. TD. M. MD. P FINISH X = 1.0TIMER FINTIM = 5.0, PRDEL = 0.01 END STOP Fig. 3.39 Listing of cards returned by DECK statement from

```
program in Fig. 3.38.
```

A macro giving the solution for x(t) and y(t) can be formulated as follows

MACRO ANS1, ANS2 = INVERT(A, B, C, D, FUN1, FUN2)  
DETERM = 
$$A*D - C*B$$
  
A11 = D/DETERM  
A12 =  $-B/DETERM$   
A21 =  $-C/DETERM$   
A22 =  $A/DETERM$   
ANS1 = A11\*FUN1 + A12\*FUN2  
ANS2 = A21\*FUN1 + A22\*FUN2

#### ENDMAC

The calculations as specified in the macro could be invoked from the program by the following statement.

P, 
$$Q = INVERT(6.0, 7.1, -2.3, 18.0, N1, N2)$$

The above instruction will execute the statements of the INVERT macro and consequently solve for P and Q from the following equation set.

$$6P + 7.1Q = N1 \tag{3.26}$$

$$-2.3P + 18P = N2 \tag{3.27}$$

At another point within the main program the macro might again be invoked by

$$X, Y = INVERT(PAR1, PAR2 **2, F-M, RING, IN1, IN2)$$

More will be said later about the function outputs and the arguments of the macro name.

A macro is a parallel-type function. This means that the statements written between MACRO and ENDMAC will be arranged by the CSMP sort algorithm to insure that calculations are performed in the correct order. In addition, the function defining the macro (INVERT in the above example) will be sorted within other statements of the overall program.

Fundamental rules which must be observed when using macros are

- 1 Macro definition cards must be placed at the beginning of the program and precede any structural statements even though the structural statements are in an INITIAL segment. Generally, the only cards placed before a macro are those which relate to FIXED, STORAGE, HISTORY, MEMORY, and RENAME.
- 2 The very first card of the macro is a translational control statement containing the word MACRO and is followed, on the same card, by the expression representing the function. At least one blank space must follow MACRO and the first output variable. The last card of the macro must contain the letters ENDMAC. For a single output variable one might have

# MACRO FORCE = SHARP(MASS, TORQUE, CONST1)

#### Macro statements


### **ENDMAC**

3 If necessary, the function defining the macro may be continued up to a total of four cards using the customary . . . for continuation. As an illustration one might have,

MACRO OUT = CALCU(M21,M22,... M31, M32, IN1, IN2)

Statements within the body of the macro cannot be continued from one card to another using the . . . feature. Therefore, continuation cards cannot appear in a macro other than the first statement defining the function.

- 4 There are no restrictions on the number of output variables, input variables, and parameters used in defining a macro other than that the total function statement cannot exceed four cards. The macro outputs and macro arguments must be separated by commas.
- 5 All variables and parameters associated with the macro definition are "dummy" names with the exception of the unique name assigned to the function definition. Thus,

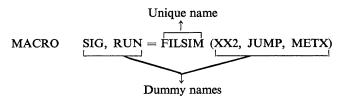

When using this macro, the label FILSIM must be retained; however, SIG, RUN, XX2, JUMP, and METX can be replaced by other names. For example, the above macro could also be invoked by the statement

TRIG, DECAY = FILSIM(6.4, CCX, (4.0 - B)/A)

in which case the following replacements are made by the macro

 $\begin{array}{c} \text{Replaces} \\ \text{TRIG} & \longrightarrow \text{SIG} \\ \text{DECAY} & \longrightarrow \text{RUN} \\ 6.4 & \longrightarrow \text{XX2} \\ \text{CCX} & \longrightarrow \text{JUMP} \\ (4.0 - B)/A & \longrightarrow \text{METX} \end{array}$ 

6 Once a macro function is defined it can be used several times in one program. For example,

> AA, BX = FILSIM(IC1, DUM, RY) KY, NY = FILSIM(NUM, DEM, RELX) RED, WWW = FILSIM(3.2, A-M, LLP)

can all be used to invoke the previously defined macro FILSIM (see 5 above) in a single simulation.

7 The arguments used in a macro statement can be literals, variables, subscripted variables, and standard FORTRAN expressions. However, system macros (CMPXPL, MODINT, LEDLAG, REALPL and INTGRL) cannot be used as arguments. Consider the macro definition given earlier

MACRO SIG, RUN = FILSIM(XX2, JUMP, METX)

The following two statements are valid.

X, Y = FILSIM(Q\*\*2, M(2), SQRT(B\*\*2 - 4\*A\*C))RX, MY = FILSIM(SINE(0.1, 400.0, 0.0), STEP(0.0), AA)

Statements which cannot be used include

X, Y = FILSIM(9.3, INTGRL(0.0, Z), AA)  
not allowed as arguments  
$$\downarrow$$
  
X, Y = FILSIM(9.3, REALPL(0.0, 0.2, W), AA)

8 Neither a user defined macro function nor a system macro can be used as part of an expression in a structure statement. As an example, the following is an invalid instruction.

$$Q = SHARP(3.3, T, -4.71)/3.75$$

- 9 Variables defined within the structure statements of a macro are not available for program output through the use of PRINT, PRTPLT, PREPARE, and RANGE. For a variable to be available as output data it must be defined as one of the output names of the macro.
- 10 A macro may be invoked within another macro. For example suppose the following macro is defined.

```
MACRO Y = STATE(A11, A12, B1, R, IC1)
X1DOT = A11*X1 + B1*R + A12
X1 = INTGRL(IC1, X1DOT)
Y = X1
ENDMAC
```

The macro STATE may be used in another macro called SIMULA as illustrated by

```
\label{eq:macro} \begin{array}{l} \text{MACRO OUTX} = \text{SIMULA}(\text{INPUT, DIST, S11, S12, SB1, SIC1}) \\ \text{XX} = \text{STATE}(\text{S11, S12, SB1, GAIN*INPUT, SIC1}) \\ \text{QQ} = \text{INTGRL}(0.0, \text{ DIST}) \\ \text{OUTX} = \text{XX} + \text{QQ} \\ \text{ENDMAC} \end{array}
```

- 11 As noted previously, macro structure statements may appear in any order since the sorting algorithm will place them in a correct sequence for computation. Macro functions can be used either in the structure statements of a procedure function or in a nosort section. A macro so used will not be sorted and furthermore, a macro cannot invoke another macro when used in this way.
- 12 Neither CSMP data nor control statements may appear between MACRO and ENDMAC. Also, FORTRAN control and input/output statements cannot appear unless they are embedded within a procedure function. Input and output statements can reference FORMAT statements but the FORMAT statements cannot appear in a macro. With the above exception, any CSMP or FORTRAN structure statements, including a subroutine call, may appear within a macro.

Perhaps the best way to understand the rules and guidelines for formulating macros is to see how they are applied in several examples.

A good policy to follow when developing a macro is to test the operation of the function before incorporating it into a more comprehensive simulation. The following example presents the development of a rather simple, but useful, macro and a test for asserting the correct operation of the function so generated.

### Example 3.10

The desired operating characteristics of an on-off device are shown in Fig. 3.40. The actual device might represent a relay with deadspace, although here the purpose is to make the characteristics as general as possible. Once developed, the macro can be used as a subcomponent in a more extensive system.

The macro may be generated by

| MACRO      | PLAY = RELAY(YP1, YP2, XP1, XP2, FLASH)    |
|------------|--|
|            | IF(FLASH.GT.XP2.AND.FLASH.LT.XP1) GO TO 99 |
|            | IF(FLASH.GE.XP1) GO TO 98                  |
|            | IF(FLASH.LE.XP2) GO TO 97                  |
| 99         | PLAY = 0.0                                 |
|            | GO TO 96                                   |
| <b>9</b> 8 | PLAY = YP1                                 |
|            | GO TO 96                                   |
| 97         | PLAY = YP2                                 |
| 96         | CONTINUE                                   |
| ENDMAC     | 2  |

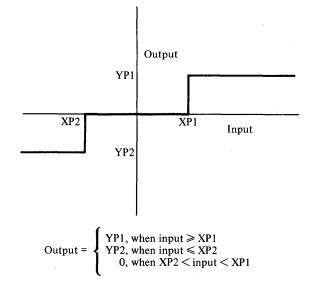


Fig. 3.40 Desired characteristics of Relay-type device.

The output, PLAY, and arguments YP1, YP2, XP1, and XP2, and FLASH are dummy symbols and can be replaced by other symbols when invoked from the main program. Notice that FORTRAN branching and logic statements have been used. Since the structure statements of a macro are sorted, the user would encounter difficulty using the program unless steps are taken to insure the statements are not sorted. One way to avoid sorting is to place a card with the letters PROCEDURAL immediately following the macro definition card. This will be explained more fully in the next section dealing with procedure functions. Another way to avoid sorting is to place a NOSORT card before the program statement which invokes the macro. A program which uses this approach and also checks the performance of the macro is given in Fig. 3.41. The macro function is invoked by the statement

#### OUTPUT = RELAY(LIMIT1, LIMIT2, BOUND1, BOUND2, INPUT)

A sine wave with frequency of 6.28 radians/sec is used as the device input. The values of LIMIT1, LIMIT2, BOUND1, and BOUND2 have been specified on a Parameter card. The output from the program is given in Fig. 3.42, where one will note that the function is operating correctly.

If the NOSORT card were omitted from the program in Fig. 3.41 the program would not run and an appropriate error message would appear.

The major emphasis in developing CSMP was placed upon the creation of a simulation language for handling problems which involve differentiation and integration. As shown in Example 3.11, however, one can write CSMP programs which do not solve differential equations. While such programs may certainly be written in FORTRAN or other higher-level languages, CSMP quite often gives a simpler formulation without using DO loops and subscripted variables. The following will present one such use of CSMP.

```
MACRO PLAY = FELAY(YP1, YP2, XP1, XP2, FLASH)
      IF(FLASH.GT.XP2.AND.FLASH.LT.XP1) GD TO 99
       IF(FLASH.GE.XP1) GO TO 98
       IF(FLASH.LE.XP2) GO TO 97
  99
      PLAY = 0.0
      GO TO 96
   98 PLAY = YP1
     GO TO 96
  97 PLAY = YP2
96 CONTINUE
ENDMAC
PARAM LIMIT1 = 1.2, LIMIT2 = -1.8, BCUND1 = 1.0, BOUND2 = -1.0
*NOSORT
INPUT = 3.0*SINE(0.0,6.28,0.0)
OUTPUT = RELAY(LIMIT1, LIMIT2, BOUND1, BOUND2, INPUT)
TIMER FINTIM = 1.0, DUTDEL = 0.02
PRTPLT OUTPUT(INPUT)
LABEL PERFORMANCE OF RELAY MACRO - EXAMPLE 3-10
END
STOP
ENDJOB
         *Placing the Macro in a Nosort section permits FORTAN
          logic and branching within the Macro.
```

Fig. 3.41 Program test for relay macro (Example 3.10).

### Example 3.11

A mortgage of 32,000 is to be financed through a bank on a 25 year 9% interest note. We would like to write a program which will calculate and print the following: (1) the current month; (2) the monthly payment; (3) the interest paid each month on the loan; (4) the running total interest; (5) the amount applied each month toward reducing the original mortgage; (6) the total equity; and (7) the balance left to pay on the loan.

A standard equation for determining the fixed monthly payments on a fixed-period loan is given by

Monthly payment = 
$$\frac{(\mathbf{P}*\mathbf{IRM}*\mathbf{S})}{(\mathbf{S}-1)}$$
 (3.28)

where 
$$\mathbf{S} = (1 + \mathbf{IRM})^{\mathbf{PERIOD}}$$
 (3.29)

and

 $\mathbf{P} =$ original mortgage value

IRM = monthly interest rate

This calculation is performed only one time and can therefore be placed in the INITIAL segment of the program.

We make the following definitions for programming convenience.

MONINT = monthly interest

BALANC = balance remaining on the loan

MPAY = amount paid each month toward reducing the loan

 $\mathbf{PAY} = \mathbf{fixed} \ \mathbf{monthly} \ \mathbf{payments}$ 

- EQUITY = total amount paid off on the loan
- TOTINT = running total interest paid

PERFORMANCE OF RELAY MACRO - EXAMPLE 3-10

| TIPE         OUTPUT         I         INPUT           0.0         0.0   |                     | MINIMUM  | OUTPUT VERSU |                | MAXIMUM           |
|---|---------------------|----------|--------------|----------------|-------------------|
| 0.0         0.0   | ·                   |          |              | 1              |                   |
| $\begin{array}{cccccccccccccccccccccccccccccccccccc$  |                     | T I      |              |                | I INPU            |
| 4.0000E-02       0.0  |                     |          |              | +              | 0.0               |
| 6.0000E-02       1.2000E 00   |                     | ******** |              | + <sup>™</sup> | 3.7581            |
| 8.0000=02       1.2000E 00       1.444         1.0000E-01       1.2000E 00       2.052         1.4000E-01       1.2000E 00       2.052         1.4000E-01       1.2000E 00       2.330         1.6000E-01       1.2000E 00       2.321         1.8000E-01       1.2000E 00       2.322         2.0000E-01       1.2000E 00       2.452         2.0000E-01       1.2000E 00       2.852         2.0000E-01       1.2000E 00       2.933         2.4000E-01       1.2000E 00       2.934         2.4000E-01       1.2000E 00       2.934         2.4000E-01       1.2000E 00       2.9447         2.80000E-01       1.2000E 00       2.9447         3.0000E-01       1.2000E 00       2.9447         3.0000E-01       1.2000E 00       2.9447         3.0000E-01       1.2000E 00       2.9447         3.0000E-01       1.2000E 00       2.9451         3.0000E-01       1.2000E 00       2.9451         3.0000E-01       1.2000E 00       2.9451         3.0000E-01       1.2000E 00       2.9451         3.0000E-01       1.2000E 00       1.17661         4.0000E-01       1.2000E 00       1.17661 <td>4.0000E-02 0.0</td> <td></td> <td></td> <td>+</td> <td>7.457(</td>               | 4.0000E-02 0.0      |          |              | +              | 7.457(            |
| 1.2000E-01       1.2000E 00       1.762         1.4000E-01       1.2000E 00       2.052         1.4000E-01       1.2000E 00       2.332         1.4000E-01       1.2000E 00       2.332         1.4000E-01       1.2000E 00       2.332         1.4000E-01       1.2000E 00       2.413         2.0000E-01       1.2000E 00       2.452         2.2000E-01       1.2000E 00       2.452         2.4000E-01       1.2000E 00       2.494         2.4000E-01       1.2000E 00       2.4554         3.4000E-01       1.2000E 00       2.4513   | 6.0000E-02 1.2000   |          |              |                |                   |
| 1.2000E-01       1.2000E 00       2.052         1.4000E-01       1.2000E 00       2.310         1.8000E-01       1.2000E 00       2.332         1.8000E-01       1.2000E 00       2.4532         2.4000E-01       1.2000E 00       2.4532         2.4000E-01       1.2000E 00       2.4532         2.4000E-01       1.2000E 00       2.4532         2.4000E-01       1.2000E 00       2.4943         2.4000E-01       1.2000E 00       2.4947         2.6000E-01       1.2000E 00       2.4541         3.6000E-01       1.2000E 00       2.4541         4.4000E-01       1.2000E 00       1.4448         4.4000E-01       0.0       2.47551 <td>8.00005-02 1.2000</td> <td></td> <td></td> <td></td> <td>• • • • • • • • •</td>  | 8.00005-02 1.2000   |          |              |                | • • • • • • • • • |
| 1.4000E-01       1.2000E 00       2.510         1.6000E-01       1.2000E 00       2.532         2.0000E-01       1.2000E 00       2.532         2.0000E-01       1.2000E 00       2.652         2.4000E-01       1.2000E 00       2.652         2.4000E-01       1.2000E 00       2.652         2.4000E-01       1.2000E 00       2.692         2.6000E-01       1.2000E 00       2.693         2.6000E-01       1.2000E 00       2.694         2.6000E-01       1.2000E 00       2.694         3.6000E-01       1.2000E 00       2.654         3.4000E-01       1.2000E 00       2.654         3.4000E-01       1.2000E 00       2.6534         3.4000E-01       1.2000E 00       2.6134         3.6000E-01       1.2000E 00       2.6134         3.6000E-01       1.2000E 00       1.766         4.0000E-01       1.2000E 00       1.766         4.0000E-01       1.2000E 00       1.766         4.0000E-01       1.2000E 00       1.766         4.0000E-01       1.2000E 00       1.766         5.0000E-01       0.0   | 1.0000E-01 1.2000   |          |              |                |                   |
| 1.6000E-01       1.2000E 00       2.532         1.8000E-01       1.2000E 00       2.652         2.4000E-01       1.2000E 00       2.652         2.4000E-01       1.2000E 00       2.993         2.6000E-01       1.2000E 00       2.993         3.6000E-01       1.2000E 00       2.947         3.0000E-01       1.2000E 00       2.952         3.6000E-01       1.2000E 00       2.313         3.8000E-01       1.2000E 00       2.313         3.8000E-01       1.2000E 00       1.766         4.000E-01       0.0       1.766         5.0000E-01       0.0       1.766         5.0000E-01       0.0       1.760         5.0000E-01  | 1.2000E-01 1.2000E  |          |              |                |                   |
| 1       1       2000E       00       2713         2       0000E       1       2000E       2       252         2       2000E       1       2000E       2       252         2       2000E       1       2000E       2       252         2       2000E       1       2000E       2       2934         2       2000E       1       2000E       2       2946         2       2000E       1       2000E       2       2947         2       2000E       1       2000E       2       2454         3       2000E       1       2000E       2       2534         3       4000E       1       2000E       2       2534         3       4000E       1       2000E       2       2333         3       8000E       1       2000E       2       2356         4       2000E       1       2000E       2       256         4       2000E       1       2000E       2       2       256         4       2000E       1       42000E       2       456       2       3505         5   | 1.4000E-01 1.2000   | E 00     |              |                | + 2.310           |
| 2.0000E-01       1.2000E 00       2.852         2.2000E-01       1.2000E 00       2.946         2.4000E-01       1.2000E 00       2.994         2.6000E-01       1.2000E 00       2.994         2.6000E-01       1.2000E 00       2.994         2.6000E-01       1.2000E 00       2.994         2.6000E-01       1.2000E 00       2.953         3.0000E-01       1.2000E 00       2.953         3.0000E-01       1.2000E 00       2.534         3.0000E-01       1.2000E 00       2.534         3.6000E-01       1.2000E 00       2.056         4.0000E-01       1.2000E 00       1.766         4.2000E-01       1.2000E 00       1.108         4.6000E-01       0.0       2.977         4.8000E-01       0.0       2.978         4.8000E-01       -1.8000E 00       +         5.2000E-01       0.0       -         5.4000E-01       -1.8000E 00       +         5.6000E-01   | 1.6000E-01 1.2000   |          |              |                |                   |
| 2.2000E-01       1.2000E 00       2.9461         2.4000E-01       1.2000E 00       2.9931         2.6000E-01       1.2000E 00       2.9931         2.6000E-01       1.2000E 00       2.9947         3.0000E-01       1.2000E 00       2.8541         3.0000E-01       1.2000E 00       2.8541         3.4000E-01       1.2000E 00       2.534         4.4484       4.4484       4.4484         4.4000E-01       1.2000E 00       1.108         4.4600E-01       0.0   | 1.8000E-01 1.2000   | E 00     |              |                | + 2.713           |
| 2.4000E-01       1.2000E 00       2.993         2.5000E-01       1.2000E 00       2.994         3.0000E-01       1.2000E 00       2.994         3.0000E-01       1.2000E 00       2.994         3.0000E-01       1.2000E 00       2.994         3.0000E-01       1.2000E 00       2.955         3.0000E-01       1.2000E 00       2.534         3.6000E-01       1.2000E 00       2.556         4.000E-01       1.2000E 00       2.556         4.000E-01       1.2000E 00       2.056         4.000E-01       0.0       2.056         4.000E-01       0.0       2.057         5.000E-01       0.0       2.057         5.0000E-01       0.0       2.057         5.0000E-01       0.0       2.057         5.0000E-01       0.0       2.057         5.0000E-01       -1.8000E 00       4.7410         5.0000E-01       -1.8000E 00       2.207         6.0000E-01       -1.8000E 00 </td <td>2.0000E-01 1.2000</td> <td>E 00</td> <td></td> <td></td> <td>+ 2.852(</td>                          | 2.0000E-01 1.2000   | E 00     |              |                | + 2.852(          |
| 2.6000E-01       1.2000E 00       2.994;         2.8000E-01       1.2000E 00       2.994;         3.000E-01       1.2000E 00       2.854;         3.2000E-01       1.2000E 00       2.715;         3.4000E-01       1.2000E 00       2.534;         3.6000E-01       1.2000E 00       2.534;         3.6000E-01       1.2000E 00       2.536;         3.8000E-01       1.2000E 00       2.536;         4.6000E-01       1.2000E 00       2.036;         4.2000E-01       1.2000E 00       1.766;         4.2000E-01       1.2000E 00       1.2000E 00         4.4000E-01       1.2000E 00       1.2000E 00         4.6000E-01       0.0       1.2000E 00         4.8000E-01       0.0       1.2000E 00         5.0000E-01       0.0       1.2000E 00         5.0000E-01       0.0       1.766;         5.2000E-01       0.0       1.2000E 00         5.6000E-01       0.0       1.2000E 00         5.6000E-01       1.8000E 00       1.2000E 00         5.8000E-01       1.8000E 00       1.758;         6.2000E-01       1.8000E 00       2.2007;         5.80000E-01       1.8000E 00       2.2007; </td <td>2.2000E-01 1.2000</td> <td>= 00</td> <td></td> <td></td> <td>+ 2.946!</td> | 2.2000E-01 1.2000   | = 00     |              |                | + 2.946!          |
| 2.8000E-01       1.2000E 00       2.947         3.0000E-01       1.2000E 00       2.854         3.4000E-01       1.2000E 00       2.534         3.6000E-01       1.2000E 00       2.534         3.6000E-01       1.2000E 00       2.056         4.000E-01       1.2000E 00       2.056         4.000E-01       1.2000E 00       2.056         4.000E-01       1.2000E 00       2.056         4.000E-01       1.2000E 00       1.766         4.4000E-01       1.2000E 00       1.766         4.6000E-01       0.0       1.766         4.6000E-01       0.0       1.7503         4.8000E-01       0.0   | 2.4000E-01 1.2000   | E 00     |              |                | + 2.9931          |
| 3.0000E-01       1.2000E 00   | 2.6000E-01 1.2000   | E 00     |              |                | + 2.994;          |
| 3.0000E-01       1.2000E 00   | 2.8000E-01 1.2000   | E 00     |              |                |                   |
| 3.2000E-01       1.2000E 00   | 3.0000E-01 1.2000   | E 00     |              |                |                   |
| 3.4000E-01       1.2000E 00   | 3-2000E-01 1-2000   | E 00     |              |                |                   |
| 3.6000E-01       1.2000E 00   |                     |          |              |                |                   |
| 3.8000E-01       1.2000E 00   |                     |          |              |                |                   |
| 4.0000E-01       1.2000E 00   |                     |          |              |                |                   |
| 4.2000E-01       1.2000E 00   |                     |          |              |                |                   |
| 4.4000E-01       1.2000E 00   |                     |          |              |                |                   |
| 4.6000E-01       0.0  |                     |          |              |                |                   |
| 4.8000E-01       0.0  |                     |          |              |                |                   |
| 5.0000E-01       0.0  |                     |          |              |                |                   |
| 5.2000E-01       0.0      +       -3.710         5.4000E-01       0.0      +       -7.410         5.6000E-01       -1.8000E 00       +       -1.099         5.8000E-01       -1.8000E 00       +       -1.400         6.0000E-01       -1.8000E 00       +       -2.049         6.4000E-01       -1.8000E 00       +       -2.307         6.6000E-01       -1.8000E 00       +       -2.851         7.0000E-01       -1.8000E 00       +       -2.949         7.6000E-01       -1.8000E 00       +       -2.993         7.6000E-01       -1.8000E 00       +       -2.993         7.6000E-01       -1.8000E 00       +       -2.994         7.8000E-01       -1.8000E 00       +       -2.994         7.8000E-01       -1.8000E 00       +       -2.948         8.0000E-01       -1.8000E 00       +       -2.948         8.0000E-01       -1.8000E 00       +       -2.948         8.0000E-01  |                     |          |              | •              |                   |
| 5.4000E-01       0.0  |                     |          |              | •              |                   |
| 5.6000E-01       -1.8000E 00       +       -1.099         5.8000E-01       -1.8000E 00       +       -1.440         6.0000E-01       -1.8000E 00       +       -1.440         6.2000E-01       -1.8000E 00       +       -2.049         6.4000E-01       -1.8000E 00       +       -2.049         6.4000E-01       -1.8000E 00       +       -2.307         6.6000E-01       -1.8000E 00       +       -2.307         6.6000E-01       -1.8000E 00       +       -2.529         6.8000E-01       -1.8000E 00       +       -2.529         7.4000E-01       -1.8000E 00       +       -2.945         7.4000E-01       -1.8000E 00       +       -2.945         7.4000E-01       -1.8000E 00       +       -2.993         7.6000E-01       -1.8000E 00       +       -2.994         7.8000E-01       -1.8000E 00       +       -2.948         8.0000E-01       -1.8000E 00       +       -2.855         8.2000E-01       -1.8000E 00       +       -2.537         8.6000E-01       -1.8000E 00       +       -2.059         9.0000E-01       -1.8000E 00       +       -2.059         9.0000E-01  |                     |          |              | *              |                   |
| 5.8000E-01       -1.8000E 00       +       -1.440         6.0000E-01       -1.8000E 00       +       -1.758         6.2000E-01       -1.8000E 00       +       -2.049         6.4000E-01       -1.8000E 00       +       -2.529         6.8000E-01       -1.8000E 00       +       -2.711         7.0000E-01       -1.8000E 00       +       -2.945         7.2000E-01       -1.8000E 00       +       -2.945         7.4000E-01       -1.8000E 00       +       -2.945         7.8000E-01       -1.8000E 00       +       -2.948         8.0000E-01       -1.8000E 00       +       -2.948         8.0000E-01       -1.8000E 00       +       -2.537         8.6000E-01       -1.8000E 00       +       -2.959         9.0000E-01       -1.8000E 00       +       -2.059         9.0000E-01       -1.8000E 00       +       -2.059         9.0000E-01  |                     |          |              | *              |                   |
| 6.0000E-01       -1.8000E 00       +       -1.758         6.2000E-01       -1.8000E 00       +       -2.049         6.4000E-01       -1.8000E 00       +       -2.307         6.6000E-01       -1.8000E 00       +       -2.529         6.8000E-01       -1.8000E 00       +       -2.711         7.0000E-01       -1.8000E 00       +       -2.945         7.2000E-01       -1.8000E 00       +       -2.945         7.4000E-01       -1.8000E 00       +       -2.993         7.6000E-01       -1.8000E 00       +       -2.993         7.6000E-01       -1.8000E 00       +       -2.994         7.8000E-01       -1.8000E 00       +       -2.948         8.0000E-01       -1.8000E 00       +       -2.948         8.0000E-01       -1.8000E 00       +       -2.948         8.0000E-01       -1.8000E 00       +       -2.537         8.6000E-01       -1.8000E 00       +       -2.537         8.6000E-01       -1.8000E 00       +       -2.059         9.0000E-01       -1.8000E 00       +       -2.059         9.0000E-01       -1.8000E 00       +       -1.453         9.4000E-01  |                     |          |              |                |                   |
| 6.2000E-01       -1.8000E 00       +       -2.049         6.4000E-01       -1.8000E 00       +       -2.307         6.6000E-01       -1.8000E 00       +       -2.529         6.8000E-01       -1.8000E 00       +       -2.529         7.0000E-01       -1.8000E 00       +       -2.811         7.2000E-01       -1.8000E 00       +       -2.945         7.4000E-01       -1.8000E 00       +       -2.993         7.6000E-01       -1.8000E 00       +       -2.9945         7.4000E-01       -1.8000E 00       +       -2.994         7.8000E-01       -1.8000E 00       +       -2.9948         8.0000E-01       -1.8000E 00       +       -2.948         8.0000E-01       -1.8000E 00       +       -2.948         8.0000E-01       -1.8000E 00       +       -2.948         8.0000E-01       -1.8000E 00       +       -2.916         8.8000E-01       -1.8000E 00       +       -2.916         9.0000E-01       -1.8000E 00       +       -2.017         9.0000E-01       -1.8000E 00       +       -2.016         9.0000E-01       -1.8000E 00       +       -1.453         9.4000E-01  |                     |          |              |                |                   |
| 6.4000E-01       -1.8000E 00       +       -2.307         6.6000E-01       -1.8000E 00       +       -2.529         6.8000E-01       -1.8000E 00       +       -2.711         7.0000E-01       -1.8000E 00       +       -2.851         7.2000E-01       -1.8000E 00       +       -2.945         7.4000E-01       -1.8000E 00       +       -2.993         7.6000E-01       -1.8000E 00       +       -2.993         7.6000E-01       -1.8000E 00       +       -2.994         8.000E-01       -1.8000E 00       +       -2.993         8.000E-01       -1.8000E 00       +       -2.948         8.000E-01       -1.8000E 00       +       -2.948         8.000E-01       -1.8000E 00       +       -2.917         8.4000E-01       -1.8000E 00       +       -2.537         8.6000E-01       -1.8000E 00       +       -2.059         9.0000E-01       -1.8000E 00       +       -2.059         9.0000E-01       -1.8000E 00       +       -1.453         9.4000E-01       -1.8000E 00       +       -1.453         9.8000E-01       0.0  |                     |          |              |                |                   |
| 6.6000E-01       -1.8000E 00       +       -2.529         6.8000E-01       -1.8000E 00       +       -2.711         7.0000E-01       -1.8000E 00       +       -2.851         7.2000E-01       -1.8000E 00       +       -2.945         7.4000E-01       -1.8000E 00       +       -2.993         7.6000E-01       -1.8000E 00       +       -2.994         7.8000E-01       -1.8000E 00       +       -2.948         8.0000E-01       -1.8000E 00       +       -2.855         8.2000E-01       -1.8000E 00       +       -2.537         8.6000E-01       -1.8000E 00       +       -2.537         8.6000E-01       -1.8000E 00       +       -2.059         9.0000E-01       -1.8000E 00       +       -2.059         9.0000E-01       -1.8000E 00       +       -1.12         9.2000E-01       -1.8000E 00       +       -1.453         9.8000E-01       0.0        -3.853   |                     |          |              |                |                   |
| 6.8000E-01       -1.8000E 00       +       -2.711         7.0000E-01       -1.8000E 00       +       -2.851         7.2000E-01       -1.8000E 00       +       -2.945         7.4000E-01       -1.8000E 00       +       -2.993         7.6000E-01       -1.8000E 00       +       -2.994         7.8000E-01       -1.8000E 00       +       -2.948         8.0000E-01       -1.8000E 00       +       -2.948         8.0000E-01       -1.8000E 00       +       -2.948         8.0000E-01       -1.8000E 00       +       -2.947         8.0000E-01       -1.8000E 00       +       -2.948         8.0000E-01       -1.8000E 00       +       -2.948         8.0000E-01       -1.8000E 00       +       -2.948         8.0000E-01       -1.8000E 00       +       -2.957         9.0000E-01       -1.8000E 00       +       -2.537         9.0000E-01       -1.8000E 00       +       -2.059         9.0000E-01       -1.8000E 00       +       -1.770         9.2000E-01       -1.8000E 00       +       -1.453         9.4000E-01       -0.0        -3.853   |                     |          |              |                |                   |
| 7.0000E-01       -1.8000E 00       +       -2.851         7.2000E-01       -1.8000E 00       +       -2.945         7.4000E-01       -1.8000E 00       +       -2.993         7.6000E-01       -1.8000E 00       +       -2.994         7.8000E-01       -1.8000E 00       +       -2.994         8.0000E-01       -1.8000E 00       +       -2.948         8.0000E-01       -1.8000E 00       +       -2.855         8.2000E-01       -1.8000E 00       +       -2.917         8.6000E-01       -1.8000E 00       +       -2.537         8.6000E-01       -1.8000E 00       +       -2.059         9.0000E-01       -1.8000E 00       +       -2.059         9.0000E-01       -1.8000E 00       +       -1.453         9.4000E-01       -1.8000E 00       +       -1.453         9.4000E-01       -1.8000E 00       +       -1.112         9.8000E-01       0.0  |                     |          |              |                |                   |
| 7.2000E-01       -1.8000E 00       +       -2.945         7.4000E-01       -1.8000E 00       +       -2.993         7.6000E-01       -1.8000E 00       +       -2.994         7.8000E-01       -1.8000E 00       +       -2.945         8.000E-01       -1.8000E 00       +       -2.993         8.000E-01       -1.8000E 00       +       -2.948         8.000E-01       -1.8000E 00       +       -2.948         8.000E-01       -1.8000E 00       +       -2.948         8.000E-01       -1.8000E 00       +       -2.917         8.4000E-01       -1.8000E 00       +       -2.537         8.6000E-01       -1.8000E 00       +       -2.059         9.0000E-01       -1.8000E 00       +       -2.059         9.0000E-01       -1.8000E 00       +       -2.059         9.0000E-01       -1.8000E 00       +       -1.453         9.4000E-01       -1.8000E 00       +       -1.453         9.4000E-01       0.0   |                     |          |              |                |                   |
| 7.4000E-01       -1.8000E 00       +       -2.993         7.6000E-01       -1.8000E 00       +       -2.994         7.8000E-01       -1.8000E 00       +       -2.994         7.8000E-01       -1.8000E 00       +       -2.994         7.8000E-01       -1.8000E 00       +       -2.948         8.0000E-01       -1.8000E 00       +       -2.855         8.2000E-01       -1.8000E 00       +       -2.537         8.6000E-01       -1.8000E 00       +       -2.537         8.6000E-01       -1.8000E 00       +       -2.537         9.0000E-01       -1.8000E 00       +       -2.059         9.0000E-01       -1.8000E 00       +       -2.059         9.0000E-01       -1.8000E 00       +       -1.770         9.2000E-01       -1.8000E 00       +       -1.453         9.4000E-01       -1.8000E 00       +       -1.112         9.8000E-01       0.0  |                     |          |              |                |                   |
| 7.6000E-01       -1.8000E 00       +       -2.994         7.8000E-01       -1.8000E 00       +       -2.948         8.0000E-01       -1.8000E 00       +       -2.855         8.2000E-01       -1.8000E 00       +       -2.717         8.4000E-01       -1.8000E 00       +       -2.537         8.6000E-01       -1.8000E 00       +       -2.316         8.6000E-01       -1.8000E 00       +       -2.059         9.0000E-01       -1.8000E 00       +       -1.770         9.2000E-01       -1.8000E 00       +       -1.453         9.4000E-01       -1.8000E 00       +       -1.112         9.6000E-01       0.0  |                     |          |              |                |                   |
| 7.8000E-01       -1.8000E 00       +       -2.948         8.0000E-01       -1.8000E 00       +       -2.855         8.2000E-01       -1.8000E 00       +       -2.717         8.4000E-01       -1.8000E 00       +       -2.537         8.6000E-01       -1.8000E 00       +       -2.316         8.8000E-01       -1.8000E 00       +       -2.059         9.0000E-01       -1.8000E 00       +       -1.770         9.2000E-01       -1.8000E 00       +       -1.453         9.4000E-01       -1.8000E 00       +       -1.112         9.6000E-01       0.0      +       -7.549         9.8000E-01       0.0      +       -3.853   |                     |          |              |                |                   |
| 8.0000E-01       -1.8000E 00       +       -2.855         8.2000E-01       -1.8000E 00       +       -2.717         8.4000E-01       -1.8000E 00       +       -2.537         8.6000E-01       -1.8000E 00       +       -2.316         8.8000E-01       -1.8000E 00       +       -2.059         9.0000E-01       -1.8000E 00       +       -1.770         9.2000E-01       -1.8000E 00       +       -1.453         9.4000E-01       -1.8000E 00       +       -1.453         9.4000E-01       0.0      +       -7.549         9.8000E-01       0.0      +       -3.853   |                     |          |              |                |                   |
| 8.2000E-01       -1.8000E 00       +       -2.717         8.4000E-01       -1.8000E 00       +       -2.537         8.6000E-01       -1.8000E 00       +       -2.316         8.8000E-01       -1.8000E 00       +       -2.059         9.0000E-01       -1.8000E 00       +       -1.770         9.2000E-01       -1.8000E 00       +       -1.453         9.4000E-01       -1.8000E 00       +       -1.112         9.6000E-01       0.0      +       -7.549         9.8000E-01       0.0      +       -3.853   |                     | -        |              |                |                   |
| 8.4000E-01       -1.8000E 00       +       -2.537         8.6000E-01       -1.8000E 00       +       -2.316         8.8000E-01       -1.8000E 00       +       -2.059         9.0000E-01       -1.8000E 00       +       -1.770         9.2000E-01       -1.8000E 00       +       -1.453         9.4000E-01       -1.8000E 00       +       -1.112         9.6000E-01       0.0      +       +7.549         9.8000E-01       0.0      +       -3.853   |                     |          |              |                |                   |
| 8.6000E-01       -1.8000E 00       +       -2.316         8.8000E-01       -1.8000E 00       +       -2.059         9.0000E-01       -1.8000E 00       +       -1.770         9.2000E-01       -1.8000E 00       +       -1.453         9.4000E-01       -1.8000E 00       +       -1.112         9.6000E-01       0.0      +       -7.549         9.8000E-01       0.0      +       -3.853   |                     |          |              |                |                   |
| 8.8000E-01       -1.8000E 00       +       -2.059         9.0000E-01       -1.8000E 00       +       -1.770         9.2000E-01       -1.8000E 00       +       -1.453         9.4000E-01       -1.8000E 00       +       -1.112         9.6000E-01       0.0      +       -7.549         9.8000E-01       0.0      +       -3.853   |                     |          |              |                |                   |
| 9.0000E-01       -1.8000E 00       +       -1.770         9.2000E-01       -1.8000E 00       +       -1.453         9.4000E-01       -1.8000E 00       +       -1.112         9.6000E-01       0.0      +       77.549         9.8000E-01       0.0      +       -3.853   |                     |          |              |                |                   |
| 9.2000E-01       -1.8000E 00       +       -1.453         9.4000E-01       -1.8000E 00       +       -1.112         9.6000E-01       0.0  |                     |          |              |                |                   |
| 9.4000E-01       -1.8000E       00       +       -1.112         9.6000E-01       0.0  | 9.0000E-01 -1.80008 | E 00 +   |              |                |                   |
| 9.6000E-01       0.0      +       +7.549         9.8000E-01       0.0      +       -3.853   |                     |          |              |                |                   |
| 9.8000E-01 0.0  | 9.4000E-01 -1.8000E | E 00 +   |              |                |                   |
|   | 9.6000E-01 0.0      |          |              | +              |                   |
| 1.0000E 00 0.0  | 9.8000E-01 0.0      |          |              | <b>↓</b>       | -3.853            |
|   | 1.0000E 00 0.0      |          |              | +              | -9.568            |

Fig. 3.42 CSMP output for program given in Fig. 3.41.

The basic calculations required are

```
MONINT = IRM*BALANC
MPAY = PAY - MONINT
EQUITY = MPAY + PAST EQUITY
BALANC = P - EQUITY
TOTINT = MONINT + PAST TOTAL INTEREST
```

These equations must be solved 300 times (twenty five years with twelve payments each year). Each time the set of equations is solved, certain quantities must be updated similarly to a difference equation.

There are several ways these equations can be programmed in CSMP but a macro approach will be given since this is the major topic of discussion.

We first write the macro

MACRO MONINT,MPAY=CALCU1(IRM,BALANC,PAY) MONINT = IRM\*BALANC MPAY = PAY - MONINT ENDMAC

where IRM and PAY are fixed parameters and BALANC is an input variable. MONINT and MPAY are output variables of the macro. The statement selected to call the macro is

MONINT,MPAY = CALCU1(IRM,BALANC,PAY)

As explained earlier, the user is only required to retain CALCU1 in the call statement and all other terms can be replaced by perhaps more meaningful terms. In this case it is convenient not to change the output and argument symbols.

Another macro is now written for the remaining calculations.

```
MACRO EQUITY, BALANC, TOTINT = CALCU2(MPAY, PASPAY, ...

P, MONINT, PSTINT)

EQUITY = MPAY + PASPAY

BALANC = P - EQUITY

TOTINT = MONINT + PSTINT

PASPAY = EQUITY

PSTINT = TOTINT

ENDMAC
```

The call statement to the macro will be

### EQUITY, BALANC, TOTINT = CALCU2(MPAY, PASPAY, P, MONINT, PSTINT)

The comments made regarding symbols used in the previous macro also apply here. Note in this last macro that PASPAY and PSTINT are used for updating the equity and total interest. At this point a word of caution is in order.

In problems which do not involve integration, calculations in the program are made at intervals of DELT. If DELT is not specified, a value of FINTIM/100 is automatically used. In this problem, all calculations must be performed once for each month. Since the unit of time is months, it is essential that DELT be specified equal to one.

A program for performing the calculations of this example is given in Fig. 3.43. The first five printed output lines are as shown in Fig. 3.44. As a matter of convenience we

```
$$$$$$$$$
*******
                    EXAMPLE 3-11
  BALANC = BALANCE TO PAY ON THE LOAN
*
  MONINT = INTEREST FOR THE CURRENT MONTH
*
  TOTINT = TOTAL INTEREST PAID TO DATE
           = AMOUNT PAID ON LOAN FOR THE CURRENT MONTH
*
  MPAY
  EQUITY = CURRENT AMOUNT PAID-OFF ON THE LOAN
*
           = THE MONTHLY INTEREST RATE (IN DECIMAL FORM)
*
  IRM
           = THE MONTHLY PAYMENT (A CONSTANT)
*
  PAY
MACRO MONINT, MPAY = CALCUL(IRM, BALANC, PAY)
   MONINT = IRM*BALANC
   MPAY
          = PAY - MONINT
ENDMAC
MACRO EQUITY, BALANC, TOTINT = CALCU2(MPAY, PASPAY,...
           P, MONINT, PSTINT)
   EQUITY = MPAY + PASPAY
   BALANC = P - EQUITY
   TOTINT = MONINT + PSTINT
   PASPAY = EQUITY
   PSTINT = TOTINT
ENDMAC
RENAME TIME = MONTH
INITIAL
PARAMETER P = 32000.0, I = 9.0, PERIOD = 300.0
           PSTINT = 0.0, TOTINT = 0.0, MONINT = 0.0,...
INCON
           EQUITY = 0.0, PASPAY = 0.0
BALANC = P
IRM = I/1200.0
S = (1.0 + IRM)**PERIOD
PAY = (P*IRM*S)/(S - 1.0)
DYNAMIC
NOSORT
     IF(MONTH.EQ.0.0) GO TO 7
MCNINT, MPAY = CALCUI(IRM, BALANC, PAY)
EQUITY, BALANC, TOTINT = CALCU2(MPAY, PASPAY, P, MONINT, PSTINT)
  7 CONTINUE
TIMER FINTIM =300.0, PRDEL = 1.0, DELT = 1.0, OUTDEL = 10.0
PRINT PAY, MONINT, TOTINT, MPAY, EQUITY, BALANC
TITLE OUTPUT FOR EXAMPLE 3-11
PRTPLT EQUITY(TOTINT)
END
STOP
ENDJOB
```

Fig. 3.43 Program for calculating the amortization of a mortgage.

change TIME to MONTH by the rename statement, as shown in the program. Note that the two macros are placed at the beginning of the program. Also, PSTINT, TOTINT, MONINT, EQUITY, and PASPAY are initialized to zero and BALANC set equal to P(\$32,000). After the NOSORT card a FORTRAN branching statement,

#### IF(MONTH.EQ.O.O) GO TO 7

is placed. This obviously causes the program to by-pass calculations, as desired, at

OUTPUT FOR EXAMPLE 3-11

INTGRL NOT USED

| MONTH        | PAY     |    | MONINT  |    | TOTINT  |    | MPAY    |    | EQUITY    |   | BALANC    |    |
|--------------|---------|----|---------|----|---------|----|---------|----|-----------|---|-----------|----|
| 0.0          | 2.6855E | 02 | 0.0     |    | 0.0     |    | 0.0     |    | 0.0       |   | 3.2000E 0 | 4  |
| 1.0000E 00   | 2.6855E | 02 | 2.4000E | 02 | 2.4000E | 02 | 2.8546E | 01 | 2.8546E 0 | 1 | 3.1971E 0 | )4 |
| 2.0000E 00   | 2.6855E | 02 | 2.3979E | 02 | 4.7979E | 02 | 2.8760E | 01 | 5.7305E 0 | 1 | 3.1943E 0 | 4  |
| 3.0000E 00   | 2.6855E | 02 | 2.3957E | 02 | 7.1936E | 02 | 2•8975E | 01 | 8.6281E 0 | 1 | 3.1914E 0 | 4  |
| 4.0000E 00   | 2.6855E | 02 | 2.3935E | 02 | 9.5871E | 02 | 2.9193E | 01 | 1.1547E 0 | 2 | 3.1885E 0 | )4 |
| 5.0000E 00   | 2.6855E | 02 | 2.3913E | 02 | 1.1978E | 03 | 2.9412E | 01 | 1.4488E 0 | 2 | 3.1855E 0 | 4  |
| 6.0000E 00   | 2.6855E | 02 | 2.3891E | C2 | 1.4368E | 03 | 2.9632E | 01 | 1.7452E 0 | 2 | 3.1825E 0 | )4 |
| 7. CO COE 00 | 2.6855E | 02 | 2.3869E | 02 | 1.6754E | 03 | 2.9854E | 01 | 2.0437E 0 | 2 | 3.1796E 0 | )4 |
| 8.00COE 00   | 2.6855E | 02 | 2.3847E | 02 | 1.9139E | 03 | 3.0078E | 01 | 2.3445E 0 | 2 | 3.1766E 0 | 4  |
| 9.0000E 00   |         | 02 | 2.3824F | 02 | 2.1522E | 03 | 3.0304E | 01 | 2.6475E 0 | 2 | 3.1735E 0 | )4 |
| 1.0000E 01   |         |    | 2.3801F | 02 | 2.3902E | 03 | 3.0531E | 01 | 2.9528E 0 | 2 | 3.1705E 0 | 4  |
| 1.1000E 01   |         |    | 2.3779E | 02 | 2.6280E | 03 | 3.0760E | 01 | 3.2604E 0 | 2 | 3.1674E 0 | )4 |
| 1.2000E 01   |         |    | 2.3755E |    | 2.8655E |    | 3.0991E | 01 | 3.5704E 0 | 2 | 3.1643E 0 |    |

Fig. 3.44 Output from the mortgage program of Fig. 3.43.

MONTH = 0.0. It is important that MONTH be used in this statement. Using TIME in place of MONTH will cause the program to ignore the IF statement and give incorrect results. When a CSMP program variable is renamed, the newly assigned variable should be used in the program.

This example problem was programmed using macro functions simply to illustrate the use of such functions. Obviously, the problem can be written without using a macro and Fig. 3.45 shows one solution using straightforward statements. The output of this program is identical in all respects to the program which uses the macros.

In summary, CSMP can be used for problem solving without integration. The advantage of using CSMP versus FORTRAN will often be that DO loops and subscripted variables are not necessary. This leads to a less demanding effort on the part of the programmer, especially if the programmer is not an expert in using FORTRAN. One disadvantage of using CSMP in problems of this type is that generally slightly more computing time (CPU time) is required.

### Example 3.12

The occasion may arise when the solution of a differential equation of the form

$$a_1\frac{d^3x}{dt^3} + a_2\frac{d^2x}{dt^2} + a_3\frac{dx}{dt} + a_4x = b_1\frac{d^3r}{dt^3} + b_2\frac{d^2r}{dt^2} + b_3\frac{dr}{dt} + b_4r \qquad (3.30)$$

is desired. If we assume all zero initial conditions and all constant coefficients, applying Laplace transforms yields

$$\frac{X(s)}{R(s)} = \frac{b_1 s^3 + b_2 s^2 + b_3 s + b_4}{a_1 s^3 + a_2 s^2 + a_3 s + a_4}$$
(3.31)

This type of problem cannot be handled directly using CSMP system macros such as REALPL and CMPXPL.

The task in this example is to develop a macro which can be used for solving a ratio of polynomials up to the fifth-power with the form

$$\frac{X(s)}{R(s)} = \frac{b_1 s^5 + b_2 s^4 + b_3 s^3 + b_4 s^2 + b_5 s + b_6}{a_1 s^5 + a_2 s^4 + a_3 s^3 + a_4 s^2 + a_5 s + a_6}$$
(3.32)

Define,

$$\frac{Y(s)}{R(s)} = \frac{1}{a_1 s^5 + a_2 s^4 + a_3 s^3 + a_4 s^2 + a_5 s + a_6}$$
(3.33)

```
****
 ****
             EXAMPLE 3-11 WITHOUT USING MACROS
           = BALANCE TO PAY ON THE LOAN
 *
    BALANC
           = INTEREST FOR THE CURRENT MONTH
    MONINT
 *
 *
    TOTINT = TOTAL INTEREST PAID TO DATE
            = AMOUNT PAID ON LOAN FOR THE CURRENT MONTH
 *
   MPAY
*
   EQUITY
           = CURRENT AMOUNT PAID-OFF ON THE LOAN
           = THE MONTHLY INTEREST RATE (IN DECIMAL FORM)
*
   IŔM
*
   PAY
            = THE MONTHLY PAYMENT (A CONSTANT)
RENAME TIME = MONTH
INITIAL
PARAMETER P = 32000.0, I = 9.0, PERIOD = 300.0
INCON PSTINT = 0.0, TOTINT = 0.0, MONINT = 0.0,...
           EQUITY = 0.0, PASPAY = 0.0
BALANC = P
IRM = I/1200.0
S = (1.0 + IRM)**PERIOD
PAY = (P*IRM*S)/(S - 1.0)
DYNAMIC
NUSORT
     IF(MONTH.EQ.0.0) GD TO 7
     MONINT = IRM*BALANC
     MPAY = PAY - MONINT
     EQUITY = MPAY + PASPAY
     BALANC = P - EQUITY
     TOTINT = MONINT + PSTINT
     PASPAY = EQUITY
     PSTINT = TOTINT
   7 CONTINUE
TIMER FINTIM = 300.0, PRDEL = 1.0, DELT = 1.0, OUTDEL = 10.0
PRINT PAY, MONINT, TOTINT, MPAY, EQUITY, BALANC
TITLE OUTPUT FOR EXAMPLE 3-11 WITHOUT MACROS
END
STOP
ENDJOB
```

Fig. 3.45 Program for calculating mortgage payments without using macros.

and

$$\frac{X(s)}{Y(s)} = b_1 s^5 + b_2 s^4 + b_3 s^3 + b_4 s^2 + b_5 s + b_6 \tag{3.34}$$

In the time domain, Eq. (3.33) becomes

$$a_1 \frac{d^5 y}{dt^5} + a_2 \frac{d^4 y}{dt^4} + a_3 \frac{d^3 y}{dt^3} + a_4 \frac{d^2 y}{dt^2} + a_5 \frac{dy}{dt} + a_6 y = r$$
(3.35)

Now define

$$y_1 = y$$
$$\frac{dy_1}{dt} = \frac{dy}{dt} = y_2$$
$$\frac{dy_2}{dt} = \frac{d^2y}{dt^2} = y_3$$

$$\frac{dy_3}{dt} = \frac{d^3y}{dt^3} = y_4$$

$$\frac{dy_4}{dt} = \frac{d^4y}{dt^4} = y_5$$

$$\frac{dy_5}{dt} = \frac{d^5y}{dt^5} = \frac{1}{a_1} [r - a_6y_1 - a_5y_2 - a_4y_3 - a_3y_4 - a_2y_5]$$

From Eq. (3.34), after going to the time domain and making appropriate substitutions, we have

$$x = b_6 y_1 + b_5 y_2 + b_4 y_3 + b_3 y_4 + b_2 y_5 + b_1 \frac{dy_5}{dt}$$
(3.36)

$$\frac{dy_5}{dt} = \frac{d^5y}{dt^5} \tag{3.37}$$

where

An appropriate macro for these equations is

MACRO XOUT = TRANSF (BN, AD, IN) Y1 = INTGRL (0.0, Y2) Y2 = INTGRL (0.0, Y3) Y3 = INTGRL (0.0, Y4) Y4 = INTGRL (0.0, Y5) Y5 = INTGRL (0.0, Y5DOT) Y5DOT = (1.0/AD(1))\*(IN-AD(6)\*Y1-AD(5)\*Y2-AD(4)\*Y3-AD(3)\*...Y4-AD(2)\*Y5) XOUT = BN(6)\*Y1+BN(5)\*Y2+BN(4)\*Y3+BN(3)\*Y4+BN(2)\*... Y5+BN(1)\*Y5DOT

**ENDMAC** 

The parameters for the polynomials can be placed in the macro using TABLE and STORAGE. For this case,

STORAGE BNUM1(6), ADEN1(6) TABLE BNUM1(1-6) = N1, N2, N3, N4, N5, N6, ... ADEN1(1-6) = D1, D2, D3, D4, D5, D6, ...

where BNUM1 and ADEN1 are dummy names for the numerator and denominator coefficients.

Care must be exercised in using the TABLE with this general fifth-order system. For example, if the particular transfer function is

$$\frac{2s^2 + 4s + 3}{9s^3 + 6s^2 + 5s + 8} \tag{3.38}$$

the polynomial should be viewed as

$$\frac{0s^3 + 2s^2 + 4s + 3}{9s^3 + 6s^2 + 5s + 8} \tag{3.39}$$

The parameters should be read in as

TABLE BNUM1(1-6) = 0.0, 2.0, 4.0, 3.0, 0.0, 0.0, ... ADEN1(1-6) = 9.0, 6.0, 5.0, 8.0, 0.0, 0.0 where N1 = 0.0 D1 = 9.0 N2 = 2.0 D2 = 6.0 N3 = 4.0 D3 = 5.0 N4 = 3.0 D4 = 8.0 N5 = 0.0 D5 = 0.0N6 = 0.0 D6 = 0.0

As an illustration of using this MACRO in a system, consider the diagram in Fig. 3.46. The program, which invokes the macro twice, is given in Fig. 3.47.

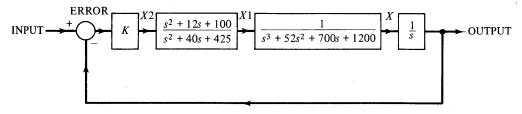


Fig. 3.46 System diagram for Example 3.12, illustrating the use of a macro function.

Note that BNUM1, ADEN1, and X2 replace N, D, and IN respectively for one reference to the macro. On the second reference, BNUM2, ADEN2, and X1 replace N, D, and IN. This explains the reason for naming the STORAGE and TABLE values BNUM1, BNUM2, ADEN1, and ADEN2.

The guidelines and examples which have been presented in this section on generating macro functions should serve as a good foundation for the beginning user. The scope of a problem will usually determine whether a special macro function should be written. Obviously, when properly used, a macro function can save considerable programming effort.

The power of the macro is further increased when used with procedure functions. The following section will show how this is accomplished.

### **PROCEDURE FUNCTION**

As in the macro, a procedure function offers another way for users to define their own simulation functions. The major differences between these two translation control statements are (a) the macro is called within the program in a way that is analogous to calling a subroutine, the procedure function is a single entity within the program and is not called; (b) macro structure statements are sorted by the sorting algorithm while structure statements of the procedure function are not sorted. Therefore, the statements of a procedure function can be so written as to utilize FORTRAN logical and branching statements as well as subscripted variables.

```
********
* A MACRO MUST BE PLACED AT THE FRONT OF THE DECK *
********
MACRO XOUT = TRANSF(BN, AD, IN)
  Y1 = INTGRL(0.0, Y2)
  Y2 = INTGRL(0.0, Y3)
  Y3 = INTGRL(0.0, Y4)
  Y4 = INTGRL(0.0, Y5)
  Y5 = INTGRL(0.0, Y5D0T)
¥5DOT = (1.0/AD(1))*(IN-AD(6)*¥1-AD(5)*¥2-AD(4)*¥3-AD(3)*¥4-AD(2)*¥5)
XOUT = BN(6)*Y1+BN(5)*Y2+BN(4)*Y3+BN(3)*Y4+BN(2)*Y5+BN(1)*Y5DOT
ENDMAC
*******
* NOTE THAT STORAGE SIZE OF ALL ELEMENTS ARE SO INDICATED ON
                                                    *
                THE SINGLE FOLLOWING CARD
*************
STORAGE BNUM1(6), ADEN1(6), BNUM2(6), ADEN2(6)
********
* THE PARTICULAR VALUES OF THE STORAGE LOCATIONS ARE GIVEN *
* USING "TABLE". NOTE THAT TABLE IS TYPED ONLY ONCE AND
                                               *
       AND THE ... FEATURE IS USED FOR CONTINUATION
                                                *
************************
TABLE
       BNUM1(1-6) = 1.0, 12.0, 100.0, 3*0.0, ...
       ADEN1(1-6) = 1.0, 40.0, 425.0, 3*0.0,...
       BNUM2(1-6) = 3*0.0, 1.0, 2*0.0, ...
       ADEN2(1-6) = 1.0, 52.0, 700.0, 1200.0, 2*0.0
PAPAMETER
         K = 3000.0
INPUT = STEP(0.0)
ERROR = INPUT - CUTPUT
X2 = K \times ERROR
X1 = TRANSF(BNUM1, ADEN1, X2)
X = TRANSF(BNUM2, ADEN2, X1)
OUTPUT = INTGRL(0,0, X)
TIMER FINTIM = 20.0, OUTDEL = 0.4
PRTPLT OUTPUT
LABEL OUTPUT OF SYSTEM WITH DOUBLE INVOCATION OF
LABEL TRANSFER FUNCTION MACRO - EXAMPLE 3-12
END
STOP
ENDJOB
```

Fig. 3.47 Program showing the use of a transfer function macro.

Except for a single important difference, one can achieve the same programming objectives with a nosort section as with a procedure function. This important difference is that a nosort section forms a division between sorted sections of the program. All statements occurring before a nosort section remain above the section. Likewise, statements made after a nosort section always remain after the section. However, statements within a procedure function are never sorted but the function itself is treated as a single entity and moved around within the overall program as required by the sorting algorithm.

The basic structure of a procedure function is given in the following example.


```
PROCEDURE MASS = MVARY (SLOPE, SWITCH, MASSO)
IF (TIME. GE. SWITCH) GO TO 14
MASS = MASSO * (1.0 + SLOPE*TIME)
GO TO 8
14 MASS = MASSO * (1.0 + SLOPE*SWITCH)
8 CONTINUE
```

ENDPROCEDURE

Suppose for a given problem that SLOPE = -0.2 and SWITCH = 3.0. We assume these values have been entered previously on a parameter card. A condition for branching is set up by a logical IF statement involving TIME and SWITCH. The procedure function for this case will determine the time varying MASS as given in Fig. 3.48. This procedure function can be located essentially anywhere in the DYNAMIC segment of a simulation requiring the time-varying mass. The sort algorithm will place the procedure function in the correct position relative to other program statements. The time-varying characteristics of the mass can easily be changed by inserting new values for MASSO, SWITCH and SLOPE on parameter cards.

Although many of the structure format statements for using a procedure function are similar to a macro, the procedure accomplishes a different purpose and the following rules should be observed.

1 The first card of the procedure contains the word PROCEDURE followed by at least one blank space. A simple illustration is

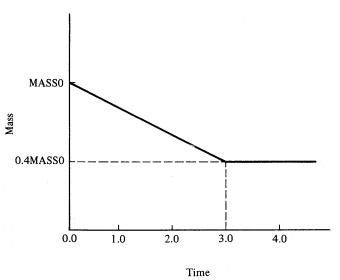

PROCEDURE JX, AMP = XFUN(XUP, PAR1, SIGNAL)

Fig. 3.48 Diagram of time-varying mass used in PROCEDURE illustration.

- 2 Unlike a macro, the arguments of a procedure cannot be functions, expressions, or numbers. They must be names defined elsewhere in the program.
- 3 As noted above, the first card of a procedure contains the word PRO-CEDURE. The very last card contains the single word, ENDPROCEDURE. All statements describing the procedure function are placed between the PROCEDURE card and the ENDPROCEDURE card. Since CSMP takes action on the first five characters of these words, the user may replace PROCEDURE by PROCED, and ENDPROCEDURE by ENDPRO.
- 4 As with the macro function, variables defined within a procedure are not available as output data by means of PRTPLT, PRINT, PREPARE or RANGE unless they are output names on the procedure definition card. In the following example,

```
PARAM CONST1 = 0.5, CONST2 = 0.1

PROCEDURE X1, X2 = READY(CONST1, CONST2)

X1 = CONST1*EXP**(-3.0*TIME)

X2 = CONST2*X1**2

X3 = INTGRL(0.0, X1)

ENDPROCEDURE

TIMER FINTIM = 1.0, PRDEL = 0.02

PRINT X1, X2

END

STOP

ENDJOB
```

X3 is not available as output data; however, output is available for X1 and X2. Changing the definition card to

PROCEDURE X1, X2, X3 = READY (CONST1, CONST2)

will make X3 available as output data.

- 5 The procedure function may be located in both INITIAL and DYNAMIC segments. (Since the TERMINAL segment executes statements in the order they appear, a procedure function would not serve a useful purpose in this segment.) The procedure may not be placed in a nosort section.
- 6 Procedure functions may be placed within a macro. Even though the macro statements are sorted, the statements contained within each procedure will not be sorted except as a single block.
- 7 Procedure functions within a macro may not be used to invoke other macros. A macro, however, may invoke another macro which itself may contain one or more procedure functions.
- 8 A procedure function cannot be placed within another procedure function.
- 9 If the user desires all statements in a macro to be procedural then a single card containing the word PROCEDURAL should be placed immediately

after the macro definition card. For example, the procedure function given previously in this section may be changed to a macro as follows:

```
MACRO MASS = MVARY (SLOPE, SWITCH, MASSO)

PROCEDURAL

IF (TIME.GE.SWITCH) GO TO 14

MASS = MASSO*(1.0 + SLOPE*TIME)

GO TO 8
MASS = MASSO*(1.0 + SLOPE + SWITCH)

8 CONTINUE

ENDMAC
```

Note that an ENDPROCEDURE card is not to be used in this case. Restrictions placed upon the arguments of MVARY, when used as a procedure function, are now removed and consequently the arguments now conform to those of a macro.

Most of the guidelines presented here on using the procedure function are applied in the following rather comprehensive problem.

#### Example 3.13

The purpose of this problem is to illustrate how CSMP can be applied to simulating four-way traffic flow at a signal light. The simulation makes use of the procedure function as well as several other program features. These additional features include the mode integrator and the logic functions AND and NOT.

The first step of the problem is to develop a reasonable model for traffic flow. In the diagram in Fig. 3.49 we assume that traffic flows from east to west, west to east, north to south and south to north. The assumption is made that cars do not turn at the light. The justification for making this assumption is simply to avoid the added complication in the problem. Turning traffic could be included with the addition of ten to twelve program statements.

The first consideration is to establish the flow of traffic. One must recognize that the spacing between cars is a random variable even with a given density of traffic flow. The one exception is when the through-put (flow) is maximum. For example, in a 20 mph speed zone, we assume maximum through-put when the distance between each car is constant and each car is traveling at the maximum speed limit. This situation is shown in Fig. 3.50.

To simplify the flow modeling we assume each car approaching the intersection is traveling at the same velocity but with a random arrival. Intuitively we know that even with random spacing between cars, the density or compactness of the traffic varies during the time of day. For this problem we assume the traffic density is as shown in Fig. 3.51. The intended interpretation here is that a relative density of one represents maximum traffic through-put as discussed earlier.

The problem becomes one of producing a string of random traffic having a given density. This can be accomplished as follows. Define an impulse train by

ETRIG = IMPULS(0.0, EPERID)


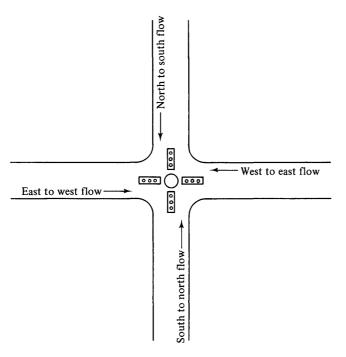


Fig. 3.49 Diagram showing intersection geometry at the traffic light.

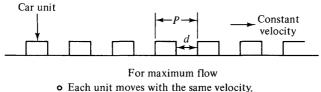

• The space, d, between each car is the same.

• The period of each unit is P sec.

Fig. 3.50 Spacing of cars for maximum flow rate.

where the pulse train starts at 0.0 and has a spacing of EPERID sec. The spacing EPERID is set equal to the period, P, corresponding to maximum traffic flow shown earlier in Fig. 3.50. Next a random-variable sequence of numbers between 0 and 1 is made available from the random-number generator, RNDGEN.

Thus 
$$ERAND = RNDGEN(3)$$

where ERAND is the selected name of the sequence and 3 is a seed value (any odd integer). Now define a time-varying function, ESIG, such that

$$ESIG = EDENSE - ERAND$$

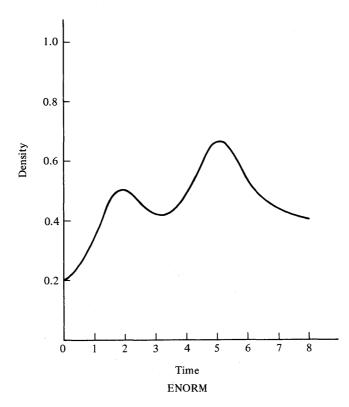


Fig. 3.51 Normalized east to west traffic density.

where EDENSE is the value of the traffic density (from Fig. 5.51) at a particular time. ESIG will be a random number between -1 and 1. If EDENSE is greater than ERAND, ESIG will be positive and this signifies that a car should be generated at this time. Conversely, if ESIG is negative, no car is generated. By using the logical AND function with ETRIG and ESIG as arguments, a trigger for a pulse generator is formed. The width of the pulse from the generator can be set to the length of a car. The statements required are

ESINK = AND(ESIG, ETRIG)EFLOW = PULSE(EWIDTH, ESINK)

where EWIDTH is a parameter (the car length) and EFLOW is the flow of traffic. AND is a logical function defined by

Y = AND(X1, X2) Y = 1 if X1, X2 > 0Y = 0 otherwise

By combining the above statements, one can write a procedure function for generating EFLOW as follows.

```
PROCEDURE EFLOW = EFORM(EWIDTH, EPERID)
ETRIG = IMPULS(0.0, EPERID)
ERAND = RNDGEN(3)
EDENSE = AFGEN(ENORM, TIME)
ESIG = EDENSE -- ERAND
ESINK = AND(ESIG, ETRIG)
EFLOW = PULSE(EWIDTH, ESINK)
ENDPRO
```

The value of EDENSE is determined by using the linear interpolater, AFGEN, where the function is defined by the data of Fig. 3.51. Thus,

FUNCTION ENORM =  $(0.0,0.2),(0.5,0.25),(1.0,0.34),\ldots$ (1.5,0.46),(2.0,0.5),(2.5,0.45),(3.0,0.42),(3.5,0.43),... (4.0,0.48),(4.5,0.58)

Use of the AFGEN was previously explained in Chap. 1. At this point in the simulation development the user should write a short program and verify that EFORM is correctly generated. A short program for this purpose is given in Fig. 3.52 and the resulting output is presented in Fig. 3.53.

```
FUNGTION ENDRM = (0.0, 0.2), (.5, .25), (1., .34), (1.5, .46), (2., .5), ...
     (2.5,.45), (3.,.42), (3.5,.43), (4.,.48), (4.5,.58), (5.,.66)
PARAM EWIDTH = 0.01, EPERID = 0.02
  NOTE ON THE FOLLOWING PROCEDURE TRANSLATION CONTROL CARD
    THAT ALL VARIABLES REQUESTED FOR PRINTING MUST BE LISTED AS
                OUTPUTS OF THE PROCEDURE FUNCTION
*******
PROCEDURE ETRIG, EDENSE, ERAND, ESIG, EFLOW = EFORM(EWIDTH, EPERID)
     ETRIG = IMPULS(0.0, EPERID)
     ERAND = RNDGEN(3)
     EDENSE = AFGEN(ENCRM, TIME)
     ESIG = EDENSE - ERAND
     ESINK = AND(ESIG, ETRIG)
     EFLOW = PULSE(EWIDTH, ESINK)
ENDPRO
TIMER FINTIM = 0.2, PRDEL = 0.002, DELT = 0.002
PRINT ETRIG, EDENSE, ERAND, ESIG, EFLOW
TITLE I******
               TEST FOR RANDOM PULSE GENERATOR - EXAMPLE 3-13 ******
END
STOP
ENDJOB
```

Fig. 3.52 Program for testing the random generation of a string of cars.

Having developed a reasonable representation of traffic flow, attention is next directed to the problem of determining (a) how many cars have approached the light; (b) how many cars have passed under the light; and (c) how many cars are waiting at any given instant of time. The total number of cars approaching the light can be determined by integrating the traffic flow and dividing by the width of a car pulse. This can be deter-

| I*****     | TEST FOR RAND | OM PULSE GEN | ERATOR - E | XAMPLE 3-13 * | ****       |
|------------|---------------|--------------|------------|---------------|------------|
| TIME       | ETRIG         | EDENSE       | ERAND      | ESIG          | FFLOW      |
| 0.0        | 1.0000E 00    | 2.0006-01    | 9.1557E-05 | 1.9991E-01    | 1.0000E 00 |
| 2.0000E-03 | 0.0           | 2.00205-01   | 5.4933E-04 | 1.9965E-01    | 1.0000E 00 |
| / 0000E-03 | 0 0           | 2 00/05 01   | 2 /7205-02 | 1 07025-01    | 1 00005 00 |

| 2.0000E-03  | 0.0     |     | 2.00208-01  | 5.4933E-04 | 1.9965E-01  | 1.00005  | 00 |
|-------------|---------|-----|-------------|------------|-------------|----------|----|
| 4.0000E-03  | 0.0     |     | 2.0040E-01  | 2.4720E-03 | 1.9793E-01  | 1.0000E  | 00 |
| 6.0000E-03  | 0.0     |     | 2.0060E-01  | 9.8878E-03 | 1.9071E-01  | 1.0000E  | 00 |
| 8.0000E-03  | 0.0     |     | 2.0080E-01  | 3.70798-02 | 1.6372E-01  | 1.0000E  | 00 |
| 1.00COE-02  | 0.0     |     | 2.0100E-01  | 1.3348E-01 | 6.7515E-02  | 1.000 CE |    |
| 1.2000E-02  | 0.0     |     | 2.0120E-01  |            | -2.6600E-01 | 0.0      | •• |
| 1.40 COE-02 | 0.0     |     | 2.0140E-01  | 6.0182E-01 | -4.00425-01 | 0.0      |    |
| 1.6000E-02  | 0.0     |     | 2.0160E-01  |            | -2.0452E-01 | 0.0      |    |
|             |         |     |             |            |             |          |    |
| 1.8000E-02  | 0.0     | ~~  | 2.0180E-01  | 2.0407E-02 | 1.8139E-01  | 0.0      |    |
| 2.0000E-02  | 1.0000E | 00  | 2.0200E-01  |            | -2.6532E-01 | 0.0      |    |
| 2.2000E-02  | 0.0     |     | 2.0220E-01  | 6.2025E-01 | -4.1805 -01 | 0.0      |    |
| 2.4000E-02  | 0.0     |     | 2.0240E-01  |            | -3.1322E-01 | 0.0      |    |
| 2.6000E-02  | 0.0     |     | 2.02605-01  |            | -3.0890E-01 | 0.0      |    |
| 2.80 COE-02 | 0.0     |     | 2.0280E-01  |            | -2.2560E-01 | 0.0      |    |
| 3.0000E-02  | 0.0     |     | 2.0300E-01  |            | -7.6387E-01 | 0.0      |    |
| 3.2000E-02  | 0.0     |     | 2.0320E-01  |            | -7.4244E-01 | 0.0      |    |
| 3.4000E-02  | 0.0     |     | 2.0340E-01  |            | -7.6855E-01 | 0.0      |    |
| 3.6000E-02  | 0.0     |     | 2.0360E-01  |            | -1.1736E-01 | 0.0      |    |
| 3.8000E-02  | 0.0     |     | 2.0380E-01  | 1.7823E-01 | 2.5567E-02  | 0.0      |    |
| 4.0000E-02  | 1.0000E | 00  | 2.0400E-01  | 1.80792-01 | 2.3215E-02  | 1.000 CE | 00 |
| 4.2000E-02  | 0.0     |     | 2.0420E-01  |            | -2.7642E-01 | 1.0000E  | 00 |
| 4.4000E-02  | 0.0     |     | 2.0440E-01  |            | -5.2244E-02 | 1.000CE  | 00 |
| 4.60C0E-02  | 0.0     |     | 2.0460E-01  |            | -9.6995E-03 | 1.0000E  | 00 |
| 4.8000E-02  | 0.0     |     | 2.0480E-01  | 9.7600E-01 | -7.7120E-01 | 1.0000E  | 00 |
| 5.0000E-02  | 0.0     |     | 2.0500E-01  | 9.27295-01 | -7.2229E-01 | 1.0000E  | 00 |
| 5.2000E-02  | 0.0     |     | 2.05205-01  | 7.7977E-01 | -5.7457E-01 | 0.0      |    |
| 5.40C0E-02  | 0.0     |     | 2.0540E-01  | 3.3299E-01 | -1.2759E-01 | 0.0      |    |
| 5.6000E-02  | 0.0     |     | 2.0560E-01  | 9.8003E-01 | -7.7443E-01 | 0.0      |    |
| 5.8000E-02  | 0.0     |     | 2.0580E-01  | 8.8322E-01 | -6.7742E-01 | 0.0      |    |
| 6.0000E-02  | 1.0000E | 00  | 2.0600E-01  | 4.7910E-01 | -2.7310E-01 | 0.0      |    |
| 6.2000E-02  | 0.0     |     | 2.0620E-01  | 9.2562E-01 | -7.1942E-01 | 0.0      |    |
| 6.4000E-02  | 0.0     |     | 2.0640E-01  | 2.4180E-01 | -3.5397E-02 | 0.0      |    |
| 6.6000E-02  | 0.0     |     | 2.0660E-01  | 1.2020E-01 | 8.6404E-02  | 0.0      |    |
| 6.8000E-02  | 0.0     |     | 2.0680E-01  | 5.4501E-01 | -3.3821E-01 | 0.0      |    |
| 7.CO00E-02  | 0.0     |     | 2.0700E-01  | 1.8827E-01 | 1.8727E-02  | 0.0      |    |
| 7.2000E-02  | 0.0     |     | 2.0720E-01  |            | -1.7379E-02 | 0.0      |    |
| 7.4000E-02  | 0.0     |     | 2.0740E-01  |            | -4.4561E-01 | 0.0      |    |
| 7.6000E-02  | 0.0     |     | 2.C760E-01  |            | -6.8928E-01 | 0.0      |    |
| 7.80C0E-02  | 0.0     |     | 2.0780E-01  |            | -2.9634E-01 | 0.0      |    |
| 8.0000E-02  | 1.0000E | 00  | 2.0800E-01  |            | -7.4495E-01 | 0.0      |    |
| 8.20C0E-02  | 0.0     | ••• | 2.0820E-01  | 1.8040E-01 | 2.7796E-02  | 0.0      |    |
| 8.4000E-02  | 0.0     |     | 2.0840E-01  |            | -2.9750E-01 | 0.0      |    |
| 8.60005-02  | 0.0     |     | 2.0860E-01  |            | -2.0318E-01 | 0.0      |    |
| 8.8000E-02  | 0.0     |     | 2.0880E-01  |            | -7.0877E-01 | 0.0      |    |
| 9.0000E-02  | 0.0     |     | 2. C900E-01 |            | -5.9038E-01 | 0.0      |    |
| 9.2000E-02  | 0.0     |     | 2.0920E-01  |            | -3.2892E-01 | 0.0      |    |
| 9.4000E-02  | 0.0     |     | 2.0940E-01  | 3.4321E-02 | 1.7508E-01  | 0.0      |    |
| 9.4000E-02  | 0.0     |     | 2.0940E-01  |            | -1.5322E-01 |          |    |
| 9.8000E-02  |         |     |             |            |             | 0.0      |    |
|             | 0.0     | 00  | 2.0980E-01  |            | -6.5823E-01 | 0.0      |    |
| 1.0000E-01  | 1.0000E | 00  | 2.1000E-01  |            | -7.3281E-01 | 0.0      |    |
| 1.0200E-01  | 0.0     |     | 2.1020E-01  |            | -6.3437E-01 | 0.0      |    |
| 1.0400E-01  | 0.0     |     | 2.1040E-01  |            | -3.7176E-01 | 0.0      |    |
| 1.0600E-01  | 0.0     |     | 2.1060E-01  |            | -6.8116E-01 | 0.0      |    |
| 1.0800E-01  | 0.0     |     | 2.10802-01  | 1.1116E-01 | 9.9635E-02  | 0.0      |    |
|             |         |     |             |            |             |          |    |

Fig. 3.53 The printer-plotted output from the program of a random pulse generator.

mined using the INTGRL function as

ELEFT = INTGRL(0.0, EFLOW)ETOTAL = ELEFT/EWIDTH

where ETOTAL is the total traffic arriving from the east.

For simplicity, the state of the light is assumed to be either green or red with amber ignored. The number of cars passing under the light can now be determined using the mode integrator function whose characteristics are given in Table 3.4.

#### Table 3.4

#### Mode Integrator Function

| CSMP Statement             | Mathematical Equivalent   |
|----------------------------|---|
| Y = MODINT(IC, X1, X2, X3) | $y(t) = \int x_3(t) dt + IC  x_1 > 0, \text{ any } x_2$<br>$y(t) = IC  x_1 \le 0, \ x_2 > 0$<br>$y(t) = \text{last output}  x_1 \le 0, \ x_2 \le 0$ |

The input signal  $X_3$  should be the actual traffic passing under the light with  $X_1$  the state of the light. Thus, if  $X_1$  is greater than zero (the light is green), y(t) increases by integrating  $X_3$ . When the light changes to red,  $X_1$  equals zero and y(t) holds the last output value. Any non-positive number for  $X_2$  can be used. Expressing this in program variables gives

> ERIGHT = MODINT(0.0, EWLITE, -1.0, EWX2)EPASED = ERIGHT/EWIDTH

where EWLITE = state of the east-west light

EWX2 = the pulses passing under the light

EPASED = the total number of cars passed through the light

The traffic backed-up at any time on the east side is given by

## EBAKUP = ELEFT - ERIGHTEWAIT = EBAKUP/EWIDTH

where EWAIT is the actual traffic backed up or waiting on the east side.

The excitation signal, EWX2, must take the following into account. When the light changes from red to green, traffic will not move instantaneously. We assume the flow linearly increases with time up to the limit of maximum through-put. Once the maximum flow is reached, the excitation will remain at this level until EBAKUP reaches zero. Once EBAKUP reaches zero, EWX2 should be changed to EFLOW. Suppose we assume that after 8 car units have passed under the light, EWX2 reaches the maximum value of EWIDTH/EPERID.

A program which combines the generation of random traffic with traffic volumn in the east to west direction is given in Fig. 3.54. The correct state of EWX2 is determined by the procedure function EWX3 except for testing the state of EBAKUP. Logically, this test should also be made in the EWX3 procedure function but in attempting to do so an algebraic loop will be formed between ERIGHT, EBAKUP, and EWX3. This algebraic loop is avoided by testing the state of EBAKUP in a NOSORT segment.

```
FUNCTION ENORM = (0.0,0.2),(.5,.25),(1.,.34),(1.5,.46),(2.,.5),...
      (2.5,.45), (3.,.42), (3.5,.43), (4.,.48), (4.5,.58), (5.,.66)
PARAM EWIDTH = 0.012, EPERID = 0.024, CYCLE = 1.0, EBAKUP = 0.0
LITRIG = IMPULS (0.0,CYCLE)
EWLITE = PULSE(CYCLE/2.0,LITRIG)
ETRIG = IMPULS(0.0, EPERID)
PROCEDURE EFLCW = EFORM(ETRIG)
      ERAND = RNDGEN(3)
      EDENSE = AFGEN(ENORM, TIME)
      ESIG = EDENSE - ERAND
      ESINK = AND(ESIG, ETRIG)
      EFLOW = PULSE(EWIDTH, ESINK)
ENDPRO
NOSORT
IF(EBAKUP.GT.O.O) EWX2 = EWX3
IF(EBAKUP.LE.O.O) EWX2 =EFLOW
SORT
ELEFT = INTGRL(0.0,EFLOW)
ERIGHT = MODINT(0.0, EWLITE, -1.0, EWX2)
EBAKUP = ELEFT-ERIGHT
PROCEDURE EWX3 = GENRAL(EWLITE, EFLOW, CYCLE, EWIDTH, EPERID)
      IF(TIME.LT.(CYCLE/2.0)) GO TO 19
      IF(EWLITE.EQ.0.0) GO TO 21
      IF(EPASLT.EQ.0.0) OLDTIM = TIME
      EDELT = TIME - OLDTIM
      IF(EDELT.GE.(8.0*EPERID)) GO TO 23
      EWX3 = ((EWIDTH)/(8.0*(EPERID**2)))*EDELT
      EPASLT = EWLITE
      GO TO 27
 21
      EWX3 = 0.0
      EPASLT = 0.0
      GO TO 27
 19
      EPASLT = 0.0
      IF(EWLITE.GT.0.0) EWX3 = EFLOW
      IF(EWLITE GE \cdot 0 \cdot 0) EWX3 = 0 \cdot 0
      GO TO 27
 23
      EWX3 = EWIDTH/EPERID
 27
      CONTINUE
ENDPRO
ETOTAL = ELEFT/EWIOTH
EPASED = ERIGHT/EWIDTH
EWAIT = EBAKUP/EWIDTH
TIMER FINTIM = 1.0, OUTDEL = 0.02, PRDEL = 0.02
PRTPLT ETOTAL, EPASED, EWAIT
LABEL TEST FOR TRAFFIC MODEL - EXAMPLE 3-13
END
STOP
ENDJOB
```

Fig. 3.54 Traffic simulation program for east to west traffic.

This same basic model applies to west-east, north-south, and south-north traffic and in a natural way invites the use of macro functions.

A simpler program could have been written to illustrate the use of the procedure function. However, most meaningful real-world simulations require combinations of several CSMP features. The intention here has been to show how the procedure function can typically be used as an element in a more comprehensive simulation.

## **Fortran Subprograms**

There are two forms of subprograms that can be used in CSMP programs, FORTRAN function and subroutine. The function subprogram can be used whenever the output is a single variable. A subroutine must always be used when there are multiple outputs.

The MACRO and PROCEDURE functions essentially serve the same purpose as subprograms and are generally preferred. However, subprograms do have certain advantages not found in the macro and procedure functions. The following is a listing of the most important advantages.

- 1 FORTRAN subprograms that are stored in the computer's system library can be called directly by CSMP programs.
  - 2 The statements of a subprogram are not processed by the CSMP translator. Consequently, larger models can be developed by using subprograms.
  - 3 Subprograms used in CSMP programs are compatible in FORTRAN programs. Therefore, subprograms can be interchanged between CSMP and FORTRAN programs.

## **General Guidelines**

The rules for writing a subprogram for the use in a CSMP program are exactly the same as for a FORTRAN program. If needed, the reader should refer to specialized texts on FORTRAN<sup>(2-5)</sup> for a complete discussion on this topic. Implementation of subprograms in CSMP is somewhat different than in FORTRAN. Special considerations that must be followed are outlined by the following general rules.

- 1 All subprograms must follow the STOP card and furthermore, the last subprogram must be terminated by the ENDJOB card.
- 2 The following CSMP functional elements cannot be used in subprograms: INTGRL, DERIV, DELAY, ZHOLD, IMPL, MODINT, REALPL, LEDLAG, CMPXPL, HSTRSS, STEP, IMPULS, PULSE, RAMP, SINE, GAUSS, RNDGEN, and any user-defined macro function.
- 3 A FORTRAN function subprogram can be invoked in all segments and sections of a CSMP program. This includes invocations in macro and procedure functions. Using input variables P, Q, and R, a statement for calling the function XYZ is

X = XYZ(P, R, Q)

4 A FORTRAN subroutine can be called by two different methods. The CALL statement which is used in FORTRAN programs is only allowed in nosort sections and procedure functions. An example of a CALL statement for the subroutine named ABC is the following.

CALL ABC(
$$P$$
,  $Q$ ,  $R$ ,  $X$ ,  $Y$ )

If the output variables of the subroutine are on the right-hand side of the argument list of the subroutine, a second method for calling a subroutine can be used. This method can be used in all sections and segments, including macro and procedure functions. An example of this type of statement for the same ABC subroutine is shown below.

X, 
$$Y = ABC(P, Q, R)$$

It should be reemphasized that the above statement can only be used when the outputs X and Y are the last variables in the argument list of the subroutine.


Another limitation for using the above form for calling a subroutine is that it can only be used when there are two or more output variables.

- 5 When calling a FORTRAN subroutine that is stored in computer memory, the CALL form must be used in a nosort section or procedure function.
- 6 If the output of a subprogram includes subscripted variables, the calling statement in the CSMP program must be in a nosort section of a procedure function. All subscripted variables used as inputs or outputs must be declared on either a STORAGE or DIMENSION card.

The following example program illustrates the use of a FORTRAN subroutine to calculate the roots of a quadratic equation of the following form;

$$Ax^2 + Bx + C = 0 (3.40)$$

In this program the inputs to the subroutine are the coefficients A, B, and C. The outputs returned by the subroutine are the real part of the solution: X1REAL and X2REAL; and the imaginary part of the solution, X1IM and X2IM.

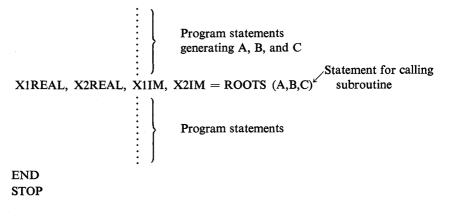

```
SUBROUTINE ROOTS (A,B,C,XIREAL,X2REAL,X1IM,X2IM)
      IF(B*B - 4.0*A*C) 1,2,3
      1 X1REAL = -B/(2.0*A)
        X2REAL = X1REAL
        X1IM
               = SQRT(4.0*A*C-B*B)/(2.0*A)
        X2IM
               = -X1IM
        GO TO 4
      2 X1REAL = -B/(2.0*A)
        X2REAL = X1REAL
       X1IM
               = 0.0
       X2IM
               = 0.0
        GO TO 4
      3 X1REAL = (-B+SQRT(B*B-4.0*A*C))/(2.0*A)
       X2REAL = (-B - SQRT(B*B - 4.0*A*C))/(2.0*A)
       X1IM
               = 0.0
       X2IM
               = 0.0
      4 CONTINUE
       RETURN
       END
ENDJOB
```

The statement used in the above example program for calling the subroutine can be used in all segments and sections of the program. The following statement can also be used to call the subroutine, but it must be used in a nosort section or procedure function.

CALL ROOTS(A, B, C, X1REAL, X2REAL, X1IM, X2IM)

### Example 3.14

One method for solving a set of simultaneous differential equations is to solve for the highest derivative of each variable and then successively integrate to obtain the total answer. This approach sometimes requires solving a set of simultaneous algebraic equations. As an example, consider the following problem,

$$\ddot{x}_1 + (t^2 + 4)\ddot{x}_2 = -0.5\dot{x}_1 - 1.7x_1 + 0.3x_2 + 0.21x_3^3 + \sin(t)$$
 (3.41)

$$5\ddot{x}_1 + 24\ddot{x}_3 = 0.017tx_1 - 5\dot{x}_2 - x_2 + 0.1x_3 + 1.6\dot{x}_3$$
(3.42)

$$56\ddot{x}_1 + 2t\ddot{x}_2 + 100\ddot{x}_3 = \dot{x}_1\dot{x}_2 - x_3 - 2.4\dot{x}_3 + e^{-x_1/23}$$
(3.43)

where all initial conditions are zero.

The method of solution is to first solve for  $\ddot{x}_1$ ,  $\ddot{x}_2$ , and  $\ddot{x}_3$  as functions of the other variables that appear in the equations. This requires the solution of a set of simultaneous linear algebraic equations as shown by Eq. (3.44).

$$XDD = A^{-1}Y \tag{3.44}$$

where A, XDD, and Y are defined by the following matrices.

$$A = \begin{bmatrix} 1 & t^2 + 4 & 0 \\ 5 & 0 & 24 \\ 56 & 2t & 100 \end{bmatrix}$$
(3.45)

$$XDD = \begin{bmatrix} \ddot{x}_1 \\ \ddot{x}_2 \\ \vdots \\ \ddot{x}_3 \end{bmatrix}$$
(3.46)

$$Y = \begin{bmatrix} -0.5\dot{x}_1 - 1.7x_1 + 0.3x_2 + 0.21x_3^3 + \sin(t) \\ 0.017tx_1 - 5\dot{x}_2 - x_2 + 0.1x_1 + 1.6\dot{x}_3 \\ \dot{x}_1\dot{x}_2 - x_3 - 2.4\dot{x}_3 + e^{-x_1/23} \end{bmatrix}$$
(3.47)

Since the elements of both the A and Y matrices are time dependent, the XDD vector must be calculated at each integration step. Most computer installations have programs available for solving matrix relationships of the form given by Eq. (3.44). At many centers these subroutines are on-line and can be called from storage. In this example, a subroutine which uses the Gauss-Jordan elimination method with complete pivotal searching is employed. The subroutine SOLVE is called from the CSMP program. Within the subroutine SOLVE is another subroutine named INVERT. Figure 3.55 shows a listing of the CSMP program and the FORTRAN subroutines for solving the set of differential equations.

Because A is a double-subscripted variable, the FORTRAN DIMENSION statement must be used. The FORTRAN LOGICAL instruction is a FORTRAN specification statement and is used to declare that SING is a logical variable. If the matrix A is singular, the logical variable SING is true. In this example, the matrix is never singular and hence the solution of the equation set is given in Fig. 3.56.

Since the variable-step Runge-Kutta integration method is used in this example, subroutine SOLVE is called four times for each integration step. If this procedure is used to solve an equation set that has a large number of variables, a large amount of computer time will be required for the multiple solution of the XDD vector.

It should be noted that the only way to call the subroutine SOLVE is by using the CALL SOLVE instruction in a nosort or procedure section. The following statement cannot be used since the output variable (XDD) is not the last argument of the subroutine.

$$XDD = SOLVE(A, 3, 3, 3, Y, SING)$$

Note that there is only one output variable. This is another reason why the above form for calling the subroutine SOLVE cannot be used.

Special consideration must be made when using subprograms where the output depends on past values of output and past and present values of input.

### Memory

This statement is required for subprograms that contain memory functions. A memory function is one where the output depends only on past values of input and output. As an example, consider the following statement.

#### MEMORY ABC(13)

The above instruction specifies that 13 storage locations are allocated for memory functions which are contained in the subprogram ABC. The MEMORY

```
TITLE PROGRAM TO DEMONSTRATE THE USE OF A SUBROUTINE AND TO SOLVE
  TITLE A SYSTEM OF SIMULTANEOUS DIFFERENTIAL EQUATIONS
      DIMENSION A(3,3), XDD(3), Y(3)
1
      LOGICAL SING
  FIXED I, J
NOSORT
  DO 1 I = 1.3
  DO 1 J = 1,3
1 A(1,J) = 0.0
  A(1,1) = 1.0
  A(1.2) = TIME*TIME + 4.0
  A(2,1) = 5.0
  A(2.3) = 24.0
  A(3,1) = 56.0
  A(3.2) = 2.0 + TIME
  A(3.3) = 100.0
  Y(1) = -0.5*XD1 - 1.7*X1 + 0.3*X2 + 0.21*(X3**3) + SIN(TIME)
  Y(2) = 0.017*X1*TIME - 5.0*XD2 - X2 + 0.1*X3 + 1.6*XD3
  Y(3) = XD1*XD2 - X3 - 2.4*XD3 + EXP(-X1/23.0)
  CALL SOLVE(A.3.3.3.Y.XDD, SING)
SORT
     XD1 = INTGRL(0.0, XDD(1))
     XD2 = INTGRL(0.0.XDD(2))
     XD3 = INTGRL(0.0, XDD(3))
     X1 = INTGRL(0.0,XD1)
     X_2 = INTGRL(0.0, XD2)
     X3 = INTGRL(0.0, XD3)
  PRINT X1, X2, X3
  TIMER FINTIM = 0.2, PRDEL = 0.01
END
STOP
   THE FOLLOWING TWO SUBROUTINES WILL SOLVE A SET OF SIMULTANEOUS
C
     LINEAR EQUATIONS.
c
      SUBROUTINE SOLVE (A. MA, NA, N, B. X. SING)
      REAL A(MA,NA),B(N),X(N)
      LOGICAL SING
      CALL INVERT (A.N. MA, SING)
      IF (SING) RETURN
      DO 10 I=1.N
      X(I)=0.0
      DO 10 J=1.N
  10 X(I)=X(I)+A(I,J)+B(J)
      RETURN
      END
      SUBROUTINE INVERT(A.ORDER.DIM A. SING)
      INTEGER ORDER, DIM A
      REAL A(DIM A,1), B(100), C(100)
      N= OR DER
      LOGICAL SING
      INTEGER IP(100), IQ(100)
      DO 1 K=1.N
      PIVOT=0.
      DO 100 I=K.N
DO 100 J=K.N
      IF (ABS(A(I, J))-ABS(PIVOT))100,100,101
 101
     PIVOT=A(I,J)
      IP(K)=I
      IO(K) = J
 100
      CONTINUE
      IF(PIVOT)102,900,102
     IPK=IP(K)
 102
      IOK=IQ(K)
      IF(IPK-K)200,299,200
 200 DO 201 J=1.N
      Z=A(IPK,J)
      A(IPK,J) = A(K,J)
      A(K,J) = Z
 201
 299
      CONTINUE
      IF(IQK-K)300,399,300
```

Fig. 3.55 CSMP program and subroutines used to solve a set of differential equations.

| 300   | DO 301 I=1.N                  |
|-------|-------------------------------|
|       | Z=A(I,IQK)                    |
|       | A(I,IQK)=A(I,K)               |
| 301   | A(I,K)=Z                      |
| 399   | CONTINUE                      |
|       | DC 400 J=1,N                  |
|       | IF(J-K)403,402,403            |
| 402   | B(J) = 1./PIVOT               |
|       | C(J)=1.                       |
|       | GOTO 404                      |
| 403   | B(J) = -A(K,J)/PIVCT          |
|       | $C(J) = A(J \cdot K)$         |
| 404   | A(K.J)=0.                     |
| 400   | A(J,K)=0.                     |
|       | DO 405 I=1,N                  |
|       | DO 405 J=1,N                  |
| 405   | A(I,J) = A(I,J) + C(I) + B(J) |
| 1     | CONTINUE                      |
|       | K=N                           |
|       | D0 500 KDUM=1,N               |
|       | IOK = IO(K)                   |
|       | IPK=IP(K)                     |
|       | IF(IPK-K)501,502,501          |
| 501   | DO 503 I=1.N                  |
|       | Z=A(I,IPK)                    |
|       | A(I, IPK)=A(I,K)              |
| 503   | A(1,K)=Z                      |
| 502   | IF(IQK-K)504,500,504          |
| 504   | D0 506 J=1.N                  |
|       | Z=A(IQK,J)                    |
|       | A(IQK,J) = A(K,J)             |
| 506   | A(K,J) = Z                    |
| 500   | K=K-1                         |
|       | SING = .FALSE.                |
|       | RETURN                        |
| 900   | SING = .TRUE.                 |
|       | RETURN                        |
|       | END                           |
| ENDJO | В                             |

#### Fig. 3.55 (Continued)

PROGRAM TO DEMONSTRATE THE USE OF A SUBROUTINE AND TO SOLVE A System of simultaneous cifferential equations

| TIME       | X1         | X2          | Х3          |
|------------|------------|-------------|-------------|
| 0.0        | 0.0        | C.C         | 0.0         |
| 1.0000E-02 | 1.4215E-00 | -3.1430E-07 | -2.9598E-07 |
| 2.0000E-02 | 5.6849E-06 | -1.0927E-06 | -1.1833E-06 |
| 3.0000E-02 | 1.2790E-05 | -2.0889E-06 | -2.6614E-06 |
| 4.0000E-02 | 2.2737E-05 | -3.C570E-06 | -4.73075-06 |
| 5.00005-02 | 3.5528E-05 | -3.7516E-C6 | -7.3923E-06 |
| 6.0000E-02 | 5.1166E-05 | -3.9282E-06 | -1.0648E-05 |
| 7.00002-02 | 6.9655E-05 | -3.3428E-C6 | -1.4501E-05 |
| 8.0000E-02 | 9.1001E-05 | -1.7521E-06 | -1.8953E-C5 |
| 9.0000E-02 | 1.1521E-04 | 1.C862E-06  | -2.4010E-05 |
| 1.0000E-01 | 1.4229E-04 | 5.4138E-06  | -2.9676E-05 |
| 1.1000E-01 | 1.7225E-04 | 1.1471E-05  | -3.5957E-05 |
| 1.2000E-01 | 2.0510E-04 | 1.94985-05  | -4.2859E-05 |
| 1.3000E-J1 | 2.4085E-04 | 2.9733E-C5  | -5.0389E-05 |
| 1.400JE-01 | 2.7952E-04 | 4.2413E-05  | -5.8555E-05 |
| 1.5000E-01 | 3.2111E-04 | 5.77.74E-C5 | -6.7367E-05 |
| 1.6000é-01 | 3.6565E-04 | 7.6053E-05  | -7.6833E-05 |
| 1.7000E-01 | 4.13145-04 | 5.7482E-C5  | -8.6964E-05 |
| 1.8000E-01 | 4.6361E-04 | 1.2229E-04  | -9.7770E-05 |
| 1.9000E-01 | 5.1708E-04 | 1.5072E-04  | -1.0926E-04 |
| 2.0000E-01 | 5.7356E-04 | 1.8299E-04  | -1.2146E-04 |

Fig. 3.56 PRINT output for the solution of the set of differential equations.

INTEGRATION

RKS

170

card should appear in the deck before the first reference to the subprogram. Examples of some CSMP memory elements are the following

> INTGRL DELAY REALPL CMPXPL

## History

This statement is used with subprograms where functions are used in which the output depends on past and present values of output and present values of input. The following instruction will reserve 8 history storage locations for the subprogram ABC, and 17 for the subprogram DEF.

```
HISTORY ABC(8) DEF(17)
```

The HISTORY statement must appear before any reference to the subprogram. Some CSMP history functions are:

| DERIV  | IMPULS | RST   |
|--------|--------|-------|
| GAUSS  | PULSE  | STEP  |
| HSTRSS | RNDGEN | ZHOLD |

A more comprehensive discussion of MEMORY and HISTORY can be found in References (1 and 6).

## **Implicit Functions**

For certain types of simulations, the output of CSMP will state that an algebraic loop is formed between a specified list of variables and that the program cannot be executed. This problem arises whenever a loop does not contain at least one memory function.

As noted in the previous section, there are two types of memory functions defined in CSMP. If we consider a function to be characterized as having an output and input, the following applies.

- (a) A MEMORY function is one whose output depends only on past values of the output and input.
- (b) A HISTORY function is one whose output depends on past values of the output and input and in addition, the present value of the input.

There are four MEMORY functions in CSMP: INTGRL, REALPL, CMPXPL, and DELAY. Each loop of a simulation must contain either at least one of these functions or a user-defined memory function to avoid an algebraic loop. However, loops are not always obvious in a simulation.

Consider the simple circuit shown in Fig. 3.57(a). If the output is the voltage

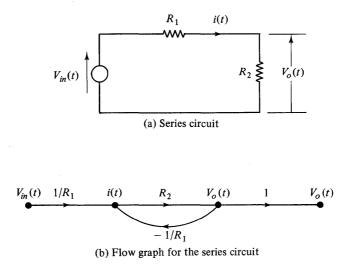


Fig. 3.57 Series circuit and proposed flowgraph.

across  $R_2$  and the input is the independent source  $V_{in}(t)$ , a set of equations describing the network is

$$V_o(t) = i(t)R_2 \tag{3.48}$$

$$i(t) = \frac{V_{in}(t)}{R_1} - \frac{V_o(t)}{R_1}$$
(3.49)

A flow graph for the two equations is given in Fig. 3.57(b). Since the flow graph contains a feedback loop without a memory function, programming these equations will result in an algebraic loop. An algebraic loop can often be circumvented by either rewriting the simulation equations or using the CSMP implicit function.

## Formulation of Implicit Functions

An equation of the form F(x) = 0 is an implicit function. The equation for F(x) can be written as

$$x = f(x) \tag{3.50}$$

where  $F(x) \neq f(x)$ . As an example, suppose

$$F(x) = x^2 + 3x - 4 = 0 \tag{3.51}$$

One way of expressing the variable x is

$$x = f(x) = \frac{1}{3}(4 - x^2) \tag{3.52}$$

The CSMP function

$$X = IMPL(XO, ERROR, FOFX)$$
(3.53)

will often find an x which satisfies the general equation, x = f(x), and in particular may satisfy Eq. (3.52). In the IMPL function arguments,

XO = an initial guess for x as specified by the user ERROR = the error specified by the user in finding x FOFX = the right hand side of Eq. (3.50)

A general rule for using the IMPL function is that the expressions for FOFX must appear after X = IMPL (XO, ERROR, FOFX) and the last such expression must specify FOFX. Furthermore, the variable X must appear at least once on the right side of the equations defining FOFX. As applied to Eq. (3.52) one may write either

X = IMPL (XO, ERROR, FOFX)  
A = 
$$4.0/3.0$$
  
B =  $-(X**2)/3.0$   
FOFX = A + B

or

$$X = IMPL (XO, ERROR, FOFX)$$
  
FOFX = (4.0 - X\*\*2)/3.0

which illustrates that the user is not required to split-up FOFX.

CSMP uses a Wegstein's accelerated convergence algorithm to calculate  $x_{n+1}$  using  $x_{n-1}$ ,  $x_n$ ,  $f(x_{n-1})$  and  $f(x_n)$  with a user-specified initial guess for x.<sup>(6)</sup> The test for satisfying the user-specified ERROR is based on

$$\left|\frac{x_{n+1}-x_n}{x_{n+1}}\right| \le \text{ERROR} \quad \text{for } |x_{n+1}| > 1$$
 (3.54)

or

$$|x_{n+1} - x_n| \le \text{ERROR}$$
 for  $|x_{n+1}| \le 1$  (3.55)

Generally there will be more than one way of expressing x = f(x). For the case,  $F(x) = x^2 + 3x - 4 = 0$ , two ways of writing x are

$$x = \frac{4 - x^2}{3} = f(x) \tag{3.56}$$

and

$$x = \pm \sqrt{4 - 3x} = f(x) \tag{3.57}$$

The IMPL function results will often depend on the form selected for f(x) as well as the initial guess. The polynomial,  $x^2 + 3x - 4 = 0$ , has roots at x = 1 and x = -4. Suppose Eq. (3.56) is used to represent f(x). The convergence of the implicit algorithm may be observed by printing out the variables x and f(x) each time the program passes through the implicit loop. A short program for this purpose is given in Fig. 3.58. With ERROR = 0.05, the following values of X were obtained for the indicated initial values of XO.

```
PARAM X0 = -3.0, ERROR = 0.05
NOSORT
X = IMPL(X0,ERROR,FCFX)
A = 4.0/3.0
B = -(X**2)/3.0
FOFX1 = A + B
WRITE(6,1) X,FOFX1
1 FORMAT(2E20.10)
FOFX = A + B
TIMER FINTIM = 1.0, DELT = 0.25, PRDEL = 0.25
PRINT X
TITLE ILLUSTRATION OF IMPLICIT FUNCTION
END
STOP
ENDJOB
```

Fig. 3.58 Program for printing the values of x and f(x) during the implicit loop convergence process.

| Initial Guess<br>XO | Solution<br>X |
|---------------------|---------------|
| 0.5                 | 1             |
| 2.5                 | 1             |
| -1.0                | 1             |
| -3.0                | -4            |
| -6.0                | —4            |

Rather than present a lengthy discussion on how convergence takes place, the reader is encouraged to submit the previous program of Fig. 3.58 and observe the trial values of X and FOFX1 as the program converges to the final value of X.

If X is expressed by

$$x = -\sqrt{4 - 3x} \tag{3.58}$$

solutions for X, using ERROR = 0.05, are as follows

| Initial Guess<br>XO | Solution<br>X |
|---------------------|---------------|
| 3.0                 |               |
| -1.0                | -4            |
| -2.0                | -4            |
| -6.0                | -4            |

We observe that for XO = -1, X converges to +1 in one case and -4 in the other.

Corresponding to the program in Fig. 3.58 a portion of subroutine Update will give

```
30000 X = IMPL( 1, XO,ERROR,FOFX)
IF(NALARM) 30002, 30002, 30001
30001 CONTINUE
A = 4.0/3.0
B = -(X**2)/3.0
FOFX1 = A + B
WRITE(6,1) X, FOFX1
1 FORMAT(2E20.10)
FOFX = A + B
GO TO 30000
30002 CONTINUE
```

On first entering the IMPL routine, NALARM is set equal to 1 and X equal to XO. The value of FOFX is determined and the program returns to 30000. When the error criteria is satisfied, NALARM is set to zero and X set equal to the last value of FOFX. The program goes to 30002 and continues in the simulation. If the error criteria is not satisfied after 100 iterations, NALARM is set to -1 and the run is terminated with a message stating that 100 iterations have been exceeded.

The entire implicit function may be considered as a functional block with X as the output variable. Occasions may arise in which intermediate variables defining the implicit function are required for calculations elsewhere in a program. In such cases, extreme care must be exercised to avoid erroneous results. If at all possible, the desired intermediate variables should be recalculated outside the implicit loop. However, it may be possible to define the intermediate variables as outputs from either a procedure function or a user-defined macro which contains the entire implicit loop. Example 3.16 illustrates the use of a macro for this purpose.

Rules and guidelines for using the IMPL function can be summarized as follows.

- 1 As many statements as desired may be used to define f(x); however, the output name in the last statement of the definition must be identical to the third argument, FOFX, of the IMPL statement. The output name for FOFX cannot be the output of an expression containing an INTGRL block nor can it be the output of a user defined macro, procedure or user-supplied routine. The last statement in the implicit loop cannot be continued.
- 2 The implicit variable must appear on the right side of an equal sign at least once in the statements defining FOFX.
- 3 An implicit loop can be defined within a macro or procedure provided the entire set of required statements is contained within the macro or procedure.
- 4 An implicit loop cannot be defined within another implicit loop.

#### Example 3.15

Consider the circuit diagram of Fig. 3.57(a) which was earlier described by the equations

$$V_o(t) = i(t)R_2$$
 (3.59)

$$i(t) = \frac{V_{in}(t)}{R_1} - \frac{V_o(t)}{R_1}$$
(3.60)

A simple CSMP program for the solution of i(t) and the resulting output is

```
PARAM R1 = 8.0, R2 = 2.0

VIN = 10.0*STEP(0.0)

VO = IA*R2

IA = VIN/R1 - VO/R1

TIMER FINTIM = 1.0, DELT = 0.25, PRDEL = 0.25

PRINT IA

END

STOP

ENDJOB
```

SIMULATION INVOLVES AN ALGEBRAIC LOOP CONTAINING THE FOLLOWING ELEMENTS VIN VO IA \*\*\*\*\*\*\*PROBLEM CAN NOT BE EXECUTED\*\*\*\*\*\*\*

The algebraic loop can be broken by using the implicit function shown below.

PARAM R1 = 8.0, R2 = 2.0, IAO = 2.0, ERROR = 0.05 VIN = 10.0\*STEP(0.0) IA = IMPL(IAO, ERROR, FOFIA) A = VIN/R1 VO = IA\*R2 B = -VO/R1FOFIA = A + B TIMER FINTIM = 1.0, DELT = 0.25, PRDEL = 0.25 PRINT IA END STOP ENDJOB

The output from the PRINT request is

| TIME       | IA         |
|------------|------------|
| 0.0        | 1.0000E 00 |
| 2.5000E-01 | 1.0000E 00 |
| 5.0000E-01 | 1.0000E 00 |
| 7.5000E-01 | 1.0000E 00 |
| 1.0000E 00 | 1.0000E 00 |

The initial value of IA is specified on the PARAM card as IAO = 2.0 and the acceptable error as ERROR = 0.05. Note that FOFIA is the last statement used in defining IA and also corresponds to the third argument in the IMPL function.

#### Example 3.16

The diagram of a feedback system which does not contain a memory function is shown in Fig. 3.59. An unaware user may write the following program only to find that the simulation involves an algebraic loop.

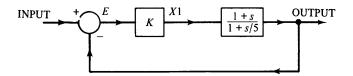


Fig. 3.59 Diagram for Example 3.16. (This diagram does not contain a memory function.)

```
PARAM K = 0.6

INPUT = STEP(0.0)

E = INPUT - OUTPUT

X1 = K*E

OUTPUT = LEDLAG(1.0, 1.0/5.0, X1)

METHOD RKSFX

TIMER FINTIM = 2.0, DELT = 0.05, PRDEL = 0.1

PRINT OUTPUT<sup>†</sup>

END

STOP

ENDJOB
```

The algebraic loop can be broken by making OUTPUT an implicit function in the following manner.

```
PARAM OUTO = 0.2, ERROR = 0.05, K = 0.6

INPUT = STEP(0.0)

OUTPUT = IMPL(OUTO, ERROR, FOFOUT)

E = INPUT - OUTPUT

X1 = K*E

FOFOUT = LEDLAG(1.0, 1.0/5.0, X1)

METHOD RKSFX

TIMER FINTIM = 2.0, DELT = 0.05, PRDEL = 0.1

PRINT OUTPUT<sup>†</sup>

END

STOP

ENDJOB
```

The response of the system has a discontinuity at time equals zero and hence a fixed-step integration method is used to avoid computational difficulties with the variable-step integration. The printed output from the program is shown in Fig. 3.60. One can easily verify by analytical methods that the values for OUTPUT are correct.

 $^{\dagger}$ OUTPUT is acceptable for S/360 CSMP but should be changed to another variable for CSMP III.

| TIME       | OUTPUT     |
|------------|------------|
| 0.0        | 7.5000E-01 |
| 1.0000E-01 | 6.8202E-01 |
| 2.0000E-01 | 6.2637E-01 |
| 3.0000E-01 | 5-8080E-01 |
| 4.0000E-01 | 5.4350E-01 |
| 5.0000E-01 | 5-1296E-01 |
| 6.0000E-01 | 4.8795E-01 |
| 7.0000E-01 | 4.6747E-01 |
|            |            |
| 8.0000E-01 | 4.5071E-01 |
| 9.00C0E-01 | 4.3699E-01 |
| 1.0000E 00 | 4.2575E-01 |
| 1.1000E 00 | 4.16558-01 |
| 1.20COE 00 | 4.0902E-01 |
| 1.3000E 00 | 4.0285E-01 |
| 1.4000E 00 | 3.9780E-01 |
| 1.5000E 00 | 3.9367E-01 |
| 1.6000E 00 | 3.9029E-01 |
| 1.7000E 00 | 3.8752E-01 |
|            | 3.8525E-01 |
|            |            |
| 1.9000E 00 | 3.8339E-01 |
| 2.00COE 00 | 3.8187E-01 |

Fig. 3.60 Printer output from the algebraic loop containing the LEDLAG function.

Now suppose that one desires to evaluate the integral of  $E^2$  which is often a meaningful index of performance. For this problem, this can be accomplished simply by adding the statement, ISA = INTGRL(0.0,E\*\*2), outside the implicit loop. As an alternate approach, E may be expressed as the output of a macro and incorporated into a program as follows.

> MACRO E, OUTPUT = CHECK(OUTO, ERROR, K, INPUT)OUTPUT = IMPL(OUTO, ERROR, FOFOUT)Ε = INPUT -- OUTPUT X1 = K \* EFOFOUT = LEDLAG(1.0, 1.0/5.0, X1)ENDMAC PARAM OUTO = 0.2, ERROR = 0.05, K = 0.6INPUT = STEP(0.0)E, OUTPUT = CHECK(OUTO, ERROR, K, INPUT)ISA = INTGRL(0.0, E\*\*2)METHOD RKSFX TIMER FINTIM = 2.0, DELT = 0.05, PRDEL = 0.1PRINT E, ISA, OUTPUT END STOP **ENDJOB**

In summary, the implicit function can often be used for breaking an algebraic loop. The user however should be aware that the specified initial value and the user-selected form of f(x) can influence the solution. Normally, the user will know the general results expected from the simulation. Therefore, if an unexpected (or unwanted) solution is

obtained when using the IMPL function, one should try several different initial conditions and perhaps change the form of f(x).

### REFERENCES

- 1. System/360 Continuous System Modeling Program System Manual Y20-0111, IBM Corporation, Data Processing Division, White Plains, N.Y.
- 2. MCCRACKEN, DANIEL D., A Guide to FORTRAN IV Programming. New York: John Wiley and Sons, Inc., 1972.
- 3. COOPER, LAURA, and MARILYN SMITH, Standard FORTRAN: A Problem-Solving Approach. Boston: Houghton-Mifflin Company, 1973.
- 4. HOLDEN, HERBERT L., Introduction to FORTRAN IV, New York: The MacMillan Company, 1970.
- 5. ANDERSON, DECIMA M., Computer Programming FORTRAN IV, New York: Appleton-Century-Crofts, 1966.
- 6. Continuous System Modeling Program III (CSMP III) Program Reference Manual SH-19-7001-2, Program Number 5734-X59, IBM Corporation, Data Processing Division, White Plains, N.Y.
- 7. SAGE, ANDREW P., *Optimum Systems Control*, Englewood Cliffs, N.J.: Prentice-Hall, Inc., 1968.

# PROBLEMS

1 Using the END and/or CONTINUE card, solve for the time-history of the value of a bank account over a four-year period. One hundred dollars is deposited at the beginning of the first year at the interest rate of 5% per year. At the beginning of the second year the interest rate is increased to 6%, and at the beginning of the third year the interest rate is 6.75%. The fourth year, the interest rate is 7.5%. Assume that money is continuously compounded according to the following formula.

$$\frac{d\$}{dt} = i\$$$

where i = yearly interest rate (0.05, 0.06, 0.0675, 0.075)


Answer:

At end of fourth year, 
$$\$ = 128.72$$

2 A linear transfer function that can be used to approximate the response of a human operator to a visual command in turning a steering wheel is shown below. The input is a unit-step input.

$$\theta_{\rm IN}(s) \longrightarrow - \left| \begin{array}{c} (1.6s+1)(0.11s+1)e^{-0.2s} \\ \hline (1.2s+1)(0.15s+1)(0.0035s^2+0.084s+1) \end{array} \right| \longrightarrow \theta_{\rm O}(s)$$

Determine the response of the man to a unit-step input. Note that the  $e^{-0.2s}$  term represents a pure time delay of 0.2 sec.

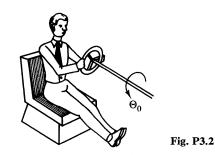

Answer:


At TIME = 1.0,  $\theta_0 = 1.1874$ 

3 A real estate purchase of \$42,000 is financed for 25 years at an interest rate of 9.5%. Write a CSMP program to calculate the monthly payments, the amount paid in interest each month, and the amount paid on the principal each month.

Answer:

Monthly payment = 366.95, at the tenth month interest = 329.97, principal = 36.98

4 Consider the system represented in the following diagram.

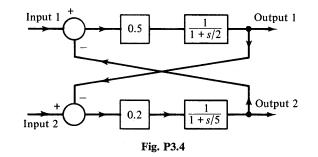


If Input 1 and Input 2 are unit-steps applied at t = 0, find the responses of Output 1 and Output 2.

Answer:

At TIME = 1.2, Output 1 = 0.39523, Output 2 = 0.12559

5 The location of a hole is given by the X and Y dimensions. Assume that the X dimension varies between 11.900 in. and 12.100 in. with a uniform distribution and Y dimension has a Gaussian distribution with a mean of 5.000 inches and a standard deviation of 0.100 inches.

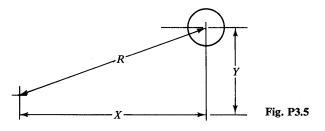

How many parts in a production run of 1000 will have a radius R outside the tolerance of  $R = 13.000 \pm 0.100$ ?

Answer:

#### 135 parts

6 Use subscripted variables and the array form of the integral statement to solve the following set of equations that describe a mechanical system. The system is initially at rest.

$$m_1x_1 + (k_1 + k_2)x_1 + cx_1 - k_2x_2 - c\dot{x}_2 = 0$$
  

$$m_2x_2 + (k_2 + k_3)x_2 + c\dot{x}_2 - k_2x_1 - c\dot{x}_1 - k_3x_3 = 0$$
  

$$m_3\ddot{x}_3 + k_3x_3 - k_3x_2 = 12\sin(4.0t)$$

where

$$m_1 = 2.3, m_2 = 3.4, m_3 = 0.9$$
  
 $k_1 = 19.0, k_2 = 45.0, k_3 = 12.0, c =$ 

$$k_1 = 19.0, k_2 = 45.0, k_3 = 12.0, c = 0.8$$

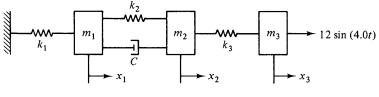


Fig. P3.6

Answer:


At TIME = 2.0, 
$$x_1 = -0.2075$$
,  $x_2 = -0.2707$ ,  $x_3 = 0.4517$ 

7 The gas pressure acting across a small caliber bullet varies with the distance traveled by the bullet down the barrel of the gun.

.

The following table gives this pressure-distance relationship for a 26 in. barrel.

|        | Pressure            |
|--------|---------------------|
| X, in. | lb/in. <sup>2</sup> |
| 0      | 5,500               |
| 1.0    | 13,000              |
| 2.0    | 22,500              |
| 3.0    | 27,700              |
| 4.0    | 30,200              |
| 5.0    | 29,000              |
| 6.0    | 27,500              |
| 8.0    | 22,000              |
| 10.0   | 16,000              |
| 12.0   | 11,100              |
| 15     | 6,200               |
| 18     | 4,100               |
| 21     | 3,750               |
| 26     | 3,540               |

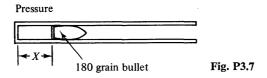

Assume the diameter of the bullet is 0.300 in. and weighs 180 gr (0.0234 lb). The frictional drag on the barrel is to be considered small compared to the gas force.

Use Newton's second law to find the time required for the bullet to leave the barrel and the muzzle velocity. Compare answers using the NLFGEN and AFGEN arbitrary function generators.

 $m\ddot{x} = PA$ 

Answers:

Using AFGEN v = 27546 in./sec Using NLFGEN v = 27512 in./sec

8 An automobile costing \$4000 is financed for 36 months with monthly payments of \$130.50. The annual effective compound interest rate for this loan can be determined by solving the expression

$$I_{annual} = (1 + i)^{12} - 1$$

where  $I_{annual}$  = annual effective compound interest rate expressed in decimal form (not per cent)

i = interest rate per month expressed in decimal form

The solution for i (rate per month) can be found from

$$a_{n/i} = \frac{(1+i)^n - 1}{i(1+i)^n}$$

where in this case

$$a_{n/i} = \frac{4000}{130.50} = 30.651$$

and n = 36. An implicit expression for *i* can therefore be written as

$$i = \frac{(1+i)^n - 1}{30.651(1+i)^n}$$

Develop a CSMP program using the IMPL function to solve for *i*. Include a statement in your program for finding  $I_{annual}$ . Use PRINT to give the values of  $I_{annual}$  and *i*. What effect does the initial guess for *i* have on the solution for *i*? Use i = 0.01 and i = 5.0 as initial values and error = 0.00001.

Answers:

For *i* (initial) = 0.01, i = .0089613,  $I_{annual} = .11298$ For *i* (initial) = 5.0, same answers

9 Use the multiple run capability of a PARAMETER card to solve Mathieu's equation for the following values of a

$$a = 0.5, 1.5, 3.0, 5.0$$
  
 $b = 2.0, \omega = 3.0$ 

Mathieu's equation is

$$\frac{d^2y}{dt^2} + (a - 2b\cos\omega t)y = 0$$
$$y(0) = \dot{y}(0) = 2.0$$


Answers:

At TIME = 1.0 
$$y = 4.979$$
  $a = 0.5$   
 $y = 3.669$   $a = 1.5$   
 $y = 2.046$   $a = 3.0$   
 $y = 0.4326$   $a = 5.0$ 

10 The figure below shows a tapered beam with an axial load of 10,000 lb and a uniform load of 72 lb/in. The differential equation describing the deflection of the beam is

$$EI\frac{d^2y}{dx^2} = -M$$
  $M =$  moment due to uniform lead  $+ p_y$ 

Using the CALL RERUN statement, find the deflection of the beam.

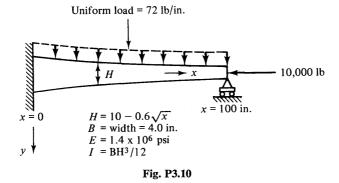

Answer:


$$Y_{\rm max} = 0.388$$
 in. at  $X = 66$  in.

11 The acceleration indicated by an accelerometer is given by the following formula.

$$A = \omega_n^2 z$$


The equation of motion of the seismic mass is

$$\ddot{z}+2\zeta\omega_n\dot{z}+\omega_n^2z=\ddot{y}$$

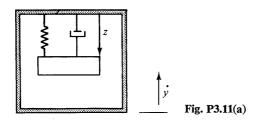


Ch. 3

Using the multiple run capability of the PARAMETER and END cards, find the indicated acceleration reading for the four combinations of natural frequencies and damping ratios. The input acceleration is shown below.

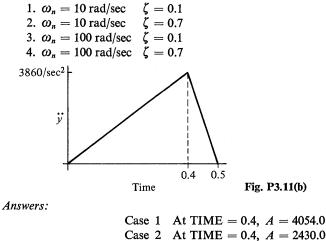

12 A steel cantilever beam has a distributed load as shown below.

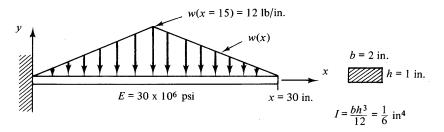

Case 3 At TIME = 0.4, A = 3839.0Case 4 At TIME = 0.4, A = 3725.0



The equation which describes the shape is the following fourth order differential equation.

$$\frac{d^4y}{dx^4} = -\frac{w(x)}{EI}$$

w(x) = density of the distributed load

Using the following boundary condition on the left end and the AFGEN function to represent the density of the distributed load, solve for the deflected shape of the beam.

$$y(0) = \frac{dy(0)}{dx} = 0$$
$$\frac{d^2 y(0)}{dx^2} = -\frac{2700}{EI}$$
$$\frac{d^3 y(0)}{dx^3} = \frac{180}{EI}$$

Answer:

At 
$$x = 30$$
,  $y = -0.111$  in.

13 The approximate dimensions of the cross-section of a railroad rail are given by the following table.

| У    | t    |
|------|------|
| 0    | 6    |
| 0.5  | 6    |
| 1    | 1.7  |
| 1.3  | 1.0  |
| 3.0  | 0.65 |
| 4.7  | 0.8  |
| 4.9  | 0.95 |
| 5.0  | 1.2  |
| 5.3  | 2.9  |
| 6.4  | 2.9  |
| 6.55 | 1.0  |
|      |      |

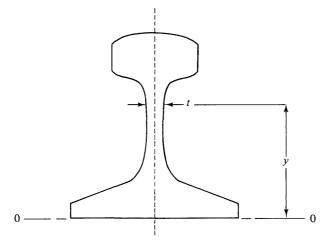


Fig. P3.13

Use the AFGEN function to approximate the shape of the rail and find the center of mass and the moment of inertia about line O-O. The moment of inertia is given by the following formula.

$$I=\int y^2t\,dy$$

Answer:


$$y_{cg} = 2.87$$
 in.  $I = 171.9$  in.<sup>4</sup>

14 The transfer function of a system is given by

$$\frac{Y(s)}{U(s)} = \frac{12}{(s+2)(s+6)}$$

Ch. 3

A unit-step input is applied to the system. It is desired to sample the output signal, y(t), every 0.04 sec as shown in the diagram below.

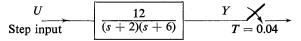

Write a CSMP program which outputs the sampled signal. Use the IMPULS function for modeling the sampler.

Answer:

y = 0.76307 at TIME = 0.72 using variable-step integration.


15 The following equations describe the motion of a top spinning about a frictionless pivot point. The only external torque is due to gravity.

$$\ddot{\theta} = \frac{I'\dot{\psi}^2 \sin\theta\cos\theta - I(\dot{\phi} + \dot{\psi}\cos\theta)\dot{\psi}\sin\theta + WD\sin\theta}{I'}$$
$$\ddot{\psi} = \frac{-2I'\dot{\theta}\dot{\psi}\cos\theta + I(\dot{\phi} + \dot{\psi}\cos\theta)\dot{\theta}}{I'\sin\theta}$$
$$\ddot{\phi} = \dot{\psi}\dot{\theta}\sin\theta - \ddot{\psi}\cos\theta$$

- I = moment of inertia of top about spin axis = 0.001 lb-in-sec<sup>2</sup>
- I' = moment of inertia of top about a line perpendicular to the spin axis and through the pivot point = 0.04 lb-in-sec<sup>2</sup>

$$W = \text{weight} = 0.8 \text{ lb}$$

D = 2.0 in.

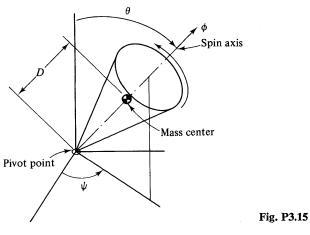

Find the motion of the top for the following initial conditions. Note the singularity at  $\theta = 0$ .

 $\psi = \dot{\psi} = 0$ ,  $\dot{\phi} = 500$  radians/sec,  $\theta = 1.0$  radians,  $\dot{\theta} = 0.5$  radians/sec Answer:

At TIME = 1.0 sec,  $\theta = 63.83^\circ$ ,  $\psi = 200.55^\circ$ ,  $\dot{\phi} = 499.31$  rad/sec

16 The difference equation for a low pass filter can be expressed as

 $y(kT) = (1 - \alpha)x(kT) + \alpha y[(k - 1)T]$ 

for  $\alpha$  less than 1. For this case select  $\alpha = 0.8$  and T = 0.1. The input signal, x(t), is given by

$$x(t) = t + 0.5 \sin(6\pi t)$$

Write a CSMP program which (a) gives the input signal x(t) every 0.1 sec; and (b) gives the filtered signal y(t) every 0.1 sec.<sup>†</sup>

Answer:

At TIME = 4.1, 
$$x(t) = 4.5755$$
,  $y(t) = 3.7666$ 

17 A classical problem in the calculus of variation is to determine the path of quickest descent-the brachistochoe problem. This problem involves finding the curve between two points that a sliding particle would descend in the minimum time. The exact curve is a cycloid.

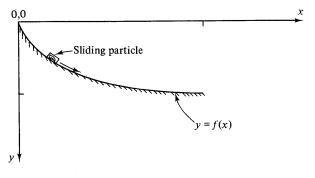


Fig. P3.17

The time required for a mass to slide down a curve under uniform gravity is given by the following expression.

$$t = \frac{1}{\sqrt{2g}} \int_0^x \sqrt{\frac{1+y'^2}{y}} \, dx$$

Using Euler's equation, the above integral can be minimized by the solution to the following differential equations

$$y' = \sqrt{\frac{c}{y} - 1}$$

The value of c = 30.32 will yield a solution that will pass through the following point: x = 25, y = 25.9. Using this value of c, solve the above equation to determine the shape of the curve. Note that in integrating the above expression for y', it is necessary to add a small number  $(10^{-6})$  to y to avoid dividing by zero at the start of the integration. Also, it is necessary to use a small step size at the beginning of the integration. Use the CONTINUE card to increase the step size of a fixed-step size integration method (RKSFX) after x = 0.5.

Answer:

At x = 25, y = 26.01

†See Problem 18, Chap. 4 for additional comments.

18 Consider the first-order differential equation given by

$$\frac{dy(t)}{dt} + 3y(t) = u(t)$$
$$y(0) = 0$$

where u(t) is a unit-step defined to be 1 for t greater than or equal to zero and zero for t less than zero. One approach for numerical solution to this equation is to use the Tustin approximation for differentiation. In such case

$$\frac{dy(t)}{dt} \longrightarrow \frac{2}{T} \left[ \frac{z-1}{z+1} \right] Y(z)$$

where T is the time between numerical iterations and z is the z-transform variable. Using this approximation one writes

$$\frac{2}{T}\left[\frac{z-1}{z+1}\right]Y(z) + 3Y(z) = U(z)$$

which yields

$$\frac{Y(z)}{U(z)} = K_1 \frac{(1+z^{-1})}{(1+K_2 z^{-1})}$$
$$K_1 = \frac{T}{2+3T}, \qquad K_2 = \frac{3T-2}{3T+2}$$

Using the left shifting property of z-transforms gives the difference equation

$$y(kT) = K_1[u(kT) + u((k-1)T] - K_2y((k-1)T)$$

(a) Solve the original differential equation using the standard INTGRL function of CSMP. Use trapezoidal integration (i.e., METHOD TRAPZ) with DELT = 0.1. (b) Write a CSMP program which solves the difference equation. Use T = 0.1. Compare the results with that of part (a).


Answers:

At TIME = 1.0, 
$$y(t) = 0.31578$$
 [part (a)],  $y(t) = 0.31711$  [part (b)]

**19** The steady-state current for a 60 hertz-120 volt input to the circuit below is given by the following expression.

$$i = 120 \left[ \frac{R_2^2 + L^2 \omega^2}{L^2 \omega^2 (R_1 + R_2)^2 + (R_1 R_2)^2} \right]^{1/2} \qquad \omega = 120\pi \text{ rad/sec}$$

The phase angle of the current can be expressed as

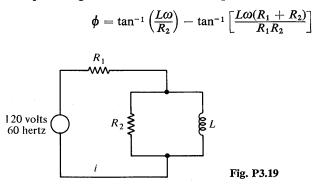

The values of the resistances and inductance with the appropriate tolerances and standard deviations are:

$$R_1 = 10$$
 ohms ( $\pm 10\%$ ),
  $\sigma_{R_1} = 0.33$  ohms

  $R_2 = 60$  ohms ( $\pm 20\%$ ),
  $\sigma_{R_2} = 4.0$  ohms

  $L = 0.18$  henries ( $\pm 20\%$ ),
  $\sigma_{L} = 0.012$  henries

Use the GAUSS function to calculate the current and phase angle for gaussian distributed random values of  $R_1$ ,  $R_2$ , and L. Find the average and standard deviation of both the current and phase angle for 300 different combinations of parameters.

An expression for the standard deviation is:

$$\sigma_{x} = \left[\frac{n\sum_{i=1}^{n} x_{i}^{2} - \left(\sum_{i=1}^{n} x_{i}\right)^{2}}{n(n-1)}\right]^{1/2}$$


Answer:

$$i_{ave} = 2.294 \text{ amps}, \ \phi_{ave} = -34.29^{\circ}$$
  
 $\sigma_i = 0.104 \text{ amps} \quad \sigma_{\phi} = 2.264^{\circ}$ 

20 The purpose of this problem is to illustrate how a macro is invoked within another macro. Consider the general system diagram shown in Fig. P3.20-1. Both subsystem A and subsystem B can be described by a state equation of the form

$$\begin{bmatrix} \dot{x}_1(t) \\ \dot{x}_2(t) \end{bmatrix} = \begin{bmatrix} a_{11} & a_{12} \\ a_{21} & a_{22} \end{bmatrix} \begin{bmatrix} x_1(t) \\ x_2(t) \end{bmatrix} + \begin{bmatrix} b_1 \\ b_2 \end{bmatrix} r(t)$$

Disturbance A

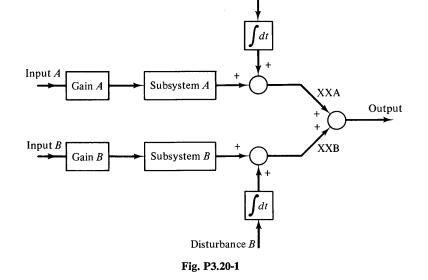

where  $x_1(0) = IC1$  and  $x_2(0) = IC2$ . The program in Fig. P3.20-2 is a proposed method for writing a single MACRO to describe both subsystems A and B and a single MACRO to describe both XXA and XXB. Verify that the program is correct.

```
MACRO Y = STATE(A11,A12,A21,A22,B1,B2,R,IC1,IC2)
  X1DOT = A11*X1 + A12*X2 + B1*R
  X2DOT = A21*X1 + A22*X2 + B2*R
  X1 = INTGRL(IC1+X1DOT)
  X2 = INTGRL(IC2, X2U0T)
  Y = X1
ENDMAC
SECOND MACRO FOLLOWS
MACRO OUTX = SIMULA(INPUT,GAIN,DIST,S11,S12,...
      $21, $22, $81, $82, $IC1, $IC2)
  XX = STATE(S11,S12,S21,S22,SB1,SB2,GAIN*INPUT,SIC1,SIC2)
  QQ = INTGRL(0.0,DIST)
  OUTX = XX + QQ
ENDMAC
* PARAMETERS FOR THE SUBSYSTEMS FOLLOW
PARAMETER SAA11 = 0.0, SAA12 = 1.0, SAA21 = -2.0, SAA22 = -3.0,...
           SAB1 = 0.0, SAB2 = 1.4, SAGAIN = 0.5, SAIC1 = 0.0, SAIC2 = 0.0
PARAMETER SBA11 = 0.0, SBA12 = 1.0, SBA21 = -4.0, SBA22 = -5.0,...
        SBB1 = 0.0, SBB2 = 1.0, SBGAIN = 2.1, SBIC1 = 0.0, SBIC2 = 0.0
INA = STEP(0.0)
DISTA = 0.2*SIN(400.0*TIME)
INB = STEP(0.1)
DISTB = EXP(-0.1*TIME)
XXA = SIMULA(INA, SAGAIN, DISTA, SAA11, SAA12, SAA21, ...
      SAA22.SAB1.SAB2.SAIC1.SAIC2)
XXB = SIMULA(INB, SBGAIN, DISTB, SBA11, SBA12, SBA21,...
    SBA22, SBB1, SBB2, SBIC1, SBIC2)
OUTPUT = XXA + XXB
TIMER FINTIM = 2.0, OUTDEL = 0.04
PRTPLT OUTPUT(XXA,XXB)
END
STOP
```

Fig. P3.20-2

Find the response of the system for the inputs, disturbances and system parameters as given in Figure P3.20-2.

21 Many problems in control theory formerly solved by classical methods are now formulated as an optimal control problem using state space analysis. This problem illustrates the use of CSMP for simulation of a time optimal control problem in which the control is expressed in closed form. The state equations for a particular system are given by

$$\begin{bmatrix} \dot{x}_1(t) \\ \dot{x}_2(t) \end{bmatrix} = \begin{bmatrix} 0 & 1 \\ 1 & -\alpha \end{bmatrix} \begin{bmatrix} x_1(t) \\ x_2(t) \end{bmatrix} + \begin{bmatrix} 0 \\ 1 \end{bmatrix} u(t)$$

with initial conditions

$$x_1(0) = x_{10}$$
$$x_2(0) = x_{20}$$

The problem is to find the closed-loop control u(t) such that for any initial set, x(0), the system response time for state x(t) is minimized. Figure P3.21-1 gives a diagram which expresses the essence of this problem.

The solution for the control u(t) can be expressed as<sup>(7)</sup>

$$u(t) = -\operatorname{sign}\left[x_1 + \frac{1}{\alpha}x_2 - \left(\frac{\operatorname{sign}(x_2)}{\alpha^2}\right)(\ln(1 + \alpha |x_2|))\right]$$


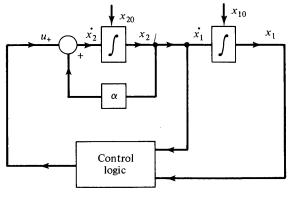


Fig. P3.21-1

which is maximum effort in that u(t) will be either plus or minus one. The solution for the control logic is obtained from the argument of the sign function and is thus given by

$$x_1 + \frac{1}{\alpha}x_2 - \left(\frac{\operatorname{sign}(x_2)}{\alpha^2}\right)(\ln(1 + \alpha | x_2|)) = 0$$

This equation defines the switching curve as shown in Fig. P3.21-2.

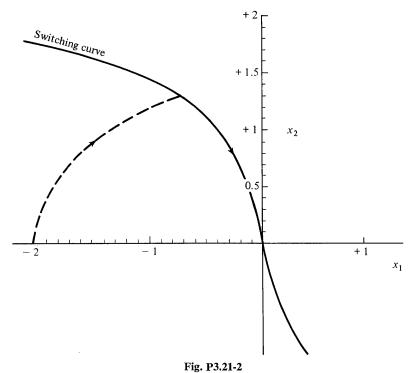

The program listing for simulating this system is given in Fig. P3.21-3. The complexity of writing a single statement for u(t) can be avoided by grouping the terms of the switching curve. A conventional FORTRAN statement for the sign of a function is used in the simulation along with standard CSMP simulation statements. The FORTRAN statement

$$y = \operatorname{sign}\left(P_1, P_2\right)$$

takes the value of  $P_1$  and multiplies by the sign of  $P_2$ .

```
PARAM ALPHA = 0.4
INCON ICX1 = -2.0, ICX2 = 0.0
X1DOT = X2
X1 = INTGRL(ICX1, X1DOT)
X2DOT = -ALPHA*X2 + U
X2 = INTGRL(ICX2, X2DOT)
GAMMA = ALOG(1.0 + ALPHA*ABS(X2))
BETA = SIGN(1.0, X2)/(ALPHA*ALPHA)
RHO = X1 + (X2)/ALPHA
U = -SIGN(1.0, RHO - BETA*GAMMA)
TIMER FINTIM = 3.0, OUTDEL = 0.06
PRTPLT X1(U,X2)
LABEL STATE RESPONSE OF X1 AND X2 FOR TIME OPTIMAL
CONTROL
END
STOP
ENDJOB
```

Fig. P3.21-3 Program listing for time optimal control.

The time optimal response, starting from any point in the  $x_1$ ,  $x_2$  plane should respond under control of maximum effort u(t) until the system trajectory reaches the switching curve. At this point the sign of the control is reversed and the system should follow the ideal switching curve to the origin. Use the program above with ICX1 = -2 and ICX2 = 0 and find the system response for  $x_1(t)$  and  $x_2(t)$ . Use a FINTIM of 3.0 and an OUTDEL of 0.06. Verify that the response intersects the switching curve and then proceeds to the origin.

Answer:

At TIME = 2.1, X1 = -0.36077, X2 = 0.05055, U = -1.0

# **4** FURTHER APPLICATION OF CSMP

The types of problems which can be simulated with CSMP are practically unlimited. Consequently, examples in Chaps. 2 and 3 were rather general and specifically selected to illustrate basic features. For the most part, these earlier chapters present those attributes of the program which are required in the majority of simulations. The material in Chap. 4 is somewhat more limited in scope but nevertheless relates to important engineering applications.

One normally views CSMP as a tool for obtaining the transient or dynamic response of a system of equations. In the first part of this chapter, however, two methods are given for obtaining the steady-state frequency response of a system. One of these methods relies on direct application of the system transfer function: the Laplace variable s is replaced by  $j\omega$  and the response is obtained as a function of  $\omega$ . The second method uses transient response information to find the frequency response.

The second topic of the chapter deals with particular block diagram forms of transfer functions and illustrates how these diagrams can be used to formulate the system state-variable equations. An example is given in which the state equations are solved using CSMP.

Real-time digital control has become increasingly important with recent technological development in the minicomputer and microprocessor field. Therefore, a section is included which gives the basic concepts for simulating direct digital control. The material covers sample and hold simulation, recursive digital control algorithms, and the digital three-mode (PID) controller. Anyone involved with real-time digital control will find this material to be helpful in evaluating the performance of proposed computer control systems.

Although CSMP is normally viewed as a software package for simulating continuous systems, the program also has the capability of simulating digital logic. The final section in this chapter presents an introduction to logic simulation and thus provides a method for investigating the performance of purposed configurations without actually building hardware realizations.

## **Frequency Response**

The concept of frequency response is well known in most scientific fields, particularly physics and engineering.<sup>(1-4)</sup> Basically this concept arises when considering an *n*th order, linear, differential equation with constant coefficients. In particular, if such an equation is written as

$$\frac{d^{n}x(t)}{dt^{n}} + a_{n-1}\frac{d^{n-1}x(t)}{dt^{n-1}} + \dots + a_{1}\frac{dx(t)}{dt} + a_{0}x(t)$$

$$= \frac{b_{m}d^{m}f(t)}{dt^{m}} + b_{m-1}\frac{d^{m-1}f(t)}{dt^{m-1}} + \dots + b_{1}\frac{df(t)}{dt} + b_{0}f(t) \quad (4.1)$$

and  $f(t) = F \sin \omega t$ , the steady-state solution for x(t) can be expressed as

$$x(t) = |X(j\omega)|\sin(\omega t + \phi)$$
(4.2)

where

$$|X(j\omega)| = |A(\omega) + jB(\omega)|$$
(4.3)

and

$$\phi = \tan^{-1}[B(\omega)/A(\omega)] \tag{4.4}$$

The question arises as to whether CSMP can be effectively used to calculate the frequency response of a system. The answer is a qualified yes. We have seen that if the transfer function or differential equation of a system is known, the response of the system to any forcing function can be determined using INTGRL, REALPL, LEDLAG, CMPXPL, and user-defined transfer function macros. If the forcing function is selected as a sine wave, the response of the system in steady state will yield the  $|X(j\omega)|$  and  $\phi$ . This, however, is a rather awkward approach in that CSMP must go through the transient portion of the solution for each frequency before reaching steady state. The transient calculations are wasted computer time with respect to determining the steady-state solution. Thus, even though CSMP can be used to determine the frequency response, excessive computer time is required if the procedure described above is followed. Only in rare instances, such as calculating the response for one or two frequencies, could one justify using this procedure.

While the above method should generally be avoided, there are other approaches to finding the frequency response using CSMP. Two methods are given below. For the first method a macro is developed and the response determined without using integrators. The second method uses an array of integrators and is applicable to finding the frequency response directly from measured time-domain data.

## Frequency Response Without Integration

Consider a transfer function of the form

$$G(s) = \frac{N_6 s^5 + N_5 s^4 + N_4 s^3 + N_3 s^2 + N_2 s + N_1}{D_6 s^5 + D_5 s^4 + D_4 s^3 + D_3 s^2 + D_2 s + D_1}$$
(4.5)

Replacing s by  $j\omega$ , multiplying out, and collecting real and imaginary terms gives

$$G(j\omega) = \frac{(N_5\omega^4 - N_3\omega^2 + N_1) + j(N_6\omega^5 - N_4\omega^3 + N_2\omega)}{(D_5\omega^4 - D_3\omega^2 + D_1) + j(D_6\omega^5 - D_4\omega^3 + D_2\omega)}$$
(4.6)

Define

$$X_{1} = (N_{5}\omega^{4} - N_{3}\omega^{2} + N_{1})$$

$$X_{2} = (N_{6}\omega^{5} - N_{4}\omega^{3} + N_{2}\omega)$$

$$X_{3} = (D_{5}\omega^{4} - D_{3}\omega^{2} + D_{1})$$

$$X_{4} = (D_{6}\omega^{5} - D_{4}\omega^{3} + D_{2}\omega)$$
(4.7)

giving

$$G(j\omega) = \frac{X_1 + jX_2}{X_3 + jX_4}$$
(4.8)

Rationalizing the expression for  $G(j\omega)$  yields

$$G(j\omega) = \frac{(X_1X_3 + X_2X_4) + j(X_2X_3 - X_1X_4)}{(X_3^2 + X_4^2)}$$
(4.9)

We therefore have from Eq. (4.8)

$$|G(j\omega)| = \left[\frac{X_1^2 + X_2^2}{X_3^2 + X_4^2}\right]^{1/2}$$
(4.10)

and from (4.9)

$$\phi = \underline{/G(j\omega)} = \tan^{-1} \left[ \frac{X_2 X_3 - X_1 X_4}{X_1 X_3 + X_2 X_4} \right]$$
(4.11)

To compute the frequency response, various values of  $\omega$  must be used to calculate  $X_1$ ,  $X_2$ ,  $X_3$ , and  $X_4$ .

The values assigned to  $\omega$  will normally depend upon the intended application. Typically, linear increments of  $\omega$  are used for Nyquist plots whereas logarithmic increments are used for Bode diagrams. The frequency increments will be equally spaced on a log scale provided,

$$\omega_i = \omega_{\min}(10)^{i\Delta}$$
  $i = 0, 1, 2, \dots, m$  (4.12)

where m = the total number of steps over the frequency range

 $\omega_{\min} =$ starting value of  $\omega$ 

 $\Delta = 1/($ the number of desired points per decade)

 $\omega_i = \omega$  for the *i*th point

The natural stepping variable of CSMP is the program variable TIME. The equations for the frequency response developed above are, however, not functions of time. Nevertheless, the index  $i\Delta$  can be replaced by TIME if TIME is incremented by 0,  $\Delta$ ,  $2\Delta$ ,  $3\Delta$ , ...,  $m\Delta$ . When integration is not specified in CSMP, the increments of TIME can be controlled by the value of DELT given on the TIMER card. The following example illustrates how these observations may be used for obtaining the frequency response.

#### Example 4.1

The transfer function of a system is given by

$$G(s) = \frac{25}{s^2 + 3s + 25} \tag{4.13}$$

The frequency response is desired over the range  $\omega = 0.1$  to  $\omega = 10$  radians/sec with 20 equally spaced log steps per decade.

A program for this purpose is given in Fig. 4.1. In this program a procedural macro is used to calculate  $|G(j\omega)|$  and  $\underline{/G(j\omega)}$ . The coefficients of the transfer function are placed into the program using the STORAGE and TABLE features. Frequency is incremented by the equation

$$OMEGA = WMIN*(10.0**(TIME))$$
(4.14)

```
MACRO FASE, MAG = FREQ(N, D, OMEGA)
PROCEDURAL
   X1 = N(5)*(OMEGA**4)-N(3)*(OMEGA**2)+N(1)
   X2 = N(6)*(OMEGA**5)-N(4)*(OMEGA**3)+N(2)*OMEGA
   X3 = D(5)*(OMEGA**4)-C(3)*(OMEGA**2)+D(1)
   X4 = D(6)*(CMEGA**5)-D(4)*(OMEGA**3)+D(2)*OMEGA
   MAG = (SQRT(X1*X1+X2*X2))/(SQRT(X3*X3+X4*X4))
   CONV = 57.29578
   XREAL = X1 \times X3 + X2 \times X4
   XIMAG = X2*X3 - X1*X4
   FASE = (ATAN2(XIMAG, XREAL))*CONV
   IF(FASE)2, 2, 3
       FASE = FASE - 360.0
       CONTINUE
   2
ENDMAC
INITIAL
     PARAM WMIN = 0.1, WMAX = 10.0
DYNAMIC
STORAGE NUM(6), DEN(6)
      NUM(1-6) = 25.0, 5*0.0, ...
TABLE
       DEN(1-6) = 25.0, 3.0, 1.0, 3*0.0
NOSORT
OMEGA = WMIN*(10.0**(TIME))
PHASE, VALUE = FREQ(NUM, DEN, OMEGA)
FINISH CMEGA = WMAX
    SET OUTDEL EQUAL TO CNE OVER THE NUMBER OF STEPS PER DECADE
TIMER FINTIM = .4.0, OUTDEL = 0.05, DELT = 0.05
PRTPLT VALUE(OMEGA, PHASE), PHASE(OMEGA, VALUE)
LABEL OUTPUT FOR EXAMPLE 4-1
END
STOP
ENDJOB
```

Fig. 4.1 Frequency response program listing using a procedural macro.

The value of TIME is incremented as the smallest value of DELT and OUTDEL. Termination of OMEGA is governed by FINTIM or the finish statement, FINISH = WMAX. One must be careful in specifying FINTIM in this case. When TIME = FINTIM, OMEGA will be  $(\omega_{\min})10^{\text{FINTIM}}$ . For FINTIM = 4 the maximum OMEGA is 10,000 times  $\omega_{\min}$  which gives 1000 for  $\omega_{\min} = 0.1$ . Obviously, in this case the FINISH statement will terminate the run.

The form of output can be selected by the user. The customary Bode diagram will be obtained if printer-plots of magnitude and phase are requested. As shown on the output in Fig. 4.2, TIME is still listed in the first column and should be ignored except to observe that its increments vary according to the value of OUTDEL. The actual value of OMEGA can be listed on the plots by specifying it as an argument of the requested PRTPLT variable. For example

## **PRTPLT VALUE (OMEGA)**

The program was written for any transfer function with up to a maximum of a fifthorder numerator and denominator. The macro could be extended to a more general case, for example a tenth-order numerator and denominator, but at the sacrifice of using more CPU time.

# Frequency Response Using Array Integrators

A transfer function is defined as the ratio of the Laplace transform of the output to the Laplace transform of the input when the system has zero initial conditions. As noted in the previous section, a transfer function can be defined only for linear, time-invariant, systems. The frequency-response function can be determined from the transfer function by replacing s with  $j\omega$ . We can then write

$$G(j\omega) = \frac{X(j\omega)}{F(j\omega)} = \frac{\int_{-\infty}^{+\infty} x(t)e^{-j\omega t} dt}{\int_{-\infty}^{+\infty} f(t)e^{-j\omega t} dt}$$
(4.15)

where  $X(j\omega)$  and  $F(j\omega)$  are the Fourier transforms of x(t) and f(t) respectively. These integrals are defined provided they are absolutely convergent. This is shown by

$$\int_{-\infty}^{+\infty} |x(t)e^{-j\omega t}| dt = \int_{-\infty}^{+\infty} |x(t)| dt < \infty$$
(4.16)

and similarly for the integral involving f(t). If x(t) and f(t) are zero for t < 0, Eq. (4.15) becomes

$$G(j\omega) = \frac{\int_{o}^{\infty} x(t)e^{-j\omega t} dt}{\int_{o}^{\infty} f(t)e^{-j\omega t} dt}$$
(4.17)

Evaluating these integrals gives another method for finding the frequency response. From the standpoint of a numerical integration one would never attempt to evaluate the integral over the range  $(0, \infty)$ . Thus, from practical considerations, the

## OUTPUT FOR EXAMPLE 4-1

|            | MI         | INIMUM   | VALUE | VERSUS | TIME | MAXIMUM    |            |             |
|------------|------------|----------|-------|--------|------|------------|------------|-------------|
|            | 2.3        | 3506E-01 |       |        |      | 1.7459E 00 |            |             |
| TIME       | VALUE      | I        |       |        |      | I          | OMEGA      | PHASE       |
| 0.0        | 1.0003E-00 |          |       | +      |      |            | 1.0000E-01 | -6.8779E-01 |
| 5.0000E-02 | 1.0004E 00 |          |       | +      |      |            | 1.1220E-01 | -7.7178E-01 |
| 1.0000E-01 | 1.0005E 00 |          |       | +      |      |            | 1.2589E-01 | -8.6606E-01 |
| 1.5000E-01 | 1.0007E 00 |          |       | +      |      |            | 1.4125E-01 | -9.7187E-01 |
| 2.0000E-01 | 1.0008E 00 |          |       | +      |      |            | 1.5849E-01 | -1.0907E 00 |
| 2.5000E-01 | 1.0010E 00 |          |       | +      |      |            | 1.7783E-01 | -1.2240E 00 |
| 3.0000E-01 | 1.0013E 00 |          |       | +      |      |            | 1.9953E-01 | -1.3738E 00 |
| 3.5000E-01 | 1.0016E 00 |          |       | +      |      |            | 2.2387E-01 | -1.5419E 00 |
| 4.0000E-01 | 1.0021E 00 |          |       | +      |      |            | 2.5119E-01 |             |
| 4.5000E-01 | 1.0026E 00 |          |       | +      |      |            | 2.8184E-01 | -1.9432E 00 |
| 5.0000E-01 | 1.00335 00 |          |       | +      |      |            |            | -2.1819E 00 |
| 5.5000E-01 | 1.0041E 00 |          |       | +      |      |            |            | -2.4504E 00 |
| 6.0000E-01 | 1.0052E 00 |          |       | +      |      |            |            | -2.7525E 00 |
| 6.5000E-01 | 1.0066E 00 |          |       | +      |      |            | 4.4668E-01 | -3.0929F 00 |
| 7.0000E-01 | 1.0083E 00 |          |       | +      |      |            | 5.0119E-01 | -3.4766E 00 |
| 7.5000E-01 | 1.0105E 00 |          |       | +      |      |            | 5.6234E-01 | -3.9098E 00 |
| 8.0000E-01 | 1.0132E 00 |          |       | +      |      |            | 6.3096E-01 | -4.3997E 00 |
| 8.5CCOE-01 | 1.0166E 00 |          |       | +      |      |            | 7.0794E-01 | -4.9546E 00 |
| 9.0000E-01 | 1.0210E 00 |          |       | +      |      |            | 7.9433E-01 | -5.5850E 00 |
| 9.5000E-01 | 1.0266E 00 |          |       | +      |      |            | 8.9125E-01 | -6.3033E 00 |
| 1.0000E 00 | 1.0336E 00 |          |       | +      |      |            | 1.0000E 00 | -7.1250E 00 |
| 1.0500E 00 | 1.0426E 00 |          |       | +      |      |            | 1.1220E 00 | -8.0697E 00 |
| 1.1000E 00 | 1.0541E 00 |          |       | +      |      |            | 1.2589E 00 | -9.1626E 00 |
| 1.1500E 00 | 1.0688E 00 |          |       | +      |      |            | 1.4125E 00 | -1.0437E 01 |
| 1.2000E 00 | 1.0877E 00 | *======  |       | •      |      |            | 1.5849E 00 | -1.1938E 01 |
| 1.2500E 00 | 1.1121E 00 |          |       | •      |      |            | 1.7783E 00 | -1.3728E 01 |
| 1.3000E 00 | 1.1439E 00 |          |       |        |      |            | 1.9953E 00 | -1.5896E 01 |
| 1.3500E 00 | 1.1856E 00 |          |       |        | •    |            | 2.2387E 00 | -1.8573E 01 |
| 1.4C00E 00 | 1.2405E 00 |          |       |        |      |            | 2.5119E 00 | -2.1958E 01 |
| 1.4500E 00 | 1.3132E 00 |          |       |        |      |            | 2.8184E 00 | -2.6368E 01 |
| 1.5000E 00 | 1.4086E 00 |          |       |        | -    |            | 3.1623E 00 | -3.2311E 01 |
| 1.5500E 00 | 1.5290E 00 |          |       |        |      |            | 3.5481E 00 | -4.0618E 01 |
| 1.6000E 00 | 1.6616E 00 |          |       |        |      | -          |            | -5.2539E 01 |
| 1.6500E 00 | 1.74592 00 |          |       |        |      |            |            | -6.9360E 01 |
| 1.7000E 00 | 1.6627E 00 |          |       |        |      | +          |            | -9.0452E 01 |
| 1.7500E 00 | 1.3794E 00 |          |       |        | +    |            | 5.6234E 00 |             |
| 1.80005 00 | 1.0402E 00 |          |       | +      |      |            |            | -1.2804E 02 |
| 1.8500E 00 | 7.6003E-01 |          | +     |        |      |            |            | -1.3978E 02 |
| 1.9000E 00 | 5.5637E-01 | +        |       |        |      |            |            | -1.4797E 02 |
| 1.9500E 00 | 4.1224E-01 | +        |       |        |      |            |            | -1.5384E 02 |
| 2.0000E 00 | 3.0950E-01 | +        |       |        |      |            |            | -1.58205 02 |
| 2.0500E 00 | 2.3506E-01 | +        |       |        |      |            | 1.1220E 01 | -1.6155E 02 |

Fig. 4.2 Printer-plot of the frequency response amplitude using  $\log \omega$  steps.

range must be limited to a finite practical upper bound,  $t_f$ . The expression for  $G(j\omega)$  can be viewed as

$$G(j\omega) = \frac{\int_{o}^{t_{f}} x(t)e^{-j\omega t} dt + \int_{t_{f}}^{\infty} x(t)e^{-j\omega t} dt}{\int_{o}^{t_{f}} f(t)e^{-j\omega} dt + \int_{t_{f}}^{\infty} f(t)e^{-j\omega t} dt}$$
(4.18)

If the integration process is terminated after  $t_f$ , error in  $G(j\omega)$  will result according to the remaining integrals evaluated from  $t_f$  to  $\infty$ .<sup>(5)</sup>

Let the input to a system be a pulse of duration  $t_f/2$  where the  $t_f$  selected is large enough to cover the range of the transient response shown in Fig. 4.3. The

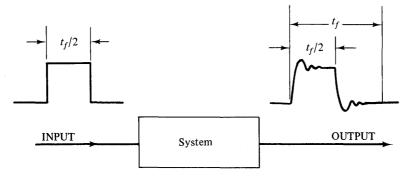


Fig. 4.3 Typical time comain signals for determining frequency response.

input signal is not required to be an ideal pulse but should contain sufficiently high harmonics to cover the frequency range of interest for  $G(j\omega)$ . G(jw) can be written as

$$G(j\omega) = \frac{\int_{o}^{t_{f}} x(t) \cos(\omega t) dt - j \int_{o}^{t_{f}} x(t) \sin(\omega t) dt}{\int_{o}^{t_{f}} f(t) \cos(\omega t) dt - j \int_{o}^{t_{f}} f(t) \sin(\omega t) dt}$$
(4.19)

Suppose the frequency response is desired at the frequency points

$$\omega_i = \omega_1, \omega_2, \omega_3, \ldots, \omega_{19}, \omega_{20}, \omega_{21}$$

Determining  $G(j\omega_i)$  requires that 84 integrals be evaluated. In particular, if

$$G(j\omega) = \frac{A(j\omega_i) - jB(j\omega_i)}{C(j\omega_i) - jD(j\omega_i)}$$
(4.20)

then

$$A(j\omega_i) = \int_{o}^{t_r} x(t) \cos(\omega_i t) dt \qquad i = 1, 2, ..., 21$$
(4.21)

and similar expressions prevail for  $B(j\omega_i)$ ,  $C(j\omega_i)$ , and  $D(j\omega_i)$ . Observe that

$$A(j\omega_i) = \text{INTGRL}[\text{IC}, x(t)\cos(\omega_i t)]$$
(4.22)

and thus 21 integrals of this form, one for each  $\omega_i$ , could be programmed.

A series of integrals of this form can best be handled using the integrator array feature of CSMP. This type of integration was presented earlier in Example 3.3. The following example will show how these concepts can be programmed in CSMP for finding the frequency response.<sup>†</sup>

#### Example 4.2

Find the pulse response and frequency response for the system shown in Fig. 4.4.

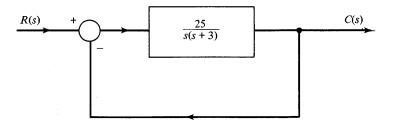


Fig. 4.4 System diagram for Example 4.2.

We observe that the closed-loop transfer function is given by

$$\frac{C(s)}{R(s)} = \frac{25}{s^2 + 3s + 25} \tag{4.23}$$

which is identical to the transfer function in Example 4.1.

The first problem to resolve is the width of the pulse test function. Comparing the above transfer function to the standard second-order form,  $s^2 + 2\zeta\omega_n s + \omega_n^2$ , gives  $\omega_n = 5$  and  $\zeta = 0.3$ . The  $\pm 1.8\%$  settling time is  $t_s = 4/\zeta\omega_n = 2.67$  sec. To insure small error for  $G(j\omega)$  we select a pulse width of 4.2 sec.

If we now apply a pulse R given by

$$R = Q1 - Q2$$
  

$$Q1 = STEP(0.0)$$
  

$$Q2 = STEP(4.2)$$
  
(4.24)

then c(t) = x(t) will be the response of the system with R = r(t) = f(t) as the input.

An ordinary CSMP program can be written for the system in Fig. 4.4 to find c(t). This c(t) plays the role of x(t) in the earlier mathematical discussion.

A program for finding the pulse response and the frequency response from  $\omega = 0.1$  to  $\omega = 10$  radians/sec at ten equal log steps per decade is shown in Fig. 4.5. The following key points are noted.

Frequency W(I) is calculated in the initial segment using a conventional DO loop. The program determines the pulse response, XX, of the system. The time-varying XX is passed on to a procedure function where the time-varying XA(I), XB(I), XC(I), and XD(I) (I = 1, 2, ..., 21) are determined. The procedure function returns XA(I), XB(I), XC(I), and XD(I) to the arguments of the array integrators A(I), B(I), C(I), and D(I).

Slight modifications are required for using the array integrator in CSMP III. See Chap. 5.

```
ILLUSTRATION OF FREQUENCY RESPONSE USING ARRAY INTEGRATION
*
      DIMENSION A(21), B(21), C(21), D(21), AIC(21), BIC(21), CIC(21), DIC(21),
1
      $ XA(21), XB(21), XC(21), XD(21)
1
1
        EQUIVALENCE (A1, A(1)), (B1, B(1)), (C1, C(1)), (D1, D(1)),
      $(AIC1,AIC(1)),(BIC1,BIC(1)),(CIC1,CIC(1)),(DIC1,DIC(1)),
1
      $ (XA1,XA(1)),(XB1,XB(1)),(XC1,XC(1)),(XD1,XD(1))
1
FIXED I, ITOTAL
STORAGE W(21), GAIN(21), PHASE(21)
**
INITIAL
PARAMETER XDECAD = 10.0, NUMDEC = 2.0, WMIN = 0.1
NOSORT
ITOTAL = NUMDEC*XDECAD + 1.0
X = 0.0
      DO 20 I = 1, ITOTAL
   X = 1.0/XDECAD + X
20 W(I) = WMIN*(10.0**(X))
**
DYNAMIC
Q1 = STEP(0.0)
02 = STEP(4.2)
R = Q1 - Q2E = R - XX
X1 = (25./3.0) \times E
X2 = REALPL(0.0,1.0/3.0,X1)
XX = INTGRL(0.0, X2)
A1 = INTGRE (AIC1,XA1,21)
B1 = INTGRL(BIC1, XB1, 21)
C1 = INTGRL(CICL,XC1,21)
      INTGRL(DIC1,XD1,21)
D1 =
PROCEDURE XA1,XB1,XC1,XD1 = FORCE(W,XX,R,ITOTAL)
      DO 1 I = 1.ITOTAL
      XA(I) = XX*COS(W(I)*TIME)
      XB(I) = XX*SIN(W(I)*TIME)
      XC(I) = R*COS(W(I)*TIME)
      XD(I) = R*SIN(W(I)*TIME)
  1
ENDPRO
TERMINAL
      CONV = 57.29578
      DO 3 I = 1, ITOTAL
      GAIN(I) = (SQRT(A(I)**2 + B(I)**2))/(SQRT(C(I)**2 + D(I)**2))
       PHASE(I) = (ATAN2(-B(I),A(I))-ATAN2(-D(I),C(I)))*CONV
      IF(PHASE(I))9,9,8
    8 \text{ PHASE(I)} = \text{PHASE(I)} - 360.0
    9 CONTINUE
    3 WRITE(6,10) W(I), GAIN(I), PHASE(I)
   10 FORMAT(1H0.8H OMEGA =. E12.5.3X.11HAMPLITUDE =. 2X. E12.5
     $,3X,7HPHASE =,2X,F10.5}
* *
TIMER FINTIM = 10.0, OUTDEL = 0.2, DELT = 0.001, PRDEL = 0.1
PRTPLT XX
LABEL OUTPUT FOR EXAMPLE 4-2 ARRAY
END
STOP
ENDJOB
```

```
Fig. 4.5 CSMP program listing for finding frequency response with integrator array.
```

In the terminal segment conventional FORTRAN statements are used to calculate

$$GAIN(I) = \sqrt{\frac{A(I)^2 + B(I)^2}{C(I)^2 + D(I)^2}}$$
(4.25)

$$PHASE(I) = \tan^{-1}\left(\frac{-B(I)}{A(I)}\right) - \tan^{-1}\left(\frac{-D(I)}{C(I)}\right)$$
(4.26)

OUTPUT FOR EXAMPLE 4-2 ARRAY

|   |            |             | NIMUM<br>443E-01 | xx | VERSUS TIME | MAXIMUM<br>1.3647E 00 |
|---|------------|-------------|------------------|----|-------------|-----------------------|
|   | TIME       |             |                  |    |             |                       |
|   | TIME       | XX          | I<br>+           |    |             | I                     |
|   | 0.0        | 0.0         | +                | _  |             |                       |
|   | 2.0000E-01 | 3.8141E-01  |                  | +  |             |                       |
| · | 4.0000E-01 | 1.0186E 00  |                  |    |             | •                     |
|   | 6.0000E-01 | 1.3555E 00  |                  |    |             | +                     |
|   | 8.0000E-01 | 1.2945E 00  |                  |    |             | +                     |
|   | 1.0000E 00 | 1.0573E 00  |                  |    |             | -+                    |
|   | 1.2000F 00 | 8.8749E-01  |                  |    | +           |                       |
|   | 1.4000E 00 | 8.7212E-01  |                  |    | +           |                       |
|   | 1.6000E 00 | 9.5215E-01  |                  |    |             |                       |
|   | 1.8000E 00 | 1.0292E 00  |                  |    |             | -+                    |
|   | 2.0000E 00 | 1.0513E 00  |                  |    |             | •+                    |
|   | 2.2000E 00 | 1.0279E 00  |                  |    |             | • •                   |
|   | 2.4000E 00 | 9.9580E-01  |                  |    |             | •                     |
|   | 2.6000E 00 | 9.8107E-01  |                  |    | +           |                       |
|   | 2.8000E 00 | 9.8608E-01  |                  |    |             | •                     |
|   | 3.0000E 00 | 9.9846E-01  |                  |    |             | •                     |
|   | 3.2000E 00 | 1.0063E 00  |                  |    |             |                       |
|   | 3.4000E 00 | 1.0063E 00  |                  |    |             |                       |
|   | 3.6000E 00 | 1.0019E 00  |                  |    |             |                       |
|   | 3.8000E 00 | 9.9819E-01  |                  |    |             |                       |
|   | 4.0000E 00 | 9.9741E-01  |                  |    |             |                       |
|   |            |             |                  |    |             |                       |
|   | 4.2000E 00 | 9.9877E-01  |                  |    |             | *                     |
|   | 4.4000E 00 | 6.1897E-01  |                  |    | +           |                       |
|   | 4.6000E 00 | -1.7633E-02 |                  |    |             |                       |
|   | 4.8000E 00 | -3.5483E-01 | +                |    |             |                       |
|   | 5.0000E 00 | -2.9445E-01 | +                |    |             |                       |
|   | 5.2000E 00 | -5.7717E-02 | +                |    |             |                       |
|   | 5.4000E 00 | 1.1226E-01  |                  | •  |             |                       |
|   | 5.6000E 00 | 1.2801E-01  |                  | -+ |             |                       |
|   | 5.8000E 00 | 4.8140E-02  | +                |    |             |                       |
|   | 6.0000E 00 | -2.9031E-02 | +                |    |             |                       |
|   | 6.2000E 00 | -5.1352E-02 |                  |    |             |                       |
|   | 6.4000E 00 | -2.8103E-02 | +                |    |             |                       |
|   | 6.6000E 00 | 4.1044E-03  | +                |    |             |                       |
|   | 6.8000E 00 | 1.8961E-02  | +                |    |             |                       |
|   | 7.0000E 00 | 1.4011E-02  | +                |    |             |                       |
|   | 7.2000E 00 | 1.6021E-03  | +                |    |             |                       |
|   | 7.4000E 00 | -6.3230E-03 | +                |    |             |                       |
|   | 7.6000E 00 | -6.3044E-03 | +                |    |             |                       |
|   | 7.8000E 00 | -1.9344E-03 | +                |    |             |                       |
|   | 8.0000E 00 | 1.8041E-03  | +                |    |             |                       |
|   | 8.2000E 00 | 2.6104E-03  | +                |    |             |                       |
|   | 8.4000E 00 | 1.2482E-03  | +                |    |             |                       |
|   | 8.6000E 00 | -3.6340E-04 | +                |    |             |                       |
|   | 8.8000E 00 | -9.9750E-04 | +                |    |             |                       |
|   | 9.0000E 00 | -6.5606E-04 |                  |    |             |                       |
|   | 9.2000E 00 | -1.4780E-05 | +                |    |             |                       |
|   | 9.4000E 00 | 3.4776E-04  |                  |    |             |                       |
|   | 9.6000E 00 | 3.0644E-04  | +                |    |             |                       |
|   | 9.8000E 00 | 7.1827E-05  | +                |    |             |                       |
|   |            | -1.0674E-04 | +                |    |             |                       |
|   | 1.0000E 01 | -1+00/46-04 | +                |    |             |                       |
|   |            |             |                  |    |             |                       |

Fig. 4.6 Pulse response of the system for Example 4.2.

PAGE 1

The program output for GAIN(I) and PHASE(I) are neither printer-plotted nor printed in the usual CSMP form but are listed using FORTRAN Write and Format statements.

The pulse response of the system is given in Fig. 4.6 where we note that the response overshoot is approximately 36%, as expected for  $\zeta = 0.3$ . We also note that for all practical purposes the system has reached steady state in 4 sec.

Frequency response information is given in column format in Fig. 4.7. Comparing this output with the results of Example 4.1 (Fig. 4.2) shows excellent agreement. The decibel amplitude could easily be added to the output listing by inserting the statement,

$$DBGAIN(I) = 20.0*ALOG(GAIN(I))$$
(4.27)

along with slight modifications in the Write and Format statements.

PROBLEM DURATION 0.0 TO 1.0000E 01

| VARIABLE<br>XX | MINI<br>-3.644 |       | T IME<br>4.9000E |   | MAXIMU<br>1.3647E |    | TI<br>7.000 |              |
|----------------|----------------|-------|------------------|---|-------------------|----|-------------|--------------|
| OMEGA =        | 0.12589E       | 00 AM | IPL I TUDE       | = | 0.10005E          | 01 | PHASE       | -0.86600     |
| OMEGA =        | 0.15849E       | 00 AM | PLI TUDE         | = | 0.10008E          | 01 | PH AS E     | = -1.09073   |
| OMEGA =        | 0.19953E       | MA 00 | PL I TUDE        | = | 0.10013E          | 01 | PHASE       | -1.37399     |
| OMEGA =        | 0.25119E       | 00 AN | IPL I TUDE       | = | 0.10021E          | 01 | PHASE       | -1.73112     |
| OMEGA =        | 0.31623E       | 00 AM | IPL I TUDE       | = | 0.10033E          | 01 | PHASE       | -2.18208     |
| OMEGA =        | 0.39811E       | 00 AM | IPL I TUDE       | = | 0.10052E          | 01 | PHASE       | -2.75266     |
| OMEGA =        | 0.50119E       | 00 AM | IPLI TUDE        | = | 0 <b>.100</b> 83E | 01 | PH AS E     | = -3.47651   |
| OMEGA =        | 0.63096E       | 00 AM | APLITUDE         | = | 0.10132E          | 01 | PHASE       | = -4.39891   |
| OMEGA =        | 0.79433E       | 00 AM | IPL I TUDE       | = | 0.10210E          | 01 | PHASE       | = -5.58496   |
| OMEGA =        | 0.10000E       | 01 AM | 1PL I TUDE       | = | 0.10336E          | 01 | PHASE       | = -7.12580   |
| OMEGA =        | 0.12589E       | 01 44 | IPL I TUDE       | = | 0.10540E          | 01 | PHASE       | = -9.16152   |
| OMEGA =        | 0.15849E       | 01 44 | MPLI TUDE        | = | C.10874E          | 01 | PH AS E     | = -11.93899  |
| OMEGA =        | 0.19953E       | 01 AM | APL I TUDE       | = | 0.11440E          | 01 | PHASE       | -15.89472    |
| OMEGA =        | 0.25119E       | 01 AM | PL I TUDE        | = | 0.12405E          | 01 | PHASE       | -21.95506    |
| OMEGA =        | 0.31623E       | 01 AM | MPLITUDE         | = | 0 <b>.14086</b> E | 01 | PHASE       | = -32.29756  |
| OMEGA =        | 0.39810E       | 01 AM | PLITUDE          | Ξ | 0 <b>.16619</b> E | 01 | PHASE       | = -52.54179  |
| OMEGA =        | 0.50118E       | 01 A' | APL I TUDE       | = | 0.16627E          | 01 | PH AS E     | = -90.46185  |
| OMEGA =        | 0.630955       | 01 AM | MPL I TUDE       | = | 0.10394E          | 01 | PHASE       | = -128.03969 |
| OMEGA =        | 0.79432E       | 01 AM | MPL I TUDE       | = | 0 <b>.5560</b> 5E | 00 | PHASE       | = -147.91357 |
| OMEGA =        | 0.99999E       | 01 At | MPLITUDE         | = | 0.30965E          | 00 | PHASE       | = -158.23978 |
| OMEGA =        | 0.12589E       | 02 AM | MPL I TUDE       | z | 0•17989E          | 00 | PHASE       | = -164.20155 |

Fig. 4.7 Frequency response information for Example 4.2 using the integrator array.

```
ILLUSIKATION OF FREQUENCE RESPONSE USING ARRAY INTEGRATION
1
       DIMENSION A(21), B(21), C(21), D(21), AIC(21), BIC(21), CIC(21), DIC(21).
1
      $ XA(21), XB(21), XC(21), XD(21)
        EQUIVALENCE (A1, A(1)), (B1, B(1)), (C1, C(1)), (D1, D(1)),
1
      $(AIC1,AIC(1)),(BIC1,BIC(1)),(CIC1,CIC(1)),(DIC1,DIC(1)),
      $ (XA1,XA(1)),(XB1,XB(1)),(XC1,XC(1)),(XD1,XD(1))
FIXED I, ITOTAL
STORAGE W(21), GAIN(21), PHASE(21)
FUNCTION SIGNAL = (0.0,0.0),(.2,.3814),(.4,1.019),(.6,1.355),...
 (.8,1.295),(1.0,1.057),(1.2,.8875),(1.4,.872),(1.6,.952),(1.8,1.03),...
 (2.0,1.051),(2.2,1.028),(2.4,.996),(2.6,.981),(2.8,.986),...
 (3.0, .998), (3.2, 1.00), (3.4, 1.00), (3.6, 1.00), (3.8, 1.00), ...
 (4.00,1.00), (4.2,.617), (4.4,-.0182), (4.6,-.354), (4.8,-.294), ...
 (5.0,-.057),(5.2,.112),(5.4,.128),(5.6,.0478),(5.8,-.029),...
 (6 \cdot 0, - \cdot 051), (6 \cdot 2, - \cdot 0279), (6 \cdot 4, \cdot 004), (6 \cdot 6, \cdot 0189), (6 \cdot 8, \cdot 0139), ...,
 (7.0,.0015),(7.2,...0063),(7.4,-.006),(7.6,-.0019),(7.8,.0018),...
 (8.0,.0026),(8.2,.00123),(8.4,-.0004),(8.6,-.0009),(8.8,-.0006),...
 (9 \cdot 0 \cdot 0 \cdot 0) \cdot (9 \cdot 2 \cdot 0 \cdot 0) \cdot (9 \cdot 4 \cdot 0 \cdot 0) \cdot (9 \cdot 6 \cdot 0 \cdot 0) \cdot (9 \cdot 8 \cdot 0 \cdot 0) \cdot (1 \cdot 0 \cdot 0 \cdot 0 \cdot 0)
**
INITIAL
PARAMETER XDECAD = 10.0, NUMDEC = 2.0, WMIN = 0.1
NOSORT
ITOTAL = NUMDEC*XDECAD + 1.0
X = 0.0
       DO 20 I = 1, ITOTAL
       X = 1.0/XDECAD + X
   20 W(I) = WMIN*(10.0**(X))
**
DYNAMIC
Q1 = STEP(0.0)
Q2 = STEP(4.2)
R = Q1 - Q2
XX = AFGEN(SIGNAL,TIME)
A1 = INTGRL (AIC1, XA1, 21)
81 =
      INTGRL(BIC1, XB1, 21)
C1 = INTGRL(CIC1,XC1,21)
D1 =
      INTGRL(DIC1,XD1,21)
PROCEDURE XA1, XB1, XC1, XD1 = FORCE(W, XX, R, ITOTAL)
       DO 1 I = 1, ITOTAL
       XA(I) = XX*CCS(W(I)*TIME)
       XB(I) = XX*SIN(W(I)*TIME)
      XC(I) = R*COS(W(I)*TIME)
  1
      XD(I) = R*SIN(W(I)*TIME)
ENDPRO
METHCD RKSFX
TERMINAL
TERMINAL
      CONV = 57.29578
       DD 3 I = 1, ITOTAL
       GAIN(I) = (SQRT(A(I)**2 + B(I)**2))/(SQRT(C(I)**2 + D(I)**2))
        PHASE(I) = (ATAN2(-B(I),A(I))-ATAN2(-D(I),C(I)))*CONV
       IF(PHASE(I))9,9,8
    8 \text{ PHASE(I)} = \text{PHASE(I)} - 360.0
    9 CONTINUE
    3 WRITE(6,10) W(I), GAIN(I), PHASE(I)
   10 FORMAT(1H0,8H CMEGA =+F12+5+3X+11HAMPLITUDE =+2X+E12+5
     $,3X,7HPHASE =,2X,F10.5)
**
TIMER FINTIM = 10.0, DUTDEL = 0.2, DELT = 0.005, PRDEL = 0.1
PRTPLT XX
LABEL ARRAY INTEGRATION USING NUMERICAL FUNCTION EXAMPLE 4-2
END
STOP
```

Fig. 4.8 CSMP program listing for finding frequency response from pulse response using the integrator array.

The CPU time for running this program on the 360/65 was approximately 40 sec. The multiple integrations account for the rather large CPU time as compared to Example 4.1 which used only 10 sec for twice as many frequency points. Obviously, if the system transfer function is known, the method of Example 4.1 is preferred over the array integration method.

The real advantage of the array-integrator method exhibits itself in the following light. There are many practical systems where direct frequency response measurements are extremely difficult and uneconomical to obtain. Making such measurements on chemical process plants and metal-rolling mills is practically out of the question. However, the pulse response of many systems can be directly and economically measured. If this time domain data is coupled to the array-integrator program via either AFGEN or NLFGEN then the system frequency response can be obtained.

To illustrate this point, suppose the time response data of Fig. 4.7 is used to define a function.

FUNCTION SIGNAL = 
$$(0.0, 0.0)$$
,  $(0.2, 0.3814)$ , ...

from which the signal XX is obtained by:

#### XX = AFGEN (SIGNAL, TIME)

The program in Fig. 4.8 has incorporated these changes by simply removing the original system-transfer function. The resulting frequency response information is shown in Fig. 4.9. The response compares favorably to the "exact" answers and deviations can be attributed to interpolation inaccuracy.

In summary, this section shows two methods for obtaining a system frequency response using CSMP. The first method applies directly to those systems with known transfer functions. The second method can be applied to systems with known transfer functions and, moreover, has its greatest value in determining the frequency response from pulseresponse information as measured directly from the physical system.

# State Variable Formulation from Transfer Functions

The occasion often arises when one wishes to express the dynamics of a system in state-variable form rather than the customary transfer function. The state equations for a linear, time-invariant, system can be written as

$$\dot{\mathbf{x}}(t) = A\mathbf{x}(t) + B\mathbf{u}(t) \tag{4.28}$$

$$\mathbf{y}(t) = C\mathbf{x}(t) + D\mathbf{u}(t) \tag{4.29}$$

where  $\mathbf{x}(t) = n$ -dimensional column vector called the system state vector,

 $\mathbf{y}(t) = q$ -dimensional column vector called the system output vector,

 $\mathbf{u}(t) = m$ -dimensional column vector called the system input vector,

and A, B, C, and D have appropriate matrix dimensions.

| OMEGA | = | 0.10000E | 00 | AMPLITUDE | = | 0.99969E | 00  | PHASE, | = | -0.68448                        |
|-------|---|----------|----|-----------|---|----------|-----|--------|---|---------------------------------|
| OMEGA | = | 0.12589E | 00 | AMPLITUDE | = | 0.99986E | 00  | PHASE  | = | -0.86155                        |
| OMEGA | = | 0.15849E | 00 | AMPLITUDE | = | 0.10001E | 01  | PHASE  | = | -1.08507                        |
| OMEGA | = | 0.19953E | 00 | AMPLITUDE | = | 0.10006E | 01  | PHASE  | = | -1.36697                        |
| OMEGA | = | 0.25119E | 00 | AMPLITUDE | = | 0.10013E | 01  | PHASE  | = | -1.72244                        |
| OMEGA | = | 0.31623E | 00 | AMPLITUDE | = | 0.10024E | 01  | PHASE  | = | -2.17153                        |
| OMEGA | = | 0.39811E | 00 | AMPLITUDE | = | 0.10041E | 01  | PHASE  | = | -2.73948                        |
| OMEGA | = | 0.50119E | 00 | AMPLITUDE | = | 0.10069E | 01  | PHASE  | = | -3.45968                        |
| OMEGA | = | 0.63096E | 00 | AMPLITUDE | = | 0.10113E | 01  | PHASE  | = | -4.37542                        |
| OMEGA | = | 0.79433E | 00 | AMPLITUDE | = | 0.10183E | 01  | PHASE  | = | -5.54671                        |
| OMEGA | = | 0.10000E | 01 | AMPLITUDE | = | 0.10297E | 01  | PHASE  | = | -7.05657                        |
| OMEGA | = | 0.12589E | 01 | AMPLITUDE | = | 0.10486E | 01  | PHASE  | = | -9.01148                        |
| OMEGA | = | 0.15849E | 01 | AMPLITUDE | = | 0.10623E | 01  | PHASE  | = | -15.71143                       |
| OMEGA | = | 0.19953E | 01 | AMPLITUDE | = | 0.11272E | 01  | PHASE  | = | -16.04182                       |
| OMEGA | = | 0.25119E | 01 | AMPLITUDE | = | 0.12128E | 01  | PHASE  | = | -21.98824                       |
| OMEGA | = | 0.31623E | 01 | AMPLITUDE | z | 0.14504E | 01  | PHASE  | = | -33.11356                       |
| OMEGA | = | 0.39810E | 01 | AMPLITUDE | = | 0.15816E | 01  | PHASE  | = | -52.59436                       |
| OMEGA | = | 0.50118E | 01 | AMPLITUDE | = | 0.15293E | 01  | PHASE  | = | -89.78917                       |
| OMEGA | = | 0.63095E | 01 | AMPLITUDE | = | 0.74014E | U O | PHASE  | = | -128.34552                      |
| OMEGA | = | 0.79432E | 01 | AMPLITUDE | = | 0.42237E | 00  | PHASE  | = | <del>-</del> 149 <b>.</b> 91252 |
| OMEGA | = | 0.99999E | 01 | AMPLITURE | = | 0.20528E | 00  | PHASE  | = | -155.85031                      |
|       |   |          |    |           |   |          |     |        |   |                                 |

Fig. 4.9 Frequency response information obtained by Fourier transform.

Consider a system represented by the transfer function

$$\frac{C(s)}{R(s)} = \frac{a_2s^2 + a_1s + a_0}{s^4 + b_3s^3 + b_2s^2 + b_1s + b_0}$$
(4.30)

A block diagram which represents this transfer function is given in Fig. 4.10. The following equations can be written from the diagram.

$$\begin{aligned} \dot{x}_1(t) &= x_2(t) \\ \dot{x}_2(t) &= x_3(t) \\ \dot{x}_3(t) &= x_4(t) \\ \dot{x}_4(t) &= r(t) - b_0 x_1(t) - b_1 x_2(t) - b_2 x_3(t) - b_3 x_4(t) \end{aligned}$$

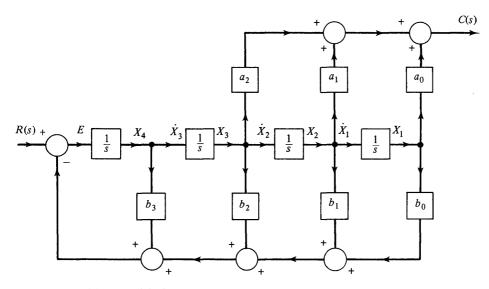


Fig. 4.10 Block diagram for phase variable state equations.

and

$$c(t) = a_0 x_1 + a_1 x_2 + a_2 x_3$$

Expressing these equations in matrix form gives

$$\begin{bmatrix} \dot{x}_1(t) \\ \dot{x}_2(t) \\ \dot{x}_3(t) \\ \dot{x}_4(t) \end{bmatrix} = \begin{bmatrix} 0 & 1 & 0 & 0 \\ 0 & 0 & 1 & 0 \\ 0 & 0 & 0 & 1 \\ -b_0 & -b_1 & -b_2 & -b_3 \end{bmatrix} \begin{bmatrix} x_1(t) \\ x_2(t) \\ x_3(t) \\ x_4(t) \end{bmatrix} + \begin{bmatrix} 0 \\ 0 \\ 0 \\ 1 \end{bmatrix} r(t)$$
(4.31)

and

$$c(t) = \begin{bmatrix} a_0 & a_1 & a_2 & 0 \end{bmatrix} \begin{bmatrix} x_1(t) \\ x_2(t) \\ x_3(t) \\ x_4(t) \end{bmatrix}$$
(4.32)

Comparing with Eqs. (4.28) and (4.29) we have

$$A = \begin{bmatrix} 0 & 1 & 0 & 0 \\ 0 & 0 & 1 & 0 \\ 0 & 0 & 0 & 1 \\ -b_0 & -b_1 & -b_2 & -b_3 \end{bmatrix} \quad B = \begin{bmatrix} 0 \\ 0 \\ 0 \\ 1 \end{bmatrix} \quad C = \begin{bmatrix} a_0 & a_1 & a_2 & 0 \end{bmatrix}$$

and  $\mathbf{x}(t) = [x_1(t), x_2(t), x_3(t), x_4(t)]^T$ ,  $\mathbf{y}(t) = c(t), \mathbf{u}(t) = r(t)$ .

Assuming the input to the system in Fig. 4.10 is a unit step, a CSMP program

corresponding to the system diagram can be written as

```
R = STEP (0.0)

E = R - BO*X1 - B1*X2 - B2*X3 - B3*X4

X4 = INTGRL (0.0, E)

X3 = INTGRL (0.0, X4)

X2 = INTGRL (0.0, X3)

X1 = INTGRL (0.0, X2)

C = AO*X1 + A1*X2 + A2*X3

TIMER FINTIM = 3.0, OUTDEL = 0.1

PRTPLT X1, X2, X3, X4, C

END

STOP

ENDJOB
```

The constants A0, A1, A2, B0, B1, B2, and B3 are usually given on parameter cards and FINTIM and OUTDEL will depend upon these coefficients. This procedure for programming a transfer function can easily be extended to higher-order polynomials. The state variable formulation in this particular form is commonly known as the phase variable representation.<sup>(6,7,8)</sup>

This illustration shows that a set of state equations can always be written for a system transfer function. The state-representation for a transfer function is not unique. In fact, it can be proven that for a given transfer function there exist infinitely many state representations.

Another method for expressing the transfer function of Eq. (4.30) is given in Fig. 4.11. Using the output of each integration (the 1/s terms) as states, one can

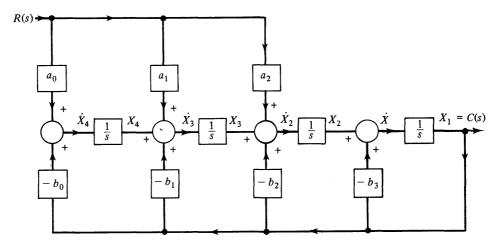


Fig. 4.11 Alternate block diagram form for state variable representation.

easily write a set of equations corresponding to Eqs. (4.28) and (4.29). This is done in an exercise at the end of this chapter.

# **Digital Control Systems**

Digital computers have become an important method for controlling feedback systems. The purpose of this section is to illustrate how CSMP can be used to simulate the digital control process.

A simplified diagram showing the role of the digital computer in a feedback system is given in Fig. 4.12. The analog output of the system is converted to a binary representation by the analog to digital (A/D) converter. The system input must be converted to a compatible binary representation. The computer subtracts the binary output from the binary input to form a binary error signal. The error signal becomes the "input" to a properly selected control algorithm.

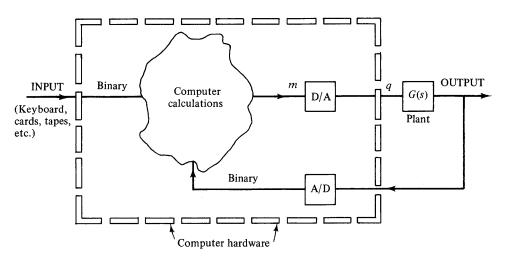


Fig. 4.12 Basic digital feedback control system.

Assume that algorithm calculations are made every T sec to form the binary signal, m, as shown in the diagram. This binary signal is converted to an analog signal by the digital to analog converter (D/A) to produce the signal q which is applied to the system. The design problem is to determine the algorithm which satisfies system specifications. The functions carried out by the computer hardware in Fig. 4.12 can be equivalently represented by the more straightforward model as given in Fig. 4.13. The problem of selecting the control algorithm reduces to one of finding the function D(z) where z is the z-transform variable. The major attention in this section will be given to the simulation problem, since methods for finding D(z) are given in the literature.<sup>(9,10,11)</sup>

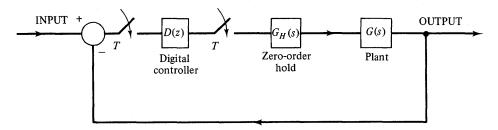


Fig. 4.13 Simplified diagram for digital control.

#### Example 4.3

The system shown in Fig. 4.14 does not include a controller D(z). It is desired, however, to investigate the effect of the sampling process on the system stability. Ideal sampling, followed by a zero-order hold, can be simulated as follows. If the input to the ideal

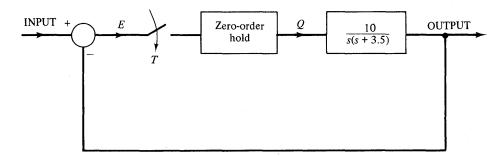


Fig. 4.14 System diagram with sample and hold. (Example 4.3.)

sampler is E, then the output of the zero-order hold can be represented as Q. This process can be simulated using the following CSMP statements.

$$A1 = IMPULS(0.0, T)$$
$$Q = ZHOLD(A1, E)$$

The reader will recall that A1 = IMPULS(P1, P2) produces a unit-impulse train starting at P1 with pulses occurring every P2 sec. Properties of the zero-order hold are defined in Table 4.1. (Also, see Appendix I)

#### Table 4.1

# Properties of the Zero-Order Hold

| CSMP Form        | Function                                   |  |  |  |
|------------------|--|--|--|--|
| Q = ZHOLD(A1, E) | Q(t) = E<br>Q(t) = last output<br>Q(t) = 0 | A1 > 0<br>$A1 \le 0$<br>t = initial  t |  |  |

Now suppose we desire to find the step response of the system for sampling times of T = 0.3 and T = 0.8. A simple program for this purpose is given below.

```
PARAM T = (0.3, 0.8)

INPUT = STEP(0.0)

E = INPUT - OUTPUT

A1 = IMPULS(0.0, T)

Q = ZHOLD(A1, E)

X1 = (10.0/3.5)*Q

X2 = REALPL(0.0, 1.0/3.5, X1)

OUTPUT = INTGRL(0.0, X2)

METHOD RKSFX

TIMER FINTIM = 6.0, OUTDEL = 0.24, DELT = 0.01

PRTPLT OUTPUT

LABEL STEP RESPONSE OF SYSTEM WITH SAMPLE AND HOLD

END

STOP

ENDJOB
```

A fixed-step integration (RKSFX) is selected for this example to insure that an integration is performed when the sampling switch closes. If a variable-step integration is used, the integration will not generally occur at the sampling time but rather when KEEP = 1. The resulting response will not be representative of uniform sampling every T sec. When using the sample and hold, variable integration can be selected but either OUTDEL or PRDEL should be chosen to be a sub-multiple of the sampling interval. Fixed-step integration is recommended for simulating discrete data systems. This is particularly important when a digital controller is placed in the system.

The responses in Fig. 4.15 show the effect of the sampling process on the system stability. The continuous system response has approximately 12% overshoot while the overshoot becomes larger as T in the sampling process is increased.

#### Example 4.4

The purpose of this example is to illustrate a procedure for finding the time response of a closed-loop feedback system which contains a digital controller, D(z), and a zeroorder hold. The basic block diagram of the system is shown in Fig. 4.16. This system is identical to the one given in Example 4.3 except the gain is raised from 10 to 70 and a digital controller is added to the system. A procedure for selecting the controller is given in reference 11.

First consider the simulation of D(z) followed by the zero-order hold. For this example the particular D(z) is given by

$$D(z) = 0.1 \frac{z - 0.981}{z - 0.998}$$

If this function is represented in a more general form as

$$D(z) = \frac{a_0 + a_1 z^{-1}}{1 + b_1 z^{-1}}$$

we can easily employ the phase variable or rectangular programming methods given in the previous section by replacing s by z. The block diagram for the rectangular form is

given in Fig. 4.17. The controller and the zero-order hold can be programmed as a MACRO using the following CSMP statements:

> MACRO E2 = COMP(SAMTIM, TX, A0, A1, B1, E1)TX = IMPULS(0.0, SAMTIM)EZ = TX \* E1Y0 = A0\*EZ + P1Y1 = A1 \* EZ - B1 \* Y0P1 = DELAY(1000, SAMTIM, Y1)E2 = ZHOLD(TX, Y0)

# **ENDMAC**

This macro is completely general for any D(z) of the form so prescribed and can easily be extended to higher-order D(z).

A block diagram of the total system is shown in Fig. 4.18 and is used to identify the inputs and outputs of the various blocks within the CSMP program. Figure 4.19 gives the program listing corresponding to the block diagram. Figure 4.20 gives the step response, c(t), of the compensated system. Compare this response to that obtained earlier in Example 4.3. The gain was 10 but has now been raised to 70. Note also that fixed-step integration is used with DELT = 0.02 to insure that integration is performed at the sampling interval of T = 0.1.

While the method for simulating D(z) given in this example is completely general for any digital controller, it is not directly the method followed in programming a control algorithm for real-time digital control. We recall that the operator  $z^{-1}$  was simulated by

|            | STEP RESPONSE     | OF CONTINUOU             | S SYSTEM TO | COMPARE WI | TH SAMPLE A | ND HOLD PAGE 1 |     |
|------------|-------------------|--------------------------|-------------|------------|-------------|----------------|-----|
|            |                   |                          | NIMUM       | OUTP       | UT VERSUS T | TME MAXIM      | IIM |
|            |                   | 0.0                      |             | 0017       | 01 128303 1 | 1.1215E        |     |
|            | + + + + =         | CUTPUT                   | -           |            |             |                |     |
|            | TIME              |                          | I           |            |             | •              |     |
|            | 0.0<br>1.8000E-01 | 0.0<br>1.2934E-01        | +           |            |             |                |     |
|            |                   |                          |             |            |             |                |     |
|            | 3.6000E-01        | 4.0196E-01<br>6.8711E-01 |             |            |             |                |     |
|            | 5.40C0E-01        | 9.1221E-01               |             |            |             | +              |     |
|            | 7.2C00E-01        |                          |             |            |             | +              |     |
|            | 9.0000E-01        | 1.0526E 00               |             |            |             | +              |     |
|            | 1.0800E 00        | 1.1151E 00               |             |            |             | +              |     |
|            | 1.2600E 00        | 1.1215E 00               |             |            |             | +              |     |
|            | 1.4400E 00        | 1.0964E 00               |             |            |             | +              |     |
|            | 1.6200E 00        | 1.0605E 00               |             |            |             | +              |     |
|            | 1.8000E 00        | 1.0272E 00               |             |            |             |                |     |
|            | 1.9800E 00        | 1.0031E 00               |             |            |             | +              |     |
|            | 2.1600E 00        | 9.8956E-01               |             |            |             | +              |     |
|            | 2.3400E CO        | 9.8478E-01               |             |            |             |                |     |
|            | 2.5200E 00        | 9.8579E-01               |             |            |             | +              |     |
|            | 2.7000E 00        | 9.8966E-01               |             |            |             | +              |     |
|            | 2.88COE 00        | 9.9414E-01               |             |            |             | +              |     |
|            | 3.0600E 00        | 9.9789E-01               |             |            |             | +              |     |
|            | 3.2400E 00        | 1.0004E 00               |             |            |             | +              |     |
|            | 3.4200E 00        | 1.0016E 00               |             |            |             | +              |     |
|            | 3.6000E 00        | 1.00195 00               |             |            |             | +              |     |
|            | 3.78COE 00        | 1.0016E 00               |             |            |             | +              |     |
|            | 3.9600E 00        | 1.0011E 00               |             |            |             | +              |     |
|            | 4.1400E 00        | 1.0005E 00               |             |            |             | +              |     |
|            | 4.3200E 00        | 1.0001E 00               |             |            |             | +              |     |
|            | 4.5COOE 00        | 9.9988E-01               |             |            |             | +              |     |
|            | 4.6800E 00        | 9.9977E-01               |             |            |             | +              |     |
|            | 4.8600E 00        | 9.9977E-01               |             |            | **********  | +              |     |
| <i>(</i> ) | 5.04COE 00        | 9.9982E-01               |             |            |             | +              |     |
| (a)        | 5.22COE 00        | 9.9989E-01               |             |            |             | +              |     |
| Continuous | 5.4000E 00        | 9.99955-01               |             |            |             | +              |     |
| Commuous   | 5.5800E 00        | 1.0000E 00               |             |            |             | +              |     |
| system     | 5.7600E 00        | 1.0000E 00               |             |            |             | +              |     |
| 5,000111   |                   |                          |             |            |             |                |     |

Fig. 4.15 System step-response for Example 4.3.

|                  |  |   |                  |                    | PAGE 1               |
|------------------|--|---|------------------|--------------------|----------------------|
|                  |  | MT  | NIMUM            | OUTPUT VERSUS TIME | MAXIMUM              |
|                  |  | 0.0   |                  | T = 3.0000E-01     | 1.8433E 00           |
|                  | TIME   | OUTPUT  | I                |                    | I                    |
|                  | 0.0<br>2.40C0E-01  | 0.0   | +                |                    |                      |
|                  | 4.8000E-01   | 2.2180E-01<br>6.6318E-01  |                  | *                  |                      |
|                  | 7.2C00E-01   | 1.08245 00  |                  | +                  |                      |
|                  | 9.6000E-01   | 1.3189E 00  |                  | +                  |                      |
|                  | 1.2000E 00   | 1.3460E 00  |                  | +                  |                      |
|                  | 1.4400E 00<br>1.6800E 00   | 1.2343E 00<br>1.0719E 00  |                  |                    |                      |
|                  | 1.9200E 00   | 9.37955-01  |                  | +                  |                      |
|                  | 2.1600E 00   | 8.7641E-01  |                  | +                  |                      |
|                  | 2.4000E 00   | 8.8489E-01  |                  | *                  |                      |
|                  | 2.64COE 00   | 9.3330E-01  |                  | +                  |                      |
|                  | 2.88COE 00<br>3.1200E 00   | 9.9045E-01<br>1.0314E 00  |                  |                    |                      |
|                  | 3.3600E 00   | 1.0453E 00  |                  | +                  |                      |
|                  | 3.6000E 00   | 1.0368E 00  |                  |                    |                      |
|                  | 3.84C0E 00   | 1.0175E 00  |                  | +                  |                      |
|                  | 4.0800E 00   | 9.9823E-01  |                  | •                  |                      |
|                  | 4.3200E 00   | 9.8635E-01  |                  |                    |                      |
| (b)              | 4.5600E 00<br>4.8000E 00   | 9.8408E-01<br>9.8875E-01  |                  |                    |                      |
|                  | 5.04005 00   | 9.9594E-01  |                  | +                  |                      |
| Sample           | 5.28COE 00   | 1.0022E 00  |                  | +                  |                      |
| and hold,        | 5.5200E 00   | 1.0054E 00  |                  | +                  |                      |
| T = 0.3 sec      | 5.76COE 00   | 1.0053E 00  |                  | +                  |                      |
| $1 - 0.3 \sec$   | 6.0000E 00   | 1.0032E 00  |                  | +                  |                      |
|                  |  |   |                  |                    | PAGE 1               |
|                  |  |   | NIMUM            | DUTPUT VERSUS TIME | MAXIMUM              |
|                  | TÌME   | 0.0<br>DUTPUT   | 'I               | T = 8.0000E - 01   | 1.8433E 00<br>I      |
|                  | 0.0  | 0.0   | +                |                    | -                    |
|                  | 2.4000E-01   | 2.2180E-01  |                  |                    |                      |
|                  |  | 2021006-01  | +                |                    |                      |
|                  | 4.8000E-01   | 7.0724E-01  | +<br>- <b></b> + | +                  |                      |
|                  | 4.8000E-01<br>7.2000E-01   | 7.0724E-01<br>1.3065E 00  | +                | +                  |                      |
|                  | 4.8000E-01<br>7.2000E-01<br>9.6000E-01   | 7.0724E-01<br>1.3065E 00<br>1.7891E 00  | +                | +                  | +                    |
|                  | 4.8000E-01<br>7.2000E-01<br>9.6000E-01<br>1.2000E 00   | 7.0724E-01<br>1.3065E 00<br>1.7891E 00<br>1.8172E 00  |                  | <br>               | +                    |
|                  | 4.8000E-01<br>7.2000E-01<br>9.6000E-01<br>1.2000E 00<br>1.4400E 00<br>1.6800E 00   | 7.0724E-01<br>1.3065E 00<br>1.7891E 00  |                  |                    | +<br>+               |
|                  | 4.8000E-01<br>7.2000E-01<br>9.6000E-01<br>1.2000E 00<br>1.4400E 00<br>1.6800E 00<br>1.9200E 00   | 7.0724E-01<br>1.3065E 00<br>1.7891E 00<br>1.6172E 00<br>1.6271E 00<br>1.3451E 00<br>1.0454E 00  |                  |                    | +<br>+<br>+          |
|                  | 4.8000E-01<br>7.2000E-01<br>9.6000E-01<br>1.2000E 00<br>1.4400E 00<br>1.6800E 00<br>1.9200E 00<br>2.1600E 00   | 7.0724E-01<br>1.3065E 00<br>1.7891E 00<br>1.6172E 00<br>1.6271E 00<br>1.3451E 00<br>1.0454E 00<br>7.4309E-01  |                  |                    | <b>+</b><br><b>+</b> |
|                  | 4.8000E-01<br>7.2000E-01<br>9.6000E-01<br>1.2000E 00<br>1.4400E 00<br>1.6800E 00<br>1.9200E 00<br>2.1600E 00<br>2.4000E 00   | 7.0724E-01<br>1.3065E 00<br>1.7891E 00<br>1.8172E 00<br>1.6271E 00<br>1.3451E 00<br>1.0454E 00<br>7.4309E-01<br>4.3961E-01  |                  |                    | +<br>+               |
|                  | 4.8000E-01<br>7.2000E-01<br>9.6000E-01<br>1.2000E 00<br>1.4400E 00<br>1.6800E 00<br>2.1600E 00<br>2.1600E 00<br>2.4000E 00   | 7.0724E-01<br>1.3065E 00<br>1.7891E 00<br>1.6271E 00<br>1.3451E 00<br>1.0454E 00<br>7.4309E-01<br>4.3961E-01<br>3.6110E-01  |                  |                    | <b>*</b><br><b>*</b> |
|                  | 4.8000E-01<br>7.2000E-01<br>9.6000E-01<br>1.2000E 00<br>1.4400E 00<br>1.6800E 00<br>2.1600E 00<br>2.4600E 00<br>2.4600E 00<br>2.6400E 00<br>2.8800E 00   | 7.0724E-01<br>1.3065E 00<br>1.7891E 00<br>1.6271E 00<br>1.3451E 00<br>1.3451E 00<br>1.0454E 00<br>7.4309E-01<br>3.6110E-01<br>5.4558E-01  |                  |                    | +                    |
|                  | 4.8000E-01<br>7.2000E-01<br>9.6000E-01<br>1.2000E 00<br>1.4400E 00<br>1.6800E 00<br>2.1600E 00<br>2.1600E 00<br>2.4000E 00   | 7.0724E-01<br>1.3065E 00<br>1.7891E 00<br>1.6271E 00<br>1.3451E 00<br>1.0454E 00<br>7.4309E-01<br>4.3961E-01<br>3.6110E-01  |                  |                    | +<br>+<br>+          |
|                  | 4.8000E-01<br>7.2000E-01<br>9.6000E-01<br>1.2000E 00<br>1.4400E 00<br>1.9200E 00<br>2.1600E 00<br>2.4000E 00<br>2.6400E 00<br>3.1200E 00<br>3.3600E 00   | $\begin{array}{c} 7 \cdot 0724 E - 01 \\ 1 \cdot 3065E \ 00 \\ 1 \cdot 7891E \ 00 \\ 1 \cdot 6271E \ 00 \\ 1 \cdot 3451E \ 00 \\ 1 \cdot 3451E \ 00 \\ 1 \cdot 345E \ 00 \\ 3 \cdot 6110E - 01 \\ 3 \cdot 6110E - 01 \\ 3 \cdot 4558E - 01 \\ 1 \cdot 3458E \ 00 \\ 1 \cdot 28458E \ 01 \\ \end{array}$   |                  |                    | +<br>+               |
|                  | 4.8000E-01<br>7.2000E-01<br>9.6000E-01<br>1.2000E 00<br>1.4400E 00<br>1.4600E 00<br>2.1600E 00<br>2.4600E 00<br>2.6400E 00<br>3.8000E 00<br>3.3600E 00<br>3.8400E 00   | 7.0724E-01<br>1.3065E 00<br>1.7891E 00<br>1.8172E 00<br>1.6271E 00<br>1.3451E 00<br>1.3451E 00<br>1.3454E 00<br>7.4309E-01<br>4.3961E-01<br>3.6110E-01<br>5.4558E-01<br>1.1343E 00<br>1.2845E 00<br>1.3647E 00  |                  |                    | +<br>+               |
|                  | 4.8000E-01<br>7.2000E-01<br>9.6000E-01<br>1.4400E 00<br>1.6800E 00<br>1.6800E 00<br>2.1600E 00<br>2.6400E 00<br>2.6400E 00<br>3.1200E 00<br>3.3600E 00<br>3.8400E 00   | 7.0724E-01<br>1.3065E 00<br>1.7891E 00<br>1.6271E 00<br>1.6271E 00<br>1.3451E 00<br>1.4545E 00<br>1.4545E 00<br>1.4545E 00<br>1.34558E-01<br>8.4359E-01<br>1.343E 00<br>1.2845E 00<br>1.4058E 00  |                  |                    | +                    |
|                  | 4.8000E-01<br>7.2000E-01<br>9.6000E-01<br>1.2000E 00<br>1.4400E 00<br>1.9200E 00<br>2.1600E 00<br>2.4600E 00<br>2.6400E 00<br>3.1200E 00<br>3.3600E 00<br>3.8400E 00<br>4.8600E 00   | $\begin{array}{c} 7 \cdot 0724 \pm -01 \\ 1 \cdot 3065 \pm 00 \\ 1 \cdot 7891 \pm 00 \\ 1 \cdot 8172 \pm 00 \\ 1 \cdot 6271 \pm 00 \\ 1 \cdot 0454 \pm 00 \\ 7 \cdot 4309 \pm -01 \\ 3 \cdot 6110 \pm -01 \\ 3 \cdot 6558 \pm -01 \\ 1 \cdot 1343 \pm 00 \\ 1 \cdot 2645 \pm 00 \\ 1 \cdot 2645 \pm 00 \\ 1 \cdot 2645 \pm 00 \\ 1 \cdot 2647 \pm 00 \\ \end{array}$  |                  |                    | +                    |
| (c)              | 4.8000E-01<br>7.2000E-01<br>9.6000E-01<br>1.4400E 00<br>1.6800E 00<br>1.6800E 00<br>2.1600E 00<br>2.6400E 00<br>2.6400E 00<br>3.1200E 00<br>3.3600E 00<br>3.8400E 00   | 7.0724E-01<br>1.3065E 00<br>1.7891E 00<br>1.6271E 00<br>1.6271E 00<br>1.3451E 00<br>1.4545E 00<br>1.4545E 00<br>1.4545E 00<br>1.34558E-01<br>8.4359E-01<br>1.343E 00<br>1.2845E 00<br>1.4058E 00  |                  |                    | +                    |
|                  | 4.8000E-01<br>7.2000E-01<br>9.6000E-01<br>1.4400E 00<br>1.4400E 00<br>1.9200E 00<br>2.1600E 00<br>2.4000E 00<br>2.6400E 00<br>3.1200E 00<br>3.3600E 00<br>3.8400E 00<br>4.0800E 00<br>4.5600E 00   | 7.0724E-01<br>1.3065E 00<br>1.7891E 00<br>1.8172E 00<br>1.3451E 00<br>1.3451E 00<br>1.3451E 00<br>1.3451E 00<br>1.3451E 00<br>1.3451E-01<br>3.6110E-01<br>5.4558E-01<br>1.1343E 00<br>1.2845E 00<br>1.3657E 00<br>1.4058E 00<br>1.0594E 00  |                  |                    | +<br>+               |
| Sample           | 4.8000E-01<br>7.2000E-01<br>9.6000E-01<br>1.2000E 00<br>1.6400E 00<br>1.6600E 00<br>2.4000E 00<br>2.6400E 00<br>2.6400E 00<br>3.1200E 00<br>3.600E 00<br>3.600E 00<br>4.3200E 00<br>4.3200E 00<br>4.300E 00<br>5.2800E 00                  | $\begin{array}{c} 7.0724E-01\\ 1.3065E 00\\ 1.7891E 00\\ 1.6271E 00\\ 1.451E 00\\ 1.451E 00\\ 1.454E 00\\ 7.4309E-01\\ 3.6110E-01\\ 3.6110E-01\\ 3.6110E-01\\ 3.4558E-01\\ 1.24558E-01\\ 1.24558E-01\\ 1.245E 00\\ 1.2647E 00\\ 1.2647E 00\\ 1.694E 00\\ 8.4347E-01\\ 7.0726E-01\\ \end{array}$   |                  |                    | +<br>+               |
| Sample and hold, | 4.8000E-01<br>7.2000E-01<br>9.6000E-01<br>1.2000E 00<br>1.4400E 00<br>1.4600E 00<br>2.1600E 00<br>2.4600E 00<br>2.6400E 00<br>3.3600E 00<br>3.4200E 00<br>3.6400E 00<br>4.8000E 00<br>5.6400E 00<br>5.2800E 00<br>5.5200E 00               | $\begin{array}{c} 7 \cdot 0.724 \pm - 0.1 \\ 1 \cdot 3065 \pm 0.0 \\ 1 \cdot 7891 \pm 0.0 \\ 1 \cdot 8172 \pm 0.0 \\ 1 \cdot 8451 \pm 0.0 \\ 1 \cdot 0.454 \pm 0.0 \\ 7 \cdot 4309 \pm -0.1 \\ 3 \cdot 6110 \pm -0.1 \\ 3 \cdot 6558 \pm -0.1 \\ 1 \cdot 1343 \pm 0.0 \\ 1 \cdot 245 \pm 0.$ |                  |                    | +                    |
| Sample and hold, | 4.8000E-01<br>7.2000E-01<br>9.6000E-01<br>1.2000E 00<br>1.4600E 00<br>1.6800E 00<br>2.1600E 00<br>2.4000E 00<br>2.6400E 00<br>2.6400E 00<br>3.3600E 00<br>3.3600E 00<br>3.8400E 00<br>4.5600E 00<br>5.2800E 00<br>5.2800E 00<br>5.7600E 00 | $\begin{array}{c} 7.0724E-01\\ 1.3065E 00\\ 1.7891E 00\\ 1.8172E 00\\ 1.6271E 00\\ 1.3451E 00\\ 1.3451E 00\\ 1.3451E 00\\ 1.3451E 00\\ 1.3451E 01\\ 3.6110E-01\\ 3.6110E-01\\ 3.6110E-01\\ 1.343E 00\\ 1.2845E 00\\ 1.3645E 00\\ 1.3657E 01\\ 7.0726E-01\\ 7.0726E-01\\ 7.0692E-01\\ 8.6170E-01\\ \end{array}$  |                  |                    | +<br>+               |
| Sample           | 4.8000E-01<br>7.2000E-01<br>9.6000E-01<br>1.2000E 00<br>1.4400E 00<br>1.4600E 00<br>2.1600E 00<br>2.4600E 00<br>2.6400E 00<br>3.3600E 00<br>3.4200E 00<br>3.6400E 00<br>4.8000E 00<br>5.6400E 00<br>5.2800E 00<br>5.5200E 00               | $\begin{array}{c} 7 \cdot 0.724 \pm - 0.1 \\ 1 \cdot 3065 \pm 0.0 \\ 1 \cdot 7891 \pm 0.0 \\ 1 \cdot 8172 \pm 0.0 \\ 1 \cdot 8451 \pm 0.0 \\ 1 \cdot 0.454 \pm 0.0 \\ 7 \cdot 4309 \pm -0.1 \\ 3 \cdot 6110 \pm -0.1 \\ 3 \cdot 6558 \pm -0.1 \\ 1 \cdot 1343 \pm 0.0 \\ 1 \cdot 245 \pm 0.$ |                  |                    | +<br>+               |

Fig. 4.15. (Continued)

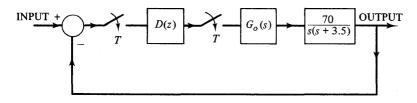
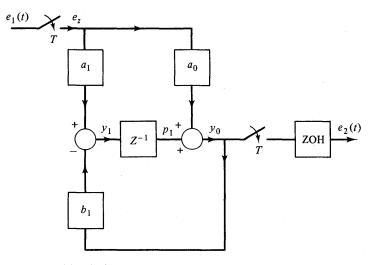


Fig. 4.16 System diagram with a digital controller. (Example 4.4.)



**Fig. 4.17** Block diagram representation for the realization of a first-order digital controller.

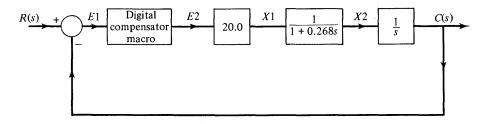


Fig. 4.18 Total simulation diagram for Example 4.4.

```
MACRO
        E2 = COMP(SAMTIM, TX, A0, A1, B1, E1)
        TX = IMPULS(0.0, SAMTIM)
        EZ = TX * E1
        YO = AO * EZ + P1
        Y1 = A1 + EZ - B1 + YO
        P1 = DELAY(1000, SAMTIM, Y1)
        E2 = ZHOLD(TX, YO)
ENDMAC
       PLANT STRUCTURE FOLLOWS
*
PARAMETER AD = 0.1, A1 = -0.0981, B1 = -0.998, SAMTIM = .1
 C = INTGRL(0.0, X2)
 X2 = REALPL(0.0.0.286,X1)
 X1 = 20.0 \times E2
 E2 = COMP(SAMTIM, TX, AO, A1, B1, E1)
 E1 = R - C
 R = STEP(0.0)
METHOD RKSFX
TIMER FINTIM = 5.0, OUTDEL = 0.18, DELT = 0.02
PRTPLT C
LABEL STEP RESPONSE FOR DIGITAL CONTROL SYSTEM EXAMP. 4-4
END
STOP
ENDJOB
```

Fig. 4.19 Program listing for a digital control system. (Example 4.4.)

| STEP RESPONS | E FOR DIGITAL | . CONTROL | SYSTEM | EXAMP. | 4-4         | PAGE 1                |
|--------------|---------------|-----------|--------|--------|-------------|-----------------------|
|              | M1<br>0.0     |           |        | С      | VERSUS TIME | MAXIMUM<br>1.1883E 00 |
| TIME         | c             | ,<br>1    |        |        |             | 1                     |
| 0.0.         | 0.0           | +         |        |        |             | -                     |
| 1.8000E-01   | 9.2493E-02    | +         |        |        |             |                       |
| 3.6000E-01   | 3.0146E-01    |           | +      |        |             |                       |
| 5.4000E-01   | 5.4612E-01    |           |        |        | -+          |                       |
| 7.20005-01   | 7.7337E-01    |           |        |        | +           |                       |
| 9.0000E-01   | 9.5472E-01    |           |        |        |             | +                     |
| 1.0800E 00   | 1.0806E 00    |           |        |        |             | +                     |
| 1.2600E 00   | 1.1542E 00    |           |        |        |             | •                     |
| 1.4400E 00   | 1.1851E 00    |           |        |        |             | +                     |
| 1.6200E 00   | 1.1857E 00    |           |        |        |             | +                     |
| 1.8000E 00   | 1.1681E 00    |           |        |        |             | +                     |
| 1.9800E 00   | 1.1421E 00    |           |        |        |             |                       |
| 2.1600E 00   | 1.1148E 00    |           |        |        |             | •                     |
| 2.3400E 00   | 1.0906E 00    |           |        |        |             | •                     |
| 2.5200E 00   | 1.0716E 00    |           |        |        |             | · •                   |
| 2.7000E 00   | 1.0582E 00    |           |        |        |             | •                     |
| 2.8800E 00   | 1.0499E 00    |           |        |        |             |                       |
| 3.0600E 00   | 1.0456E 00    |           |        |        |             | •                     |
| 3.2400E 00   | 1.0439E 00    |           |        |        |             | •                     |
| 3.4200F 00   | 1.0438E 00    |           |        |        |             |                       |
| 3.6000E 00   | 1.0443E 00    |           |        |        |             | •                     |
| 3.7800E 00   | 1.0449E 00    |           |        |        |             | •                     |
| 3.9600E 00   | 1.0451E 00    |           |        |        |             | •                     |
| 4.1400E 00   | 1.0449E 00    |           |        |        |             | •                     |
| 4.3200E 00   | 1.0441E 00    |           |        |        |             | •                     |
| 4.5000E 00   | 1.0430E 00    |           |        |        |             | •                     |
| 4.68005 00   | 1.0416E 00    |           |        |        |             |                       |
| 4.8600E 00   | 1.0400E 00    |           |        |        |             | +                     |
|              |               |           |        |        |             |                       |

Fig. 4.20 Step response of a system containing a digital controller. (Example 4.4.)

using the CSMP DELAY function. In the following example the controller will be programmed using a recursive difference equation.

# Example 4.5

The system diagram of a process to be controlled by a digital algorithm is shown in Fig. 4.21.<sup>(12)</sup> We note from the diagram that D(z) is given by

$$D(z) = \frac{Q(z)}{E(z)} = \frac{0.19185(z - 0.56496)(z - 0.96585)}{(z - 0.99501)(z - 0.42857)}$$
(4.33)

This controller can be programmed as a difference equation using either a *direct*, *cascade*, or *parallel* realization.<sup>(11)</sup> Each of these methods will be briefly discussed.

Direct Realization. The function D(z) can be expressed as

$$D(z) = \frac{Q(z)}{E(z)} = \frac{0.19185z^2 - 0.29368z + 0.10469}{z^2 - 1.42358z + 0.42643}$$
(4.34)

The standard procedure here is to divide the numerator and denominator by  $z^2$  and cross-multiply. In terms of Q(z) and E(z) this yields

$$Q(z) = 0.19185E(z) - 0.29368z^{-1}E(z) + 0.10469z^{-2}E(z) + 1.42358z^{-1}Q(z) - 0.42643z^{-2}Q(z)$$
(4.35)

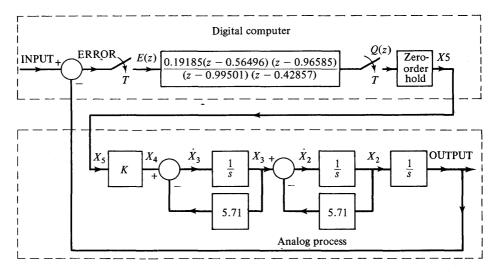


Fig. 4.21 System diagram with second-order digital controller. (Example 4.5.)

Using the real-translation property of z-transforms<sup>(13)</sup> gives

$$Q(nT) = 0.19185E(nT) - 0.29368E[(n-1)T] + 0.10469E[(n-2)T] + 1.42358Q[(n-1)T] - 0.42643Q[(n-2)T]$$
(4.36)

where T is the sampling interval, n = 0, 1, 2, ..., and

Q(nT) = the present value of the output Q at t = nT Q[(n-1)T] = the first past value of Q Q[(n-2)T] = the second past value of Q E(nT) = the present value of the input E at t = nTE[(n-1)T] = the first past value of E

E[(n-2)T] = the second past value of E

For convenience in programming, the expression for Q(nT) is written as

Q = 0.19185E - 0.29368E1 + 0.10469E2 + 1.42358Q1 - 0.42643Q2

The present value of E is always known in a process. After solving for Q, the coefficients of the algorithm are immediately updated by including the following statements;

$$Q2 = Q1$$
  
 $Q1 = Q$   
 $E2 = E1$  (4.37)  
 $E1 = E$ 

```
INTTIAL
      E1 = 0.0
      01 = 0.0
      E2 = 0.0
      Q2 = 0.0
      PARAM K = 326.
CYNAMIC
      INPUT = STEP(C.O)
      E = INPUT - OUT
      OUT = INTGR! (0.0, X2)
      X2 = INTGRL(C.0, X2D)
      X2D = X3 - 5.71 \times X2
      X3 = INTGRL(0.0, X3D)
      X3D = X4 - 5.71 \times X3
      X4 = K * X5
      X5 = ZHELE(A1, C)
      A1 = IMPULS(C.0, C.1)
PROCEDURE Q = DUMMY(E,E1,E2,Q1,Q2,A1)
      IF(A1.NE.1.0) GO TO 10
      IF(KEEP.NE.1.0) GC TO 10
      Q = .19185*E-.29368*E1+.10469*E2+1.42358*Q1-.42643*Q2
      E2 = E1
      E1 = E
      Q2 = Q1
      Q1 = Q
      CONTINUE
10
ENDPRO
METHOD RKSEX
TIMER FINTIM = 8.0, CUTDEL = 0.16, DELT = 0.01
PRTPLT OUT
LABEL OUTPUT FOR EXAMPLE 4-5
FND
STOP
ENDJOB
```

Fig. 4.22 Program listing for Example 4.5 using direct realization.

A CSMP program which incorporates this realization for D(z) is given in Fig. 4.22. We note that the expressions for D(z) are given as a procedure function since they must be executed sequentially. The statement

```
IF(KEEP.NE.1.0) GO TO 10
```

insures that the statements of the procedure function cannot be executed except when an integration is performed. Furthermore, when fixed-step integration is selected, the statement

```
IF(A1.NE.1.0) go to 10
```

allows the procedure function to be executed only at sampling instants nT where  $n = 0, 1, 2, \ldots$  and T (sampling time) is an integral multiple of DELT. One will note that when a variable step-size integration method is used, integration will not normally occur at nT and the program will generally give misleading results.

Initial values for E1, E2, Q1 and Q2 are given in the INITIAL segment. It is important to observe that E2 is updated prior to E1 and Q2 is updated prior to Q1 in the procedure function.

The response of the system for a unit-step input applied at t = 0 is given in Fig. 4.23.

OUTPUT FOR EXAMPLE 4-5

PAGE 1

|            | ₩I<br>6.0  |    | CUT | VERSUS TIME | MAXIMUM<br>1.2328F 00 |
|------------|------------|----|-----|-------------|-----------------------|
| TIME       | OUT        | T  |     |             | I                     |
| 0.0        | 0.0        | +  |     |             | 1                     |
| 1.60008-01 | 2.73895-02 | -+ |     |             |                       |
| 3.2000E-01 | 1.4074E-C1 | *  |     |             |                       |
| 4.8000E-01 | 3.1569E-01 |    | •   |             |                       |
| 6.40C0E-01 | 5.12676-01 |    |     |             |                       |
| 8.0CCCE-C1 | 7.0248E-01 |    |     | ·           |                       |
| 9.6000E-01 | 8.6790E-01 |    |     |             |                       |
| 1.12CCE 00 | 1.0009E CC |    |     |             |                       |
| 1.2800F 00 | 1.10015 00 |    |     |             |                       |
| 1.4400F 00 | 1.1678E 0C |    |     |             |                       |
| 1.6CCCF CC | 1.20885 CC |    |     |             |                       |
| 1.7600E 00 | 1.2286E 00 |    |     |             |                       |
| 1.92COE 00 | 1.2326E 00 |    |     |             |                       |
| 2.08005 00 | 1.2257E 0C |    |     |             |                       |
| 2.24COE 00 | 1.2120E 00 |    |     |             |                       |
| 2.40000 00 | 1.1947E CC |    |     |             |                       |
| 2.56005 00 | 1.1761E 00 |    |     |             |                       |
| 2.7200E JO | 1.1577E CC |    |     |             |                       |
| 2.88CCE CO | 1.1406E CC |    |     |             |                       |
| 3.0400E CO | 1.12528 00 |    |     |             |                       |
| 3.2000E 00 | 1.1118E CC |    |     |             |                       |
| 3.36005 00 | 1.1003E CC |    |     |             |                       |
| 3.5200E 00 | 1.0905E 0C |    |     |             |                       |
| 3.6ECCE CC | 1.08238 00 |    |     |             |                       |
| 3.8400E 00 | 1.07528 00 |    |     |             |                       |
| 4.0CCCE 00 | 1.06928 00 |    |     |             |                       |
| 4.1600F 00 | 1.0640E 0C |    |     |             |                       |
| 4.32008 00 | 1.05958 00 |    |     |             | +                     |
| 4.48005 00 | 1.0554E CO |    |     |             | +                     |
| 4.64005 00 | 1.05165 00 |    |     |             | +                     |
| 4.80005 00 | 1.0482E 00 |    |     |             | +                     |
| 4.SECCE CC | 1.0450E CC |    |     |             | +                     |
| 5.1200F 00 | 1.0420E 00 |    |     |             | +                     |
| 5.28COE 00 | 1.0392E 00 |    |     |             | +                     |
| 5.44COE 0C | 1.0365E CC |    |     |             | +                     |
| 5.6COOF 00 | 1.0340E 0C |    |     |             | +                     |
| 5.7600E CO | 1.0317E 00 |    |     |             | +                     |
| 5.9200E 00 | 1.0295E CC |    |     |             | +                     |
| 6.0800F 00 | 1.0274E 00 |    |     |             | +                     |
| 6.24CCE 00 | 1.0255E CC |    |     |             | +                     |
| 6.4000E 00 | 1.0237E CC |    |     |             | +                     |
| 6.56CCE 00 | 1.0220E 00 |    |     |             | +                     |
| 6.720CE 00 | 1.0204E CC |    |     |             | +                     |
| 6.8800E 00 | 1.0189E CC |    |     |             | +                     |
| 7.04CCE 00 | 1.0176E 00 |    |     |             | +                     |
| 7.2000E 00 | 1.0163E CC |    |     |             | +                     |
| 7.3600E 00 | 1.0152E CO |    |     |             | +                     |
| 7.52COE CC | 1.0141E CC |    |     |             | +                     |
| 7.6800E 00 | 1.0131E 00 |    |     |             | +                     |
| 7.84COF 00 | 1.01228 00 |    |     |             | +                     |
| 8.000CE 00 | 1.0113E CC |    |     |             | +                     |
|            |            |    |     |             |                       |

Fig. 4.23 Unit-step response of the second-order digital control system. (Example 4.5.)

Cascade Realization. For cascade realization, D(z) is expressed as

$$D(z) = \frac{Q(z)}{E(z)} = 0.19185 \left[ \frac{1 - 0.56496z^{-1}}{1 - 0.99501z^{-1}} \right] \left[ \frac{1 - 0.96585z^{-1}}{1 - 0.42857z^{-1}} \right]$$
(4.38)

where the grouping of the numerator and denominator terms within the brackets is arbitrary. An input/output relationship is assigned to each term of Q(z)/E(z)by expressing

$$\frac{Q(z)}{E(z)} = \frac{Q(z)}{V(z)} \cdot \frac{V(z)}{S(z)} \cdot \frac{S(z)}{E(z)}$$
(4.39)

where

$$\frac{Q(z)}{V(z)} = 0.19185 \tag{4.40}$$

$$\frac{V(z)}{S(z)} = \left[\frac{1 - 0.56496z^{-1}}{1 - 0.99501z^{-1}}\right]$$
(4.41)

$$\frac{S(z)}{E(z)} = \left[\frac{1 - 0.96585z^{-1}}{1 - 0.42857z^{-1}}\right]$$
(4.42)

Each of these expressions can be written in difference equation form to give

$$S = E - 0.96585E1 + 0.42857S1$$
  

$$V = S - 0.56496S1 + 0.99501V1$$
  

$$Q = 0.19185V$$
  
(4.43)

Again, after processing the above equations, the coefficients must be updated by setting

$$E1 = E$$

$$S1 = S$$

$$V1 = V$$

$$(4.44)$$

The simulation for the total system is the same as that given in Fig. 4.22 except the procedure function becomes

PROCEDURE Q = DUMMY(E, A1, E1, S1, V1)  
IF(A1.NE.1.0) GO TO 10  
IF(KEEP.NE.1.0) GO TO 10  
S = E - 
$$0.96585*E1 + 0.42857*S1$$
  
V = S -  $0.56496*S1 + 0.99501*V1$   
Q =  $0.19185*V$   
E1 = E  
S1 = S  
V1 = V  
10 CONTINUE  
ENDPRO

and in the INITIAL segment E1 = 0.0, S1 = 0.0, and V1 = 0.0.

Parallel Realization In the parallel realization method D(z) is expanded in partial-fraction form. When the numerator and denominator of D(z) are the same order, the denominator is first divided into the numerator, which for this example gives

$$D(z) = 0.19185 + \frac{(-0.02057z + 0.022875)}{(z - 0.99501)(z - 0.42857)}$$
(4.45)

In partial-fraction form, D(z) becomes

$$D(z) = 0.19185 + \frac{A}{z - 0.99501} + \frac{B}{z - 0.42857}$$
(4.46)

where A = 0.00425 and B = -0.02482. We now write the function as

$$D(z) = \frac{Q(z)}{E(z)} = \frac{M(z)}{E(z)} + \frac{N(z)}{E(z)} + \frac{P(z)}{E(z)}$$
(4.47)

where:

$$\frac{M(z)}{E(z)} = 0.19185 \tag{4.48}$$

$$\frac{N(z)}{E(z)} = \frac{0.00425z^{-1}}{1 - 0.99501z^{-1}}$$
(4.49)

$$\frac{P(z)}{E(z)} = \frac{-0.02482z^{-1}}{1 - 0.42857z^{-1}}$$
(4.50)

These expressions lead directly to the difference equations

$$M = 0.19185E$$

$$N = 0.00425E1 + 0.99501N1$$

$$P = -0.02482E1 + 0.42857P1$$

$$O = M + N + P$$
(4.51)

with coefficient updating

$$E1 = E$$

$$M1 = M$$

$$N1 = N$$

$$P1 = P$$

$$(4.52)$$

The total simulation program is again identical to that of Fig. 4.22 except that the INITIAL segment contains the values E1 = 0.0, M1 = 0.0, N1 = 0.0, P1 = 0.0 and the procedure function is given by

PROCEDURE Q = DUMMY(E, E1, M1, N1, P1, A1)  
IF(A1.NE.1.0) GO TO 10  
IF(KEEP.NE.1.0) GO TO 10  

$$M = 0.19185*E$$
  
 $N = 0.00425*E1 + 0.99501*N1$   
 $P = -0.02482*E1 + 0.42857*P1$   
 $Q = M + N + P$   
 $E1 = E$   
 $M1 = M$   
 $N1 = N$   
 $P1 = P$   
10 CONTINUE  
ENDPRO

The unit-step output response for each of the three methods is practically

identical to the response given in Fig. 4.23. The reader may ask why three different methods are presented. When these algorithms are programmed for real-time digital control, two factors become important. First, the computer time required to execute the algorithm may be an important factor. If this is the sole consideration one would select the algorithm that requires the fewest number of additions and multiplications. Second, numerical roundoff and truncation may have a significant influence on the system response. In this case one might try each realization and select the one that gives the best results. Several investigators have found that parallel realization most often gives the best performance.

#### Example 4.6

Classical analog compensation techniques that rely heavily upon frequency response methods can be extended to digital control by implementing appropriate algorithms in the digital computer. The bases for this extension were given in the previous examples.

Obtaining frequency response information or developing models can be extremely time consuming and therefore is not always a luxury the control engineer can afford. This is particularly true in the process control industry. Normally one finds in this case that a three-mode controller is the most attractive compromise for improving system performance. The term three-mode stems from the nature of the controller in that one mode is directly proportional to the applied signal, one mode is proportional to the integral of the signal, and one mode is proportional to the derivative. Therefore the term, *proportionalintegral-derivative* (PID) *controller* is often used rather than three-mode.

The diagram in Fig. 4.24 shows the representation of this controller as applied to a unity-negative feedback system. The continuous PID controller can be approximated on a digital computer using several forms of algorithms.<sup>(10,14)</sup> As a simplified version we can write

$$X_I(k) = X_I(k-1) + T * E(k)$$
(4.53)

$$X_D(k) = (1/T)(E(k) - E(k-1))$$
(4.54)

where Eq. (4.53) corresponds to integration and (4.54) to differentiation. The output of the digital PID is then given by

$$Y(k) = K_p * E(k) + K_I (X_I(k-1) + T * E(k)) + K_D ((1/T)(E(k) - E(k-1)))$$
(4.55)

We note that

T =sampling time

E(k) = present value of the applied signal

E(k-1) =first past value of E(k)

 $X_I(k)$  = present estimate of the integral

 $X_I(k-1) =$  first past value of  $X_I(k)$ 

Consider the system shown in Fig. 4.25 where the sample switch and the zero-orderhold represent the digital computer without a control algorithm. With a sampling time of T = 0.01, the step response shown in Fig. 4.26 is practically identical to the continuous system (i.e. without the sampler and hold).

A program using the same basic system but including a digital representation of the PID controller is given in Fig. 4.27. The algorithm for the controller is contained in a

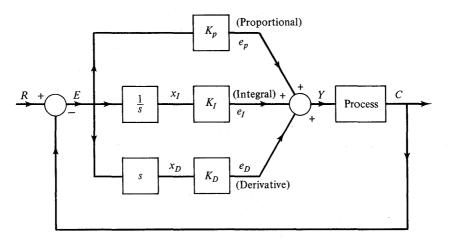


Fig. 4.24 Ideal representation of an ideal continuous PID controller.

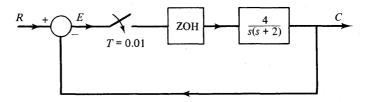


Fig. 4.25 System of Example 4.6 without a digital PID controller.

procedure function in the same way as given previously in Example 4.5. Earlier comments with respect to using fixed integration steps rather than variable steps also apply to this simulation.

Integration and differentiation for the controller are approximated by Eqs. (4.53) and (4.54), respectively. Using  $K_p = 12$ ,  $K_I = 20$ , and  $K_D = 4$  gives the step response shown in Fig. 4.28. We note the improvement in the system rise-time as well as a decrease in the overshoot when compared to the response without a controller.

In conclusion, this section has presented several methods for simulating a digital control system. There are many other ways to view the digital control system, for example, the digital implementation of a predictive controller.<sup>(15)</sup> Nevertheless, the methods presented here are fundamental and generally apply to more advanced techniques.

There is strong justification for learning the programming concepts presented in this section. Advances in computer technology, particularly in the microprocessor area, have reduced the cost for digital control by a factor of ten during the last decade. Continued improvement in computer technology, coupled with the flexibility offered by a digital controller, will in all likelihood result in a growing number of applications in this area.

# RESPONSE WITHOUT PID CONTROL - EXAMPLE 4-6

PAGE 1

|            |            | NIMUM        | COUT | VERSUS TIME | MAXIMUM    |
|------------|------------|--------------|------|-------------|------------|
| <b></b>    | 0.0        |              |      |             | 1.1628E 00 |
| TIME       | COUT       | I            |      |             | I          |
| 0.0        | 0.0        | +            |      |             |            |
| 8.0000E-02 | 1.21185-02 | +            |      |             |            |
| 1.6000E-01 | 4.5765E-02 | -+           |      |             |            |
| 2.4000E-01 | 9.6963E-02 | +            |      |             |            |
| 3.2000E-01 | 1.6191E-01 | +            |      |             |            |
| 4.0000E-01 | 2.3704E-01 | +            |      |             |            |
| 4.8000E-01 | 3.1907E-01 | +            |      |             |            |
| 5.6000E-01 | 4.0504E-01 |              | +    |             |            |
| 6.4000E-01 | 4.92358-01 |              | +    |             |            |
| 7.2000E-01 | 5.78735-01 |              |      | +           |            |
| 8.0CC0E-01 | 6.6229E-01 |              |      | +           |            |
| 8.8000E-01 | 7.4146E-01 |              |      | +           |            |
| 9.6000E-01 | 8.1503E-01 |              |      | +           |            |
| 1.0400E 00 | 8.82095-01 |              |      |             | +          |
| 1.1200E 00 | 9.42025-01 |              |      |             | +          |
| 1.2000E 00 | 9.9446E-01 |              |      |             | +          |
| 1.2800E 00 | 1.03935 00 |              |      |             | +          |
| 1.3600E 00 | 1.0765E 00 |              |      |             | +          |
| 1.44COE 00 | 1.10655 00 |              |      |             | +          |
| 1.5200E 00 | 1.1295E 00 |              |      |             | +          |
| 1.6000E 00 | 1.1460E 00 |              |      |             | +          |
| 1.6800E 00 | 1.1567E 00 |              |      |             |            |
| 1.7600E 00 | 1.1621E 00 |              |      |             | +          |
| 1.8400E 00 | 1.1628E 00 |              |      |             | +          |
| 1.92005 00 | 1.1596E 00 |              |      |             | +          |
| 2.00005 00 | 1.1531E 00 | ************ |      |             | +          |
| 2.08C05 00 | 1.14405 00 |              |      |             | +          |
| 2.1600E 00 | 1.1328E 00 | ********     |      |             | +          |
| 2.2400E 00 | 1.1201E CO |              |      |             | +          |
| 2.3200E 00 | 1.1065E 00 | ***          |      |             | *          |
| 2.4000E 00 | 1.0923E 00 | **           |      |             |            |
| 2.4800E 00 | 1.0781E 00 |              |      |             | +          |
| 2.5600E 00 | 1.0641E 00 |              |      |             | +          |
| 2.6400E 00 | 1.0507E 00 |              |      |             | +          |
| 2.72COE 00 | 1.03815 00 |              |      |             | +          |
| 2.8000E 00 | 1.0264E 00 | ********     |      |             | +          |
| 2.8800E 00 | 1.0159E 00 |              |      |             | +          |
| 2.9600E 00 | 1.0065E 00 |              |      |             | +          |
| 3.0400E 00 | 9.9837E-01 |              |      |             | +          |
| 3.1200E 00 | 9.9147E-01 |              |      |             | +          |
| 3.20005 00 | 9.8579E-01 |              |      |             | +          |
| 3.2800E 00 | 9.81295-01 |              |      |             | +          |
| 3.3600E 00 | 9.7789E-01 |              |      |             | +          |
| 3.4400E 00 | 9.7552E-01 |              |      |             | +          |
| 3.5200E 00 | 9.7408E-01 |              |      |             | +          |
| 3.6000E 00 | 9.7346E-01 |              |      |             | +          |
| 3.6800E 00 | 9.7356E-01 |              |      |             | +          |
| 3.7600E 00 | 9.74275-01 |              |      |             | +          |
| 3.8400E 00 | 9.7548E-01 |              |      |             | +          |
| 3.9200E 00 | 9.7709E-01 | *******      |      |             | +          |
| 4.00COE 00 | 9.79015-01 |              |      |             | +          |

Fig. 4.26 Step response for Example 4.6 without PID controller.

```
INITIAL
      T = 0.01
      E1 = 0.0
      INTG1 = 0.0
      KINTG = 20.0
      KPROP = 12.0
      KDERIV = 4.0
DYNAMIC
      E = INPUT - RESP
      INPUT = STEP(0.0)
      RESP = INTGRL(0.0, X1)
      X1 = REALPL(0, 0, 1, 0/2, 0, X2)
      X2 = 2.0 \times X3
      X3 = ZHOLD(A1,Y)
      A1 = IMPULS(0,0,T)
PROCEDURE Y = PIC(41, E, E1, T, KPROP, KINTG, KDERIV, INTG1)
      IF(A1.NE.1.0) GO TO 10
      IF(KEEP.NE.1.0)
                       GO TO 10
      EPROP = KPROP * E
      EDERIV = KDERIV*(1.0/T)*(E - E1)
      INTG = INTG1 + T*E
      EINTG = KINTG*INTG
      Y = EPROP + EDERIV + EINTG
      E1 = 5
      INTG1 = INTG
10
     CONTINUE
ENDPRO
METHCD RKSFX
TIMER FINTIM = 4.0, CUTDEL = 0.08, DELT = 0.001
PRTPLT RESP
LABEL OUTPUT FOR EXAMPLE 4-6 WITH PID CONTROLLER
END
STOP
ENDJOB
```

Fig. 4.27 CSMP program listing for PID controller. (Example 4.6.)

# **Simulation of Digital Logic**

The capability for simulating various digital logic functions is available in CSMP. We recall that functional blocks such as INTGRL are the key elements for simulating continuous systems. The same holds true for the digital logic case in that again standard blocks are available which make it possible to simulate practically any digital configuration.

Most of the functions related to logic simulation are given in Table 4.2. These functions are also given in Appendix I along with other special switching logic. As an introduction, example problems are given below that illustrate how these elements can be used in combination to perform useful logic tasks.

#### Example 4.7

This problem illustrates how a random-generated binary number (either 0, 1, 2, or 3) can be processed through digital logic so as to form the equivalent decimal representation of the number and thereby activate the proper edges of a Nixie light.

In Fig. 4.29(a), XL1 and XL2 form the binary representation of 0, 1, 2, and 3. E1 through E7 in 4.29(b) is a truth table for the edges of the light as defined in 4.29(c). The

# OUTPUT FOR EXAMPLE 4-6 WITH PID CONTROLLER

PAGE 1

| $\begin{array}{c c c c c c c c c c c c c c c c c c c $   |            |            |   | RESP | VERSUS TIME | MAXIMUM |
|--|------------|------------|---|------|-------------|---------|
| 0.0         0.0         +           1.6000E-01         1.0108E 00  |            |            |   |      |             |         |
| 8.0000E-02       7.9619E-01         1.6000E-01       1.004E 00         3.2000E-01       1.077E 00         4.0000E-01       1.0718E 00         5.6000E-01       1.0718E 00         7.2001-01       1.6645E 00         7.2001-01       1.6645E 00         8.0000E-01       1.0733E 00         8.0000E-01       1.0245E 00         1.1200E 00       1.0225E 00         1.2200E 00       1.02625E 00         1.2200E 00       1.01225 00         1.2200E 00       1.0122E 00         1.4200E 00       1.0263E 00         1.4200E 00       1.0263E 00         1.4200E 00       1.0126E 00         1.4200E 00       1.0263E 00         1.4200E 00       1.0126E 00         1.4200E 00       1.0106E 00         1.4200E 00       1.0106E 00         1.4200E 00       1.0046E 00         1.4200E 00       9.9315E-01         1.4200E 00       9.9315E-01         1.9200E 00       9.9355E-01         2.4000E 00       9.9355E-   |            |            |   |      |             | 1       |
| 1.6000E-01       1.0025E 00         3.2000E-01       1.075E 00         4.0000E-01       1.077E 00         4.0000E-01       1.077E 00         5.6000E-01       1.078E 00         5.6000E-01       1.078E 00         5.6000E-01       1.078E 00         5.6000E-01       1.064E 00         7.2000E-01       1.0601E 00         7.2000E-01       1.0601E 00         5.6000E-01       1.033E 00         5.6000E-01       1.0326E 00         1.0400F 00       1.0205E 00         1.2000E 00       1.0026E 00         1.4000E 00       1.0026E 00         1.4000E 00       1.0026E 00         1.4000E 00       1.0026E 00         1.5200E 00       1.0026E 00         1.6000E 00       9.9818-01         1.8000E 00       9.9356E-01         1.8000E 00       9.9356E-01         2.1600E 00       9.9356E-01         2.1600E 00       9.9356E-01         2.1600E 00       9.9356E-01         2.1600E 00       9.9356E-01   |            |            | + |      |             |         |
| 2,4000E-01       1.0755E       00         4,0000E-01       1.0775E       00         4,0000E-01       1.0775E       00         4,0000E-01       1.0775E       00         4,0000E-01       1.0718E       00         5,0000E-01       1.0604E       00         7,2000E-01       1.0604E       00         8,0000E-01       1.04645       00         4,6000E-01       1.04645       00         4,6000E-01       1.0265       00         4,6000E-01       1.0265       00         1.2000E       00       1.0265       00         1.2000E       01       1.0265       0         1.2000E       01       1.0265       0         1.2000E       01       1.0265       0         1.2000E       01       1.0265       0         1.4400F       00       1.0025       00         1.4500E       01       1.00265       0         1.4600E       00       1.00265       0         1.4600F       01       1.00265       0         1.4600F       01       1.00265       0         1.4600F       00       9.94185-01       1  |            |            |   |      | +           |         |
| 3.2000E-01       1.0777E       00         4.8000E-01       1.0777E       00         5.6000E-01       1.078E       00         5.6000E-01       1.064E       00         7.2000E-01       1.0601E       00         8.0000E-01       1.053E  |            |            |   |      |             | •       |
| 4.0000E-01       1.0778E 00         5.6000E-01       1.078E 00         5.6000E-01       1.064E 00         7.2000E-01       1.0601E 00         8.0000E-01       1.0633E 00         9.0000E-01       1.0633E 00         9.0000E-01       1.0633E 00         9.0000E-01       1.0633E 00         9.0000E-01       1.0263E 00         9.0000E-01       1.0265E 00         1.2200E 00       1.0226E 00         1.2200E 00       1.026E 00         1.2200E 00       1.0026E 00         1.2200E 00       1.0026E 00         1.4200E 00       1.0026E 00         1.4200E 00       1.0026E 00         1.4200E 00       9.9818E-01         1.5200E 00       1.0032E 00         1.6600E 00       9.9618E-01         1.8400E 00       9.9519E-01         1.8400E 00       9.9519E-01         2.9000E 00       9.9355E-01         2.3200E 00       9.9355E-01         2.3200E 00       9.9506E-01         2.4600E 00       9.95   |            |            |   |      |             | +       |
| 4,8000E-01       1.0758E 00         5,6000E-01       1.0648E 00         7,2000E-01       1.0601E 00         8,0000E-01       1.0633E 00         9,6000E-01       1.0335 00         1,0400F 00       1.0263E 00         1,0400F 00       1.0263E 00         1,2000E 01       1.0263E 00         1,2000E 00       1.0265E 00         1,2000E 00       1.0026E 00         1,2000E 00       1.0022E 00         1,4400F 00       1.0004E 00         1,6600E 00       1.0004E 00         1,6600E 00       9.9618E-01         1,7600F 00       9.9519E-01         1,8400F 00       9.9519E-01         1,8400F 00       9.9355E-01         2,2400F 00       9.3355E-01         2,2400F 00       9.3355E-01         2,2400F 00       9.3355E-01         2,4000F 00       9.   |            |            |   |      |             | +       |
| 5.6000E-01       1.0718E 00         6.4000E-01       1.0664E 00         7.2000E-01       1.0601E 00         8.8000E-01       1.0643E 00         7.6000E-01       1.0326E 00         7.6000E-01       1.0263E 00         1.1200E 00       1.0265E 00         1.2200E 00       1.0265E 00         1.2200E 00       1.0105E 00         1.2200E 00       1.0105E 00         1.2200E 00       1.0105E 00         1.2200E 00       1.0066E 00         1.4400F 00       1.0066E 00         1.6500E 00       1.0046E 00         1.6600E 00       1.0046E 00         1.6600E 00       9.9818E-01         1.7600F 00       9.6946E-01         1.8400E 00       9.9618E-01         1.8400E 00       9.9379E-01         2.0000E 00       9.9379E-01         2.0000E 00       9.9379E-01         2.1600E 00       9.9379E-01         2.2400E 00       9.9379E-01         2.4600E 00       9.9456E-01         2.4600E 00       9   |            |            |   |      |             |         |
| 6.4 COOE-O1       1.0664E CO         7.2000E-O1       1.0631E CO         8.8000E-O1       1.0533E OO         9.6000E-O1       1.0325E OO         1.04C0F 00       1.0326E OO         1.2000E 00       1.0263E OO         1.2000E 00       1.0106E OO         1.3600E 00       1.0106E OO         1.4400F 00       1.0004E OO         1.4400F 00       1.0004E OO         1.4500E 00       1.0004E OO         1.6600E 00       9.9418E-01         1.7600F 00       9.9431E-01         1.9200E 00       9.9355E-01         2.0000E 00       9.9355E-01         2.2400E 00       9.9355E-01         2.4600E 00       9.9355E-01         2.4600E 00       9.9562E-01         2.4600E 00  |            |            |   |      |             |         |
| 7,2000E-01       1.0601E 00         8,8000E-01       1.0533E 00         9,6000E-01       1.0463E 00         9,6000E-01       1.0326E 00         1.1200E 00       1.0226E 00         1.2200E 00       1.0152E 00         1.2800E 00       1.0152E 00         1.4400F 00       1.0066E 00         1.4500E 00       1.0066E 00         1.5200E 00       1.0025E 00         1.6600D 00       9.9818E-01         1.6600D 00       9.9646E-01         1.8400E 00       9.9519E-01         1.8400E 00       9.9379E-01         2.0800E 00       9.9379E-01         2.0800E 00       9.9379E-01         2.1600D 00       9.9379E-01         2.1600D 00       9.9379E-01         2.1600D 00       9.9379E-01         2.1600D 00       9.9379E-01         2.4000E 00       9   |            |            |   |      |             |         |
| 8.800000000000000000000000000000000000   |            |            |   |      |             | •       |
| 8,8000E-01       1.04039E 00         9,6000E-01       1.0393E 00         1.04C0P 00       1.0326E 00         1.2200E 00       1.0226E 00         1.2200E 00       1.0205E 00         1.2800F 00       1.0152E 00         1.3600E 00       1.0152E 00         1.4400F 00       1.0066E 00         1.4400F 00       1.0066E 00         1.4600E 00       9.0018E-01         1.6600E 00       9.004E-01         1.6600E 00       9.9818E-01         1.6600E 00       9.9646E-01         1.8400E 00       9.9379E-01         2.0000E 00       9.9379E-01         2.0000E 00       9.9375E-01         2.4000F 00       9.9375E-01         2.4000E 00       9.9376E-01         2.4000E 00       9.962E-01         2.4000E 00       9.962E-01         2.4000E 00       9.962E-01         2.4000E 00       9.962E-01         2.4000E 00       9.967   |            |            |   |      |             | •       |
| 0.6000E-01       1.0339E 00         1.04400F 00       1.0326E 00         1.2000E 00       1.0263E 00         1.2000F 00       1.0263E 00         1.2800F 00       1.0152E 00         1.3600E 00       1.0106E 00         1.4400F 00       1.0042E 00         1.5200E 00       1.0042E 00         1.5200E 00       1.0042E 00         1.5200E 00       1.0042E 00         1.6800D 00       9.9818E-01         1.6800D 00       9.9818E-01         1.6800D 00       9.9818E-01         1.8400E 00       9.9319E-01         1.8400E 00       9.9319E-01         1.9200DE 00       9.9356E-01         2.0800DE 00       9.9356E-01         2.1600E 00       9.9356E-01         2.1600E 00       9.9356E-01         2.3200E 00       9.9356E-01         2.4800D 00       9.9356E-01         2.4800D 00       9.9356E-01         2.4800D 00       9.956E-01         2.4800D 00       9.956E-01         2.4800D 00       9.956E-01         2.4800D 00       9.956E-01         2.4800D 00       9.9784E-01         2.4800D 00       9.9784E-01         2.8800D 00       9.   |            |            |   |      |             | •       |
| 1.0440F 00       1.0263E 00  |            |            |   |      |             | •       |
| 1.1200E 00       1.0205E 00  |            |            |   |      |             | +       |
| 1.22000 00       1.02055 00  |            |            |   |      |             | +       |
| 1.2800E 00       1.0152E 00  |            |            |   |      |             | +       |
| 1.3600E 00       1.0106F 00         1.4400F 00       1.0022E 00         1.5200E 00       1.0022E 00         1.6600E 00       9.08185-01         1.7600E 00       9.0646E 01         1.7600E 00       9.0646E 01         1.8400E 00       9.0519E-01         1.8400E 00       9.0519E-01         1.8400E 00       9.0535E-01         2.0000E 00       9.0375E-01         2.1600F 00       9.0355E-01         2.2400F 00       9.0355E-01         2.2400F 00       9.0356E-01         2.3200E 00       9.0356E-01         2.4600F 00       9.0562E-01         2.4600F 00       9.0562E-01         2.4600F 00       9.0732E-01         2.6400F 00       9.0732E-01         2.7200F 00       9.0732E-01         3.200E 00       9.0774E-01         3.200E 00       9.0977E-01         3.200E 00       9.09   |            |            |   |      |             | +       |
| 1.4400F 00       1.0032E 00         1.5200F 00       1.0032E 00         1.6000F 00       1.0004E 00         1.6000F 00       9.9646E-01         1.7600F 00       9.9646E-01         1.8400F 00       9.9646E-01         1.8400F 00       9.9646E-01         1.8400F 00       9.9646E-01         1.8400F 00       9.9519E-01         1.8400F 00       9.9355E-01         2.0000F 00       9.9355E-01         2.1600F 00       9.9355E-01         2.1600F 00       9.9356E-01         2.3200F 00       9.9356E-01         2.400F 00       9.9562E-01         2.400F 00       9.9672E-01         2.600F 00       9.9675E-01         2.800F 00       9.9732E-01         2.800F 00       9.9974E-01         3.200F 00       9.9974E-01   |            |            |   |      | ********    | +       |
| 1.5200E       00       1.0032E       00         1.6600E       00       9.9818E-01  |            |            |   |      |             | +       |
| 1.6000E 00       1.0004E 00         1.6E00E 00       9.9818E-01         1.7600F 00       9.9646E-01         1.8400E 00       9.9519E-01         1.9200E 00       9.9431E-01         2.0000E 00       9.9379E-01         2.0000E 00       9.9355E-01         2.1600E 00       9.9355E-01         2.2400E 00       9.9355E-01         2.3200E 00       9.9356E-01         2.4400E 00       9.9356E-01         2.4200E 00       9.9356E-01         2.400E 00       9.9356E-01         2.400E 00       9.9356E-01         2.400E 00       9.9454E-01         2.400E 00       9.9506E-01         2.400E 00       9.9506E-01         2.400E 00       9.9506E-01         2.400E 00       9.9506E-01         2.400E 00       9.952E-01         2.400E 00       9.9620E-01         2.400E 00       9.9620E-01         2.400E 00       9.9620E-01         2.400E 00       9.9732E-01         2.800E 00       9.9875E-01         3.1200E 00       9.9977E-01         3.200E 00       9.9977E-01         3.200E 00       9.9977E-01         3.400E 00       9.9977E-01   |            |            |   |      |             | •       |
| 1.6 & COE       0.98185-01         1.7600F CO       9.98185-01         1.84 COE       00         1.84 COE       00         1.92COE       00         2.0000E       00         9.9379E-01  |            |            |   |      |             | •       |
| 1.7600F       00       9.9646E=01         1.8400F       00       9.9519E=01         1.9200F       00       9.9379E=01         2.0000F       00       9.9355E=01         2.1600F       00       9.9355E=01         2.2400F       00       9.9355E=01         2.3200F       00       9.9355E=01         2.4400F       00       9.9355E=01         2.4500F       00       9.9355E=01         2.4600F       00       9.9562E=01         2.5600E       00       9.9562E=01         2.5600E       00       9.9562E=01         2.6400F       00       9.962E=01         2.800E       00       9.9784E=01         2.800E       00       9.9784E=01         2.800E       00       9.9784E=01         3.1200E       00       9.9975E=01         3.2400E       00       9.9974E=01         3.2800E       00       9.9974E=01         3.2400E       00   |            |            |   |      |             |         |
| 1.8400E 00       9.9519E-01         1.9200E 00       9.9379E-01         2.0000E 00       9.9379E-01         2.1600E 00       9.9355E-01         2.1600E 00       9.9355E-01         2.1600E 00       9.9355E-01         2.3200E 00       9.9355E-01         2.400F 00       9.9355E-01         2.3200E 00       9.9355E-01         2.4000E 00       9.9454E-01         2.4000E 00       9.9506E-01         2.4000E 00       9.9506E-01         2.4000E 00       9.9522E-01         2.6600E 00       9.952E-01         2.7200F 00       9.962E-01         2.7200F 00       9.962E-01         2.8800F 00       9.9732E-01         2.8800F 00       9.9732E-01         2.8800F 00       9.9732E-01         3.1200E 00       9.9875E-01         3.200E 00       9.9978E-01         3.200E 00       9.9974E-01         3.200E 00       9.9974E-01         3.200E 00       9.9974E-01         3.200E 00       9.9974E-01         3.200E 00       1.0001E 00         3.600E 00       1.0003E 00         3.600E 00       1.0003E 00         3.600E 00       1.0005E 00 <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> |            |            |   |      |             |         |
| 1.9200E       00       9.9431E-01         2.0800E       00       9.9379E-01         2.1600E       00       9.9356E-01         2.2400E       00       9.9356E-01         2.2400E       00       9.9356E-01         2.2400E       00       9.9356E-01         2.2400E       00       9.9356E-01         2.4000E       00       9.9356E-01         2.4000E       00       9.9456E-01         2.400E       00       9.9506E-01         2.400E       00       9.9506E-01         2.400E       00       9.9506E-01         2.400E       00       9.9506E-01         2.400E       00       9.9620E-01         2.400E       00       9.9620E-01         2.720DF       00       9.9620E-01         2.720DF       00       9.9677E-01         2.800E       00       9.9732E-01         2.800E       00       9.9832E-01         3.0400F       00       9.9832E-01         3.200E       00       9.9974E-01         3.200E       00       9.9974E-01         3.200E       00       1.0001E       00         3.600E       00   |            |            |   |      |             | •       |
| 2.0000E 00       9.9379E-01         2.0800F 00       9.9356E-01         2.1600F 00       9.9356E-01         2.2400F 00       9.9356E-01         2.3200F 00       9.9309E-01         2.4400F 00       9.9506E-01         2.4600F 00       9.9506E-01         2.4600F 00       9.9506E-01         2.4600F 00       9.9506E-01         2.4600F 00       9.9506E-01         2.6400F 00       9.9620E-01         2.6400F 00       9.9620E-01         2.6400F 00       9.9620E-01         2.7200F 00       9.9677E-01         2.8000F 00       9.9784E-01         2.8000F 00       9.9832E-01         3.0400F 00       9.9875E-01         3.200E 00       9.9974E-01         3.200E 00       9.9974E-01         3.200E 00       9.9974E-01         3.400E 00       1.0001E 00         3.5200E 00       1.0003E 00         3.600E 00       1.0004E 00         3.6600E 00       1.0005E 00         3.7600E 00       1.0005E 00   |            |            |   |      |             | •       |
| 2.0800F 00 9.9355E-01  |            |            |   |      |             |         |
| 2.1600E 00       9.9356E-01  |            |            |   |      |             | +       |
| 2.2400E 00       9.9375E-01         2.3200E 00       9.9309E-01         2.400E 00       9.9454E-01         2.4800E 00       9.9506E-01         2.5600E 00       9.9506E-01         2.6400E 00       9.9506E-01         2.6400E 00       9.9562E-01         2.6400E 00       9.9677E-01         2.6400E 00       9.9677E-01         2.8000E 00       9.9732E-01         2.8000E 00       9.9732E-01         2.8000E 00       9.9732E-01         2.8000E 00       9.9732E-01         3.800E 00       9.9732E-01         3.800E 00       9.9732E-01         3.1200E 00       9.9875E-01         3.200E 00       9.9974E-01         3.200E 00       9.9974E-01         3.200E 00       9.9974E-01         3.200E 00       9.9974E-01         3.400E 00       1.0003E 00         3.600E 00       1.0003E 00         3.600E 00       1.0004E 00         3.6600E 00       1.0005E 00         3.7600E 00       1.0005E 00         3.8400E 00       1.0005E 00  |            |            |   |      |             | +       |
| 2.3200E 00 9.9309E-01  |            |            |   |      |             | -       |
| 2.4000E 00 9.9454E-01  |            |            |   |      |             | •       |
| 2.4800E 00       9.9506E-01  |            |            |   |      |             |         |
| 2.5600E 00 9.9562E-01  |            |            |   |      |             | +       |
| 2.6400E 00       9.9620E-01  |            |            |   |      |             | +       |
| 2.7200E 00 9.9677E-01  |            |            |   |      |             |         |
| 2.8000E 00 9.9732E-01  |            |            |   |      |             | +       |
| 2.8800F 00 9.9784F-01  |            |            |   |      |             | +       |
| 2.96C0E 00 9.9832E-01  |            |            |   |      |             | +       |
| 3.0400F 00       9.9875F-01         3.1200E 00       9.9913E-01         3.2000E 00       9.99346F-01         3.2800E 00       9.9974E-01         3.3600E 00       9.9974E-01         3.4400E 00       1.0001E 00         3.5200E 00       1.0003E 00         3.6600E 00       1.0004E 00         3.6600E 00       1.0004E 00         3.7600E 00       1.0005E 00         3.8400E 00       1.0005E 00   |            |            |   |      |             | +       |
| 3.1200E C0       9.9913E-01  |            |            |   |      |             | +       |
| 3.2000E 00 9.9946E-01  |            |            |   |      |             |         |
| 3.2800E 00 9.9974E-01  |            |            |   |      |             | +       |
| 3.3600E 00 9.9997E-01  |            |            |   |      |             | +       |
| 3.4400E 00       1.0001E 00  |            |            |   |      |             |         |
| 3.5200E 00 1.0003E 00  |            |            |   |      |             | •       |
| 3.6C00E 00 1.0004E 00  |            |            |   |      |             | •       |
| 3.6800E 00 1.0004E 00  |            |            |   |      |             |         |
| 3.76COE CO 1.0005E OO  |            |            |   |      |             | •       |
| 3.8400E 00 1.0005E 00  |            |            |   |      |             | •       |
| 3.9200E 00 1.00055 00+   |            |            |   |      |             |         |
|  | 3.8400E 00 | 1.0005E 00 |   |      |             | +       |
| 4.0C00E 00 1.0005E 00+   |            |            |   |      |             |         |
|  | 4.0000E 00 | 1.0005E 00 |   |      |             | +       |

Fig. 4.28 Step response of system with PID digital controller. (Example 4.6.)

| Statement Form                          | Function  |  |  |  |
|---|---|--|--|--|
| $Y = RST (X_1, X_2, X_3)$               | $Y = 0$ $X_1 > 0$ $Y = 1$ $X_2 > 0, X_1 \le 0$  |  |  |  |
| $Y_{N-1} =$ Previous state of flip-flop | $ \begin{array}{c} Y = 0 \\ Y = 0 \\ Y = 0 \\ Y = 0 \end{array} \Big  \begin{array}{c} X_1 \le 0, \\ X_1 \le 0, \\ X_2 \le 0, \end{array} \Big  \begin{array}{c} X_3 > 0, \\ X_3 > 0, \\ X_{N-1} = 0 \\ X_3 \le 0, \\ Y_{N-1} = 1 \end{array} \right  $ |  |  |  |
| RESETTABLE FLIP-FLOP                    | $Y = 1$ $X_{3} \le 0, Y_{N-1} = 1$ $X_{3} \le 0, Y_{N-1} = 1$   |  |  |  |
| $Y = COMPAR (X_1, X_2)$<br>COMPARATOR   | $ \begin{array}{ll} Y = 0 & X_1 < X_2 \\ Y = 1 & X_1 \geq X_2 \end{array} $   |  |  |  |
| $Y = AND (X_1, X_2)$                    | $\begin{array}{ll} Y=1 & X_1>0, X_2>0\\ Y=0 & OTHERWISE \end{array}$  |  |  |  |
| $Y = NAND (X_1, X_2)$<br>NOT AND        | $\begin{array}{ll} Y=0 & X_1>0, X_2>0\\ Y=1 & OTHERWISE \end{array}$  |  |  |  |
| $Y = IOR (X_1, X_2)$<br>INCLUSIVE OR    | $\begin{array}{ll} Y=0 & X_1 \leq 0, X_2 \leq 0 \\ Y=1 & OTHERWISE \end{array}$   |  |  |  |
| $Y = NOR (X_1, X_2)$<br>NOT OR          | $Y = 1$ $X_1 \le 0, X_2 \le 0$<br>Y = 0 OTHERWISE   |  |  |  |
| $Y = EOR (X_1, X_2)$<br>EXCLUSIVE OR    | $\begin{array}{ll} Y = 1 & X_1 \le 0, X_2 > 0 \\ Y = 1 & X_1 > 0, X_2 \le 0 \\ Y = 0 & \text{OTHERWISE} \end{array}$  |  |  |  |
| Y = NOT (X)NOT                          | $Y = 1  X \le 0$ $Y = 0  X > 0$   |  |  |  |
| $Y = EQUIV (X_1, X_2)$                  | $ \begin{array}{ll} Y = 1 & X_1 \leq 0, X_2 \leq 0 \\ Y = 1 & X_1 > 0, X_2 > 0 \end{array} $  |  |  |  |
| EQUIVALENT                              | Y = 0 OTHERWISE   |  |  |  |

# Table 4.2

# Logic Functions for CSMP (Also, see Appendix I)

logic statements defining E1 through E7 are:

× .


| (not XL1 and not XL2)     |
|---------------------------|
| (XL1 or not XL2)          |
| (always on)               |
| (not XL1 or XL2)          |
| (same as the state of E2) |
| (not XL2)                 |
| (the state of XL1)        |
|                           |

| Number | XL1 | XL2 |
|--------|-----|-----|
| 0      | 0   | 0   |
| 1      | 0   | 1   |
| 2      | 1   | 0   |
| 3      | 1   | 1   |

(a) Binary values of XL1 and XL2 for given decimal numbers.

| E1 | E2 | E3 | E4 | E5 | E6 | E7 | Number |
|----|----|----|----|----|----|----|--------|
| 1  | 1  | 1  | 1  | 1  | 1  | 0  | 0      |
| 0  | 0  | 1  | 1  | 0  | 0  | 0  | 1      |
| 0  | 1  | 1  | 0  | 1  | 1  | 1  | 2      |
| 0  | 1  | 1  | 1  | 1  | 0  | 1  | 3      |

(b) Truth table for light edges.

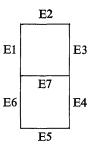

(c) Light edge definition.

Fig. 4.29 Diagram defining logic properties for Example 4.7

A logic circuit for performing the above functions is given in Fig. 4.30 where we assume the random number is available from XL1 and XL2.

The program for making this simulation will first use RNDGEN to generate a random number. The number so generated will lie between 0 and 1. The output of the random number generator will be particulated as follows:

 $\begin{array}{ll} For & 0 \leq output < 0.25 \longrightarrow Assign \ 0 \\ For \ 0.25 \leq output < 0.50 \longrightarrow Assign \ 1 \\ For \ 0.50 \leq output < 0.75 \longrightarrow Assign \ 2 \\ For \ 0.75 \leq output \leq 1.00 \longrightarrow Assign \ 3 \end{array}$ 

The numbers 0, 1, 2, and 3 will be represented in binary form to give the correct values for XL1 and XL2. Next the logic functions for E1 through E7 will be expressed in terms of CSMP functional logic blocks. Finally, the output will give the random binary number and indicate the state for each edge of the light.

The program given in Fig. 4.31 will accomplish the above tasks. More than 50% of the program statements are used to create a special form of output. Note that on the TIMER card, FINTIM is given as 15.0 and DELT specified as 0.5. This means that 30 random numbers will be generated. Of course, the user has complete freedom to specify

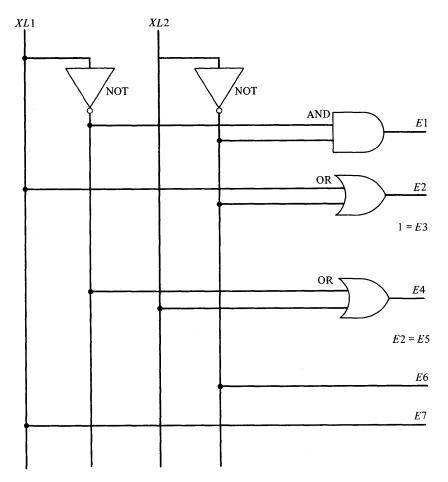


Fig. 4.30 Logic circuit for Example 4.7.

FINTIM and DELT. In this example neither the PRINT nor PRTPLT features of CSMP were used since all desired output is obtained from conventional FORTRAN statements. An example of typical output is given in Fig. 4.32 where the random number, the binary representation, and the state of each light edge are given at the top of the page. This is followed by a bold print output of the decimal equivalent.

#### Example 4.8

The reset-set-toggle (RST) flip-flop in the CSMP functional blocks, as given in Table 4.2, can be used for simulating many standard digital functions. This example illustrates the use of the flip-flop in constructing and testing a two-bit up-down counter. (Modulo two.)

Several comments should first be made on logic design using CSMP. First the logic statements should be placed after a NOSORT card. Logic designs using flip-flops with feedback from the output states will form algebraic loops if run as SORT statements.

```
PROGRAM TO TURN ON LIGHT WITH NUMBER FROM ZERO TO THREE
NOSORT
*
          PART ONE - GENERATE RANDOM NUMBER
***********
    L = RNDGEN(9)
    XL2 = 0.0
    IF(L.GE.0.5) GD TO 13
    XL1 = 0.0
    IF(L_{\bullet}GE_{\bullet}O_{\bullet}25) \times L2 = 1.0
    GO TO 14
 13
    XL1 = 1.0
    IF(L \cdot GE \cdot 0 \cdot 75) \times L2 = 1 \cdot 0
 14 CONTINUE
******************
                 PART TWO - LOGIC STRUCTURE
***********
    XL18AR = NOT(XL1)
    XL2BAR = NOT(XL2)
    E1 = AND(XL1BAR, XL2BAR)
    E2 = IOR(XL1,XL2BAR)
    E3 = 1.0
    E4 = IOR(XL1BAR, XL2)
    E5 = E2
    E6 = XL2BAR
    E7 = XL1
************
 PART THREE - WRITE OUT THE VALUES FOR L,XL1,XL2,E1,E2,E3,E4,E5,E6,E7*
********
    WRITE(6,3)
                                      EDGE1 EDGE2 EDGE3
   3 FORMAT(1H1,1X, RANDCM NUMBER
                               XL1 XL2
    $EDGE4 EDGE5 EDGE6 EDGE7*)
    WRITE(6,10) L,XL1,XL2,E1,E2,E3,E4,E5,E6,E7
 10 FORMAT(3X,F10.8,7X,F3.1,2X,F3.1,4X,F3.1,4X,F3.1,4X,F3.1,4X,F3.1,4X,F3.1,
    $4X,F3.1,4X,F3.1,4X,F3.1,////////
              **
  **********
    PART FOUR - SPECIAL WRITE STATEMENTS TO FORM DECIMAL NUMBER
IF(XL1.EQ.0.0.AND.XL2.EQ.0.0) GD TO 9
    IF(XL1.EQ.1.0.AND.XL2.EQ.1.0) GO TO 8
    IF(XL1.EQ.0.0.AND.XL2BAR.EQ.0.0) GO TO 11
    IF(XL1.EQ.1.0.AND.XL2BAR.EQ.1.0) GO TO 12
   9 WRITE(6,15)
  THIS FORMAT PRINTS A ZERO
  15 FORMAT(T34,12('X')/T34,12('X')/11(T34,'XX
                                            XX / / ),
    $2(T34, *XXXXXXXXXXXX/))
    GO TO 25
  11 WRITE(6,19)
  THIS FORMAT PRINTS A CNE
  19 FORMAT(15(/T40, XX'))
    GO TO 25
  12 WRITE(6,20)
  THIS FORMAT PRINTS A TWO
  20 FORMAT(T34,12('X')/T34,12('X')/5(T44,'XX'/),T34,12('X')/
   $T34,12('X')/5(T34, *XX'/), T34,12('X')/T34,12('X')/)
    GO TO 25
   8 WRITE(6,17)
  THIS FORMAT PRINTS A THREE
  17 FORMAT(T34,12("X")/T34,12("X")/5(T44,"XX"/),T34,12("X")/
    $T34,12('X')/5(T44, *XX'/), T34,12(*X')/T34,12(*X')/)
  25 CONTINUE
TIMER FINTIM =15.0, DELT = 0.5
END
STOP
```

\*

Fig. 4.31 Program listing for NIXIE light indicator. (Example 4.7.)

| RANDCM NUMBER | XL1 | XL2 | EDGE1 | EDGE 2 | EDGE3 | EDGE4 | EDGE5 | EDGE6 | EDGE7 |
|---------------|-----|-----|-------|--------|-------|-------|-------|-------|-------|
| 0.54687333    | 1.0 | 0.0 | 0.0   | 1.0    | 1.0   | 0.0   | 1.0   | 1.0   | 1.0   |

```
*****
XXXXXXXXXXXXXX
       хх
       хх
       хx
       XX
       хΧ
****
*****
хх
хх
хх
хх
XX
*****
****
```

Fig. 4.32 Typical program output for NIXIE light. (Example 4.7.)

Furthermore, the SORT algorithm will change the logic statements around so that the resulting simulation becomes nonsense. Second CSMP will go through the program statements twice at TIME = 0 even though integral functions are not used. This means that flip-flops will react to the two passes and will often give erroneous results. This problem can be avoided by starting pulses into the logic only after TIME = 0. Third, when integration is not used in CSMP, the program statements are executed every DELT units. Thus, users should specify a DELT on the TIMER card commensurate with the frequency desired for executing the program statements. In summary, the following guidelines are recommended when using CSMP to simulate logic containing flip-flops.

- 1 Always place logic statements after a NOSORT card.
- 2 Apply inputs to the logic *after* time = 0.
- 3 Use a DELT corresponding to the frequency desired for executing the program statements.

The logic diagram of an up-down counter using RST flip-flops is shown in Fig. 4.33. The counter counts up one unit for every  $X_1$  pulse applied and counts down one unit for every  $X_2$  pulse applied. Simultaneous pulses for  $X_1$  and  $X_2$  gives an undefined condition.

A CSMP program for simulating this counter is given in Fig. 4.34. The train of pulses applied to the system start at TIME = 0.1. Four pulses are first applied from  $X_1$  and followed by a continuous train of pulses from  $X_2$ . Note that variables Q1I and Q2I are introduced in the INITIAL section. This allows the states of the flip-flops to be defined so that statements for R1, S1, T1 (input to flip-flop 1) and R2, S2, T2 (input to flip-flop 2) can be written. Note also that all logic statements follow a NOSORT card and that

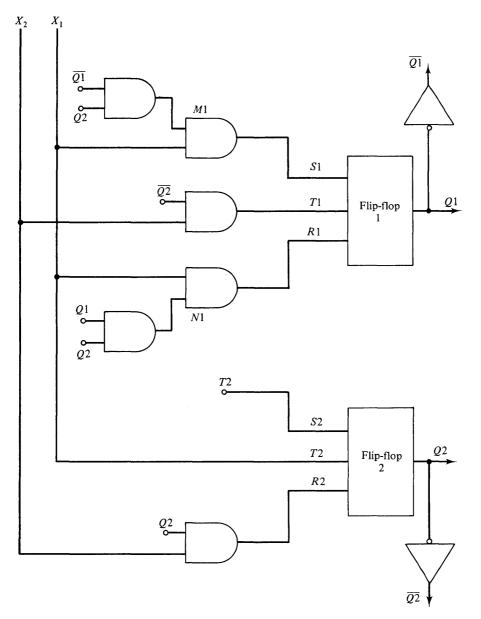


Fig. 4.33 Logic diagram for up-down counter of Example 4.8.

DELT = 0.1 is used on the TIMER card. If a DELT is not specified, the program uses FINTIM/100 and thereby executes the program statements at this value.

The output of the program is given in Fig. 4.35. Note that Q2 is the low-order bit and Q1 is the high-order bit. The four input pulses for X1 gives the binary count 1, 2, 3, 0 (which is correct). One will also observe that X2 causes the proper down-count.

```
INITIAL
   Q1I = 0.0
   Q2I = 0.0
******************
* THE FOLLOWING STATEMENTS GENERATE A TRAIN OF PULSES AS INPUT
                                                  *
*******
CYNAMIC
NOSORT
   XX1 = IMPULS(0, 1, 0, 1)
   YY1 = IMPULS(0.5,0.1)
   X1 = XX1 - YY1
   X2 = YY1
******
* THE FOLLOWING STATEMENTS FORM AN UP-DOWN COUNTER
***********
   Q1IBAR = NOT(Q1I)
   Q2IBAR = NOT(Q2I)
   M1 = AND(Q1IBAR, Q2I)
   S1 = AND(X1,M1)
   T1 = AND(X2, Q2IBAR)
   N1 = AND(Q11,Q21)
   R1 = AND(X1, N1)
   R2 = AND(X2,Q2I)
   S2 = T1
   T_2 = X_1
   Q1 = RST(R1, S1, T1)
   Q2 = RST(R2, S2, T2)
   Q1I = Q1
   Q2I = Q2
TIMER FINTIM = 1.5, DELT = 0.1, PRDEL = 0.1
PRINT X1, X2, Q1, Q2
TITLE OUTPUT OF A MODULO TWO COUNTER EXAMPLE 4-8
END
STOP
ENCJOB
```

Fig. 4.34 CSMP program of the up-down counter of Example 4.8.

| TIME<br>0.0 | X1<br>0.0  | X2<br>0+0  | Q1<br>0.0  | Q2<br>0.0  |
|-------------|------------|------------|------------|------------|
| 1.0000E-01  | 1.0000E 00 | 0.0        | 0.0        | 1.0000E 00 |
| 2.0000F-01  | 1.0000E 00 | 0.0        | 1.0000E 00 | 0.0        |
| 3.0000E-01  | 1.0000E 00 | 0.0        | 1.0000E 00 | 1.0000E 00 |
| 4.00005-01  | 1.0000E 00 | 0.0        | 0.0        | 0.0        |
| 5.0000E-01  | 0.0        | 1.0C00E 00 | 1.0000E 00 | 1.0000E 00 |
| 6.00005-01  | 0.0        | 1.0000E 00 | 1.0000E 00 | 0.0        |
| 7.CO00E-01  | 0.0        | 1.0000E 00 | 0.0        | 1.0000E 00 |
| 8.0000E-01  | 0.0        | 1.0000E 00 | 0.0        | 0.0        |
| 9.0000E-01  | 0.0        | 1.0000E 00 | 1.0000E 00 | 1.0000E 00 |
| 1.00COE 00  | 0.0        | 1.COOOF 00 | 1.0000E 00 | 0.0        |
| 1.1000E 00  | 0.0        | 1.0C00E 00 | 0.0        | 1.0000E 00 |
| 1.2000F 00  | 0.0        | 1.0000E 00 | 0.0        | 0.0        |
| 1.30005 00  | 0.0        | 1.00005 00 | 1.0000E 00 | 1.0000E 00 |
| 1.40005 00  | 0.0        | 1.0000E 00 | 1.0000E 00 | 0.0        |
| 1.50C0E 00  | 0.0        | 1.0000E 00 | 0.0        | 1.0000E 00 |

CUTPUT OF A MODULO TWO COUNTER EXAMPLE 4-8

Fig. 4.35 Output results of up-down counter simulation. (Example 4.8.)

# REFERENCES

- 1. Kuo, B.C., Automatic Control Systems. Englewood Cliffs, N. J.: Prentice-Hall, Inc. 1967.
- 2. THALER, G. J., and BROWN, R. G., Analysis and Design of Feedback Systems. New York: McGraw-Hill Book Company, 1960.
- 3. D'Azzo, J. J., and HOUPIS, C. H., Feedback Control System Analysis and Synthesis. New York: McGraw-Hill Book Company, 1966.
- 4. DORF, R. C., *Modern Control Systems*. Reading, Mass.: Addison-Wesley Publishing Co., Inc., 1967.
- 5. CHIRLIAN, P. M., Signals, Systems, and the Computer. New York and London: Intext Educational Publishers, 1973.
- 6. DORF, R. C., *Time Domain Analysis and Design of Control Systems*. Reading, Mass.: Addison-Wesley Publishing Co., Inc., 1965.
- 7. SCHULTZ, D. G., and MELSA, J. L., *State Functions and Linear Control Systems*. New York: McGraw-Hill Book Company, 1967.
- 8. DRANSFIELD, PETER, *Engineering Systems and Automatic Control*. Englewood Cliffs, N. J.: Prentice-Hall, Inc., 1968.
- 9. Kuo, B. C., Analysis and Synthesis of Sampled Data Control Systems. Englewood Cliffs, N. J.: Prentice-Hall, Inc., 1963.
- CADZOW, J. A., and MARTENS, H. R., Discrete-Time and Computer Control Systems. Englewood Cliffs, N. J.: Prentice-Hall, Inc., 1970.
- 11. SAUCEDO, R., and SCHIRING, E. E., Introduction to Continuous and Digital Control Systems. New York: The MacMillan Company, 1968.
- 12. HYLAND, W. W., and GREEN, W. L., "Application of Real-Time Digital Automatic Gauge Control," *ISA Transactions*, Vol. 13, No. 4, 326–34, 1974.
- 13. STEIGLITZ, KENNETH, An Introduction to Discrete Systems. New York: John Wiley and Sons, 1974.
- 14. SMITH, C. L., *Digital Computer Process Control*. New York and London: Intext Educational Publishers, 1969.
- 15. WOLF, J. and GREEN, W. L., "Application of a Minicomputer for Practical Realization of Predictive Compensation." *ISA Transactions*, Vol. 12, No. 3, 1973.
- DEBOLT, R. R., and POWELL, B. E., "A Natural 3-Mode Controller Algorithm for D.D.C." ISA Journal Sept., 1966, pp. 43–7.

#### PROBLEMS


1 The open-loop transfer function of a system is given by

$$G(s) = \frac{150}{s(s+2)(s+10)}$$

(a) Find the frequency response of the open-loop system over the range  $\omega_{\min} = 0.1$  to  $\omega_{\max} = 100.0$ . Use the basic program given in Fig. 4.1 with NUM(1-6) and DEN(1-6) changed to appropriate values for this problem. Obtain 20 output points per decade. Add a statement to the program in Fig. 4.1 so that the output magnitude is expressed in decibels (dB). If VALUE is the output, this can be expressed in dB by

#### VALUEX = 20.0\*ALOG10(VALUE)

(b) The G(s) given above is used in a unity-negative feedback system as shown below. Again, use the basic program of Fig. 4.1 to obtain the closed-loop frequency response. Express the output in dB and request PRTPLT of output and phase for  $.1 \le \omega \le 100.0$ ,

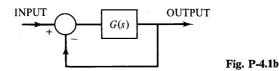

- (c) From the computer output of (a) and (b) give
  - (i) the phase margin and gain margin of the system;
  - (ii) the peak overshoot  $(M_p)$  of the closed-loop frequency response;
  - (iii) the frequency at which the peak response occurs  $(\omega_p)$ ;
  - (iv) the approximate bandwidth of the closed-loop system; and, finally,
  - (v) is the closed-loop system stable?

Answers:

- Part (a). At  $\omega = 1.2589$ , VALUEX = 13.983, PHASE = -129.36Part (b). At  $\omega = 2.5119$ , VALUEX = 5.2604, PHASE = -24.841Part (c). (i) Phase margin = 10 deg, gain margin = 4.06 dB
  - (i) If 15117 ID (ii) is a 1512 ID (iii) is a 1512 ID (iii) is
    - (ii)  $M_p = 15.117$  dB, (iii)  $\omega_p = 3.548$ , (iv) 5.3, (v) yes
- 2 A stereo amplifier has the following transfer function


$$G(s) = \frac{4.05 \times 10^8 s}{(s+30)(s+135,000)}$$

Use the frequency response program given in Fig. 4.1 and determine the response of the amplifier for  $6.28 \le \omega \le 628,000$ . Use log stepping with 10 increments per decade. Have the program plot dB magnitude and phase versus  $\omega$ . What values are given by the PRTPLT for the low-frequency cutoff, high-frequency cutoff, bandwidth, and mid-frequency gain?

Answers:

Low frequency cutoff  $\doteq 31.5$  radians/sec High frequency cutoff  $\doteq 1.27 \times 10^5$  radians/sec Bandwidth  $\doteq 1.27 \times 10^5$  radians/sec Mid-frequency gain  $\doteq 69.5$  dB


3 Make the necessary modifications to the program in Fig. 4.1 in order to find the frequency response of  $V_o(s)/V_I(s)$  for the network given below. Use the PRTPLT statement to list the dB magnitude and phase versus  $\omega$  ( $\omega$  in log steps, 10 steps/per decade) over the range  $0.1 \le \omega \le 30,000$ . *Hint*: the transfer function is given by

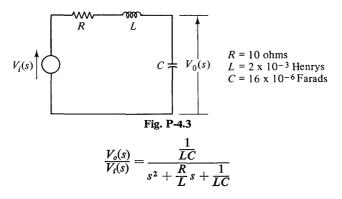

Answer:

At  $\omega = 1995.2$ ,  $V_o(\omega) = 0.638$  dB, Phase  $= -20.09^{\circ}$ 

4 Consider the multiple-element mechanical system shown in Fig. P-4.4. The differential equations describing this system are

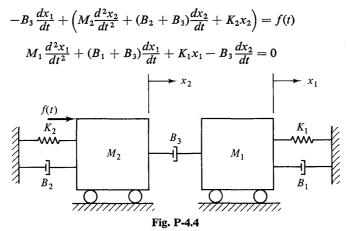

By assuming zero initial conditions, taking the Laplace transform, and solving the simultaneous equations one finds

 $\frac{X_1(s)}{F(s)} = \frac{sB_3}{C_4 s^4 + C_3 s^3 + C_2 s^2 + C_1 s + C_0}$ where:  $C_4 = M_1 M_2$  $C_3 = M_1 (B_2 + B_3) + M_2 (B_1 + B_3)$  $C_2 = M_2 K_1 + M_1 K_2 + B_1 (B_2 + B_3) + B_2 B_3$  $C_1 = K_1 (B_2 + B_3) + K_2 (B_1 + B_3)$  $C_0 = K_1 K_2$ 

Let  $M_1 = M_2 = K_1 = K_2 = B_3 = 1.0$ , and  $B_1 = B_2 = 0.5$ . Find the frequency response of the transfer function,  $X_1(s)/F(s)$ , over the relevant range of  $\omega$ . Solve this problem by making appropriate changes of the program in Fig. 4.1.

Answers:

At  $\omega = 1.0$ , magnitude = -1.938 dB, phase =  $-90^{\circ}$ 

5 A particular process-transfer function is given by<sup>16</sup>

$$T(s) = \frac{1.25(s^2 + 0.345s + 0.32)e^{-0.5s}}{(s+1)(s+0.2)^2}$$

Find the frequency response over the range  $.001 \le \omega \le 10$  by making appropriate changes in the program of Fig. 4.1. Use log stepping for  $\omega$  with 16 steps per decade. What is the phase margin and gain margin?

Answer:

Phase margin = 
$$62^{\circ}$$
, gain margin = 0.677 absolute

6 The transfer function of a particular band-reject filter is given by

$$G(s) = \frac{s^4 + 1.6 \times 10^3 s^3 + 8.8 \times 10^5 s^2 + 1.92 \times 10^8 s + 1.44 \times 10^{10}}{s^4 + 1.204 \times 10^{4} s^3 + 3.648 \times 10^7 s^2 + 1.4448 \times 10^{9} s + 1.44 \times 10^{10}}$$

Find the frequency response of this filter over the range  $1 \le \omega \le 100,000$ . Use log stepping for  $\omega$  with 10 steps per decade. PRTPLT the dB magnitude of the filter response. What band of frequencies are rejected by this filter?

Answer:

Approximately 14 to 8500 radians/sec

7 A signal is given by

$$y(t) = 10.0*SIN(10.0*TIME) + 1.1*SIN(350.0*TIME)$$

Find the response of the filter in Prob. 6 to this signal over the time interval  $0 \le \text{TIME} \le 1.4$  with OUTDEL = 0.014. Use the transfer function macro given in Example 3.12 in developing your program. Comment on the filter response for this y(t).

Answer:

For  $\omega = 350$ , signal is attenuated by 40 dB

8 A pulse r(t) defined by

 $r(t) = 1 \qquad 0.0 \le t \le 0.6$  $r(t) = 0 \qquad \text{all other } t$ 

is applied to a linear, time-invariant, minimum-phase system. Data for the pulse response are given below.

| Time  | Response | Time  | <i>Response</i> 0.5092 |  |
|-------|----------|-------|------------------------|--|
| 0.000 | 0.000    | 0.645 |                        |  |
| 0.045 | 0.2899   | 0.675 | 0.3773                 |  |
| 0.075 | 0.4221   | 0.720 | 0.2405                 |  |
| 0.120 | 0.5590   | 0.765 | 0.1534                 |  |
| 0.165 | 0.6464   | 0.855 | 0.0624                 |  |
| 0.255 | 0.7380   | 0.915 | 0.0342                 |  |
| 0.330 | 0.7710   | 0.975 | 0.0188                 |  |
| 0.390 | 0.7838   | 1.060 | 0.0076                 |  |
| 0.480 | 0.7934   | 1.200 | 0.0002                 |  |
| 0.600 | 0.7980   |       |                        |  |

Find the frequency response of this system. *Hint*: Use the array-integrator frequency response program as shown in Fig. 4.8. Use the data above to define the AFGEN function. An approximate frequency range should start at  $\omega_{\min} = 0.1$  with NUM-DEC (number of decades) = 4 and XDECAD (number of points per decade) = 10. Dimensioned variables in Fig. 4.8 should be changed from 21 to 41. Allow approximately 3 min of CPU time on a 360/65 to run this problem.

Answer:

At  $\omega = 19.95$  radians/sec, magnitude = -8.85 dB, phase =  $-62.9^{\circ}$ 

9 Data given in Prob. 8 were measured from the system configuration of Fig. P-4.9.

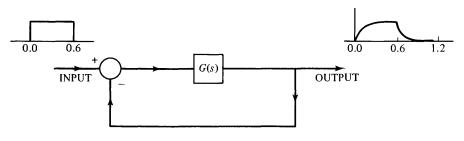


Fig. P-4.9

- (a) From the frequency response of Prob. 8, determine a reasonable model for G(s).
- (b) Use the G(s) determined from part (a) above in the configuration of Fig. P-4.9. Apply a pulse input as shown in this diagram and use CSMP to find the output response. Compare this response to the data given in Prob. 8 to determine the validity of your model. An introductory background in feedback systems is necessary for working this problem.

Answers:

(a) 
$$G(s) = \frac{8}{(s+2)}$$

10 The transfer function of a system is given by

$$\frac{C(s)}{R(s)} = \frac{300s^2 + 720s + 132}{s^5 + 22s^4 + 137s^3 + 496s^2 + 725s + 132}$$

- (a) Express this transfer function in integration form as shown in Fig. 4.11.
- (b) Write a set of state variable equations from your diagram by using the output of each integration as a state.
- (c) Use the equations in part (b) and write a CSMP program for finding c(t) (the output) when r(t) (the input) is a unit step. *Hint*: Use variable-step integration with OUTDEL = 0.12 and FINITIM = 6.0.

Answer:

(c) At TIME = 0.84, 
$$c(t) = 1.1923$$

11 The transfer function of a system is given by

$$\frac{C(s)}{R(s)} = \frac{150}{s^3 + 12s^2 + 20s + 150}$$

- (a) Express this transfer function in integration form as shown in Fig. 4.10.
- (b) Write a set of state variable equations from your diagram by using the output of each integrator as a state.
- (c) Use the equations in part (b) and write a CSMP program for finding c(t) (the output) when r(t) (the input) is a unit step. *Hint*: Use variable-step integration with OUTDEL = 0.08, FINTIM = 4.0.

Answer:

At TIME = 
$$1.12$$
,  $c(t) = 1.3443$ 

12 A signal given by

$$f(t) = (4 * e^{-0.1t}) + \sin(1.5t) \sec(1.5t)$$

is applied to the input of a sample and hold system as illustrated in Fig. P-4.12. The ideal sampler closes every T = 0.4 sec. Write a CSMP program which will PRTPLT f(t),  $f^*(t)$ , and x(t). Use an OUTDEL of 0.1 sec and a FINTIM of 5.0 sec.

$$f(t) \xrightarrow{f^{*}(t)} Zero-order$$
hold Fig. P-4.12

Answer:

At TIME = 2.1, 
$$x(t) = 3.416$$

13 The model of a continuous process is given in Fig. P-4.13.

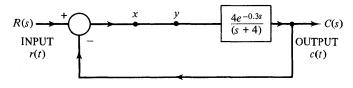


Fig. P-4.13

- (a) If r(t), the input, is a unit step, write a CSMP program which gives the output response, c(t). Assume all initial conditions are zero.
- (b) Remove the segment of the system between x and y in Fig. P-4.13 and replace it by a sample and hold as given in Prob. 12. This replacement is representative of what happens when a digital computer is used to close the process loop. Develop a CSMP simulation for this case and determine the unit-step response for T = 0.08, 0.32. A fixed-step integration should be used for this case with DELT being a sub-multiple of T.

Answers:

(a) At TIME = 0.96, c(t) = 0.50984

(b) At TIME = 1.04, T = 0.08, c(t) = 0.65624At TIME = 1.04, T = 0.32, c(t) = 0.47167Both for METHOD RKSFX, DELT = 0.008 14 The system diagram of a proposed direct digital control system using a PID control algorithm is shown in Fig. P-4.14. The digital control portion can be expressed in a

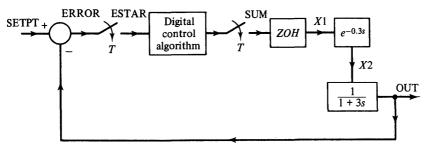


Fig. P-4.14

#### **PROCEDURE** algorithm by

```
PROCEDURE SUM = PID(A1,SETPT,T,K,TI,TD,ESTAR,ESTAR1,INTG1)

IF(A1.NE.1.0) GO TO 10

IF(KEEP.NE.1.0) GO TO 10

EPROP = ESTAR

EDERIV = TD*(1.0/T)*(ESTAR - ESTAR1)

INTG = INTG1 + T*ESTAR

EINTG = (1.0/TI)*INTG

SUM = K*(EPROP + EDERIV + EINTG)

ESTAR1 = ESTAR

INTG1 = INTG

10 CONTINUE

ENDPRO
```

Find the unit-step response of this system using the above control algorithm with T = 0.02, K = 9.6, TI = 1.67, TD = 0.15, INTG1 = 0.0, and ESTAR1 = 0.0. Use RKSFX with DELT = 0.02, FINTIM = 10.0, OUTDEL = 0.2. Give the PRTPLT of OUT. A review of Example 4.6 may be helpful in working this problem.

Answer:

At TIME = 
$$0.8$$
, OUT =  $1.1431$ 

15 A cascade form of a PID controller for the system in Prob. 14 is given in Fig. P-4.15.<sup>(16)</sup> Implement this controller in discrete form using a PROCEDURE function. Parameters of the controller are K = -9.6, Sampling Interval = 0.02, TI = 1.67, TD = 0.15, all initial conditions are zero. Use RKSFX fixed-step integration, FINTIM = 10.0, DELT = 0.02, OUTDEL = 0.2. Give the PRTPLT of OUT.

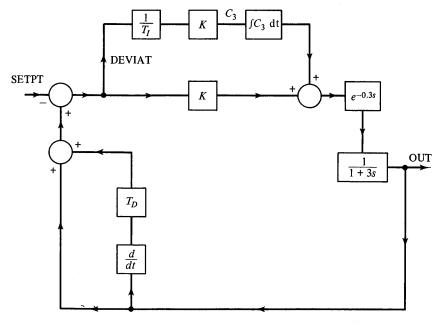


Fig. P-4.15

Answer:

At TIME = 1.2, 
$$out(t) = 0.94849$$

16 Consider the system shown in Fig. P-4.16. It has been determined that a suitable controller, D(z), for this system with a sampling time of T = 0.5 is

$$D(z) = \frac{A0 + A1 * z^{-1}}{1 + B1 * z^{-1}} = \frac{(0.25 - 0.24 * z^{-1})}{(1.0 - 0.99 * z^{-1})}$$

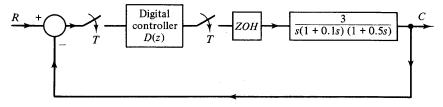


Fig. P-4.16

Use the method given in Example 4.4 for simulating the above system. Let the input, R, be a unit step. Give the PRTPLT of C and the output of the zero-order hold. Let FINTIM = 10.0, OUTDEL = 0.15, DELT = 0.025, METHOD RKSFX.

Answers:

At TIME = 4.2, ZOH = -0.026969, c(t) = 1.1697

17 The diagram for a digital control system is given in Fig. 4.21. Find the unit-step response of the system when the controller is expressed as a parallel realization. Use the PROCEDURE approach. See Example 4.5 for further details.

Answers:

(For T = 0.1, DELT = 0.05, OUTDEL = 0.1, METHOD RKSFX) At TIME = 1.4, output = 1.1532

18 Although the subject was not discussed in the text, CSMP can be used for simulating and finding the response of digital filters. For example, the exponential filter can be expressed as

$$\frac{Y(z)}{X(z)} = \frac{(1-\alpha)z}{z-\alpha}$$

where: z = the z-transform variable

 $\alpha = a$  filter parameter

Y(z) = z-transform of the filter output

X(z) = z-transform of the filter input

A digital algorithm for this filter is

$$Y(nT) = (1 - \alpha)X(nT) + \alpha Y[(n-1)T]$$

where: Y(nT) = nth value of the filter output

Y((n-1)T) = (n-1)st value of the filter output

X(nT) = nth value of the filter input

T = filter sampling time

The frequency response of the discrete filter for several values of  $\alpha$  is shown in Fig. P-4.18(a).


Let an input signal to the filter be given by

$$y(t) = \sin (0.05t) + 0.5 \sin (0.44t)$$
  
term A term B

We wish to design a filter which will attenuate term B by 15 dB but pass term A. To achieve this we select  $\alpha = 0.9$  and T = 1.43 sec. The program in Fig. P-4.18(b) can be used to simulate this filter. Run this program and observe the output. Comment on your results.

Answer:

At TIME = 80.08, 
$$x(t) = -1.0729$$
,  $y(t) = -0.21010$ 

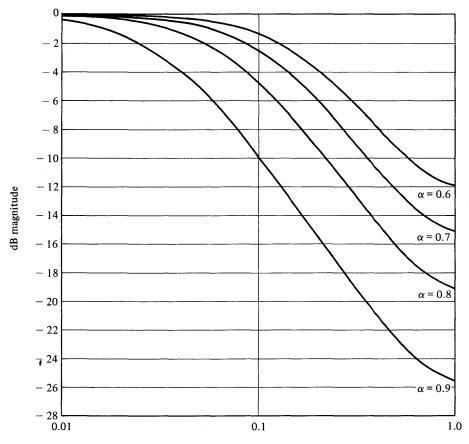

 $\omega$  (multiply each value by  $\pi/T$ )

Fig. P-4.18(a) Magnitude response of the digital exponential filter.

#### \*\*\*PROBLEM INPUT STATEMENTS\*\*\*

```
PARAM ALPHA = 0.9, Y1 = 0.0
  SAMPLING TIME = 1.43
*
DYNAMIC
    NOSORT
     X = SIN(0.05*TIME) + 0.5*SIN(0.44*TIME)
     Y = (1.0 - ALPHA)*X + ALPHA*Y1
     Y1 = Y
   WHEN USING THIS PROGRAM BE SURE THAT DELT ON THE
   TIMER CARD IS SET EQUAL TO THE SAMPLING TIME
   MAKE SURE Y1 IS UPCATED AS SHOWN
۰
TIMER
       FINTIM = 250.0, OUTDEL = 2.86, DELT = 1.43
PRTPLT X, Y
LABEL ILLUSTRATICN OF EXPONENTIAL FILTER, PROB 4-18
END
STOP
ENCUCE
```

Fig. P-4.18(b) Program listing for Problem 4.18.

19 The algorithm of a third-order discrete Butterworth filter is given by

$$Y(n) = 0.0039 * X(n) + 0.0116 * X(n-1) + 0.0116 * X(n-2) + 0.0039 * X(n-3) + 2.3051 * Y(n-1) - 1.8317 * Y(n-2) + 0.4957 * Y(n-3)$$

where the coefficients have been selected to give a bandwidth of  $\pi/9T$ . Let the input to the filter be identical to the input signal given in Prob. 18. Use a sampling time of T = 2 sec. This should attenuate term B by 30 dB. Write a CSMP program to simulate this filter. Use a FINTIM = 125, DELT = 2.0, and OUTDEL = 2.0. Compare the results to Prob. 18.

Answer: At TIME = 68, x(t) = 0.29501, y(t) = -0.14972

Ch. 4

# 5

# CSMP III

The preceding chapters specifically dealt with the form of CSMP called System/360 Continuous System Modeling Program (S/360 CSMP). An extension of S/360 CSMP called CSMP III is available. It incorporates the following major changes and improvements.

- 1 Additional output versatility including extensive x-y plotting capability is available.
- 2 Several new functional blocks have been added.
- 3 Double precision calculations can be used to improve accuracy.
- 4 The model size has been increased.

There is very little difference in using the two forms of CSMP. Most programs written for S/360 CSMP are completely compatible with CSMP III and will run without modifications. The following is a brief check list of items that should be considered when running a program on a different form of CSMP.

- 1 The S/360 CSMP PRTPLT statement is treated as an OUTPUT instruction in CSMP III. The OUTPUT statement cannot be used in S/360 CSMP.
- 2 Subscripted variables are allowed in CSMP III PRINT and OUTPUT statements, but are not permitted in any S/360 CSMP output instructions.
- 3 The S/360 CSMP CONTINUE statement is equivalent to the END CON-TINUE instruction used in CSMP III.
- 4 In S/360 CSMP data cards are placed between the labels DATA and ENDDATA. The equivalent labels in CSMP III are INPUT and ENDIN-PUT.

- 5 The use of the array form of the INTGRL function is considerably different in the two forms of CSMP.
- 6 There are several function blocks that can only be used in CSMP III. They are listed in this chapter and in Appendix I.
- 7 The JCL (job control language) cards are different.

It is the intent of this chapter to point out the major differences in using the two forms of the CSMP program and to describe the additional features of CSMP III. This material does not contain a detailed description of all the features and capabilities of CSMP III. The reader should refer to the IBM manual<sup>(1)</sup> for additional information.

This chapter is divided into three sections: output, functions, and control statements. The greatest difference between the two forms of the CSMP program exists in output capability. Output capabilities are covered in the first section. The second section contains descriptions of the additional CSMP III functions. A few control statements are slightly different in CSMP III. This is covered in the last section.

# **Output Statements**

Additional output statements are provided in CSMP III as well as methods for controlling the format of the output. The beginning user should start with the standard output statements and gradually work up to using the various available options.

The four major output statements are PRINT, OUTPUT, PREPARE, and RANGE: Each of these statements can be used alone or with auxiliary instructions to alter the standard output format. FORTRAN output capability is available in both forms of CSMP.

# PRINT

The PRINT statement is used exactly as in S/360 CSMP. The changes listed below provide additional flexibility.

- 1 Up to 55 variables can be listed on a PRINT card.
- 2 The PRINT statement can be used for subscripted variables. For example, the following card will print the values of A, B, X(1), Y(6), Y(7), Y(8), and Y(9).

PRINT A, B, X(1), Y(6-9)

# TITLE

As in S/360 CSMP, the TITLE statement is used for specifying the heading of PRINT output. Each TITLE statement, which can be continued to one addi-

tional card, provides up to 120 characters in one line of output. A maximum of six cards can be included in a program. This means that three TITLE statements, each containing one continuation card; six TITLE cards with no continuations; or an equivalent number of cards can be used.

For example, the following two TITLE statements provide a total of two lines of heading for PRINT output.

TITLE SIMULATION OF THE CONTROL SYSTEM FOR NATURAL GAS  $\cdots$  TRANSMISSION

TITLE ALL UNITS ARE GIVEN IN THE METRIC SYSTEM

#### RERUN

The RERUN card is used to print in the heading the values of listed parameters. For example, when several runs are made using the CALL RERUN statement, the current values of X, Y, and Z are printed as part of the heading by using the following statement.

# RERUN X, Y, Z

#### PRINTPAGE

This statement allows the user to specify the size of pages used for PRINT output. If the size is not specified by the HEIGHT and WIDTH variables, the height will be the standard sixty lines and the width will be 132 characters. An example of a PRINTPAGE statement is shown below.

# PRINTPAGE HEIGHT = 50, WIDTH = 104

This instruction will provide a page 50 lines high and 104 characters wide. Page width determines the maximum number of variables that can be listed in column form as summarized below.

| Maximum Number of Output<br>Variables in Column Form |
|--|
| 9  |
| 8  |
| 7  |
| 6  |
| 5  |
|  |

# OUTPUT

The OUTPUT statement provides an additional means for both printing and plotting output. It is used in place of the S/360 CSMP PRTPLT statement. If PRTPLT is used in CSMP III, it is automatically treated as an OUTPUT state-

ment. Up to fifty-five variables can be included in one statement. An example of a valid OUTPUT card is shown below.

OUTPUT X, W, T(3), Q(3-12), P

The output format is automatically determined by the number of variables that are listed on the OUTPUT statement. For five or fewer variables, the output is both plotted and printed on the same plot. When there are more than five variables the output is only printed. The following example illustrates the use of the OUTPUT statement with the three different formats.

# Example 5.1

Consider the problem of calculating the steady-state error of an accelerometer for a sinusoidal input of frequency  $\omega$ . Fig. 5.1 shows the basic elements of an accelerometer.

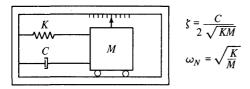


Fig. 5.1 Elements of an accelerometer.

)

The steady-state percent error is given by the following expression

$$\operatorname{ERROR} = \frac{100}{\left[\left(1 - \left(\frac{\omega}{\omega_n}\right)^2\right)^2 + \left(2\zeta\frac{\omega}{\omega_n}\right)^2\right]^{1/2}} - 100$$
(5.1)

Symbols used in program

where  $\zeta = \text{damping factor}$  ZETA  $\frac{\omega}{\omega_n} = \text{ratio of exciting} \qquad \text{FREQ}$ frequency to natural frequency

The program shown in Fig. 5.2 calculates the percent error as a function of frequency ratio and damping factor. The independent variable is the frequency ratio (FREQ) and each subscripted variable (ERROR(I)) represents the error for a particular value of  $\zeta$ . The ERROR(I) variable corresponds to a damping factor of I/20. The printing format depends on the number of variables listed in the OUTPUT statement. For 1–5 variables, both a printer-plot and tabular listing are given on the same page. The plot for each variable is independently scaled and identified by a unique symbol. The output for the following instruction containing four variables is given in Fig. 5.3.

# OUTPUT ERROR(1), ERROR(8-9), ERROR(14)

As with the S/360 CSMP PRTPLT instruction, multiple OUTPUT statements can be used to provide separate plots. For example, the following three cards will provide three separate plots of X, Y, and Z.

OUTPUT X OUTPUT Y OUTPUT Z

```
LABEL STEADY-STATE ERROR OF AN ACCELEROMETER AS A FUNCTION OF FREQUE...
NCY AND CAMPING FACTOR
 RENAME TIME = FREQ
  FIXED I
  STORAGE ERRUR(20)
NOSORT
 DG 1
      1 = 1,20
  ZETA = FLOAT(I)/20.0
1 ERROR(I) = 100.0/SQRT((1.0 - FREQ*FREQ)**2 + (2.0*ZETA*FREQ)**2)
                                                                     ...
  - 100.0
 OUTPUT
         ERROR(1), ERROR(8-9), ERPOR(14)
LABEL TYPICAL OUTPUT FOR 1-5 VARIABLES
 OUTPUT ERROR(4), ERROR(6-10)
LABEL TYPICAL OUTPUT FOR 6-9 VARIABLES
  OUTPUT ERROR(1-20)
LABEL TYPICAL OUTPUT FOR 10-55 VARIABLES
  TIMER FINTIM = 1.0, OUTDEL = 0.02
END
STOP
ENDJOB
```

Fig. 5.2 Program to calculate the steady-state error of an accelerometer.

In S/360 CSMP, three separate PRTPLT cards or the following single statement will also give three separate plots.

# PRTPLT X, Y, Z

For 6–9 variables, a column listing is used. It is similar to the format used by the PRINT statement. The output from the following instruction containing six variables is given in Fig. 5.4.

#### OUTPUT ERROR(4), ERROR(6–10)

For 10-55 variables a row format is used. The names of the variables are listed in the left column and each successive column contains the magnitude of the variables for increasing values of the independent variable (TIME). Figure 5.5 shows an example of this type of output for the following statement.

#### OUTPUT ERROR(1-20)

Similar to the PRTPLT instruction, the print interval for the OUTPUT statement is specified by OUTDEL.

#### LABEL

This statement specifies the heading that appears at the top of each page of OUTPUT printout. Only one continuation card is allowed for each LABEL instruction. LABEL statements provide headings for all OUTPUT instructions that follow the LABEL cards. LABEL instructions that follow an OUTPUT statement refer only to the statement they follow. Examples are shown by the program of Fig. 5.2 and outputs in Figs. 5.3, 5.4, and 5.5. A typical LABEL statement is shown below.

LABEL SIMULATION OF THE INDUSTRIAL DYNAMICS OF A ... MANUFACTURING PLANT

| FRED         ERROR(1)         ERROR(1)         ERROR(1)         ERROR(1)         ERROR(1)         ERROR(1)           2.00000C-02         3.96102E-02         x         I         I         0.0         0.0         0.0         0.0         0.0           2.00000C-02         0.5994         X         I         I         0         I         2.71918E-02         2.77885E-02         7.78186E-           6.00000C-02         0.35947         X         I         I         0         I         0.245904         0.21423         6.54602E-           0.10000         1.0049         +X         I         I         0         I         0.46397         0.38091         1.07422E-           0.10000         1.6355         +X         I         I         0         I         1.43400         1.1671         1.99896           0.10000         2.6134         +X         I         I         0         I         1.3340         1.6274         1.49946           0.22000         3.0561         +X         I         I         0         I         2.7895         2.7494         2.3825         0.0           0.22000         5.0581         +X         I         I         0 |     |
|--|-----|
| $\begin{array}{cccccccccccccccccccccccccccccccccccc$   | •   |
| $ \begin{array}{cccccccccccccccccccccccccccccccccccc$  | -04 |
| $\begin{array}{cccccccccccccccccccccccccccccccccccc$   |     |
| $\begin{array}{c ccccccccccccccccccccccccccccccccccc$  |     |
| $\begin{array}{cccccccccccccccccccccccccccccccccccc$   |     |
| $\begin{array}{c c c c c c c c c c c c c c c c c c c $   |     |
| $\begin{array}{cccccccccccccccccccccccccccccccccccc$   | -02 |
| $\begin{array}{cccccccccccccccccccccccccccccccccccc$   | -02 |
| $\begin{array}{cccccccccccccccccccccccccccccccccccc$   |     |
| $ \begin{array}{cccccccccccccccccccccccccccccccccccc$  |     |
| $ \begin{array}{cccccccccccccccccccccccccccccccccccc$  |     |
| $\begin{array}{cccccccccccccccccccccccccccccccccccc$   |     |
| $ \begin{array}{cccccccccccccccccccccccccccccccccccc$  |     |
| $ \begin{array}{cccccccccccccccccccccccccccccccccccc$  |     |
| $\begin{array}{c ccccccccccccccccccccccccccccccccccc$  |     |
| $\begin{array}{c ccccccccccccccccccccccccccccccccccc$  |     |
| $ \begin{array}{cccccccccccccccccccccccccccccccccccc$  |     |
| $\begin{array}{cccccccccccccccccccccccccccccccccccc$   |     |
| $\begin{array}{cccccccccccccccccccccccccccccccccccc$   |     |
| $\begin{array}{cccccccccccccccccccccccccccccccccccc$   |     |
| $ \begin{array}{c ccccccccccccccccccccccccccccccccccc$   |     |
| $ \begin{array}{c ccccccccccccccccccccccccccccccccccc$   |     |
| $ \begin{array}{cccccccccccccccccccccccccccccccccccc$  |     |
| 0.64000       68.390       I       +       I       I       D       X * I       I       27.962       21.237       -6.8057         0.66000       75.980       I       +       I       I       O       X * I       I       29.387       22.044       -7.6416         0.66000       84.541       I       +       I       I       O       X I*       I       30.750       22.761       -8.5343         0.70000       94.257       I       +       I       IO       X I*       I       32.025       23.372       -9.4828         0.72000       105.36       I       +       I       OI       X *       I       33.190       23.859       -10.486         0.74000       118.14       I       +       I       OI       IX       *       I       34.216       24.205       -11.541         0.76000       133.00       I       +       I       OI       IX       *       I       35.075       24.391       -12.647   |     |
| 0.66000       75.980       I       +       I       I       0       X *I       I       29.387       22.044       -7.6416         0.68000       84.541       I       +       I       I       0       X *I       I       29.387       22.044       -7.6416         0.68000       84.541       I       +       I       I       0       X I*       I       30.750       22.761       -8.5343         0.70000       94.257       I       +       I       ID       XI       *       I       32.025       23.372       -9.4828         0.72000       105.36       I       +       I       OI       X       *       I       33.190       23.859       -10.486         0.74000       118.14       I       +       I       OI       IX       *       I       34.216       24.205       -11.541         0.76000       133.00       I       +       I       OI       IX       *       I       35.075       24.391       -12.647   |     |
| 0.68000       84.541       I       +       I       I       0       X I*       I       30.750       22.761       -8.5343         0.70000       94.257       I       +       I       ID       XI*       I       32.025       23.372       -9.4828         0.72000       105.36       I       +       I       OI       X       *       I       33.190       23.859       -10.486         0.74000       118.14       I       +       I       OI       X       *       I       34.216       24.205       -11.541         0.76000       133.00       I       +       I       OI       IX       *       I       35.075       24.391       -12.647   |     |
| 0.70000     94.257     I     +     I     IO     XI     *     I     32.025     23.372     -9.4828       0.72000     105.36     I     +     I     OI     X     *     I     33.190     23.859     -10.486       0.74000     118.14     I     +     I     OI     IX     *     I     34.216     24.205     -11.541       0.76000     133.00     I     +     I     OI     IX     *     I     35.075     24.391     -12.647   |     |
| 0.72000       105.36       I       +       I       0I       X       *       I       33.190       23.859       -10.486         0.74000       118.14       I       +       I       0I       IX       *       I       34.216       24.205       -11.541         0.76000       133.00       I       +       I       0       I       IX       *       I       35.075       24.391       -12.647   |     |
| 0.74000 118.14 I + I O I IX * I 34.216 24.205 -11.541<br>0.76000 133.00 I + I O I IX * I 35.075 24.391 -12.647   |     |
| 0.76000 133.00 I + I O I IX * I 35.075 24.391 -12.647  |     |
|  |     |
|  |     |
| 0.80000 171.16 IIIIIXIXI 36.184 24.226 -14.997   |     |
|  |     |
|  |     |
|  |     |
|  |     |
|  |     |
|  |     |
|  |     |
| 0.94000 568.38 I O I I X + I * I 31.414 17.100 -24.308   |     |
| 0.96000 706.80 I 0 I XI + * I 29.535 15.267 -25.721  |     |
| 0.98000 846.09 I 0 I X I * I + I 27.389 13.265 -27.144   |     |
| 1.0000 900.00 I-OIXIII 25.000 11.111 -28.571   |     |

Fig. 5.3 Typical printer-plot from OUTPUT statement for 1-5 variables.

249

STEADY-STATE ERROR OF AN ACCELEROMETER AS A FUNCTION OF FREQUENCY AND DAMPING FACTOR TYPICAL OUTPUT FOR 6-9 VARIABLES

|             |                    | E2000 ( / )            | 500 00 1 7 L           | 50000101           | 500 <b>0</b> 0 1 0 1 | 50000410          |
|-------------|--------------------|------------------------|------------------------|--------------------|----------------------|-------------------|
| FPEQ        | ERROR (4)          | ERPOR(6)               | ERROR (7)              | ERROR(8)           | ERROR(9)             | ERROR(10          |
| 0.0         | 0.0                | 0.0                    | 0.0                    | 0.0<br>2.71912E-02 | 0.0<br>2.37885E-02   | 0.0<br>1.99890E-( |
| 2.00000E-02 | 3.68042E-02        | 3.27911E-02<br>0.13132 | 3.01971E-02<br>0.12088 | 0.10884            | 9.51996E-02          | 7.99561E-         |
| 4.00000E-02 | 0.14738            | 0.29585                | 0.27225                | 0.24504            | 0.21423              | 0.17982           |
| 6.00000E-02 | 0.33218            | 0.29585                | 0.48465                | 0.43597            | 0.38091              | 0.31946           |
| 8.00000E-02 | 0.59196<br>0.92775 | 0.82510                | 0.75854                | 0.68192            | 0.59528              | 0.49870           |
| 0.10000     | 1.3409             | 1.1914                 | 1.0945                 | 0.98314            | 0.85732              | 0.71727           |
| 0.12000     |                    | 1.6268                 | 1.4934                 | 1.3400             | 1.1671               | 0.97485           |
| 0.16000     | 1.8332<br>2.4066   | 2.1328                 | 1.9559                 | 1.7531             | 1.5246               | 1.2711            |
| 0.18000     | 3.0636             | 2.7107                 | 2.4832                 | 2.2227             | 1.9298               | 1.6053            |
| 0.20000     | 3.8068             | 3.3623                 | 3.0763                 | 2.7494             | 2.3825               | 1.9771            |
| 0.22000     | 4.6397             | 4.0895                 | 3.7365                 | 3.3336             | 2.8827               | 2.3856            |
| 0.24000     | 5.5657             | 4.8946                 | 4.4651                 | 3.9761             | 3.4300               | 2.8298            |
| 0.26000     | 6.5891             | 5.7798                 | 5.2635                 | 4.6771             | 4.0242               | 3.3088            |
| 0.28000     | 7.7144             | 6.7478                 | 6.1333                 | 5.4372             | 4.6647               | 3.8210            |
| 0.30000     | 8.9469             | 7.8014                 | 7.0759                 | 6.2568             | 5.3507               | 4.3650            |
| 0.32000     | 10.292             | 8.9437                 | 8.0932                 | 7.1360             | 6.0815               | 4.9389            |
| 0.34000     | 11.757             | 10.178                 | 9.1865                 | 8.0751             | 6.8557               | 5,5405            |
| 0.36000     | 13.349             | 11.507                 | 10.358                 | 9.0739             | 7.6719               | 6.1671            |
| 0.38000     | 15.075             | 12.936                 | 11.608                 | 10.132             | 8.5281               | 6.8159            |
| 0.40000     | 16.945             | 14.467                 | 12.938                 | 11.249             | 9.4220               | 7.4834            |
| 0.42000     | 18.968             | 16.105                 | 14.351                 | 12.423             | 10.351               | 8.1655            |
| 0.44000     | 21.156             | 17.853                 | 15.846                 | 13.652             | 11.311               | 8.8578            |
| 0.46000     | 23.520             | 19.715                 | 17.423                 | 14.935             | 12.298               | 9.5549            |
| 0.48000     | 26.073             | 21.696                 | 19.083                 | 16.268             | 13.307               | 10.251            |
| 0.50000     | 28.831             | 23.797                 | 20.824                 | 17.647             | 14.332               | 10.940            |
| 0.52000     | 31.810             | 26.022                 | 22.645                 | 19.067             | 15.367               | 11.614            |
| 0.54000     | 35.026             | 28.373                 | 24.542                 | 20.521             | 16.403               | 12.265            |
| 0.56000     | 38.499             | 30.851                 | 26.510                 | 22.001             | 17.431               | 12.885            |
| 0.58000     | 42.250             | 33.456                 | 28.544                 | 23.498             | 18.441               | 13.463            |
| 0.60000     | 46.301             | 36.184                 | 30.632                 | 25.000             | 19.421               | 13.990            |
| 0.62000     | 50.676             | 39.030                 | 32.766                 | 26.493             | 20.357               | 14.455            |
| 0.64000     | 55.397             | 41.986                 | 34.929                 | 27.962             | 21.237               | 14.846            |
| 0.66000     | 60.490             | 45.040                 | 37.103                 | 29.387             | 22.044               | 15.152            |
| 0.68000     | 65.977             | 48.172                 | 39.267                 | 30.750             | 22.761               | 15.361            |
| 0.70000     | 71.878             | 51.359                 | 41.393                 | 32.025             | 23.372               | 15.462            |
| 0.72000     | 78.207             | 54.568                 | 43.451                 | 33.190             | 23.859               | 15.444            |
| 0.74000     | 84.969             | 57.759                 | 45.403                 | 34.216             | 24.205               | 15.296            |
| 0.76000     | 92.152             | 60.881                 | 47.211                 | 35.075             | 24.391               | 15.009            |
| 0.78000     | 99.723             | 63.874                 | 48.829                 | 35.741             | 24.403               | 14.576            |
| 0.80000     | 107.61             | 66.667                 | 50.210                 | 36.184             | 24.226               | 13.990            |
| 0.82000     | 115.71             | 69.179                 | 51.307                 | 36.379             | 23.848               | 13.248            |
| 0.84000     | 123.85             | 71.326                 | 52.072                 | 36.303             | 23.259               | 12.347            |
| 0.86000     | 131.78             | 73.016                 | 52.461                 | 35.938             | 22.455               | 11.289            |
| 0.88000     | 139.18             | 74.162                 | 52.436                 | 35.270             | 21.432               | 10.077            |
| 0.90000     | 145.66             | 74.688                 | 51.969                 | 34.292             | 20.194               | 8.7149            |
| 0.92000     | 150.77             | 74.529                 | 51.043                 | 33.004             | 18.747               | 7.2117            |
| 0.94000     | 154.06             | 73.645                 | 49.652                 | 31.414             | 17.100               | 5.5766            |
| 0.96000     | 155.15             | 72.025                 | 47.807                 | 29.535             | 15.267               | 3.8210            |
| 0.98000     | 153.81             | 69.684                 | 45.530                 | 27.389             | 13.265               | 1.9576            |
| 1.0000      | 150.00             | 66.667                 | 42.857                 | 25.000             | 11.111               | 0.0               |
|             |                    |                        |                        |                    |                      |                   |

Fig. 5.4 Typical print-out from OUTPUT statement for 6-9 variables.

STEADY-STATE ERROR OF AN ACCELEROWETER AS A FUNCTION OF FREQUENCY AND DAMPING FACTOR TYPICAL OUTPUT FOR 10-55 VARIABLES

| FREO          | 0.0         | 2.00000E-02  | 4.00000E-02  | 6.00000E-02  | 8.00000E-02  | 0.10000     | 0.12000  | 0.14000     | 0.16000     |
|---------------|-------------|--------------|--------------|--------------|--------------|-------------|----------|-------------|-------------|
| ERROR (1)     | 0.0         | 3.98102E-02  | 0.15944      | 0.35947      | 0.64085      | 1.0049      | 1.4535   | 1.9888      | 2.6134      |
| ERROR (2)     | 0.0         | 3.91998E-02  | 0.15703      | 0.35400      | 0.63107      | 0.98949     | 1.4310   | 1.9576      | 2.5719      |
| ERROR (3)     | 0.0         | 3.82080E-02  | 0.15302      | 0.34492      | 0.61476      | 0.96375     | 1.3934   | 1.9057      | 2.5029      |
| ERROR (4)     | 0.0         | 3.68042E-02  | 0.14738      | 0.33218      | 0.59196      | 0.92775     | 1.3409   | 1.8332      | 2.4066      |
| ERROR (5)     | 0.0         | 3.50037E-02  | 0.14015      | 0.31583      | 0.56265      | 0.88152     | 1.2735   | 1.7402      | 2.2831      |
| ERROR(6)      | 0.0         | 3.27911E-02  | 0.13132      | 0.29585      | 0.52689      | 0.82510     | 1.1914   | 1.6268      | 2.1328      |
| ERROR (7)     | 0.0         | 3.01971E-02  | 0.12088      | 0.27225      | 0.48465      | 0.75854     | 1.0945   | 1.4934      | 1.9559      |
| ERROR (8)     | 0.0         | 2.71912E-02  | 0.10884      | 0.24564      | 0.43597      | 0.68192     | 0.98314  | 1.3400      | 1.7531      |
| ERROR (9)     | 0.0         | 2.37885E-02  | 9.51996E-02  | 0.21423      | 0.38091      | 0.59528     | 0.85732  | 1.1671      | 1.5246      |
| ERROR (10)    | 0.0         | 1.99890E-02  | 7.99561E-02  | 0.17982      | 0.31946      | 0.49870     | 0.71727  | 0.97485     | 1.2711      |
| ERROR(11)     | 0.0         | 1.57776E-02  |              | 0.14185      | 0.25169      | 0.39229     | 0.56314  | 0.76364     | 0.99303     |
| ERROR (12)    | 0.0         | 1,11847E-02  |              | 0.10028      | 0.17761      | 0.27614     | 0.39516  | 0.53383     | 0.69113     |
| E RROR (13)   | 0.0         | 6.17981E-03  |              | 5.51910E-02  |              |             | 0.21350  | 0.28581     | 0.36603     |
| E RROR (14)   | 0.0         | 7.78198E-04  |              | 6.54602E-03  | .1.07422E-02 | 1.49994E-02 |          | 1.99890E-02 | 1.84326E-02 |
| E RROR (15)   | 0.0         |              |              |              | -8.19550E-02 |             | -0.18980 | -0.26311    | -0.35097    |
| ERROR (16)    | 0.0         |              | -4.49066E-02 |              | -0.18079     | -0.28378    | -0.41106 | -0.56320    | -0.74120    |
| E RROR (17)   | 0.0         |              | -7.11975E-02 |              | -0.28558     | -0.44699    | -0.64481 | -0.87968    | -1.1517     |
| E RROR (18)   | 0.0         |              | -9.91821E-02 |              | -0.39650     | -0.61919    | -0.89111 | -1.2120     | -1.5816     |
| ERROR (19)    | 0.0         | -3.21350E-02 |              | -0.28918     | -0.51329     | -0.80026    | -1.1495  | -1.5597     | -2.0300     |
| E RROR ( 20 ) | 0.0         | -3.99475E-02 | -0.15977     | -0.35873     | -0.63596     | -0.99013    | -1.4195  | -1.9223     | -2.4961     |
| FREQ          | 0.18000     | 0.20000      | 0.22000      | 0.24000      | 0.26000      | 0.28000     | 0.30000  | 0.32000     | 0.34000     |
| ERROR (1)     | 3.3306      | 4.1441       | 5.0581       | 6.0777       | 7.2084       | 8.4569      | 9.8304   | 11.337      | 12.988      |
| ERROR (2)     | 3.2770      | 4.0764       | 4.9740       | 5.9747       | 7.0837       | 8.3072      | 9.6520   | 11.126      | 12.738      |
| ERROR (3)     | 3.1879      | 3.9638       | 4.8343       | 5.8037       | 6.8768       | 8.0590      | 9.3566   | 10.776      | 12.326      |
| ERROR (4)     | 3.0636      | 3.8068       | 4.6397       | 5.5657       | 6.5891       | 7.7144      | 8.9469   | 10.292      | 11.757      |
| ERROR (5)     | 2.9043      | 3.6061       | 4.3910       | 5.2621       | 6.2226       | 7.2762      | 8.4270   | 9.6793      | 11.038      |
| ERROR (6)     | 2.7107      | 3.3623       | 4.0895       | 4.8946       | 5.7798       | 6.7478      | 7.8014   | 8.9437      | 10.178      |
| ERROR (7)     | 2.4832      | 3.0763       | 3.7365       | 4.4651       | 5.2635       | 6.1333      | 7.0759   | 8.0932      | 9.1865      |
| ERROR (8)     | 2.2227      | 2.7494       | 3.3336       | 3.9761       | 4.6771       | 5.4372      | 6.2568   | 7.1360      | 8.0751      |
| ERROR(9)      | 1.9298      | 2.3825       | 2.8827       | 3.4300       | 4.0242       | 4.6647      | 5.3507   | 6.0815      | 6.8557      |
| ERROR(10)     | 1.6053      | 1.9771       | 2.3856       | 2.8298       | 3.3088       | 3.8210      | 4.3650   | 4.9389      | 5.5405      |
| ERROR(11)     | 1.2504      | 1.5346       | 1.8445       | 2.1785       | 2.5349       | 2.9119      | 3.3071   | 3.7180      | 4.1418      |
| E RROR (12)   | 0.86581     | 1.0565       | 1.2616       | 1.4791       | 1.7070       | 1.9431      | 2.1845   | 2.4286      | 2.6720      |
| E RROR (13)   | 0.45276     | 0.54440      | 0.63914      | 0.73494      | 0.82953      | 0.92043     | 1.0049   | 1.0802      | 1.1429      |
| ERROR(14)     | 1.23138E-02 | 0.0          | -2.03094E-02 | -5.06287E-02 | -9.31854E-02 | -0.15018    | -0.22418 | -0.31799    | -0.43413    |
| E RROR (15)   | -0.45436    | -0.57500     | -0.71442     | -0.87425     | -1.0565      | -1.2630     | -1.4957  | -1.7568     | -2.0485     |
| E RROR (16)   | -0.94608    | -1.1788      | -1.4406      | -1.7326      | -2.0561      | -2.4123     | -2.8026  | -3.2282     | -3.6901     |
| E RROR (17)   | -1.4616     | -1.8096      | -2.1964      | - 2. 6222    | -3.0876      | -3.5928     | -4.1382  | -4.7239     | -5.3502     |
| ERROR (18)    | -1.9997     | -2.4657      | -2.9793      | -3.5398      | -4.1467      | -4.7991     | -5.4962  | -6.2369     | -7.0203     |
| E RROR (19)   | -2.5589     | -3.1451      | -3.7868      | -4.4822      | -5.2295      | -6.0264     | -6.8709  | -7.7606     | -8.6931     |
| E RROR (20)   | -3.1383     | -3.8462      | -4.6166      | - 5.4463     | -6.3320      | -7.2700     | -8.2569  | -9.2888     | -10.362     |

Fig. 5.5 Typical print-out from OUTPUT statement for 10-55 variables.

#### PAGE

The PAGE card provides a number of options for selecting the format and page size for OUTPUT printout. The following parameters which appear on a PAGE card can be used to provide logarithmic scaling, contoured and shaded printer-plots, merged printer-plots, reduced size pages, and a method for interfacing with x-y plotting devices.

> HEIGHT and WIDTH XYPLOT MERGE CONTOR SHADE NTAB and NPLOT GROUP LOG SYMBOL

As in the use of the LABEL statement, a PAGE card which is placed before a group of OUTPUT statements applies to them all. PAGE statements which are placed after an OUTPUT statement refer only to the statement they follow. If instructions are not specified on a PAGE statement, the standard format is always automatically used.

HEIGHT and WIDTH. These variables are used to control page height and width for both printer and x-y plotter output. If the HEIGHT variable is not specified, the standard 60 lines per page is used for printer-plot output. For x-y plotter output, the default option is either 8 in. or 8 cm depending on the local plotter system. The WIDTH variable can be used to reduce the size from the standard width of 132 characters to the minimum width of 52 characters. For x-y plotter output, the WIDTH variable refers to the width of the plot. The standard width is 10 in. or 10 cm. An example of specifying a printer-plot 120 characters wide and 50 lines high is shown below.

#### PAGE HEIGHT = 50, WIDTH = 120

XYPLOT. For computer installations where a plotting subroutine has been incorporated into the CSMP III System, the XYPLOT symbol can be used to initiate off-line x-y plotting. Because of the various makes and models of digital plotters, each computer facility needs to develop its own plotting subroutine.<sup>(1,2)</sup> When the XYPLOT symbol is listed on the PAGE card, the variables contained in the OUTPUT statement are printed by an x-y plotter rather than a line printer. The first variable listed in the OUTPUT statement is plotted on the abscissa, and all the remaining variables are plotted on the ordinate. LABEL statements are automatically transferred to the plotting routines. If the scale is not specified, automatic scaling is used. An example of the method used to specify the scale is shown by the following statements.

OUTPUT X(4.0, 12.0), Y(0.0, 25.0) PAGE XYPLOT For this example, the variable X is plotted on the abscissa with a scale ranging from 4.0 to 12.0, and the variable Y is plotted on the ordinate with the scale of 0.0 to 25.0.

If automatic scaling is desired, the following statements should be used.

# OUTPUT X, Y, Z PAGE XYPLOT

The above statements will plot X on the abscissa versus the variables Y and Z on the ordinate. Note that the OUTPUT statement used with XYPLOT allows complete flexibility in the choice of the independent variable.

The PREPARE instruction described in Chap. 3 can also be used to produce a data set for off-line plotting.

MERGE. This symbol is used to merge printer-plots from several runs to one plot for OUTPUT statements containing only one variable. As an example, consider the problem of plotting on one graph the dynamic response of a springmass-damper system for three values of damping.

#### Example 5.2

Fig. 5.6 shows a linear spring-mass-damper system with the given parameters and initial conditions. The equation of motion is given by Eq. (5.2).

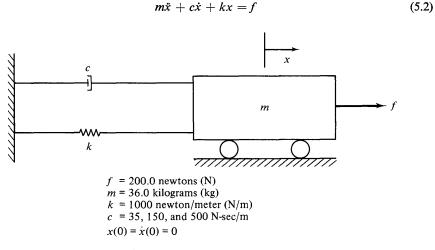


Fig. 5.6 Linear spring-mass-damper system.

The program of Fig. 5.7 uses a standard PARAMETER statement to make three runs for specific values of c. The MERGE parameter is used to combine the time-history of displacement for all three runs in one printer-plot.

Fig. 5.8 shows the resulting OUTPUT.

An alternate form of print-plot is available by specifying the CONTOR and SHADE parameters. They can effectively illustrate the transient response of distributed systems. For example, the transient and spatial temperature distribution in one-dimensional heat flow can be illustrated by using the CONTOR or SHADE parameter.

```
* CSMP III PROGRAM TO SIMULATE SPINT-MASS-DAMPER SYSTEM AND TO
* ILLUSTRATE THE USE OF THE MERGE STATEMENT
CONSTANT F = 200.0, M = 36.0, K = 1000.0
PARAMETER C = (35.0, 150.0, 500.0)
* XDC = ACCELERATION XD = VELOCITY
XDD = (F - C*XD - K*X)/M
XD = INTGRL(0.0,XDD)
X = INTGRL(0.0,XD)
OUTPUT X
PAGE MERGE
TIMER FINTIM = 1.96, CUTDEL = 0.04
END
STOP
ENDJOB
```

Fig. 5.7 Program to simulate spring-mass-damper system and to illustrate MERGE output.

CONTOR. This parameter provides a contoured form of a printer-plot. Scaling for the plot is automatic when the following statement is used.

#### PAGE CONTOR

A second form of the CONTOR parameter can be used to specify the scale. In the following statement, the scaled range of the plot is between 3.0 and 45.0.

PAGE CONTOR = (3.0, 45.0)

#### Example 5.3

The problem of simulating the transient-temperature distribution in a rod illustrates printer-plots using both CONTOR and SHADE parameters. The copper rod shown in Fig. 5.9 is insulated on the outside surface to prevent heat flow in the radial direction. The initial temperature of the rod is  $300^{\circ}$ K and the left-hand end is connected to an infinite heat source which maintains this end at a temperature of  $300^{\circ}$ K. At the start of the simulation, the right-hand end is brought in contact with a surface having a constant temperature of  $500^{\circ}$ K. As in Example 3.3, the copper rod is divided into 20 equal-size elements. Assuming a constant temperature in each element, the transient temperature of the *i*th element is given by Eq. (5.3).

$$\frac{dT(i)}{dt} = Q[T(i-1) - 2.0*T(i) + T(i+1)] \qquad i = 1, 2, \dots, 20$$
(5.3)

Symbols used in computer program

| where $Q = k/(\rho c L^2)$                            | Q  |
|---|----|
| $ ho = 	ext{density of copper,} \\ 	ext{8890 kg/m}^3$ | RO |
| c = specific heat,<br>398 joule/kg-°K                 | C  |
| k = thermal conductivity,<br>386 watt/m-°K            | K  |
| L = length of element,<br>0.02 m                      | L  |

Figure 5.10 shows the program for solving the set of 20 equations.

| PARAMETER<br>C     | RUN 1<br>35.000    | RUN 2<br>150.00 | RUN 500.00 | 3          |                                       |            |                    |                            |
|--------------------|--------------------|-----------------|------------|------------|---------------------------------------|------------|--------------------|----------------------------|
| Ū                  |                    | .0              |            | "X"= RU    | N 3                                   | 0.4000     |                    |                            |
|                    |                    | .0              |            | ***= RU    |                                       | 0.4000     |                    |                            |
|                    | 0                  | •0              |            | *+*= RUI   | N 1                                   | 0.4000     |                    |                            |
| TIME               | RUN 1              |                 |            |            |                                       |            | RUN 2              | RUN 3                      |
| 0.0                | 0.0                | X               | !          | [          |                                       | [[         | 0.0                | 0.0                        |
| 4.00000E-02        | 4.37119E-03        |                 | 1          | I          |                                       | I          | 4.19209E-03        | 3.710d7E-03                |
| 8.000005-02        | 1.70718E-02        |                 | 1          | r          |                                       | 1 1        | 1.572705-02        | 1.25050E-02                |
| 0.12000            |                    | I X *+          |            | I          |                                       | 1          | 3.30069E-02        | 2.39268E-02                |
| 0.16000            | 6.36933E-02        |                 | +          | I          |                                       |            | 5.44452F-02        | 3.64596E-02                |
| 0.20000            | 9.506455-02        |                 | * +}       |            |                                       |            | 7.85291E-02        | 4.92066E-02                |
| 0.24000            | 0.12980            | I               | X *        | +          |                                       | 1          | 0.10387            | 6.16432E-02                |
| 0.28000            | 0.16625            | 1               | X          | * *        |                                       | 1          | 0.12924<br>0.15360 | 7.34793E-02<br>8.45687E-02 |
| 0.32000            | 0.20278            | 1               | X          |            | [+<br>[ +                             | I<br>T     | 0.17612            | 9.48529E-02                |
| 0.36000            | 0.23780            | 1               | X          | 1 <b>*</b> | · · · · · · · · · · · · · · · · · · · | :<br>/T    | 0.19615            | 0.10433                    |
| 0.40000            | 0.26984            | !               |            | [ X        | *                                     | [1         | 0.21327            | 0.11301                    |
| 0.44000            | 0.29763            | 1               |            | I X        |                                       | · • · · ·  | 0.22721            | C.12095                    |
| 0.48000            | 0.32011            | -               | 1          |            | *                                     | • • •      | 0.23791            | 0.12819                    |
| 0.52000            | 0.33652<br>0.34638 | 1               | 1          | r x        | · · ·                                 |            | 0.24541            | 0.13478                    |
| 0.56000<br>0.60000 | 0.34950            | 1               | 1          |            | *                                     | · · ·      | 0.24991            | 0.14078                    |
| 0.64000            | 0.34601            | 1               |            | r îx       | *                                     | • 1        | 0.25169            | 0.14624                    |
| 0.68000            | 0.33631            | t<br>t          |            | Âx -       | *                                     | · · ·      | 0.25108            | 0.15119                    |
| 0.72000            | 0.32107            | T               | 1          | r Â        | *                                     | · • ·      | 0.24849            | 0.15569                    |
| 0.76000            | 0.30114            | T               | 1          |            | *                                     | T          | 0.24431            | 0.15978                    |
| 0.80000            | 0.27759            | 1               |            | x          | ++                                    |            | 0.23897            | 0.16349                    |
| 0.84000            | 0.25156            | Ť               |            | r X        | * +                                   | I I        | 0.23286            | 0.16686                    |
| 0.88000            |                    | İ               | 1          | -          | *                                     | t T        | 0.22635            | 0.16992                    |
| 0.92000            |                    | Ť               |            | t X +      | *                                     | t T        | 0.21976            | 0.17270                    |
| 0.96000            | 0.17088            | I               | 1          |            | [ + ]                                 | 1          | 0.21338            | 0.17522                    |
| 1.0000             | 0.14702            | t               | 1          |            | [*                                    | T I        | 0.20743            | 0.17751                    |
| 1.0400             | 0.12638            | T               | 1          | r + x *    | •                                     | <b>T</b> 1 | 0.20209            | 0.17959                    |
| 1.0800             | 0.10972            | I               | 1          | [+ X *]    | 1                                     | I          | 0.19749            | 0.18147                    |
| 1.1200             | 9.76132E-02        | T               | +1         | C X *1     | 1                                     | I I        | 0.19369            | 0.18318                    |
| 1.1600             | 9.04175E-02        | t               | + 1        | X* 1       | 1 1                                   | I I        | 0.19074            | 0.18474                    |
| 1.2000             | 8.82555E-02        | I               | +1         | [X*-]      | [                                     | 1t         | 0.18861            | 0.18615                    |
| 1.2400             | 9.10290E-02        | I               | + 1        |            |                                       | I I        | 0.18728            | 0.18742                    |
| 1.2800             | 9.84293E-02        | I               | +1         |            |                                       | I I        | 0.18667            | 0.18859                    |
| 1.3200             | 0.10996            | I               | 1          |            |                                       | I I        | 0.18670            | 0.18964                    |
| 1.3600             | 0.12496            | I               | 1          |            |                                       | I I        | 0.18726            | 0.19060                    |
| 1.4000             |                    | I ·             | 1          | I + X      |                                       | I T        | 0.18826            | 0.19147                    |
| 1.4400             |                    | I               | 1          | I + X      |                                       | Í          | 0.18959            | 0.19225                    |
| I.4800             | 0.18255            | I               | 1          | +*X        |                                       | I          | 0.19113            | 0.19297                    |
| 1.5200             | 0.20293            | I               |            | x1         |                                       | 1          | 0.19280            | C.19362<br>0.19421         |
| 1.5600             | 0.22241            | I               | 1          | X          |                                       | 1          | 0.19451<br>0.19618 | 0.19474                    |
| 1.6000             | 0.24017            | I               |            | [X]        |                                       |            | 0.19775            | 0.19523                    |
| 1.6400             | 0.25551            | 1               | 1          | X .        |                                       |            | 0.19917            | 0.19567                    |
| 1.6800             |                    | t               | 1          |            |                                       | •          | 0.20040            | 0.19607                    |
| 1.7200             |                    | I               |            | [ X1       |                                       | I I I      | 0.20143            | 0.19643                    |
| 1.7600             | 0.28203            | 1               | 1          | L X*       |                                       | 1          | 0.20224            | 0.19676                    |
| 1.8000             |                    | I               | 1          | X X        |                                       | 1          | 0.20284            | 0.19706                    |
| 1.8400             |                    | I<br>T          | 1          |            |                                       | 1          | 0.20323            | 0.19733                    |
| 1.8800             |                    | 1<br>Y          | 1          |            | (* +                                  | I I        | 0.20343            | 0.19758                    |
| 1.9200             |                    | 7<br>T          | 1          |            | (* *                                  | I I I      | 0.20346            | 0.19780                    |
| 1.9600             | 0.25567            | ĩ               | 1          | · ,        | •                                     |            |                    |                            |

Fig. 5.8 MERGE output from program of Fig. 5.7.

255

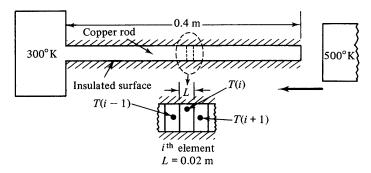


Fig. 5.9 Insulated copper rod.

Note in the CONTOR printer-plot of Fig. 5.11 there are 11 variable groups each covering a specific range of temperatures.

The following listing shows the symbols for each range:

| Symbols | Percent range   | Temperature values |
|---------|-----------------|--------------------|
| L       | less than 2.5%  | 300 to 305 °K      |
| 1       | 7.5% to 12.5%   | 315 to 325 °K      |
| 2       | 17.5% to 22.5%  | 335 to 345 °K      |
| 3       | 27.5% to 32.5%  | 355 to 365 °K      |
| 4       | 37.5% to 42.5%  | 375 to 385 °K      |
| 5       | 47.5% to 52.5%  | 395 to 405 °K      |
| 6       | 57.5% to 62.5%  | 415 to 425 °K      |
| 7       | 67.5% to 72.5%  | 435 to 445 °K      |
| 8       | 77.5% to 82.5%  | 455 to 465 °K      |
| 9       | 87.5% to 92.5%  | 475 to 485 °K      |
| н       | more than 97.5% | 495 to 500 °K      |

The percent numbers in the above listing are valid for all CONTOR plots while the temperature values apply only to Fig. 5.11.

SHADE. This parameter provides a shaded print-plot and is used exactly the same as the CONTOR parameter. Scaling is automatic when the following statement is used.

#### PAGE SHADE

The scale range of -5.0 to 4.5 is specified by the following form.

# **PAGE SHADE** = (-5.0, 4.5)

The output from the SHADE parameter of the program of Fig. 5.10 is shown in Fig. 5.12.

Note that there are ten levels of intensity. Variables having values near the high side of the scale are represented by dark plotting. Variables in the lowest 10%

```
TABEL CSMP III PRUGRAM TO SIMULATE THE TRANSIENT TEMPERATURE
LABEL DISTRIBUTION OF A COPPER ROD
INITIAL
  CONSTANT RD = 3890.0, C = 398.0, K = 386.0, L = 0.02,
                                                                         . . .
  TLEFF = 300.0, TRIGHT = 500.0
 FIXED I
  Q = K/(R()*C*L*L)
  TABLE
         TI(1-20) = 20*300.0
DYNAM IC
NOSHRT
  TO(1) = Q*(TLEFT - 2.0*T(1) + T(2))
  DO 1 I = 2,19
1 \quad TD(I) = Q*(T(I-1) - 2.0*T(I) + T(I+1))
  TD(20) = Q*(T(19) - 2.0*T(20) + TRIGHT)
SORT
  T = INTGRL(T1, TD, 20)
  OUTPUT T(1-20)
LABEL EXAMPLE OF A CONTOR PRINTER-PLOT
PAGE CONTOR
  OUTPUT T(1-20)
LABEL EXAMPLE OF A SHADE PPINTER-PLOT
PAGE SHADE
  TIMER FINTIM = 450.0, DUTUEL = 10.0
END
STOP
END JOB
```

Fig. 5.10 Program to simulate the temperature of copper rod.

of the scale range are represented by blanks. At each 10% increase in magnitude of the output variables, the printing becomes one shade darker.

The remaining five PAGE parameters (NTAB, NPLOT, GROUP, LOG, and SYMBOL) are only applicable to printer-plot output. This occurs when OUT-PUT statements contain less than six variables.

NTAB. This parameter specifies the number of variables that will be both print-plotted and tabulated. When NTAB is used on the PAGE card as shown below,

# PAGE NTAB = 2

only the first two variables in the OUTPUT statement will be both print-plotted and tabulated. The remaining variables on the OUTPUT statement will only be print-plotted.

NPLOT. This parameter specifies the number of variables that will be both print-plotted and tabulated. All remaining variables listed on the OUTPUT statement will only be tabulated.

GROUP. This parameter specifies the number of variables that are to be print-plotted with the same scale. The common scale is determined by the entire group of variables. The following statement specifies that the first three variables listed on the OUTPUT card will be print-plotted with the same scale.

# PAGE GROUP = 3

LOG. This parameter specifies that number of variables on the OUTPUT card that are to be print-plotted with a logarithmic ordinate scale.

SYMBOL. This parameter allows the user to specify the identification symbols used in printer-plots. To illustrate the use of several PAGE parameters, consider the output from the following statements used in the program of Fig. 5.2.

#### CSMP III PROGRAM TO SIMULATE THE TRANSIENT TEMPERATURE DISTRIBUTION OF A COPPER ROD EXAMPLE OF A CONTOR PRINTER-PLOT

| 11= 320.          |                       | '= 360 <b>.</b> '4' |              | •L•≖ 300.<br>•5•= 400. |                    |                      |                    |           |                |
|-------------------|-----------------------|---------------------|--------------|------------------------|--------------------|----------------------|--------------------|-----------|----------------|
| <b>'6'= 420</b> . | 171= 440. 8           | •= 460. •9•         | = 480.       | "H"= 500.              |                    |                      |                    |           |                |
|                   |                       |                     | -            | 1                      | 1 1                | 1 1                  | 1 1                | 1 1       | 1              |
| TIME              | 1 2 3                 | 4 5 6               | 7 9          | 90                     | 1 2                | 3 4                  | 56                 | 7 8       | 9              |
| TIME<br>0.0       |                       |                     |              |                        |                    |                      |                    |           |                |
| 10.000            |                       |                     |              |                        |                    |                      |                    | 111 22 3  |                |
| 20.000            |                       |                     |              |                        |                    |                      |                    |           | 55 66 7        |
| 30.000            |                       |                     |              |                        |                    | 111111               | 2222               | 333 44 55 | 66 17          |
| 40.000            |                       |                     |              |                        |                    |                      | 222 333            |           | 56 77 91       |
| 50.000            |                       |                     |              |                        | 111111             |                      |                    | 4 555 66  | 17 6           |
| 60.000            |                       |                     |              |                        | 111111111          |                      | 3333 444           | 555 666   | 77 88          |
| 70.000            |                       |                     |              | 1111                   |                    | 2222 333             |                    |           | 11 48          |
| 80.000            |                       |                     |              | 1111111                |                    |                      | 4444 55            |           |                |
| 90.000            | LLLLLLLLLLLLLLLL      |                     | 1            | 1111111111             | 222222             |                      | 4444 5555          |           |                |
| 100.00            | LLLLLLLLLLLLLLLLL     | LLL                 | 11111        | 111111                 | 2222222            | 33333 44             | 44 555             | 666 777   | 800            |
| 110.00            | LLLLLLLLLLLLLLL       |                     | 11111111     | 111 2                  | 222222 3           | 3333 4444            | 5555               | 6666 777  | 338 4          |
| 120.00            | LLELE. <b>LLL</b> LLL |                     | 111111111111 | . 222                  | 2222 3333          | 33 44444             | 5555 6             | 666 777   | 488 4          |
| 130.00            | LLLLLLLLL             | - 111               | 11111111     | 222222                 | 2 333333           | 4444                 | 5555 66            | 66 7777   | 1 96E          |
| 140.00            | LLLLLLL               | 111111.             | 11111        | 22222222               | 333333             |                      | 5555 666           |           | 19 8666        |
| 150.00            | LLLLLL                | 111111111           |              | 22222222               | 333333             |                      | 555 6666           |           | 3999 20        |
| 160.00            | LLLL                  | 11111111111         |              | 2222222                | 333333             | 44444 555            |                    |           | 188 91         |
| 170.00            | LLLL                  | 11111111111111      |              |                        |                    | 444 5555             |                    |           | 194 bb         |
| 180,00            | LLL                   | 11111111111         | 222222       |                        | 3333 444           |                      | 6666               | 7777 88   |                |
| 190.00            |                       | 1111111111          | 2222222      |                        |                    |                      | 66666              | 7777 888  |                |
| 200.00            |                       | 111111111           | 22222222     | 33333                  |                    |                      | 66666              | 7777 888  |                |
| 210.00            |                       | 11111111            | 22222222?    | 3333333                | 44444              | 55555                | 6666               | 7777 8888 |                |
| 220.00            |                       |                     | 22222222     | 333333                 | 44444              | 55555                |                    | 777 8888  |                |
| 230.00            | L 111111              |                     | 2222222      | 3333333                | 44444              |                      |                    | 777 38888 |                |
| 240.00            | 1111111               |                     | 22222        | 3333333                | 444444             |                      |                    | 77 9888   | 999            |
| 250.00            | 1111111               |                     |              | 3333333                | 444444<br>444444 5 |                      | 666 777            |           | 399            |
| 260.00            |                       |                     |              |                        |                    | 5555 666<br>5555 666 | 666 777<br>66 7777 |           | 9399'<br>9399' |
| 270.00<br>280.00  | 111111111             | 22222222            |              |                        |                    | 555 6666             |                    |           | 5595           |
| 290.00            | 111111111             | 22222222            |              |                        | 4444 555           |                      |                    |           | 9999           |
| 3,00.00           | 111111111             | 2?222222            | 33333        |                        |                    |                      |                    |           | 9399           |
| 310.00            | 111111111             | 222222222           | 333333       |                        |                    |                      | 77777              | 88888     | 99999          |
| 320.00            | 11111111              | 22222222            | 3333333      |                        |                    |                      | inn                | 88888     | 99499          |
| 330.00            | 11111111              | 2222222             | 3333333      |                        |                    |                      | 777777             | 88888     | 59555          |
| 340.00            | 11111111              | 22222222            | 3333333      | 444444                 | 555555             | 666666               | 77777              | 88898     | 99999          |
| 350.00            | 11111111              | 2222222             | 3333333      | 4444444                | 555555             | 666666               | 77777              | 888888    | 99,99          |
| 360.00            | 11111111              | 22222222            | 3333333      | 444444                 | 555555             | 666665               | 117777             | 88888     | 55555          |
| 370.00            | 11111111              | 2222222             | 3333333      | 44444                  | 555555             | 66666                | 77777              | 83888     | 4999999        |
| 380.00            | 11111111              | 22222222            | 3333333      | 444444                 | 555555             | 666666               | 77777              | 88888     | 989999         |
| 390.00            | 11111111              | 2222222             | 3333333      | 444444                 | 555555             | 666666               | 77777              | 888888    | 999599         |
| 400.00            | 1111111               | 2222222             | 3333333      | 44444                  | 555555             | 666666               | 77777              | 888888    | 999999         |
| 410.00            | 1111111               | 2222222             | 3333333      | 444444                 | 555555             | 666666               | 77777              | 88888     | 99959          |
| 420.00            | 1111111               |                     | 333333       | 44444                  | 555555             | 666666               | 77777              | 88888     | 99999          |
| 430.00            | 1111111               |                     | 333333       | 444444                 | 555555             | 665666               | 77777              | 88888     | 99959          |
| 440.00            | 11111111              |                     | 33333        | 444444                 | 555555             | 666666               | 777777             | 888888    | 99999          |
| 450.00            | 1111111               | 2222222 33          | 33333        | 44444                  | 555555             | 666666               | 77777              | 888868    | 99999          |

Fig. 5.11 Example of CONTOR printer-plot output.

Fig. 5.12 Example of SHADE printer-plot output.

| SHADED PRESENTATION FOR T(1) | ENTATIC | N FOR |   |   | 0.76               |         | GREY SCAL                               | w         | H  <br>                               | 320.  | 80<br>1 01 | LESS   |                                       |            |                    |               |                |   |  |         |
|------------------------------|---------|-------|---|---|--------------------|---------|---|-----------|---------------------------------------|---|------------|--|---------------------------------------|------------|--------------------|---------------|----------------|---|--|---------|
|                              | 26      | 34C•  |   |   | 340.<br>\$003      | 2 C     | 30U.                                    |           |                                       | .005  | 26         | 380.<br>222  |                                       |            |                    |               |                |   |  |         |
|                              | 10      | 460.  |   |   | 460.               | 20      | 480.                                    |           | · · ·                                 | 480.  |            | GREATER  |                                       |            |                    |               |                |   |  |         |
|                              |         |       |   |   |                    |         |   |           |                                       | -   | -          | -  | -                                     | -          | -                  | -             | -              |   |  | ~       |
|                              | 1       | 2     | m | 4 | ŝ                  | 9       | 7                                       | æ         | 6                                     | • 0   | 4 p-4      | • •  | • ~                                   | • •        | • ب                | ••            | • ~            | • @                                     | • 0*   | 10      |
| TIME                         |         |       |   |   |                    |         |   |           |                                       |   |            |  |                                       |            |                    |               |                |   |  |         |
| 0.0                          |         |       |   |   |                    |         |   |           |                                       |   |            |  |                                       |            |                    |               |                |   |  |         |
| 10.000                       |         |       |   |   |                    |         |   |           |                                       |   |            |  |                                       |            |                    |               |                | ***                                     | *××++++  | ×       |
| 20.000                       |         |       |   |   |                    |         |   |           |                                       |   |            |  |                                       |            | 1                  |               | #              | *****                                   |  |         |
| 30.000                       |         |       |   |   |                    |         |   |           |                                       |   |            |  |                                       | 1          |                    |               | *****          | XXX + + +                               |  | <b></b> |
| 40.000                       |         |       |   |   |                    |         |   |           |                                       |   |            |  | Ì                                     |            | *****              | ***           | • • • • * * :  | XXXXX+                                  | ************   |         |
| 50.000                       |         |       |   |   |                    |         |   |           |                                       |   |            | 1  |                                       |            | *    11    11    1 | ****          | (X++++         | XXXXXXX                                 |  |         |
| 60.000                       |         |       |   |   |                    |         |   |           |                                       |   |            |  |                                       |            | ****               | +++***        | (XXX++-        | XXXXXX                                  |  |         |
| 70.000                       |         |       |   |   |                    |         |   |           |                                       |   |            |  |                                       |            | ****               | ++++++        | CXXXXX-        | XXXXX                                   | <b>\$\$\$\$\$\$\$\$\$\$\$\$\$\$</b> \$\$\$ <b>XXXXXXXX</b> *+++++********================= |         |
| 80.000                       |         |       |   |   |                    |         |   |           |                                       | 1   |            | ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ●                  |                                       | ****       | *****              | X+++++        | (XXXXX)        | XXXXBB                                  | 3882288R   |         |
| 00.009                       |         |       |   |   |                    |         |   |           |                                       |   |            | <b>\$\$\$\$\$\$\$888883};;;;;;;;;;;;;;;;;;;;;;;;;;</b> |                                       | *****      | ++++**             | XXX+++        | <b>KXXXX</b>   | XXXEE                                   | *******  | ¥2      |
| 100.00                       |         |       |   |   |                    |         |   |           |                                       |   |            | <b>\$\$\$\$\$\$\$?????</b> **************************  | ******                                | ****       | ++++++             | XXXX++        | KXXXXX         | XX6888                                  |  |         |
| 110.00                       |         |       |   |   |                    |         |   | i         |                                       |   |            | <b>●●●●●●●●●●●●●</b> ●●●●●●●●●●●●●●●●●●●●●●●           | *****                                 |            | ++++++             | XXXXXX        | XXXXXX         | XXBBBB                                  | 866666   | -       |
| 120.00                       |         |       |   |   |                    |         |   |           |                                       |   | 1919       | *******  | *****                                 | *****      | X+++++             | XXXXXX        | (XXXXX)        | 日本市の名×                                  |  |         |
| 130.00                       |         |       |   |   |                    |         |   |           |                                       |   |            | ****   | *****                                 | ******     | X X X + + +        | <b>XXXXX</b>  | KXXXXX         |   |  |         |
| 140.00                       |         |       |   |   |                    | •       |   |           |                                       | ●●●●●●のでいたいではいたいにはいたいにはないです。 ・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・   |            | *****  | ****                                  |            | X X X + +          | ***           | XXXXX          |   |  |         |
| 150.00                       |         |       |   |   |                    | i       |   |           |                                       | 学習者学習を行わせたたちになったいというというないでは、「「「「」」」、「「」」、「」、「」、「」、「」、「」、「」」、「」」、「」  |            | ******   | ****                                  |            | ****               | *****         | ******         |   |  |         |
|                              |         |       |   |   |                    |         |   |           |                                       |   |            | *****  | ****                                  |            | ~~~~               | ****          |                |   |  |         |
| 100.001                      |         |       |   |   |                    |         | !                                       |           | <br>  <br>  <br>                      | ●20番目の●2番目的においたがどだだだだがだがくがくがくがく、キャキ・キャキ・キャーが、オンボンボンボンボンドー=============================                      | F 1        | ******   | *****                                 | ***        | *****              | ******        |                |   |  |         |
| 1 70.00                      |         |       |   |   | 1                  |         |   |           | 4    11    1    1    1    1    1    1 |   | ****       | ***  | · · · · · · · · · · · · · · · · · · · | (+++++     | X X X X X          | *****         |                | 「「「「「」」の「」」の「「」」の「「」」の「」」の「」」の「」」の「」」の「 |  |         |
| 180.00                       |         |       |   |   |                    |         |   |           |                                       |   | ****       | *****  | +++++                                 | (XX+++     | XXXXXX             | ****          |                |   |  |         |
| 190.00                       |         |       |   |   |                    |         |   |           |                                       | ●●●●●●●●●●●●●●●●●●●●●●●●●●●●●●●●●●●●  | ****       | *****  | ****                                  | (XXX++-    | XXXXXX             | ****          |                |   |  | =       |
| 200.00                       |         |       |   |   |                    |         |   |           |                                       |   | ***        | +++****  | ++++                                  | XXXX++     | XXXXX              | *****         |                |   |  |         |
| 210.00                       |         |       |   | i |                    | ******* |   |           |                                       |   | ****       | ++++***  | · • • • • • •                         | (XXXXX     | *****              | XXXXXX        |                |   |  | = :     |
| 220.00                       |         |       |   | İ |                    |         |   |           | 4000000                               |   | ****       | +++++  | (++++                                 |            | XXXXXXX            | XXXXXX        |                |   |  | -       |
| 230.00                       |         |       |   |   |                    |         |   |           |                                       |   | ****       | ++++++   | () + + + +                            |            | XXXXXX             | XXXXXX        | (666666)       |   |  |         |
| 240.00                       |         |       |   |   |                    |         |   |           | ***                                   | 書書寫字錄書書書書書書書書書書書書書書書書書書書書書書書書書書書書書書書書書書   | ****       | +++++++  | (X X + + +                            |            | XXXXXXX            |               |                | 295556                                  |  |         |
| 250.00                       |         |       |   |   |                    |         | ***                                     |           | ****                                  |   |            | +++++++  | (XX+++                                | XXXXXX     | ****               |               |                |   |  |         |
| 260.00                       |         |       | i |   |                    | 1       | ***                                     |           | ***                                   |   | •••**      | ++++++++   | (XXX++                                |            | ****               | XXXXBB        |                |   |  | = :     |
| 270.00                       |         |       | ļ |   |                    |         |   |           | ¥¥ * *                                | ****  | ****       | ++++++   | (XXXX+                                |            | XXXXXX             |               |                |   |  | -       |
| 280 •00                      |         |       | i |   |                    |         | *****                                   |           | ****                                  | ****  | *****      | ++++++++   | (XXXXX                                |            | *****              |               |                |   |  |         |
| 290.00                       |         |       |   |   |                    |         | 11.11.11.11.11.11.11.11.11.11.11.11.11. | 9 H H H H | * * * * *                             | ****  | -+++       | X+++++   | (XXXXX                                | (XXXXX)    | *****              | BBBXXX        |                |   |  |         |
| 300 .00                      |         |       |   |   |                    |         |   | (¥31111   | ****                                  | ****  | ****       | X+++++   | XXXXX                                 | (XXXXX)    | ****               | のようのと、        |                |   |  |         |
| 310.00                       |         |       |   |   |                    |         |   |           | ****                                  |   | ****       | XX+++++  | (XXXXX                                | ***XXXX    | ****               | X X 8 4 8 8   | 888888         |   |  |         |
| 320.00                       |         |       |   |   |                    |         | **                                      | ***       | ****                                  |   | ++++       | XXX++++  | XXXXX                                 |            | ****               | × # # # # # # | 1555555<br>201 | 58555<br>                               |  |         |
| 330.00                       |         |       |   |   |                    |         |   | ****      | ****                                  | →→→□□□□□□□□□□□□□□□□□□□□□□□□□□□□□□□□   |            | XXX++++  | XXXXX                                 | ****XX     | ****               | × # 888 8     |                | 528223                                  |  |         |
| 340.00                       |         |       |   |   | ****               |         | ***                                     |           | ****                                  | ■重要的考察者の自然のないでは、「」」」」」」」」」」」」」」」」」」」」」」」」」」」」」」」」」」」」   | ****       | XXXX+++-   | XXXXX                                 | ÷×××××     | ****               | Xasta         | 882288         |   |  |         |
| 350.00                       |         |       |   |   |                    | ***     |   | ****      | ***                                   |   | ++++       | XXXX+++-   | (XXXXXX                               | #X X X X X | *****              | 경영운동원은        | 888888         |   |  |         |
| 360.00                       |         |       |   |   |                    |         |   | ****      | ****                                  | ▋▋▋▋゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚   |            | XXXXX++-   | <b>XXXXX</b>                          | ****       | XXXXXX             |               | 898868         |   |  |         |
| 370.00                       |         | t     |   |   |                    |         | ***                                     | ****      | ****                                  |   | ****       | XXXXX++-   | XXXXX                                 | (*****)    | XXXXXX             |               |                |   |  |         |
| 380.00                       |         | 1     |   |   |                    |         | ****                                    | ****      | ****                                  |   | +++++      | ******   | (XXXXX                                | ****       | XXXXX              |               |                |   | 0004000  | =       |
| 00.095                       |         | '     |   |   | 11 H H H H H H H H |         | ****                                    | ****      | *****                                 |   | ****       | ******   | (XXXXX                                | (*****)    | *****              |               | ******         | 8 8 8 8 8 8 8                           |  |         |
| 400-00                       |         | •     |   |   |                    |         | * * * * * * * *                         | ****      | ***                                   |   | ++++       | <b>XXXXXX</b>  | <b>XXXXX</b>                          | (XXXXX)    | \$*****            |               | 888881         | 696666                                  | 9929299  | 2       |
| 410,00                       |         | '     |   |   |                    |         | ****                                    | ****      | ****                                  | <b>●書録目最終目録目録目録目録目録目録目録は、沐光光光光光光光光光光光光光光光光光光光光光光・オーチーナーナーナーナーナーナーナーナー</b>                                   | +++++      | XXXXXXX  | <b>EXXXXX</b>                         | (****      |                    | 동동동동동         | 88888          | 54555                                   | ****   | =       |
| 420.00                       |         | 1     |   |   | ****               |         | ***                                     | ****      | *****                                 | <b>⋒⋒⋑⋽⋑⋑⋧⋨⋸⋳⋳</b> ⋦⋨⋢⋧⋳⋵⋳⋳⋳⋳⋳⋳⋳⋳⋳⋳⋳⋳⋳⋳⋳⋳⋳⋳⋳⋳⋳∊∊∊∊∊∊∊∊∊∊∊∊∊∊∊   | +++++      | <b>XXXXXX</b>  | <b>EXXXXX</b>                         | (XXXXX)    | XXXX88             | 846666        | 848884         | 59555E                                  |  | =       |
| 430.00                       |         | 1     |   |   |                    |         | ***!!!                                  | ****      | *****                                 | <b>▋▋▋▋₿</b> \$                             | ×++++      | XXXXXXX  | <b>XXXXX</b>                          | *****      | XXXX88             | ***           | 용옷원송옷은         | 555559                                  | *****  |         |
| 440.00                       |         | 1     |   |   |                    |         | ***                                     | *****     | ****                                  |   | X++++      | XXXXXXX  | XXXXX                                 | ****       | 84××××             | <b>566888</b> | 5555588        | 89585                                   |  | = :     |
| 450.00                       |         | i     |   |   |                    |         | ***                                     | ****      | ****                                  | <b>쮎줼僩劕줼ᇕ瑿鞼鸐鴲膼쭒韽딇鬙┫욈읪믱쎀崰뇔嬠꾵딃뇔뢠못</b> 똤뜾똤똣똤똣汑똣ズズズズズズズズズズズ <del>イーマーマーマーマーマー</del> ××××××××××××××××××××××××××× | ×++++      | XXXXXXXX   | (XXXXXX                               | ****       | XXXXHE             | 三世代にの         |                | <b>新市市市</b>                             |  | _       |

OUTPUT ERROR(8), ERROR(9), ERROR(12), ERROR(15) PAGE NTAB = 2, GROUP = 4, SYMBOL = (A, B, C, D)

The output for the above statements is shown in Fig. 5.13.

Note that the NTAB parameter provides that only the first two variables have tabulated output. The GROUP parameter provides that all four variables are plotted with the same ordinate scale. The SYMBOL parameter specifies that the letters A, B, C, and D are used to identify the printer plots of the variables ERROR(8), ERROR(9), ERROR(12), and ERROR(15), respectively.

# CALL PRINT and CALL OUTPUT

Both the PRINT and OUTPUT instructions can be invoked at any point in the program by using the CALL statement. These output statements are normally invoked when specified conditions occur, where the IF instruction is usually used to branch to the CALL statement. An example of using the CALL OUTPUT statement is shown below.

#### NOSORT

IF(X.GT.6.0) CALL OUTPUT

Note that both the CALL PRINT and CALL OUTPUT statements must be used in nosort or procedure sections. The use of the CALL instruction assumes that the appropriate PRINT or OUTPUT statement is defined in the program. If either of the CALL instructions are invoked at a normal PRDEL or OUTDEL interval, the duplicate printing is suppressed.

As in S/360 CSMP, the FORTRAN WRITE statement in nosort or procedure sections is allowed. In some circumstances, this type output may be desirable.

# RANGE

This instruction is used to list the maximum and minimum values of selected variables and the time of occurrence. Its function in CSMP III is exactly the same as in S/360 CSMP. The only difference is that the maximum number of variables allowed in a RANGE statement is 110. An example of a valid instruction is shown below.

RANGE G, H, X1, Y1, T, COST, Q, ... L, J, R

Subscripted variables should not be used in a RANGE statement.

# **Functions**

In addition to the functions available in S/360 CSMP, CSMP III provides the user with additional function blocks. This section briefly describes some of the more important functions available *only* in CSMP III.

|             |             | 40.00<br>40.00<br>40.00 |            |     |        | *C*=ERR<br>*B*=ERR<br>*A*=ERR | DR (9) |        |                   |          | 40.00<br>40.00<br>40.00 |             |
|-------------|-------------|-------------------------|------------|-----|--------|-------------------------------|--------|--------|-------------------|----------|-------------------------|-------------|
| FREQ        | ERROR(8)    |                         |            |     |        |                               |        |        |                   |          |                         | ERROR (9)   |
| 0.0         | 0.0         | 1                       | []         | []  | [      | 11                            | )      | I      | []                |          | [I                      | 0.0         |
| 2.00000E-02 | 2.71912E-02 | I                       | I :        | I   | L      | 1 1                           |        | I.     | I 1               |          | l ī                     | 2.37885E-02 |
| 4.00000E-02 |             | I                       | I          | I   | I      | I                             | ס      | I      | 1 1               |          | i ī                     | 9.51996E-02 |
| 6.00000E-02 |             |                         |            |     | Ī      |                               |        |        | i i               |          | īī                      | 0.21423     |
| 8.00000E-02 |             | ī                       | i ·        | T   | Ī      | ī                             | D      | I      | i i               |          | i î                     | 0.38091     |
| 0.10000     | 0.68192     | I                       |            |     |        | I                             | 08     | 1      |                   |          | i                       | 0.59528     |
| 0.12000     | 0.98314     | 1                       | T I        | I   | ī      | ī                             | DB     | ī      |                   |          | i i                     | 0.85732     |
| 0.14000     |             | ī                       | I          | I   | Ť      | Ī                             | DC     | Ī      | i i               |          | i i                     |             |
| 0.16000     |             | -                       |            | ī   | ī      |                               |        |        | i i               |          | i i                     |             |
| 0.18000     |             |                         |            | ī   | ī      |                               |        |        | i i               |          | i i                     |             |
| 0.20000     | 2.7494      |                         |            |     |        | -                             | ICBA   | I      |                   |          |                         | 2.3825      |
| 0.22000     |             | ī                       | T          | i   | , i    |                               | IC B   | i i    | T I               |          | i i                     | 2.8827      |
| 0.24000     |             |                         |            |     | ī      |                               |        | ī      | i i               |          | i i                     |             |
| 0.24000     |             | -                       |            |     | -      |                               |        |        | i i               |          |                         | 4.0242      |
| 0.28000     |             | I<br>I                  |            | T   | t<br>T | I D                           |        | I      |                   |          |                         | 4.6647      |
|             |             | 1                       |            | 1   | 1      | 1 U.                          |        | 1<br>7 | L                 |          |                         |             |
| 0.30000     | 6.2568      |                         |            | 1   |        | I D                           | IC BA  | 1      |                   |          | []                      | 5.3507      |
| 0.32000     | 7.1360      | 1                       |            |     | 1      |                               |        |        |                   |          |                         | 6.0815      |
| 0.34000     |             | -                       |            | I   | •      |                               |        |        | 1 1               |          | I 1                     | 6.8557      |
| 0.36000     |             | I                       | L i        | I I |        |                               |        | BA     |                   |          | L 1                     | 7.6719      |
| 0.38000     | 10.132      | I                       | I          | 1   | 1      | I D                           | I C    | IBA    | 1 1               |          | I I                     |             |
| 0.40000     | 11.249      | I                       | []         | [   | I      | 10                            | IC     | I-BA   | []                |          | II                      | 9.4220      |
| 0.42000     | 12.423      | 1                       | I          | I   | I      | I D                           |        | IBA    | I 1               |          | I I                     |             |
| 0.44000     |             | 1                       |            |     |        |                               |        | IBA    |                   | [ ]      | • •                     | 11.311      |
| 0.46000     |             | -                       | I :        | I . | I      |                               |        | I B A  |                   | [ .      | I I                     |             |
| 0.48000     | 16.268      | I                       | I          | I   | I      | ID                            | ГС     | I B    | A 1               | [ ]      | I I                     | 13.307      |
| 0.50000     | 17.647      | I                       | [          | 1   | [      | I-D                           | IC     | IB-:   | [-A]              |          | II                      | 14.332      |
| 0.52000     | 19.067      | I                       | I          | I   |        |                               | IC.    |        | BA 1              |          | I I                     | 15.367      |
| 0.54000     | 20.521      | I                       | I.         | I : | I      | ID                            | I C    | 1 :    | IB A I            | [ ]      | I I                     | 16.403      |
| 0.56000     | 22.001      | I                       | 1          | I : | I      | D                             | гс     | I      | IB Al             |          | I I                     | 17.431      |
| 0.58000     | 23.498      | 1                       | I.         | 1   | I D    | 1                             | IC.    | I      | IB 4              | <b>\</b> | I I                     | 18.441      |
| 0.60000     | 25.000      | []                      | [          | []  | ID-    | I                             | IC     | I      | [B]               | A        | [I                      | 19.421      |
| 0.62000     | 26.493      | 1                       | <b>I</b> . | I   | t D    | I                             | L C    | I      | L B 1             | A :      | I I                     | 20.357      |
| 0.64000     | 27.962      | I                       | I          | I   | I D    | I                             | IC     | I      | I B 1             |          | I I                     | 21.237      |
| 0.66000     | 29.387      | I                       | I I        | I : | L D    | I                             | I C    | I      | I BI              | A        | i i                     | 22.044      |
| 0.68000     | 30.750      | Ī                       | r i        |     | T D    |                               |        | ī      | і <sup>—</sup> ві |          | i ī                     | 22.761      |
| 0.70000     | 32.025      | I                       |            |     | D      | I                             |        |        |                   |          |                         | 23.372      |
| 0.72000     | 33.190      | T                       |            | T I | 5      | T                             | ic     | -<br>1 | T 6               |          |                         | 23.859      |
| 0.74000     |             | Ī                       | i i        | i D |        |                               |        | ī      | i i               |          | i a i                   | 24.205      |
| 0.76000     |             |                         |            | I D |        | i c                           |        | •      |                   |          | I A I                   | 24.391      |
| 0.78000     | 35.741      | T I                     |            | I D |        | i č                           |        | i i    |                   | 8        |                         | 24.403      |
| 0.80000     | 36.184      | ·<br>·                  |            | ID  |        | I                             |        |        |                   | Bassasa  |                         | 24.226      |
| 0.82000     |             | Ī                       | r i        | 10  | Ť      | Î C                           | r      | T      | T P               |          | ÂÎ                      | 23.848      |
| 0.84000     |             | -                       |            | ID  | 1      |                               | •      | I .    |                   |          |                         |             |
| 0.84000     |             |                         |            |     |        | IC                            |        |        | L C<br>L BI       |          |                         | 22.455      |
| 0.88000     | 35.270      | •<br>1                  |            | -   |        |                               | L.     |        |                   |          |                         | 22.435      |
|             |             | L .<br>T                | ι υ.<br>Ι  | L   |        | с<br>Т                        | L<br>L | L      | . 5 J             |          |                         |             |
| 0.90000     | 34.292      | 1                       |            |     | ι      | 1                             |        | 1      |                   |          |                         | 20.194      |
| 0.92000     | 33.004      |                         |            | I   | I C    | 1                             |        |        | ГВ І              |          | IA I                    | 18.747      |
| 0.94000     |             |                         |            |     | L C    | 1                             | •      |        | IB 1              |          | A 1                     | 17.100      |
| 0.96000     |             |                         |            |     | 1 C    | 1                             | •      | I B    |                   | A        |                         | 15.267      |
| 0.98000     | 27.389      | 1                       | 2          | 1   | 10     | 1                             | 1      | I B    | 1 1               | A        | L I                     | 13.265      |
| 1.0000      | 25.000      | 10-                     | 1          | 1C. | 1      | 1                             |        | 18     | 11                | A        | II                      | 11.111      |

Fig. 5.13 Printer-plot to illustrate the use of NTAB, GROUP, and SYMBOL.

# Arbitrary Function Generators

The AFGEN and NLFGEN function generators used in S/360 CSMP are also available in CSMP III. There are two additional arbitrary function generators available for CSMP III users, FUNGEN and TWOVAR.

# FUNGEN

This arbitrary-function generator allows the user to choose the degree of interpolation. A typical statement is shown below.

Y = FUNGEN(ABC, N, X)

where Y = dependent variable (output)


ABC = function name, it is defined on a FUNCTION card

- N = degree of interpolation, may be 1, 2, 3, 4, or 5. N must be an integer constant or integer variable.
- X = independent variable (input)

When N = 1, FUNGEN is identical to AFGEN; and when N = 2, FUNGEN uses second-degree interpolation which is the same as NLFGEN.

# CALL FGLOAD

In addition to specifying x-y data in a FUNCTION statement as illustrated in Example 2.4, a CALL FGLOAD instruction using subscripted variables can be used to load the data. A typical set of statements follows.

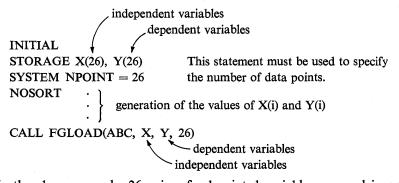

In the above example, 26 pairs of subscripted variables are read in or generated in the Initial segment. This data is then entered into the function ABC by the CALL FGLOAD instruction. The values of the independent variables X must be monitonically increasing and single-valued. A typical set of instruction for using the data entered by the CALL FGLOAD statement is shown below.

COST = AFGEN (ABC, UNITS)

FUNCTION ABC

dummy statement to instruct the CSMP translator that the name ABC is an arbitrary function This function loading capability is useful when the x-y relationship results from complex calculations. Computer time can be saved by performing the calculations only once in the Initial segment and then using an arbitrary function generator to return the values in the Dynamic segment.

# TWOVAR

This arbitrary function generator can be used for functions of the form Z = F(X, Y). An example of this statement is shown below.

Z = TWOVAR(ABC, Y, X)

where Z = dependent variable

ABC = function name

X & Y = independent variables

A graphical representation of Z as a function of X and Y is given by Fig. 5.14.

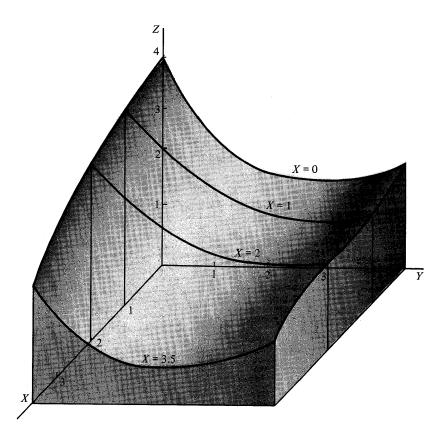


Fig. 5.14 Functional relationship between X, Y, and Z.


Note in Fig. 5.14 that the three-dimensional surface is represented by four lines each having a constant value of X. The functional relationship of Y and Z for constant values of X is the format used to specify the function Z = F(X, Y). Using the function name ABC, the following statements can be used to define the functional relationship shown in Fig. 5.14.

Value of X FUNCTION ABC,  $0.0 = (0.0, 4.0), (0.5, 3.0), (1.5, 2.0), (2.5, 1.7), \dots$ (3.5, 1.7), (4.5, 2.0) FUNCTION ABC,  $1.0 = (0.0, 3.5), (1.0, 2.8), (2.0, 1.9), (3.0, 1.5), \dots$ (4.5, 1.8) FUNCTION ABC,  $2.0 = (0.0, 3.0), (1.0, 2.3), (2.0, 1.8), (3.2, 1.6), \dots$ (3.8, 1.6), (4.5, 1.6) FUNCTION ABC,  $3.5 = (0.0, 2.2), (1.0, 1.2), (2.0, 0.7), (2.8, 0.75), \dots$ (3.5, 0.9), (4.0, 1.05), (4.5, 1.2)

Each FUNCTION statement contains the pairs of (Y, Z) values for a constant value of X. The cards must be arranged such that the values of X be monotonically increasing in each FUNCTION statement. If the TWOVAR function should have to extrapolate for values of either X or Y outside the specified range, a diagnostic message will appear and computation will proceed.

# CALL TVLOAD

Data for the TWOVAR function generator can be loaded using the subroutine TVLOAD. Its use is similar to FGLOAD, except TVLOAD must be called to load the data for each family of curves having a constant value of X. An example of loading the data contained in Fig. 5.14 for the curve X = 0 is given by the following instructions.

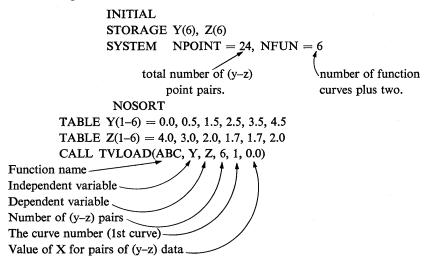

The CALL TVLOAD statement is used three more times to load the y-z data for the curves X = 1.0, X = 2.0, and X = 3.5.

An example of the second CALL TVLOAD statement is shown below.

CALL TVLOAD(ABC, Y, Z, 5, 2, 1.0)

The value of X must be monotonically increasing for the successive CALL TVLOAD instructions. The range of Y should be the same for each call instruction and must be monotonically increasing.

A typical set of instructions for using the TWOVAR arbitrary function which is loaded by the subroutine TVLOAD is shown below.

Q = TWOVAR(ABC, R, S) FUNCTION ABC FUNCTION ABC Two dummy FUNCTION statements are required.

# SLOPE

This function is used to calculate the slope of a function specified by data points in a FUNCTION statement. It is not the time derivative as given by the DERIV function. The standard form is given below.

$$\mathbf{Y} = \mathbf{SLOPE}(\mathbf{ABC}, \mathbf{N}, \mathbf{X})$$

where Y = the slope of the function ABC at X.

$$\mathbf{Y} = \frac{df(X)}{dX}$$

- ABC = function name containing the x-y data. The data may also be loaded by the CALL FGLOAD statement.
  - N = an integer constant or variable giving the degree of the polynomial that is used to fit the data. The slope is computed from a polynomial curve fit. N may be 1, 2, or 3.

Example 3.12 in Chap. 3 illustrates the use of a macro to handle a general transfer function. CSMP III has a function block for this purpose.

# TRANSF

Consider the following general block diagram written in Laplace transform notation.

$$r(s) \longrightarrow \left| \begin{array}{c} a_m s^m + a_{m-1} s^{m-1} + \dots + a_1 s + a_{m+1} \\ b_n s^n + b_{n-1} s^{n-1} + \dots + b_1 s + b_{n+1} \end{array} \right| \longrightarrow c(s)$$

The output for the above block can be obtained by using the following statement.

$$C = TRANSF(n, B, m, A, R)$$

- where n & m = integers giving the order of the denominator and numerator of the transfer function, respectively
  - B & A = subscripted variables defining the transfer function of the denominator and numerator, respectively

R = input

The following statements should be used to declare A and B as subscripted variables and to assign values to A(i) and B(i).

STORAGE A(
$$m + 1$$
), B( $n + 1$ )  
TABLE A( $1 - (m + 1)$ ) =  $a_1, a_2, a_3, \dots, a_{m+1}$   
TABLE B( $1 - (n + 1)$ ) =  $b_1, b_2, b_3, \dots, b_{n+1}$ 

Consider the example of simulating the following block diagram by the use of the TRANSF function.

$$\begin{array}{c} R(s) \\ r(t) = 12.0 \end{array} \overbrace{\begin{array}{c} \frac{s^2 + 5s^2 + 11.2}{1.1s^4 + 4s^3 + 7s^2 + 2s + 0.5} \end{array}} \xrightarrow{C(s)} \end{array}$$

The program for determining the response is shown below.

STORAGE A(3), B(5) TABLE A(1 - 3) = 5.0, 1.0, 11.2 TABLE B(1 - 5) = 2.0, 7.0, 4.0, 1.1, 0.5 C = TRANSF (4, B, 2, A, 12.0) PRINT C TIMER FINTIM = 4.0, PRDEL = 0.08 END STOP ENDJOB

#### **Control Statements**

Additional control capabilities are available in CSMP III. They include branching instructions, integration techniques, and double-precision calculations. This section describes the additional control capabilities as well as the changes in control statements.

## END CONTINUE

This statement is used in CSMP III as the CONTINUE instruction is used in S/360 CSMP. It allows a run to be interrupted so that data or control statements can be changed during the simulation. A detailed explanation of the CSMP CON-TINUE statement is contained in Chap. 3 in the section on translation control statements.

# **INPUT and ENDINPUT**

These labels are used to identify the set of cards containing data to be entered into the program by the FORTRAN READ(5, XYZ) instruction. The INPUT card must immediately follow the END statement. All data cards must be contained between INPUT and ENDINPUT. The ENDINPUT label must be punched in card columns 1–8.

```
END
INPUT

data cards

ENDINPUT

STOP

ENDJOB
```

In S/360 CSMP, the DATA and ENDDATA labels are used in place of IN-PUT and ENDINPUT. This is described in Chap. 3 in the section on data statements.

In CSMP III it is possible by the use of the CALL FINISH statement to terminate a run by branching to the Terminal segment. Also new parameters and control variables can be introduced in the simulation by employing the CALL CONTIN card.

# CALL FINISH

This statement can be used in nosort or procedure sections to branch to the Terminal segment. If there is no Terminal segment, the program will terminate when the CALL FINISH instruction is encountered. The CALL FINISH instruction is normally used in conjunction with an IF statement as shown below.

# IF(FORCE .GT. FMAX) CALL FINISH

# CALL CONTIN

This statement is similar to the CALL RERUN instruction described in Chap. 2. When the program encounters a CALL CONTIN statement, a new run is initiated starting with the value of TIME from the previous run. The CALL CONTIN card does not reset initial conditions. As with the CALL RERUN instruction, the CALL CONTIN statement should only be used in the Terminal segment and is normally used with an IF statement.

# **Integration Techniques**

There are two additional integration methods available in CSMP III; RKSDP and STIFF. As in S/360 CSMP, if the integration technique is other than the variable-step Runge-Kutta, it must be specified on a METHOD card as shown below.

RKSDP. This is the double-precision version of the variable-step Runge-Kutta method. To take advantage of the increased accuracy, the ABSERR and RELERR parameters should be used to decrease the error-bound on the integrator output. Additional information for using double-precision is contained in a following section.

STIFF. This variable-step integration method should be used for the class of problems represented by so-called "stiff" equations. These equations have solutions which have exponents which are greatly different as typified by Eq. (5.4).

$$x = Ae^{-t} + Be^{-100t} (5.4)$$

STIFF integration is used because numerical solutions using a method such as Runge-Kutta sometimes exhibit what is called partial-induced-instability when solving a stiff equation.<sup>(3)</sup>

#### Array Integration

The array or specification form of the INTGRL function is also available in CSMP III as illustrated by the following statement.

# Y = INTGRL(XO, X, 40)

The above instruction specifies an array of 40 integrators: Y = output, XO = initial condition, and X = integrand.

Since the above INTGRL statement in CSMP III automatically specifies that Y, XO, and X are subscripted variables, they must not be included in a STORAGE or DIMENSION statement. Unlike S/360 CSMP, the initial conditions can be loaded using a TABLE statement. The EQUIVALENCE card that is required in S/360 CSMP is not used in CSMP III. Examples of programs using a CSMP III array integrator are shown in Figs. 5.10 and 5.15. The program of Fig. 5.15 shows the double-precision calculations used in the program of Fig. 5.10.

There are two additional variables that can be included on the TIMER card, DELMAX and TIME.

#### DELMAX

This symbol specifies the maximum allowable integration step size for all variable-step integration methods. If not specified, the smaller of PRDEL or OUTDEL is used.

#### TIME

This variable specifies the value of TIME at the beginning of the run. If not included on the TIMER card, it is set equal to zero.

# **Double-Precision Operations**

In some simulation problems the round-off errors with single-precision arithmetic are too large for satisfactory solutions. Double-precision calculation can improve accuracy and is available in CSMP III. The following describes the various aspects of using double-precision.

*Integration.* The following card provides double precision variable-step Runge-Kutta integration.

# METHOD RKSDP

The numerical integration calculations are performed in double-precision but the output is returned in single-precision which is rounded from the doubleprecision results.

If double-precision output is required, the specification form of the INTGRL statement must be used for all integration. The following two control cards should be included.

# SYSTEM DPINTG METHOD RKSDP

Double-precision initial conditions may be set using the TABLE instruction.

*Calculations.* There are several rules that must be followed when using double-precision numbers.

1 All double-precision variables must be subscripted and all of these variables not appearing in the specification form of the INTGRL function must be declared on a REAL\*8 card.

> / REAL\*8 Q(15), P(30), S(60) Column 7 Virgule in column 1

The above instruction must appear before the first structure statement.

2 Double-precision numbers can be rounded and set equal to single-precision numbers using the following statement.

$$Y = ZZRND(X(4))$$

In the above instruction, the double-precision variable X(4) is rounded and set equal to the single-precision variable Y.

- 3 Double-precision symbols starting with the letters I, J, K, L, M, and N must be included on a FIXED card.
- 4 The double-precision symbol for TIME is ZZTIME.
- 5 The exponential form using D instead of E can be used for assigning values to double-precision constants.

*Output.* Double-precision variables cannot be used in standard CSMP III output statements. They must be equated, or rounded using the ZZRND instruction before they can appear in CSMP output statements.

```
X = XDP(1)  (equated)

Y = ZZRND(YDP(1))  (rounded)

OUTPUT X, Y
```

If double-precision output is desired, the FORTRAN WRITE statement should be used as covered in Chap. 3 in the section on data output.

The program of Fig. 5.15 illustrates double-precision integration for calculating the transient temperature distribution of the copper rod of Example 5.3. A FORTRAN WRITE instruction is used to print the double-precision result which is shown in Fig. 5.16.

Note the differences between the double-precision program of Fig. 5.15 and the single-precision program of Fig. 5.10.

```
* CSMP III PROGRAM TO SIMULATE THE TRANSIENT TEMPERATURE DISTRIBUTION
*
  OF A COPPER RUD USING DOUBLE PRECISION CALCULATIONS
INITIAL
     REAL*8 DP(7)
1
  FIXED I
  TABLE TI(1-20) = 20*3.002
  SYSTEM DPINTG
  METHOD RKSDP
  RFLERR T(1-20) = 1.0E-8
  ABSERR T(1+20) = 1.0E-8
NCSORT
     THE DOUBLE PRECISION SUBSCRIPTED VARIABLE DP(I) IS USED
  TO INPUT THE VALUES OF THE PARAMETERS OF THE COPPER ROD OF EXAMPLE. 5.3
*
  EP(1) = 8.8903
  DP(2) = 3.98D2
  DP(3) = 3.86D2
  DP(4) = 2.0D-2
  DP(5) = 3.002
  DP(6) = 5.002
 DP(7) = DP(3)/(DP(1)*DP(2)*DP(4)*DP(4))
100 FORMAT(5G22.12)
     FORMAT(/,6X, "TIME",18X, "T(4)",18X, "T(8)",17X, "T(10)",17X, "T(16)")
101
  WRITE(6,101)
DYNAM IC
NOSORT
  TO(1) = DP(7)*(UP(5) - 2.0*T(1) + T(2))
 00 1 I = 2,19
1 \quad TC(I) = DP(7) * (T(I-1) - 2 \cdot 0 * T(I) + T(I+1))
  TD(20) = DP(7)*(T(19) - 2.0*T(20) + DP(6))
SORT
  T = INTGRL(TI, TD, 20)
NOSORT
   THE FOLLOWING FORTRAN WRITE STATEMENT PROVIDES OUTPUT AT THE END OF
**
* EACH TENTH VALID INTEGRATION STEP
  IF(KEEP.NE.1)
                 GO TO 2
  CT = CT + 1.0
  IF(CT.LT.9.5)
                 GU TO 2
  WRITE(6,100)(TIME, 1(4), T(8), T(10), T(16))
  CT = 0.0
2 CONTINUE
  TIMER FINTIM = 450.0
END
STOP
ENDJOB
```

Fig. 5.15 Simulation of the temperature of copper rod using double precision.

|        | TIME                  | T(4)             | T (8)         | T(10)         | T(16)         |
|--------|-----------------------|------------------|---------------|---------------|---------------|
|        | 1.26562500000         | 300.00000000     | 300.00000000  | 300.00000000  | 300.004681049 |
|        | 3.09375)00000         | 100.000000000    | 300.00000001  | 300.000000174 | 300.194794311 |
|        | 5.90625300000         | 300.00000000     | 300.00000950  | 300.000061033 | 301.805008651 |
|        | 10.4062500000         | 300.000000205    | 300.000221716 | 300.004986118 | 308.069261558 |
|        | 17.7187500000         | 300.000089036    | 300.014688666 | 300.135408143 | 322.048061889 |
|        | 30.0937500000         | 300.010141710    | 300.336381644 | 301.497811928 | 343.563464148 |
|        | 51.4687500000         | 300.306926535    | 302.971772836 | 307.765962064 | 369.055400686 |
|        | 89.7187500000         | 303-023022391    | 312.727054459 | 323.260691628 | 394.918449206 |
|        | 148.218750000         | 310.683180099    | 329.427550268 | 344.141355339 | 415.596172422 |
|        | 1 99.968750000        | 317.385209377    | 341.543210126 | 357.834603171 | 426.321822957 |
|        | 253.968750000         | 3?2.984081578    | 351.104582398 | 368.286939071 | 433.850591096 |
|        | 303,468750000         | 326.863540646    | 357.595660186 | 375.294859587 | 438.733635794 |
|        | 355.218750000         | 329.884090965    | 362.611840784 | 380.685218191 | 442.442048677 |
|        | 406.968750000         | 332.099773735    | 366.280281305 | 384.619834664 | 445.134832194 |
|        | 450.000000000         | 333.481153192    | 368.564808895 | 387.068383299 | 446.807280527 |
| \$\$\$ | SIMULATION HALTED FOP | FINISH CONDITION | TIME 450.00   |               |               |

Fig. 5.16 Double precision output from program of Fig. 5.15.

#### REFERENCES

- 1. Continuous System Modeling Program III (CSMP III) Program Reference Manual, SH19-7001-2, Program Number 5734-XS9, IBM Corporation, Data Processing Division, White Plains, N. Y.
- 2. Continuous System Modeling Program, Program Logic Manual, LY19-7000, IBM Corporation, Data Processing Division, White Plains, N. Y.
- 3. Fox, LESLIE and D. F. MAYERS, Computing Methods for Scientists and Engineers, Clarendon Press at Oxford, 1968, p. 215.

# PROBLEMS

1 The equations which defined the concentrations of xenon 135 (X) and iodine 135 (I) in a nuclear reactor which has been suddenly shut down are given below.

$$\begin{split} \dot{X} &= -2.09 \times 10^{-5} X + 2.88 \times 10^{-5} I \\ \dot{I} &= -2.88 \times 10^{-5} I \end{split}$$

The initial concentrations are

 $X(0) = 3 \times 10^{15}$  atoms per unit volume

 $I(0) = 7 \times 10^{16}$  atoms per unit volume

Find the concentrations at t = 100,000 sec. Plot the results using a logarithmic ordinate.

Answer:

At TIME = 100,000  $X = 1.761 \times 10^{16} I = 3.929 \times 10^{15}$ 

2 In an epidemic of a contagious disease, the following Kermack-McKendrick set of equations model the number of the population who are susceptible to the disease S, the number of infectious carriers C, and the number of individuals who have recovered and are immune R.

$$\dot{S} = -A \cdot S \cdot C$$
$$\dot{C} = A \cdot S \cdot C - B \cdot C$$
$$\dot{R} = B \cdot C$$

A and B are constants which characterize the epidemic. Time is measured in days.

Using the following initial conditions for a population of 1000,

S(0) = 900C(0) = 10R(0) = 90

solve the Kermack-McKendrick equation using A = 0.001 and B = 0.072.

Include S, C, and R in a common printer-plot using the same scale for all variables.

Answer:

At TIME = 10 days, 
$$S = 27.4$$
,  $C = 631.2$ ,  $R = 341.4$ 

3 Solve the following equation using both the RKSFX and STIFF methods.

$$\ddot{y} + 201\dot{y} + 200y = 0$$
  
 $y(0) = 1.0$   
 $\dot{y}(0) = 0$ 

Compare the numerical solution with the exact solution.

$$y = \frac{200}{199}e^{-t} - \frac{1}{199}e^{-200t}$$

Answer:

The difference between the exact solution and the numerical solution using RKSFX and STIFF is less than  $10^{-4}$ . However, several program interrupts due to underflow occur when using RKSFX.

4 Use the TRANSF function to solve for the dynamic response of the system represented by the following block diagram. A unit-step input occurs at t = 0.

$$r(s) \longrightarrow \boxed{\frac{s^2 + 5s + 7}{s^6 + 8s^5 + 23s^4 + 44s^3 + 41s^2 + 14s + 4}} \longrightarrow c(s)$$

Answer:

At TIME = 
$$10.0 \ c = 2.1671$$

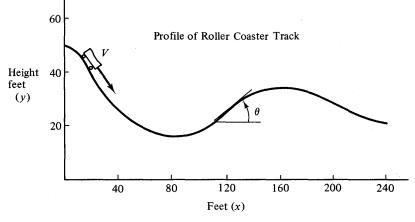


Fig. P-5.5

5 A 640 lb gravity-powered roller coaster travels on a track shown in the above profile. Aerodynamic drag equal to  $0.005v^2$  and a rolling resistance of 10 lb oppose motion. The velocity at the start of the run is 15 ft/sec. Use the SLOPE function to evaluate dy/dx in simulating the motion of the vehicle.

The equation of motion is


$$\frac{w}{g}\dot{v}=-w\sin\theta-0.005v^2-10.0$$

where 
$$\sin \theta = \frac{\frac{dy}{dx}}{\sqrt{1 + \left(\frac{dy}{dx}\right)^2}}$$
  
 $x = \int_0^t \frac{v \, dt}{\sqrt{1 + \left(\frac{dy}{dx}\right)^2}}$   
 $w = \text{weight}$   
 $g = \text{acceleration of gravity, 32.17 ft/sec^2}$ 

Answer:

At TIME = 6.0 sec: 
$$v = 35.1$$
 ft/sec and  $x = 197.0$  ft.

6 A 27 lb weight moving downward at a velocity of 200 in/sec strikes and sticks to a lead cylinder.

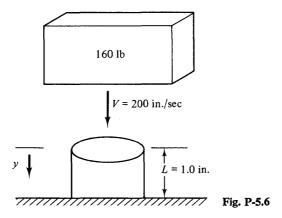

The dynamic resisting-force of the lead cylinder for large strains is approximated by the following formula.

$$F = 620 \left[ 1 + 0.004 \left( \frac{\dot{y}}{L - y} \right)^{2.02} \right] \left( \frac{y}{L - y} \right)^{0.44}$$

The equation that describes the motion of the mass is given below.

$$\frac{27}{386}\ddot{y} = 27 - F$$

Generate data for the resisting-force F in the Initial segment using the following range for y and  $\dot{y}$ .

$$0 < y < 0.25$$
 m.  
 $0 < \dot{y} < 200$  in./sec


Load the generated data by using the TVLOAD subroutine and then use the TWOVAR function to calculate F to determine the maximum deflection of the load cylinder.

Answer:

$$y_{\rm max} = 0.150$$
 in. at TIME = 0.00343 sec

7 The device below is used to control the water level in a tank. The flow characteristics of the valve are given in the figure below. The outflow from the tank is given by the following expression.

 $q_{0} = 5.05\sqrt{h}$ 

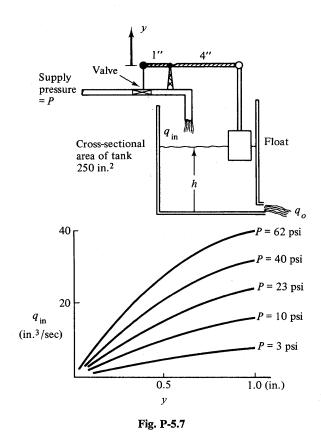

At the start of the simulation, h = 10, P = 23 psi, and y = 0.5. Use the TWOVAR function to represent the valve characteristics and solve for the dynamics of the system when P is suddenly increased to 60 psi.

$$250\,\frac{dh}{dt}=q_{in}-q_o.$$

Answer:

At TIME = 40 sec, 
$$h = 10.69$$
 in.

8 The curve below represents an odd periodic function. Using the FUNGEN function with 5th-order interpolation, find the Fourier coefficients for the first five terms of the periodic function. The odd Fourier coefficients are given by the following expression.

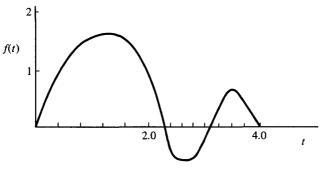


Fig. P-5.8

$$b_n = \frac{2}{p} \int_0^p f(t) \sin\left(\frac{n\pi t}{p}\right) dt$$
$$2p = \text{period} = 8.0$$

Answer:

$$b_1 = 0.84, b_2 = 0.91, b_3 = 0.32, b_4 = -0.40, b_5 = 0.27$$

**9** The road-holding ability of an automobile can generally be improved by decreasing the unsprung mass. Use the below model of one corner of an automobile to find the time average ratio of tire force to vehicle weight as the car passes over a depression in the road. Do the simulation for unsprung masses of 80 and 150 lb. Equations of motion are


$$m_1 \ddot{y}_1 = k_t (y - y_1) + k(y_2 - y_1) + c(\dot{y}_2 - \dot{y}_1) + m_1 g$$
  
$$m_2 \ddot{y}_2 = k(y_1 - y_2) + c(\dot{y}_1 - \dot{y}_2) + m_2 g$$

initial conditions:


$$y_1(0) = \frac{(m_1 + m_2)g}{k_t} \quad y_2(0) = y_1(0) + \frac{m_2g}{k}$$
$$\dot{y}_1(0) = \dot{y}_2(0) = 0$$
$$\frac{\text{Tire force}}{\text{weight}} = \frac{k_t(y - y_1)}{(m_1 + m_2)g}$$

Answer:

Unsprung mass 80 lb: average force/weight = 0.6937Unsprung mass 150 lb: average force/weight = 0.6733

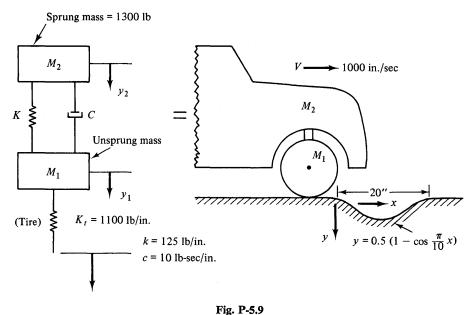

- 10 A control system is represented by the following block diagram. For the following input, use the TRANSF and REALPL functions to find the time response of the output.

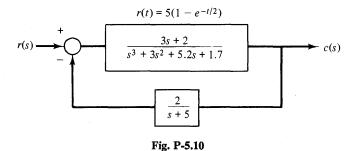

Answer:

At TIME = 6.0, c = 3.5697

11 Motorcycle helmets are tested by dropping a helmet containing a headform on a rigid surface. The following data for two different helmets was taken at the Southwest Research Institute and is the acceleration measured in the headform during a Z-90 test. The helmet has a velocity at impact of 19.6 ft/sec. Using the OVERLAY statement, find the rebound velocities of both helmets using one program.

The following expression can be used to estimate the injury to a human head from an impact. A value greater than 1000 is usually fatal.

$$\mathrm{HIC} = \int_0^t a^{2.5} \, dt$$

*a* is the acceleration in g's.

Ch. 5

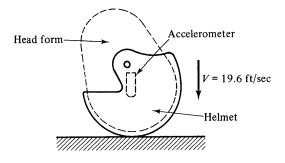



Fig. P-5.11

Calculate the value of HIC for both helmets.

| Test Results of | of a Good Helmet | Test Results o | f a Poor Helmet  |
|-----------------|------------------|----------------|------------------|
| Time            | Acceleration     | Time           | Acceleration     |
| (sec)           | (g's)            | (sec)          | (g's)            |
| 0               | 0                | 0              | 0                |
| 0.001           | 24               | 0.001          | 100              |
| 0.002           | 45               | 0.0015         | 180              |
| 0.003           | 84               | 0.002          | 235              |
| 0.004           | 125              | 0.0025         | 220              |
| 0.005           | 144              | 0.003          | 258              |
| 0.006           | 135              | 0.0035         | 246              |
| 0.007           | 120              | 0.004          | 205              |
| 0.008           | 71               | 0.0045         | 175              |
| 0.009           | 52               | 0.005          | 110              |
| 0.01            | 20               | 0.0055         | 75               |
| 0.011           | 12               | 0.006          | 48               |
| 0.012           | 0                | 0.0065         | 14               |
|                 |                  | 0.007          | 0                |
| Answer:         |                  |                |                  |
| Good helmet:    | rebound velocity | Poor helmet:   | rebound velocity |
| = 7.34  ft/se   | c                | = 10.85  ft/s  | sec              |
| HIC = 935.7     |                  | HIC = 2653     |                  |

12 Each of the three tanks initially contain 500 gal of brine with 50 lb, 100 lb, and 150 lb of salt dissolved in tanks 1, 2, and 3, respectively. The flow between tanks is shown in Fig. P-5.12. By assuming the brine is kept well stirred, the following equations describe the amount of salt in each tank.

$$\frac{dw_1}{dt} = \frac{5w_2}{500 - t} - \frac{3w_1}{500 + 2t}$$
$$\frac{dw_2}{dt} = \frac{3w_1}{500 + 2t} + \frac{4w_3}{500 - t} - \frac{8w_2}{500 - t}$$
$$\frac{dw_3}{dt} = \frac{3w_2}{500 - t} - \frac{4w_3}{500 - t}$$

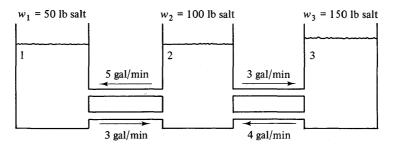



Find the amount of salt in each tank after 4 hours. Use the GROUP parameter to plot the time-history of  $w_1$ ,  $w_2$ , and  $w_3$  with the same scale.

Answer:


 $w_1 = 186.77$  lb of salt  $w_2 = 54.927$  lb of salt  $w_3 = 58.308$  lb of salt

13 When a perfectly flexible and homogeneous cable is hung between two support points, the equation of its shape is called the *catenary*. The exact shape is given by the solution to the following differential equation.

$$\frac{d^2 y}{dx^2} = \frac{w}{h} \sqrt{1 + \left(\frac{dy}{dx}\right)^2}$$

where: w = 0.17 lb/ft, weight per unit length of cable

h = tension in cable at the lowest point

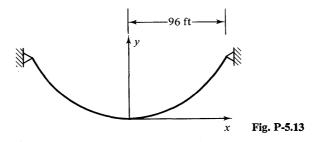

Find the shape of the free hanging cable for the following values of h.

h = 10, 40, and 300 lb

Use the MERGE parameter to plot all three curves on one page. *Answer:* 

At: 
$$x = 96$$
 ft  
 $h = 10$  lb,  $y = 97.341$  ft  
 $h = 40$  lb,  $y = 19.857$  ft  
 $h = 300$  lb,  $y = 2.6118$  ft

14 An aluminum circular fin on a 0.5 ft. diameter pipe is used to transfer energy from the surface of the pipe to the ambient air. One fin can transfer 3200 Btu/hour. For a thin circular fin having only a radial temperature distribution, the following equation gives the steady-state temperature for natural convection.

$$\frac{d^2T}{dr^2} + \frac{1}{r}\frac{dT}{dr} - \frac{2h}{kL}(T-T_a) = 0$$

where: T = temperature of fin

 $T_a$  = ambient temperature = 80°F

 $h = 0.19(T - T_a)^{0.33}$  Btu/hr-ft<sup>2</sup>-°F

 $k = 118 \text{ Btu/hr-ft-}^{\circ}\text{F}$ 

L =thickness of fin = 0.0085 ft

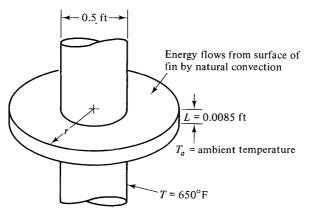


Fig. P-5.14

Find the temperature at a radius of 0.75 ft. Note that the above equation requires the integration to start at r = 0.25 ft. An initial condition for the temperature gradient on the inside surface of the fin can be calculated from the following relationship.

$$q = 3200 = -kA \left. \frac{dT}{dr} \right|_{r=0.25}$$
$$A = \operatorname{area} = 0.5\pi L$$

Answer:

$$T(r = 0.75) = 171.55^{\circ}$$
F

15 Solve problem 14 using the following boundary conditions

$$T(r = 0.25) = 650^{\circ} F$$
  
$$\frac{dT}{dr}(r = 0.75) = -\frac{h}{k} [T(r = 0.75) - T_a]$$

In the second boundary condition, the heat flow from the outer edge of the fin is set equal to the energy removed from the same surface by convection. Since the

# Ch. 5

Answer:

$$\frac{dT(r = 0.25)}{dr} = -1146^{\circ} \text{F/IN}$$
$$T(r = 0.75) = 451.7^{\circ} \text{F}$$

APPENDIX

# *LISTING AND DEFINITION OF ALL CSMP FUNCTIONS*

The information in this section gives a summary of the functional blocks in both CSMP/360 and CSMP III. The first portion contains those functions which are identical for both versions of CSMP. The second portion gives those functions which have been added to the newer version, CSMP III.

Material in this Appendix can be a valuable asset to the user in that a brief description of the function is given along with the example numbers in the text which use the function.

| <b>Program Statement</b>  | Mathematical/Transformation Equivalent  |
|---|---|
| INTEGRATION<br>$Y = INTGRL(IC, X)$ $IC = y(t) _{t=t_0}$ $X = \text{the input variable or}$ $function$ (a) For CSMP/360, $t_0 = 0$ .   | $y = \int_{t_0}^{t} x  dt + y(t_0)$<br>$t_0 = \text{starting time}$<br>t = independent variable<br>Equivalent Laplace transform |
| (b) For CSMP III, $t_0$ is specified on<br>the TIMER card by TIME = $t_0$ .<br>If not specified, $t_0 = 0$ .<br>These comments apply for all blocks<br>that contain a $t_0$ . | $\frac{Y(s)}{X(s)} = \frac{1}{s}$   |

 Table A-1

 Functions Involving Integration And Differentiation

This is probably one of the most frequently used functional blocks of CSMP. If the user does not specify a method of integration, then RKS variable step will automatically be used in the program. However, six other methods of integration are available and any one of these can be selected by listing the particular integration form on a METHOD card (see pages 81 to 93). Users may define their own integration through the use of a FORTRAN subroutine named CENTRL (pages 93 to 95).

A vector or array integration form is also available by using the specification form

$$Y = INTGRL(IC, X, N)$$

where Y = an output array

IC = array of initial conditions

X = array of inputs or integrands

N = the number of elements in the input array

Before using the specification form of integration, the reader should review the material starting on page 103. Application of this form of integration for S/360 CSMP is given in Example 3.3, page 104 and Example 4.2, page 200. Examples of the use of array integration in CSMP III are shown in Chapter 5.

Application of the ordinary integration form, that is Y = INTGRL(IC,X), can be found in the following examples: Ex. 2.1, p. 14; Ex. 2.2, p. 18; Ex. 2.3, p. 25; Ex. 2.4, p. 30; Ex. 2.5, p. 35; Ex. 2.6, p. 39; Ex. 2.7, p. 42; Ex. 2.8, p. 52; Ex. 2.9, p. 58; Ex. 2.10, p. 60; Ex. 3.1, p. 90; Ex. 3.6, p. 114; Ex. 3.8, p. 126; Ex. 3.9, p. 134; Ex. 3.12, p. 151; Ex. 3.13, p. 158; Ex. 3.14, p. 167; Ex. 3.16, p. 177; Ex. 4.3, p. 210; Ex. 4.4, p. 211; Ex. 4.5, p. 215; Ex. 4.6, p. 221; Ex. 5.2, p. 253; Ex. 5.3, p. 254.

| <b>Program Statement</b>             | Mathematical/Transformation Equivalent |
|--------------------------------------|--|
| DIFFERENTIATION                      |  |
| Y = DERIV(IC, X)                     | $y(t) = \frac{dx(t)}{dt}$              |
| $IC = \frac{dx(t)}{dt}\Big _{t=t_0}$ | u.                                     |
| $dt = t_0$                           | Equivalent Laplace transform           |
| X = input variable                   | $\frac{Y(s)}{X(s)} = s$                |

#### Comments

Generally, this function is not used to any considerable extent in simulation. DERIV is not a MEMORY or HISTORY function and therefore cannot be used alone in a closed loop except when the loop is broken by an implicit function. An example using the DERIV function is given on p. 48.

| <b>Program</b> Statement  | Mathematical/Transformation Equivalent   |
|---|--|
| REAL POLE OF FIRST-ORDER LAG<br>$Y = REALPL(IC, P, X)$ $IC = y(t) _{t=t_0}$ $X = the forcing function$ or input | $p\frac{dy}{dt} + y = x$<br>Equivalent Laplace transform<br>$\frac{Y(s)}{X(s)} = \frac{1}{ps+1}$ |

This function is often used in control system simulation. The terms real pole and first-order lag are frequently used in control systems and engineering; hence these terms are used as descriptive titles. However, the equation

$$p\frac{dy}{dt} + y = x$$

is simply a first-order differential equation. When the transfer function is expressed as

$$\frac{Y(s)}{X(s)} = \frac{A}{s+B}$$

the form must be changed to

$$\frac{Y(s)}{X(s)} = \frac{\frac{A}{B}}{1 + \frac{s}{B}}$$

See pp. 21 to 22 for further comments.

Applications using the REALPL function are given in Ex. 2.2, p. 18; Ex. 2.6, p. 39; Ex. 2.8, p. 52; Ex. 4.2, p. 200; Ex. 4.3, p. 210; Ex. 4.4, p. 211; Ex. 4.6, p. 221.

|          | Program Statement                           | Mathematical/Transformation Equivalent          |
|----------|---|---|
| LEAD-LAC | }   |   |
| Y =      | LEDLAG(P1, P2, X)                           | $p_2 \frac{dy}{dt} + y = p_1 \frac{dx}{dt} + x$ |
| Note:    | P1 and P2 are parameters; initial           | Equivalent Laplace transform                    |
| 5        | conditions are not used with this function. | $\frac{Y(s)}{X(s)} = \frac{p_1s+1}{p_2s+1}$     |

**Comments** 

This is another function often used in control system simulation. The term lead-lag is descriptive of compensation in control systems. A lead compensator is of the form given above when  $p_1 > p_2$ . A lag compensator is of the same form

but with  $p_2 > p_1$ . Further comments and application of this function are given in Example 2.6, p. 39.

| <b>P</b> rogram Statement  | Mathematical/Transformation Equivalent  |
|--|---|
| COMPLEX POLES<br>$Y = CMPXPL(IC1, IC2, P1, P2, X)$ $IC1 = y(t) _{t=t_0}$ $IC2 = \dot{y}(t) _{t=t_0}$ | $\frac{d^2y}{dt^2} + 2P_1P_2\frac{dy}{dt} + P_2^2y = x$<br>Equivalent Laplace transform<br>$\frac{Y(s)}{X(s)} = \frac{1}{s^2 + 2P_1P_2s + P_2^2}$ |

#### **Comments**

This function is particularly designed for second-order polynomials with complex roots. If the roots are real, one may employ REALPL twice. Nevertheless, CMPXPL will also handle the case when roots of  $s^2 + 2P_1P_2s + P_2^2$  are real. Ordinarily, one encounters this polynomial in the form  $s^2 + 2\zeta\omega_n s + \omega_n^2$ . Obviously,  $P_2$  is equivalent to  $\omega_n$  and  $P_1$  equivalent to  $\zeta$ . If one desires to simulate the transfer function

$$\frac{Y(s)}{X(s)} = \frac{1}{s^2 + 1.6s + 4}$$

then  $P_2 = 2$  and  $P_1 = 0.4$ .

Application of this function is given in Example 2.7, p. 42.

| Program Statement   | Mathematical/Transformation Equivalent   |
|---|--|
| MODE-CONTROLLED INTEGRATOR<br>$Y = MODINT(IC, X1, X2, X3)$ $IC = y(t) _{t=t_0}$ | $y(t) = \int_{t_0}^{t} x_3 dt + \text{IC}; \text{ for } x_1 > 0, \text{ any } x_2$ $y(t) = \text{IC} \qquad ; \text{ for } x_1 \le 0, x_2 > 0$ $y(t) = \text{last output} \qquad ; \text{ for } x_1 \le 0, x_2 \le 0$ $\text{from integrator}$ |

#### Comments

This function allows the user to start an integration, integrate for prescribed conditions, then hold the value of y, restart the integration for other prescribed conditions. For some simulations, the value of y may have large step-changes. If this occurs while using a variable-integration step-size the condition on DELMIN may not be satisfied and the simulation will halt. The user can correct the situation by changing to a fixed-step integration with appropriate step-size.

See Example 3.13, p. 158, for application of the mode-controlled integrator.


#### Table A-2

## Special CSMP Functions

| <b>Program</b> Statement | Mathematical/Transformation Equivalent                      |
|--------------------------|---|
| ZERO-ORDER HOLD          |   |
| Y = ZHOLD(X1, X2)        | $y(t) = x_2$ ; for $x_1 > 0$                                |
| X1 = a trigger signal    | $y(t) = \text{last value of } x_2; \text{ for } x_1 \leq 0$ |
| X2 = input to the hold   | $y(t) _{t=t_0}=0$   |
|                          | Equivalent Laplace transform                                |
|                          | $\frac{Y(s)}{X(s)} = \frac{1 - e^{-sT}}{s}$                 |
|                          | T = the sampling interval                                   |

#### **Comments**

This function has important application in the design and simulation of discrete data systems. The physical property of the zero-order hold is illustrated in the following sketches.

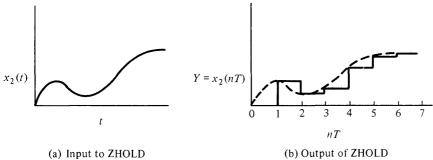

A convenient signal for X1 is the IMPULS function. Thus, to sample and hold a sine function of a frequency of 30 radians/sec, every 1 sec, one may write


$$X2 = SIN(30.0*TIME)$$
  
X1 = IMPULS(0.0, 1.0)  
Y = ZHOLD(X1, X2)

It is important to recognize that if a variable-step integration method is used in a problem, integration will generally not occur when IMPULS is applied. This means that sampling will not occur at nT but rather at those values of TIME for which an integration is performed. This problem can be overcome by using a fixed-step integration in which T is a multiple of DELT.

Application of the zero-order hold can be found in Ex. 4.3, p. 210; Ex. 4.4, p. 211; Ex. 4.5, p. 215; Ex. 4.6, p. 221.

| Program Statement                         | Mathematical/Transformation Equivalent |
|---|--|
| dead time (DELAY)                         |  |
| Y = DELAY(N, P, X)                        | $y = x(t-p);$ for $t \ge p$            |
| P = the ideal delay time                  | y = 0; for $t < p$                     |
| N = number of points of X                 | Equivalent Laplace transform           |
| sampled during P.<br>N must be an integer | $\frac{Y(s)}{X(s)} = e^{-ps}$          |
| constant $\geq$ 3 but $\leq$ 16,378       |  |

The role of this function is shown in the following sketches. As a rule of thumb one can select N as a number in the range of expected integrations during P. The program uses P/N as the sample interval of X when  $P/N \ge DELT$ , otherwise DELT is used.

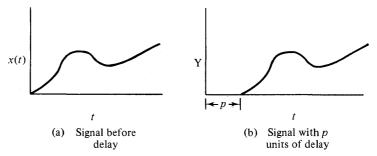

Dead time is often present in process control systems and hence DELAY is a convenient function to use when simulating these systems. Another important use of the DELAY function stems from the simulation of discrete systems represented by z-transforms. Thus, if

$$D(z) = \frac{M(z)}{N(z)} = \frac{A + Bz^{-1}}{1 + Cz^{-1}}$$

the Delay function can be used for  $z^{-1}$  to simulate D(z) much in the same way that INTGRL is used to simulate  $s^{-1}$ .

Application of the Delay function is given in Ex. 2.8, p. 52; and Ex. 4.4, p. 211.

| Problem Statement   | Mathematical/Transformation Equivalent |
|---|--|
| IMPLICIT FUNCTION   |  |
| Y = IMPL(IG, ERROR, FOFY)   | y=f(y)                                 |
| IG = an initial guess for Y   | $ f(y) - y  \le \operatorname{error}$  |
| $ERROR = an \ acceptable \ error \ in finding \ a \ solution \ for \ Y$ |  |
| FOFY = the function of y, f(y)  |  |

The implicit function is used to solve a problem of the form

$$F(y) = 0$$

This function can be expressed (usually in several different forms) as

١

$$y = f(y)$$
  
where  $F(y) = f(y) - y = 0$ 

The expression for f(y) must be the last statement used in the implicit loop.

Further comments on the implicit function and how it can be used to break algebraic loops are given on pp. 176 to 178. For application see Ex. 3.15, p. 176; and Ex. 3.16, p. 177.

# Table A-3

#### Signal Sources

Program StatementFunction DefinitionRAMP FUNCTIONy = t - T; for  $t \ge T$ Y = RAMP(T)y = 0; for t < TT = starting time of ramp $Y = \frac{45^{\circ}}{T}$ 

#### **Comments**


This function is often used for special test-signal purposes. Note that the slope of the ramp is 1. This can be changed to any value by

$$Y = Q * RAMP(T)$$

Also, combinations of the ramp can be used to generate other special signals. For example,

$$X1 = RAMP(0.0)$$
  
 $X2 = RAMP(2.0)$   
 $X3 = X1 - X2$ 

produces the signal shown below.

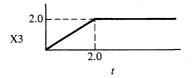

App. I

| <b>Program Statement</b>      | Function Definition   |
|-------------------------------|---|
| STEP FUNCTION                 | y = 0; for $t < T$  |
| Y = STEP(T)                   | $y = 1$ ; for $t \ge T$   |
| T = starting time of the step | $y = 0; \text{ for } t < T$ $y = 1; \text{ for } t \ge T$ $y = 1; \text{ for } t \ge T$ $y = 1$ |


The step input is one of the most frequently used signals for investigating the transient response of a system. The amplitude of the step can be changed to values other than one by using the statement,

Y = A\*STEP(T)

where A is the desired amplitude. Single-shot pulses can easily be generated by multiple use of the step function. For example, the statements

$$X1 = STEP(0.5)$$
  
 $X2 = STEP(1.5)$   
 $X3 = X1 - X2$ 

produces the pulse sketched below. Application of the step function can be found in the following examples. Ex. 2.2, p. 18; Ex. 2.6, p. 39; Ex. 2.7, p. 42; Ex. 2.8, p. 52; Ex. 3.12, p. 151; Ex. 3.13, p. 158; Ex. 3.15, p. 176; Ex. 3.16, p. 177; Ex. 4.2, p. 200; Ex. 4.3, p. 210; Ex. 4.4, p. 211; Ex. 4.5, p. 215; Ex. 4.6, p. 221.

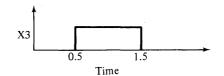

| <b>P</b> rogram Statement          | Function Definition   |
|------------------------------------|---|
| PULSE FUNCTION                     | y = 1;  for time duration  P  following   |
| Y = PULSE(P, TRIG)                 | the application of TRIG.  |
| P = pulse width                    | y = 0;  for all other time  |
| TRIG = trigger starting each pulse | $y = \frac{1.0}{P} + \frac{P}{TRIG} +$ |

This function offers a convenient way for generating a train of pulses. Periodic pulses can be generated by using a periodic trigger. The spacing between pulses will be random provided the trigger is random (with P less than the duration between trigger applications). For an illustration of generating a pulse train see the comment notes of the Impulse function.

The pulse function is used in the following examples. Ex. 2.7, p. 42; and Ex. 3.13, p. 158.

| <b>P</b> rogram Statement   | Function Definition                                   |
|---|---|
| IMPULSE FUNCTION  | y = 0; for $t < T$                                    |
| Y = IMPULS(T, P)  | y = 1; for $t = T + NP$                               |
| T = time when first impulse is<br>applied<br>P = spacing between impulses | $y = 0$ ; for $t \neq T + NP$<br>$N = 0, 1, 2, \dots$ |
|   | $Y \xrightarrow{P \xrightarrow{T}} t$                 |


#### Comments

This function has an amplitude of 1 at discrete points of time. In most cases a unit impulse is considered to have infinite amplitude and an area of 1 (Dirac function). The user should note this difference.

The IMPULS is particularly useful as a trigger function. As an example, a train of unit pulses can be generated as follows.

$$X1 = IMPULS(0.0, 1.0)$$
  
 $X2 = PULSE(0.2, X1)$ 

The signal X2 generated by these two statements is shown below. The impulse function is also useful in simulating the ideal sampler in discrete data systems (see Example 4.3, p. 210). The use of the impulse function is also given in Ex. 2.7, p. 42; Ex. 3.13, p. 158; Ex. 4.4, p. 211; Ex. 4.5, p. 215; Ex. 4.6, p. 221.

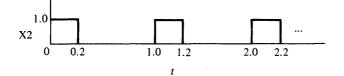

| Program Statement   | Function Definition   |
|---|---|
| <ul> <li>VARIABLE SINE FUNCTION</li> <li>Y = SINE(DELAY, OMEGA, PHASE)</li> <li>DELAY = delay time for starting the function</li> <li>OMEGA = frequency of the function in radians/unit time</li> <li>PHASE = phase shift in radians</li> </ul> | $y = \sin \left( \operatorname{omega}(t - \operatorname{delay}) + \operatorname{phase} \right)$<br>; for $t \ge \operatorname{delay}$<br>$y = 0$ ; for $t < \operatorname{delay}$<br>$y = 0$ ; for $t < \operatorname{delay}$<br>y = 0<br>DELAY |

This function offers the user a convenient way of displacing a sine function. If the user is not concerned about either phase shift or delay, the ordinary FOR-TRAN SIN can be used as in the following statement

#### Y = SIN(OMEGA\*TIME)


where OMEGA is a specified value of radian frequency and TIME is the CSMP variable for time. See Example 3.10, p. 145 for an illustration of the CSMP SINE function.

| <b>P</b> roblem Statement  | Function Definition                       |
|--|---|
| UNIFORM DISTRIBUTION<br>RANDOM NUMBER GENERATOR<br>Y = RNDGEN(N) | Uniform distribution of Y                 |
| N = any odd integer which is usedas a "seed" value               | P(y)                                      |
|  | у   |
|  | P(y) is the probability density function. |

#### **Comments**

This function generates numbers between 0 and 1 with a uniform distribution. For a given seed value, the random sequence will be unchanged from one computer run to the next. Details for using RNDGEN are given on p. 119.

Application of this function is given in Ex. 3.13, p. 158; Ex. 4.7, p. 224.

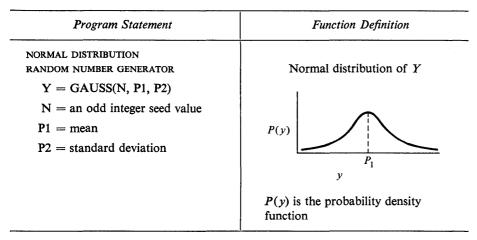

This function produces random values of y which statistically have a Gaussian distribution with a specified mean and standard deviation. Both random number generators return numbers only at valid integration steps (KEEP = 1). Additional comments concerning the use of GAUSS are given on p. 118. See Example 3.7, p. 118 for application.

| Table A-4 |
|-----------|
|-----------|

| Function Generation   |  |
|---|--|
| Problem Statement   | Function Definition                                    |
| ARBITRARY FUNCTION GENERATOR<br>(linear interpolation)<br>Y = AFGEN(FUNCT, X)<br>X = an independent variable<br>FUNCT = name of a function defined<br>by a FUNCTION card. | $A \xrightarrow{C} D \xrightarrow{F} E$                |
| Any valid FORTRAN symbol can be used.   | Linear interpolation between data points (A,B,C,D,E,F) |

#### 

#### **Comments**


AFGEN is used to generate a function specified by the user. Linear or straight line interpolation is used between given values of x. Data points for xand y are listed on a FUNCTION card (placed at the beginning of the program) as below

FUNCTION LUCK = 
$$(0.0, 1.2), (0.3, 1.8), (0.7, 2.3), (1.1, 0.9), (1.7, -0.3)$$

The function is called by a statement in the program such as

$$Y = AFGEN(LUCK, X)$$

Further explanation of AFGEN is given on p. 31. Application of this function is given in Ex. 2.4, p. 30; Ex. 3.13, p. 158; Ex. 4.2, p. 200.

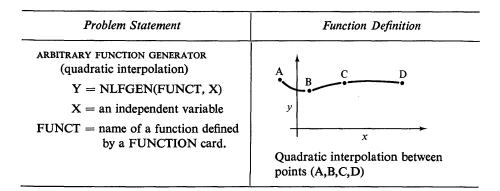

#### **Comments**

The use of this function is identical to AFGEN except that quadratic interpolation is used between data points. See the comments given for AFGEN and also refer to p. 31.

Application of NLFGEN can be found in Ex. 2.10, p. 60; Ex. 2.11, p. 65; Ex. 3.5, p. 110.

# Table A-5

Nonlinear System Characteristics

| Program Statement   | Definition of Characteristic  |
|---|---|
| DEAD SPACE<br>Y = DEADSP(P1, P2, X)<br>X = input function<br>P1, P2 = parameters defining the range of the dead space | $\begin{array}{c c} & y \\ \hline P_1 \\ \hline P_2 \\ x \end{array}$   |
|   | $y = 0 	; \text{ for } P_1 \le x \le P_2$<br>$y = x - P_2; \text{ for } x > P_2$<br>$y = x - P_1; \text{ for } x < P_1$ |

This function can be used for simulating dead space in a system nonlinearity such as a valve. The slope on the active portion is not limited to 45° and can be changed to a specified value by

> Y = Q\*DEADSP(P1, P2, X)(Q = specified slope)

Application of this function is given in Example 2.9, p. 58.


| Program Statement  | Definition of Characteristic  |
|--|---|
| LIMITER<br>Y = LIMIT(P1, P2, X)<br>X = an input<br>P1, P2 = parameters defining<br>the range of limiting | $y = P_1; \text{ for } x < P_1$ $y = P_2; \text{ for } x > P_2$ $y = x; \text{ for } P_1 \le x \le P_2$ |

Comments

Used for defining limiting or saturation in a system. The slope of the function can be changed from  $45^{\circ}$  by the statement

> Y = Q\*LIMIT(P1, P2, X)(Q = user defined slope)

A typical application of this function is given in Example 2.10, p. 60.

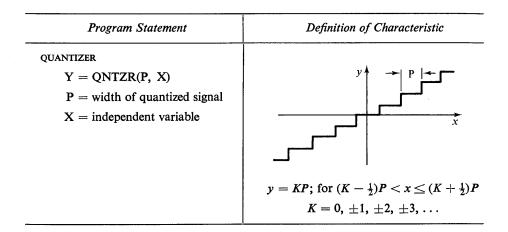

Useful for quantizing a function or signal. For example, a sin function can be quantized as follows.

$$X1 = SIN(10.0*TIME)$$
  
$$X2 = X1*QNTZR(0.05, TIME)$$

This function can be used to simulate the output of a digital to analog converter.


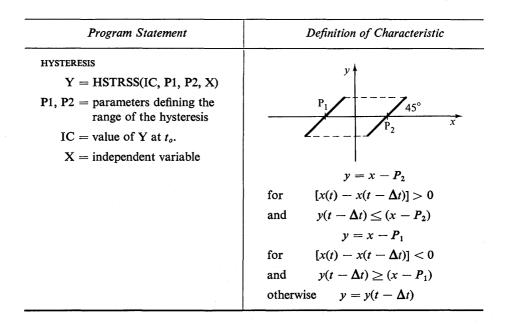



Table A-6 Switching Functions

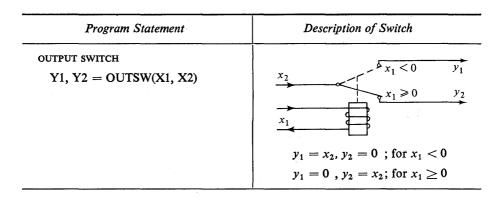

| <b>Program</b> Statement             | Description of Switch  |
|--------------------------------------|--|
| INPUT SWITCH<br>Y = INSW(X1, X2, X3) | $x_{2}$ $x_{3}$ $y = x_{2}; \text{ for } x_{1} < 0$ $y = x_{3}; \text{ for } x_{1} \geq 0$ |

| <b>Program Statement</b>        | Description of Switch   |
|---------------------------------|---|
| COMPARATOR $Y = COMPAR(X1, X2)$ | $\begin{array}{c c} x_1 & C \\ \hline \\ x_2 & P \\ \hline \\ R \\ E \end{array} \begin{array}{c} x_1 < x_2 \\ x_1 < x_2 \\ \hline \\ x_1 \ge x_2 \end{array} \begin{array}{c} y = 0 \\ y = 1 \\ \hline \\ y = 1 \end{array}$ |
|                                 | $y = 0$ ; for $x_1 < x_2$<br>$y = 1$ ; for $x_1 \ge x_2$  |

| <b>P</b> rogram Statement                   | Description of Switch   |
|---|---|
| UNCTION SWITCH<br>Y = FCNSW(X1, X2, X3, X4) | $x_{2}$ $x_{1} < 0$ $x_{3}$ $x_{1} = 0$ $y$ $x_{4}$ $x_{1} > 0$ $y = x_{2}; \text{ for } x_{1} < 0$ $y = x_{3}; \text{ for } x_{1} = 0$ $y = x_{4}; \text{ for } x_{1} > 0$ |

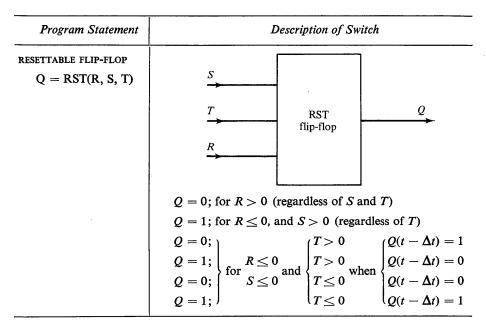

This switch has the operating characteristics of a reset-set-toggle flip-flop.  $Q(t - \Delta t)$  is the previous state of the flip-flop. At the start of a simulation,  $Q(t - \Delta t) = 0$  for R and  $S \le 0$  with either state of T. Application of this flip-flop is given in Example 4.8, p. 228.

# Table A-7 Logic Functions

| <b>Program Statement</b>  | Logic Function Description  |
|---|---|
| AND<br>Y = AND(X1, X2)<br>Applications given in<br>Ex. 3.13, p. 158<br>Ex. 4.7, p. 224<br>Ex. 4.8, p. 228 | $x_1$ $x_2$ $y = 1; \text{ for } x_1 > 0, x_2 > 0$ $y = 0; \text{ otherwise}$ |
| NAND (not and)<br>Y = NAND(X1, X2)  | $x_1$ $y = 0; \text{ for } x_1 > 0, x_2 > 0$ $y = 1; \text{ otherwise}$       |

| <b>Program Statement</b>  | Logic Function Description   |
|---|--|
| NOT<br>Y = NOT(X)<br>Application given in<br>Ex. 4.7, p. 224<br>Ex. 4.8, p. 228 | $x \qquad y = 1; \text{ for } x \le 0$ $y = 0; \text{ for } x > 0$   |
| INCLUSIVE OR<br>Y = IOR(X1, X2)<br>Application given in<br>Ex. 4.7, p. 224      | $\frac{x_1}{x_2}$ $y = 0; \text{ for } x_1 \le 0, x_2 \le 0$ $y = 1; \text{ otherwise}$  |
| NOR (not or)<br>Y = NOR(X1, X2)   | $y = 1; \text{ for } x_1 \le 0, x_2 \le 0$ $y = 0; \text{ otherwise}$  |
| EXCLUSIVE OR $Y = EOR(X1, X2)$  | $\frac{x_1}{x_2}$ $y = 1; \text{ for } x_1 \le 0, x_2 > 0$ $y = 1; \text{ for } x_1 > 0, x_2 \le 0$ $y = 0; \text{ otherwise}$ |
| EQUIVALENT<br>Y = EQUIV(X1, X2)   | $x_1$ $y = 1; \text{ for } x_1 \le 0, x_2 \le 0$ $y = 1; \text{ for } x_1 > 0, x_2 > 0$ $y = 0; \text{ otherwise}$             |

FORTRAN Functions. All FORTRAN functions are available for use in CSMP simulation. Also, the majority of FORTRAN techniques can be used with

CSMP including WRITE statements, DO loops, GO TO, and IF. In some cases the FORTRAN statements require special handling procedures within the body of a CSMP program. Several examples are given in the text in which FORTRAN is included with the CSMP program.

In the following table some of the more common FORTRAN functions are listed for convenience. Users should refer to any standard FORTRAN text for a more complete listing.

# Table A-8

# FORTRAN Functions

| <b>Program Statement</b>                | Mathematical Description    |
|---|-----------------------------|
| EXPONENTIAL                             |                             |
| Y = EXP(X)                              | $y = e^x$                   |
| NATURAL LOGARITHM                       |                             |
| Y = ALOG(X)                             | $y=\ln\left(x\right)$       |
| COMMON LOGARITHM                        |                             |
| Y = ALOG10(X)                           | $y = \log_{10} (x)$         |
| ARCTANGENT                              |                             |
| Y = ATAN(X)                             | $y=\tan^{-1}\left(x\right)$ |
| TRIGONOMETRIC SINE                      |                             |
| Y = SIN(X)                              | $y = \sin(x)$               |
| TRIGONOMETRIC COSINE                    |                             |
| Y = COS(X)                              | $y = \cos(x)$               |
| SQUARE ROOT                             |                             |
| Y = SQRT(X)                             | $y = \sqrt{x}$              |
| HYPERBOLIC TANGENT                      |                             |
| Y = TANH(X)                             | $y = \tanh(x)$              |
| ABSOLUTE VALUE                          |                             |
| (Real argument and output)              |                             |
| $\mathbf{Y} = \mathbf{ABS}(\mathbf{X})$ | y =  x                      |


| Program Statement   | Mathematical Description          |
|---|-----------------------------------|
| ABSOLUTE VALUE  |                                   |
| (Integer argument and output)   |                                   |
| Y = IABS(X)   | y =  x                            |
| TRANSFER OF SIGN  |                                   |
| X = SIGN(A, B)  | $X = \frac{A \cdot B}{ B }$       |
| LARGEST VALUE   |                                   |
| (Integer arguments and real output)   |                                   |
| $\mathbf{Y} = \mathbf{AMAX0}(\mathbf{X1}, \mathbf{X2}, \dots, \mathbf{XN})$ | $y = \max(x_1, x_2, \ldots, x_n)$ |
| LARGEST VALUE   |                                   |
| (Real arguments and output)   |                                   |
| $\mathbf{Y} = \mathbf{AMAX1}(\mathbf{X1}, \mathbf{X2}, \dots, \mathbf{XN})$ | $y = \max(x_1, x_2, \ldots, x_n)$ |
| LARGEST VALUE   |                                   |
| (Integer arguments and output)  |                                   |
| $\mathbf{Y} = \mathbf{MAX0}(\mathbf{X1}, \mathbf{X2}, \dots, \mathbf{XN})$  | $y = \max(x_1, x_2, \ldots, x_n)$ |
| LARGEST VALUE   |                                   |
| (Real arguments and   |                                   |
| integer output)   |                                   |
| $\mathbf{Y} = \mathbf{MAX1}(\mathbf{X1}, \mathbf{X2}, \dots, \mathbf{XN})$  | $y = \max(x_1, x_2, \ldots, x_n)$ |
| SMALLEST VALUE  |                                   |
| (Integer arguments and real output)   |                                   |
| - /   | $u = \min \left( u - u \right)$   |
| $Y = AMIN0(X1, X2, \dots, XN)$  | $y = \min(x_1, x_2, \ldots, x_n)$ |
| SMALLEST VALUE  |                                   |
| (Real arguments and output)   |                                   |
| $\mathbf{Y} = \mathbf{AMIN1}(\mathbf{X1}, \mathbf{X2}, \dots, \mathbf{XN})$ | $y = \min(x_1, x_2, \ldots, x_n)$ |
| SMALLEST VALUE  |                                   |
| (Integer arguments and output)  |                                   |
| $Y = MIN0(X1, X2, \dots, XN)$   | $y = \min(x_1, x_2, \ldots, x_n)$ |

| Mathematical Description          |
|-----------------------------------|
|                                   |
|                                   |
|                                   |
| $y = \min(x_1, x_2, \ldots, x_n)$ |
|                                   |

Additional CSMP Functions. The following functions have been added to CSMP III. Refer to Chap. 5 for addition comments concerning CSMP III.

#### Table A-9

Functions Added to CSMP III.

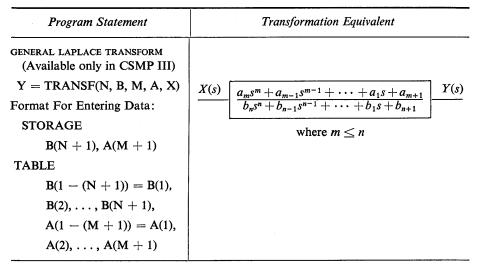

**Comments** 

The TRANSF function can be used to find the response of a transfer function with *m* zeros and *n* poles  $(m \le n)$  due to an arbitrary input, *x*. The user should note with caution that  $a_{m+1}$  and  $b_{n+1}$  are the last coefficients of the numerator and denominator respectively while  $a_m$  and  $b_n$  are the first coefficients.

Suppose one desires to find the step response of the following transfer function using TRANSF.

$$G(s) = \frac{Y(s)}{X(s)} = \frac{3s^2 + 4s + 2}{s^3 + 6s^2 + 9s + 4}$$

The statements given below can be used in the program for this purpose.

 STORAGE DENCOF(4), NUMCOF(3)

 TABLE
 DENCOF(1-4) = 9.0, 6.0, 1.0, 4.0, ...

 NUMCOF(1-3) = 4.0, 3.0, 2.0

Comments (continued).

$$IN = STEP(0.0)$$
  
OUT = TRANSF(3, DENCOF, 2, NUMCOF, IN)

For further comments see Example 3.12, p. 151; and p. 265.

| Program Statement   | Equivalent Mathematical Expression  |
|---|---|
| <ul> <li>Program Statement</li> <li>VARIABLE FLOW TRANSPORT DELAY<br/>(Available only in CSMP III)</li> <li>Y = PIPE(N, IC, P, X1, X2, ND)</li> <li>N = the number of intervals required<br/>to define the delay of P.</li> <li>IC = the initial condition of entire<br/>pipeline</li> <li>P = the holdup quantity</li> <li>X1 = flow rate</li> <li>X2 = delayed characteristic</li> <li>ND = degree of interpolation for<br/>retrieving delayed characteristic.</li> </ul> | Equivalent Mathematical Expression<br>$f_{v} = \int_{t_{0}}^{t} x_{1} dt$ $q = \int_{t_{0}}^{t} x_{1}x_{2} dt$ $y = IC; \text{ for } f_{v} < P$ $y = \frac{q(f_{v} - P) - q(f_{v}(t - \Delta t) - P)}{f_{v} - f_{v}(t - \Delta t)};$ for $f_{v} \ge P$ where $f_{v}$ = flow volume<br>q = weighted volume |
| This may be 1 or 2.<br>This functional block is used to<br>simulate the transient flow of an<br>incompressible fluid in a system<br>having a time delay.  |   |

| <b>Program Statement</b>  | Equivalent Mathematical Expression   |  |
|---|--|--|
| FUNCTION GENERATOR WITH DEGREE<br>OF INTERPOLATION CHOSEN BY USER<br>(Available only in CSMP III)             | <sup>y</sup><br>B C E  |  |
| Y = FUNGEN(FUNCT, N, X)   | A D F  |  |
| FUNCT = function name   | x  |  |
| N = degree of interpolation to<br>be used. User may select<br>from 1, 2, 3, 4, or 5.<br>X = value of abscissa | y = f(x)<br>Degree of interpolation between A, E<br>C, D, E, and F depends upon selection<br>of N. |  |

**Comments** 

Use of this function is very similar to AFGEN and NLFGEN. See p. 262.

| <b>Program Statement</b>   | Function Definition   |
|--|---|
| SLOPE OF A CURVE<br>(Available only in CSMP III)<br>Y = SLOPE(FUNCT, N, X)<br>FUNCT = user's name of the curve<br>N = the degree of interpolation<br>to be used, $N = 1, 2, \text{ or } 3$ .<br>X = value of abscissa  | $y = \frac{df}{dx}\Big _{x}$ See p. 265.  |
| ARBITRARY FUNCTION OF 2 VARIABLES<br>(Available only in CSMP III)<br>Y = TWOVAR(FUNCT, Z, X)<br>See p. 263.  | y = f(x, z)   |
| SAMPLING INTERVAL SWITCH<br>(Available only in CSMP III)<br>$Y = SAMPLE\left[P1, P2, \binom{P3}{N}\right]$ P1 = the starting time for sampling<br>to occur<br>P2 = the last time for sampling to<br>occur<br>P3 = the time interval between<br>samples if entered as a<br>floating-point number<br>N = the number of sampling<br>intervals if entered as a<br>fixed-point number | $y = 1 \text{ for TIME} = p_1 + kp_3 \le p_2$<br>or<br>$y = 1 \text{ for TIME} = p_1 + \frac{k(p_2 - p_1)}{n} \le p_2$<br>$k = 0, 1, 2, 3, \dots \text{ for both the above conditions}$<br>y = 0  otherwise |

| Program Statement   | Equivalent Mathematical Expression |
|---|------------------------------------|
| SCALAR-TO-ARRAY CONVERTOR<br>(Available only in CSMP III)   | $x(1) = v_1$                       |
| CALL ARRAY (V1, V2,, VN, X)   | $x(2) = v_2$                       |
| This statement should only be used in<br>nosort or procedural sections. Storage<br>locations for the subscripted variable | $\dot{x}(n) = v_n$                 |
| must be allocated by eithe a STORAGE of DIMENSION statement.  |                                    |

| <b>Program Statement</b>  | Equivalent Mathematical Expression  |
|---|---|
| ARRAY-TO-SCALAR CONVERTOR<br>(Available only in CSMP III)<br>Y1, Y2,, YM = SCALAR(X(2))                   | $y_1 = x(2)$ $y_2 = x(3)$ $\vdots$ $y_m = x(m+1)$   |
| DOUBLE PRECISION FLOATING-POINT TO<br>SINGLE PRECISION<br>(Available only in CSMP III)<br>Y = ZZRND(X(2)) | The ZZRND function transforms<br>by rounding the double precision<br>variable $X(2)$ to the single<br>precision variable Y. |

# APPENDIX DIAGNOSTIC MESSAGES, PROGRAM RESTRICTIONS, AND RESERVED WORDS

This material involving diagnostic messages, restrictions, and reserved words was primarily taken from IBM Manuals.<sup>(1,2)</sup>

### **Diagnostic Messages**

Diagnostic messages may occur during both the translation and execution phases of the program and are designed to be self-explanatory. Some of the diagnostic checks detect illegal characters or incorrect syntax; the symbol "\$" is printed below the detected error prior to the associated diagnostic message. A "warning only" message is printed when an error is not wholly discernible in translation or does not destroy the "validity" of simulation. Some examples of these errors are:

Control variable name not a systems variable

Parameter value not specified

Variable used as input to a section not available from any prior section

Some examples of errors causing a run halt at the end of translation are:

Incorrect structure or data statement format

Invalid data card type

Unspecified implicit loop

RELERR specification on other than an integrator output name

Examples of errors causing a run halt during execution are:

304

# App. II Diagnostic Messages, Program Restrictions, and Reserved Words 305

Failure of an integration or implicit function to meet the error criterion

A misspelled subroutine name

The following is an alphabetical list of diagnostic messages with their explanations and suggested corrections. The messages with the label "S/360" apply only to S/360 CSMP, the messages with the label "III" apply only to CSMP III, and messages designated with "Both" apply to both forms of CSMP.

- III CALL CONTIN CAN ONLY BE USED IN A TERMINAL SEGMENT "CALL CONTIN" can be used only in a Terminal segment. If it is used elsewhere, the run terminates.
- Both CALL RERUN CAN ONLY BE USED IN A TERMINAL SEGMENT "CALL RERUN" can be used only in a Terminal segment. If it is used elsewhere, the run terminates.
  - III CENTRAL INTEGRATION ROUTINE NOT SUPPLIED On the METHOD execution control card, the user has used the word, CENTRL, to specify his integration method. However, he has not supplied the integration deck to the program. The run will be terminated.
- Both CSMP STATEMENT INCORRECTLY WRITTEN The translation phase has detected an error in the statement printed before this message. The statement should be checked carefully, including parentheses and commas. Although translation of the source statements will continue, the run will be terminated before the execution phase.

Both CSMP STATEMENT OUT OF SEQUENCE The sequence of input statements cannot be processed and the run will be terminated before the execution phase. The statement should be checked for sequence in the input deck to see if it has been misplaced. MACRO definitions must precede all structure statements. An INITIAL segment, when used, must precede the DYNAMIC segment. If used, the TERMINAL segment must follow the DYNA-MIC segment.

- S/360 DATA HAS NOT BEEN SPECIFIED FOR AN AFGEN FUNCTION
- S/360 DATA HAS NOT BEEN SPECIFIED FOR AN NLFGEN FUNCTION An AFGEN (or NLFGEN) function generator has been used in a structure statement but the corresponding data has not been specified using the FUNC-TION statement. The run will be terminated.

# III DATA HAS NOT BEEN SUPPLIED FOR A TWOVAR FUNCTION A TWOVAR function generator has been used in a structure statement, but the data has not been specified on FUNCTION statements. The run will be terminated.

# III DATA NOT SUPPLIED FOR FUNCTION An AFGEN, NLFGEN, FUNGEN, or SLOPE function generator has been used in a structure statement, but a FUNCTION statement has not specified the corresponding data. The run will be terminated.

# S/360 DYNAMIC STORAGE EXCEEDED. THIS CASE CANNOT BE RUN The 8000-word limitation on simulator data storage has been exceeded. The storage in this array includes the current values of model variables, function and error tables, central integration history, and subscripted variable values. The problem should be analyzed to determine where equations can be combined to reduce the number of required entries in the array.

# S/360 ERROR—CENTRAL INTEGRATION ROUTINE NOT SUPPLIED The user has used the word CENTRL for his integration method on the METHOD execution control card; however, he has not supplied the integration deck to the program. The run will be terminated.

# Both ERROR IN COORDINATE ENTRIES An error has been detected in the previously printed FUNCTION data statement. There is either an odd number of entries in the data table or an improper sequence of X-coordinate values. The run will be terminated.

# S/360 ERROR IN PRINT-PLOT STATEMENT

An error has been detected in the PRTPLT output control statement. The statement should be checked for a correct number of parentheses and commas for specifying lower and upper limits, particularly if one or the other is missing, and commas are used to indicate this. Although the run continues, everything on the card after the error is disregarded.

### Both ERROR IN TABLE ENTRY

In the previously printed TABLE data statement, an error has been detected. Although reading of the data statements will continue, the run will be terminated before execution.

# Both EXCEEDED MAXIMUM ITERATIONS ON IMPLICIT LOOP

One hundred iterations of the implicit loop have been run and convergence has not yet occurred. The run has been terminated. One possibility is to change the error condition, so that the convergence criteria can be met.

- III FAMILY OF PARAMETER VALUES AFTER END CONTINUE DELETED Following an END CONTINUE statement, a multiple-value parameter has been defined. These values will be deleted and the program will use the previous value of the parameter.
- III FINTIM HAS NOT BEEN SET. RUN DELETED FINTIM either has not been specified or was made equal to zero.
- S/360 FINTIM IS ZERO. THIS CASE CANNOT BE EXECUTED FINTIM either has not been specified or has been specified as being equal to zero.
  - III FUNCTION DATA EXCEEDS STORAGE Function data supplied in the execution input exceeds the core storage allocated. The run is terminated.

# III FUNCTION DATA FOR LOAD EXCEEDS STORAGE The FGLOAD or TVLOAD subprogram has been called and the available storage for the function as specified by the SYSTEM NPOINT=n-statement is not sufficient.

III FUNCTION DATA FOR LOAD INCORRECT The FGLOAD or TVLOAD subprogram has been called and the input data (X values) are not monotonically increasing.

App. II

- III FUNCTION NAME xxxxx HAS BEEN SPECIFIED PREVIOUSLY The name assigned to function data on a FUNCTION statement has been already assigned to another function, parameter, or variable.
- Both GENERATED STATEMENT NO. xx The Translator has detected an error during generation of statement xx of an invoked macro in the structure of the model. Carefully check the corresponding statement of the macro definition for proper spelling and punctuation.
- Both ILLEGAL CHARACTER OR DOUBLE OPERATOR In the previously printed statement, an illegal character or double operator has been detected. Although translation of the source statements will continue, the run will be terminated before the Execution phase.
  - III ILLEGAL SPECIFICATION ON RERUN Following an END RERUN statement or END CONTINUE, there is an OUT-PUT or PREPARE statement or a TIMER statement with an OUTDEL parameter. This is an illegal specification.
- Both INCORRECT IMPLICIT STATEMENT The Translation phase has detected an error in the IMPL structure statement printed before this message. The statement should be checked to see that the third argument is the output name of the last statement in the definition and that the block output appears at least once to the right of an equal sign. Although translation of the source statements will continue, the run will be terminated before the Execution phase.
- Both INCORRECT MACRO STATEMENT The Translation phase has detected an error in the macro use statement printed before this message. The statement should be checked to ensure that the number of arguments and outputs is correct and that the argument list ends with a parenthesis. Although translation of the source statements will continue, the run will be terminated before the Execution phase.
- S/360 INCORRECT TIMER VAR NAME\*\*WARNING ONLY One of the system variable names (FINTIM, DELT, PRDEL, OUTDEL, or DELMIN) has been misspelled on the TIMER execution control card. The user should also check the possibility that the system variable has been renamed. Although the run will continue, the system variable misspelled will be unchanged.

```
Both INPUT NAME SAME AS OUTPUT NAME
The output variable name to the left of the equal sign has also been used as an
input name on the right side of the equal sign. Except as output of a memory type
functional element, such usage is not permissible in a parallel, sorted section. The
run will be terminated.
```

III INPUT P IS LESS THAN ZERO FOR DELAY Delay time P of the DELAY function is found to be less than zero, which is an invalid condition. The execution of this run will be terminated.

- III INPUT P2 IS LESS THAN P1 FOR DEADSP Parameter P2 is found to be less than parameter P1 for the DEADSP function and this is an invalid condition.
- III INPUT P2 IS LESS THAN ZERO FOR IMPULS The time between impulses P2 is found to be less than zero for the IMPULS function, which is an invalid condition.
- S/360 INPUT TO FUNCTION GENERATOR nnnnnn ABOVE SPECIFIED RANGE INPUT=xxxx.xxxx The input (xxxx.xxxx) to the function generator named nnnnnn is above the maximum specified range. The program will take the value for the maximum specified and continue. This message will be printed only once, even though the condition is reached several times.
- S/360 INPUT TO FUNCTION GENERATOR nnnnnn BELOW SPECIFIED RANGE INPUT=xxxx.xxxx The input (xxxx.xxxx) to the function generator named nnnnnn is below the minimum specified range. The program will take the value for the minimum specified and continue. This message will be printed only once, even though the condition is reached several times.

III INPUT TO FUNCTION name 
$$\begin{bmatrix} ABOVE \\ BELOW \end{bmatrix}$$
 INPUT DATA

[CURVE NO. nnnn] CALL mmmm INPUT = w at v

The input to the function generator (interpolating for the function named in the message) is above the maximum or below the minimum input specified. The output of the function generator is set equal to the output value of the function corresponding to the input extreme which was violated. This message is printed only once even though the condition may be reached several times. The curve number nnnn indicates (for functions of two variables) for which curve the first input was in error. For example, if the model contains the following function of two variables:

FUNCTION F, -5. = (0., 3.5), (1., 6.1), (3., 8.6)FUNCTION F, 3.2 = (0., 3.8), (1., 7.5), (3.2, 9.6)FUNCTION F, 10.2 = (0., 4.2), (1.2, 8.3), (2.8, 9.3)

and the diagnostic message specifies CURVE NO. 2, then the error is in the first input to the function curve

FUNCTION F, 
$$3.2 = (0., 3.8), (1., 7.5), (3.2, 9.6)$$

The call number mmmm is the first argument of the interpolation function in the UPDATE FORTRAN subroutine generated by the Translator. For example, if the model contains the statement

OP = AFGEN (FUNCT, XIN)

the UPDATE subroutine would contain the corresponding statement

$$OP = AFGEN (n, FUNCT, XIN)$$

The first argument n is an integer constant and would be the call number in the diagnostic message for this statement if the value of XIN is outside the range

of the function FUNCT. The input value out of range is specified by INPUT = w. The value of the independent variable for this out-of-range condition is given by AT v.

SECOND INPUT TO FUNCTION name ABOVE BELOW INPUT DATA

CALL mmmm INPUT = w AT v

The second input to the function generator TWOVAR (interpolating for the function of two variables named in the message) is above the maximum or below the minimum input specified. The output of the function generator is set equal to the output value of the function corresponding to the input extreme which was violated. This message is printed only once even though this condition may be reached several times. The call number mmmm is the first argument of the interpolation function block in the UPDATE subroutine generated by the Translator. For example, if the model contains the statement

OUT = TWOVAR (F, XIN, ZIN)

the UPDATE subroutine would contain the corresponding statement

OUT = TWOVAR (n, F, XIN, ZIN)

The first argument n is an integer constant and would be the call number in the diagnostic message for this statement if the value of ZIN is outside the range of the function F. The second input value which is out of range is specified by INPUT = w. The value of the independent variable for this out-of-range condition is given by AT v.

Both LABEL INCORRECTLY WRITTEN

The label used in the preceding statement cannot be recognized by the program. Check for proper spelling. The statement will be disregarded; the run will continue.

#### III MACRO WITHIN MACRO USED IN A PROCEDURAL

Macros, separately defined, can be invoked within the definition of other macros if overall parallel structure is implied. Invocation of a macro within a procedure within a macro definition is therefore not permissible. Similarly, a macro containing other macros in its definition may not be invoked from a procedure or from a procedural section.

# S/360 MACRO xxxxxx WITHIN MACRO yyyyyy USED IN A PROCEDURAL SECTION

Macros, separately defined, may be invoked within the definition of other macros if overall parallel structure is implied. Invocation of a macro within a procedure within a macro definition is therefore not permissible. Similarly, a macro containing other macros in its definition may not be invoked from a procedure or from a procedural section.

III METHOD SELECTED EXCEEDS STORAGE

The integration method specified in the execution input exceeds the core storage allocated. The run is terminated. The integration methods available, in order of increasing size, are: RECT, TRAPZ, SIMP, ADAMS, RKSFX, RKS, STIFF, RKSDP, and MILNE.

S/360 MORE THAN 10 PRTPLT STATEMENTS More than ten PRTPLT output control statements have been specified. Only the first ten will be used.

#### Both NUMBER EXCEEDS 12 CHARACTERS In the previously printed statement, a number exceeding twelve characters in a macro argument or integrator block initial condition has been detected. Although translation of the source statements will continue, the run will be terminated

macro argument or integrator block initial condition has been detected. Although translation of the source statements will continue, the run will be terminated before the execution phase.

Both NUMBER INCORRECTLY WRITTEN In the previously printed statement, a number written incorrectly has been detected. If detected during the translation phase, translation of the source statements will continue; however, the run will be terminated before the execution phase.

- S/360 ONLY FIRST 10 CONDITIONS FOR JOB END WILL BE TESTED More than ten specifications have been given with the FINISH execution control statement. Although the run will continue, only the first ten specifications will be used.
  - III ONLY FIRST 10 CONDITIONS WILL BE TESTED More than ten specifications have been given through the FINISH execution control statement. Although the run will continue, only the first ten specifications will be used.

# Both ONLY FIRST 50 VALUES WILL BE USED The multiple-value form of the PARAMETER data statement specifies more than 50 values for the parameter. A sequence of runs will be performed using only the first 50 values.

- S/360 ONLY FIRST 50 VARIABLES WILL BE PREPARED More than 50 variables (including TIME) have been specified with PREPARE or PRTPLT output control statements. Although the run will continue, only the first 50 variables will be used.
  - III ONLY FIRST 220 VARIABLES WILL BE PREPARED More than 220 variables (including TIME) have been specified through PRE-PARE or OUTPUT print control statements. Although the run will continue, only the first 220 variables will be used.
- S/360 ONLY FIRST 50 VARIABLES WILL BE PRINTED More than 50 variables (including TIME) have been requested with PRINT execution control statements. Only the first 50 will be printed; others will be ignored.
  - III ONLY FIRST 55 VARIABLES WILL BE PRINTED More than 55 variables (including TIME) have been requested through PRINT execution control statements. Only the first 55 will be printed; others will be ignored.

# S/360 ONLY FIRST 100 VARIABLES WILL BE RANGED More than 100 variables (including TIME) have been specified with the RANGE output control statement. Although the run will continue, only the first 100 variables will be used.

# III ONLY FIRST 110 VARIABLES WILL BE RANGED More than 110 variables (including TIME) have been specified through the RANGE output control statement. Although the run will continue, only the first 110 variables will be used.

App. II

Both ONLY LAST VALUE OF FAMILY USED FOR CONTINUE RUN A multiple-value parameter has been used in a run that is to be continued. The continue control feature will be implemented only with the last value of the parameter. This is a warning message. The run will continue.

Both OUTPUT NAME HAS ALREADY BEEN SPECIFIED In the previously printed statement, the output variable name to the left of the equal sign has been used before as an output variable name; that is, it has occurred to the left of the equal sign in a preceding section. The run will be continued.

#### Both PARAMETERS NOT INPUT OR OUTPUTS NOT AVAILABLE TO SORT SECTION \*\*\*SET TO ZERO\*\*\* A list of variable names will be printed following this heading. The run is continued. Variable that are not normative analiged on data and are set to man

tinued. Variables that are not parameters specified on data cards are set to zero. Output variable names that are not available to this sort section are initially set to zero, but may change as the problem is run.

# Both PROBLEM CANNOT BE EXECUTED At least one diagnostic message will have been printed among the source statements indicating the reason why the problem cannot be executed. The run will be terminated.

S/360 PROBLEM INPUT EXCEEDS TRANSLATION TABLE nn During translation of the problem, a table has been exceeded and the run will terminate. The specific table is identified by nn in the following list:

| nn | Translation Table   |
|----|---|
| 1  | More than 500 statement output names.   |
| 2  | More than 1400 statement input names (temporary count during translation).  |
| 3  | More than 400 parameter names   |
| 4  | More than 300 INTGRL or MEMORY outputs  |
| 5  | More than 1400 input names and unique block names   |
| 6  | More than 20 FIXED variable names   |
| 7  | More than 100 non-zero initial condition numeric values   |
| 8  | More than 10 FORTRAN specification cards  |
| 9  | More than 100 unique block names and symbolic names with first letter I, J, K, L, M, or N but not appearing on FIXED statements |
| 10 | More than 25 STORAGE variable names   |
| 11 | More than 15 sections (SORT or NOSORT)  |
| 12 | More than 100 MACRO arguments, outputs, and statement numbers for one MACRO   |

| nn | Translation Table   |
|----|---|
| 13 | More than 50 MACRO functions  |
| 14 | More than 120 MACRO definition cards  |
| 15 | More than 50 HISTORY or MEMORY functions  |
| 16 | More than 15 MEMORY functions   |
| 17 | More than 85 variables that are neither parameters specified on data cards nor outputs of a following SORT section  |
| 18 | More than 150 duplicate names in COMMON (outputs or inputs to INTGRL blocks)  |
| 19 | More than 100 parameters in one SORT sequence   |
| 20 | More than 600 structure statements in a single SORT section   |
| 21 | More than 180 characters in a single macro-generated statement. This restriction is violated by a procedural macro with more than 25 names for input and output variables or by a macro which includes a statement of excessive complexity. To circumvent the restriction, simplify the macro definition. |

#### III PROBLEM INPUT EXCEEDS TRANSLATION TABLE nn

A table has been exceeded during translation of the problem, and the run will terminate. The specific table is identified by nn, which refers to the following list:

| nn | Translation Table  |
|----|--|
| 1  | More than 600 macro and statement output names   |
| 2  | More than 1900 macro and statement input names   |
| 3  | More than 300 INTGRL blocks  |
| 4  | More than 400 parameter and function names   |
| 5  | More than 50 STORAGE or 100 integrator array specifications                                  |
| 6  | More than 50 user-defined history and memory functions                                       |
| 7  | More than 50 macro functions defined   |
| 8  | More than 125 MACRO definition statements  |
| 9  | More than 100 literal constants (does not include zero values)                               |
| 10 | More than 25 FIXED variable names  |
| 11 | More than 20 sort sections   |
| 12 | Sum of arguments, outputs and statement numbers of a macro block definition is more than 100 |
| 13 | More than 300 duplicate names used with INTGRL blocks  |
| 14 | More than 600 structure statements in a single sort section                                  |

|       | nn                       | Translation Table   |
|-------|--------------------------|---|
|       | 15                       | More than 100 variables in a single SORT sequence   |
|       | 16                       | More than 180 characters in a single macro-generated statement. This restriction is violated by a procedural macro with more than 25 names for input and output variables or by a macro which includes a statement of excessive complexity. To circumvent the restriction, simplify the macro definition.         |
| S/360 | RANG<br>More<br>PREP     | LT, PREPARE, AND RANGE VARIABLES EXCEED 100. ALL<br>GE VARIABLES STARTING WITH xxxxx HAVE BEEN DELETED<br>than 100 variables (including TIME) have been specified with PRTPLT,<br>ARE, and RANGE output control statements. Although the run will con-<br>only the first 100 variables will be used for this run. |
| III   | Too n                    | GE VARIABLES DELETED STARTING WITH NAME<br>nany variables have been specified on RANGE, OUTPUT, and PREPARE<br>nents. "Name" and all those following are deleted from RANGE area.   |
| S/360 | The T<br>transla         | UN FROM TERMIN CANCELED FOR CONTIN RUN<br>ERMINAL segment cannot be used to cause a rerun when a CONTINUE<br>ation control statement started the run. The TERMINAL computation<br>ments will be executed but any CALL RERUN will be ignored.  |
| S/360 | The ru                   | JLATION HALTED<br>in was terminated because a FINISH condition was satisfied. The variable<br>and its value are printed.  |
| III   | The r                    | LATION HALTED FOR FINISH CONDITION<br>un was terminated because a finish condition was satisfied. The variable<br>and its value are printed.  |
| Both  | FOLL<br>A list<br>subpro | LATION INVOLVES AN ALGEBRAIC LOOP CONTAINING THE<br>OWING ELEMENTS<br>of output variable names will be printed following this diagnostic. The sort<br>ogram has been unable to find an integration or memory block in the loop<br>ing these variables. The run will be terminated before the execution phase.     |
| S/360 | An er<br>TIME            | BOLIC NAME XXXXX NOT DEFINED<br>ror has been detected on the PARAMETER, INCON, CONSTANT, or<br>R card printed before this message. Although input to the execution phase<br>ontinue, the simulation will not be run.  |
| III   | An er<br>TIME            | BOLIC NAME NOT DEFINED IN MODEL<br>ror has been detected on the PARAMETER, INCON, CONSTANT, or<br>R card printed before this message. Although input to the Execution phase<br>ontinue, the simulation will not be run.   |
| Both  | In the been of           | BOLIC NAME EXCEEDS SIX CHARACTERS<br>previously printed statement, a symbolic name exceeding six characters has<br>detected. Although translation of source statements will continue, the run<br>e terminated before Execution.   |

App. II

#### Both SYMBOLIC NAME INCORRECTLY WRITTEN

In the previous statement, a symbolic name has been written incorrectly. The job will be terminated.

#### **III TOO MANY CONTINUATION CARDS**

The previously printed statement has been continued on too many cards. If a MACRO label statement has over three continuation statements or if a structure statement has over eight continuation statements, the user should make multiple statements or use more columns on individual cards. Although translation of the source statements will continue, the run will be terminated before the Execution phase.

#### S/360 TOO MANY CONTINUATION CARDS. MAX=n

The previously printed statement has been continued on too many cards. If N = 3, a MACRO label statements has over three continuation statements. If N = 8, a structure statement has over eight continuation statements. The user should make multiple statements or use more columns on individual cards. Although translation of the source statements will continue, the run will be terminated before the execution phase.

- Both TOO MANY LEFT PARENTHESES
- Both TOO MANY RIGHT PARENTHESES Too many left (or right) parentheses have been detected in the statement printed before this diagnostic. Although the translation of the source statements will continue, the run will be terminated before the execution phase.
- Both VARIABLE STEP DELT LESS THAN DELMIN. SIMULATION HALT The simulation will not be continued because the specified DELT is less than the specified DELMIN.

#### **Programs Restrictions**

Size limitations of the CSMP programs may be exceeded when solving very large problems. The following table gives some of the restrictions for both S/360 CSMP and CSMP III. Additional restrictions appear in this Appendix in the section on diagnostic messages under the message, "PROBLEM INPUT EXCEEDS TRANSLATION TABLE nn."

|  | S/360 CSMP | CSMP III |
|--|------------|----------|
| Number of statement and MACRO output names                       | 500        | 600      |
| Numbers of statement and MACRO input names                       | 1400       | 1900     |
| Number of parameter and function names                           | 400        | 400      |
| Number of integrators plus statements with memory<br>and history | 300        | 300      |
| Number of structure statements in a single sort section          | 600        | 600      |
| Number of sort sections  | 15         | 20       |
| Number of parameters in a single sort sequence                   | 100        | 100      |

|   | S/360 CSMP | CSMP III |
|---|------------|----------|
| Number of user-supplied memory and history functions                            | 50         | 50       |
| Number of memory functions  | 15         |          |
| Number of MACRO functions   | 50         | 50       |
| Sum of MACRO arguments, outputs, and statements number for one MACRO            | 100        | 100      |
| Number of FINISH specifications   | 10         | 10       |
| Number of RANGE and PREPARE variables   | †          | ‡        |
| Number of STORAGE variables   | 25         | 50       |
| Number of statement sent directly to FORTRAN<br>(identified by a / in column 1) | 10         |          |
| Number of FIXED variables   | 20         | 25       |

†The total number of RANGE, PRTPLT, and PREPARE variables must be 100 or less.

<sup>‡</sup>Two times the number of RANGE variables plus the number of PREPARE and OUTPUT variables must be equal to or less than 220.

#### **Reserved Words**

The words listed below are reserved for special use in CSMP. They should not be used as variable or subprograms names.

| ABS         | GO         |
|-------------|------------|
| 1120        |            |
| BACKSPACE   | GOTO       |
| CALL        | IABS       |
| COMMON      | IDIM       |
| CONTINUE    | IF         |
| DABS        | IFIX       |
| DBLE        | INTEGER    |
| DEFINE      | ISIGN      |
| DIM         | PAUSE      |
| DIMENSION   | READ       |
| DFLOAT      | REAL       |
| DO          | RETURN     |
| DOUBLE      | REWIND     |
| DSIGN       | SIGN       |
| END         | SNGL       |
| ENDFILE     | STOP       |
| EQUIVALENCE | SUBROUTINE |
| EXIT        | WRITE      |
| EXTERNAL    |            |
| FIND        |            |
| FLOAT       |            |
| FORMAT      |            |
| FUNCTION    |            |
| 1 011011011 |            |

In addition to the above words, the following restrictions must be followed for variable names.

- 1 Certain variable names are reserved for use by the system, and cannot appear in a CSMP structure statement. These names are NALARM, IZxxxx, and ZZxxxx, where x is any digit.
- 2 KEEP is a COMMON variable and it must be used consistently with its intended purpose.
- 3 DELT, DELMIN, DELMAX, FINTIM, TIME, PRDEL, and OUTDEL are system reserved names and, unless renamed, must appear only in their intended context.
- 4 TIME is the name for the independent variable and should be used only for that purpose.
- 5 CSMP subroutines, unless renamed, must be used only as intended. These names are MAINEX, CENTRL, NUMER, ALPHA, DEBUG, UPDATE, CSTORE, and the standard CSMP functional block names.
- 6 The statement numbers 30000 to 39999, inclusive, are reserved for system use in the UPDATE subprogram.

# APPENDIX **MATHEMATICS OF INTEGRATION METHODS**

There are six different integration methods available in S/360 CSMP. CSMP III provides an additional method for solving stiff equations. All methods use centralized integration. This means that integration is performed after all structure statements have been evaluated.

In the Milne and Runge-Kutta methods, the step-size is automatically adjusted to user-specified error-bounds during the problem execution. The following gives the mathematics of the integration methods as listed in the IBM programs reference manuals.<sup>(1,2)</sup>

Milne Fifth-Order Predictor-Corrector (MILNE)

Predictor:  $Y_{t+\Delta t}^p = Y_{t-\Delta t} + \frac{\Delta t}{3}(8X_t - 5X_{t-\Delta t} + 4X_{t-2\Delta t} - X_{t-3\Delta t})$ 

Corrector:  $Y_{t+\Delta t}^{c} = \frac{1}{8}(Y_{t} + 7Y_{t-\Delta t}) + \frac{\Delta t}{192}(65X_{t+\Delta t} + 243X_{t} + 51X_{t-\Delta t} + X_{t-2\Delta t})$ 

Estimate:  $Y_{t+\Delta t} = 0.96116Y_{t+\Delta t}^{c} + 0.03884Y_{t+\Delta t}^{p}$ 

Integration interval control is based on the following criteria:

$$\frac{|Y^{\circ} - Y^{p}|}{A + R|Y^{\circ}|} \cong \frac{\text{Error}}{A + R|Y^{\circ}|} \le 1$$

Runge-Kutta Fourth-Order (RKS)

$$Y_{t+\Delta t} = Y_t + \frac{1}{6}(K_1 + 2K_2 + 2K_3 + K_4)$$

317

$$K_{1} = \Delta t f(t, Y_{t})$$

$$K_{2} = \Delta t f\left(t + \frac{\Delta t}{2}, Y_{t} + \frac{K_{1}}{2}\right)$$

$$K_{3} = \Delta t f\left(t + \frac{\Delta t}{2}, Y_{t} + \frac{K_{2}}{2}\right)$$

$$K_{4} = \Delta t f(t + \Delta t, Y_{t} + K_{3})$$

The interval  $(\Delta t)$  for both variable step integrations will be reduced to satisfy the following criterion:

$$\frac{|Y_{t+\Delta t} - Y^s|}{A + R|Y_{t+\Delta t}|} \cong \frac{\text{Error}}{A + R|Y_{t+\Delta t}|} \le 1$$

In both the MILNE and RKS methods,  $Y^s$  is  $Y_{t+\Delta t}$  calculated by Simpson's rule. A and R are the absolute and relative errors corresponding to the values specified by ABSERR and RELERR.

A form of the fourth-order Runge-Kutta for a fixed-step-size (RKSFX) is also available. The mathematics are the same as shown above with the exception that the error criterion is not used.

In addition to RKSFX method, there are four fixed-step integration methods. Adams Second-Order (ADAMS)

$$Y_{t+\Delta t} = Y_t + \frac{\Delta t}{2} (3\dot{Y}_t - \dot{Y}_{t-\Delta t})$$

Simpson's Rule (SIMP)

Predictor: 
$$Y_{t+\Delta t/2}^p = Y_t + \frac{\Delta t}{2} X_t$$
  
 $Y_{t+\Delta t}^p = Y_{t+\Delta t/2}^p + \frac{\Delta t}{2} X_{t+\Delta t/2}$ 

Corrector: 
$$Y_{t+\Delta t}^c = Y_t + \frac{\Delta t}{6}(X_t + 4X_{t+\Delta t/2} + X_{t+\Delta t})$$

Trapezoidal (TRAPZ)

Predictor: 
$$Y_{t+\Delta t}^{p} = Y_{t} + \Delta t X_{t}$$
  
Estimate:  $Y_{t+\Delta t} = Y_{t} + \frac{\Delta t}{2} (X_{t} + X_{t+\Delta t})$ 

Rectangular (RECT)

$$Y_{t+\Delta t} = Y_t + \Delta t \, X_t$$

In all of the above equations, the common terminology is  $X_t \equiv \dot{Y}_t \equiv f(t)$ . The value of  $X_{t+\Delta t}$  used in the estimate is based on the prediction  $Y_{t+\Delta t}^p$ .

A method for handling stiff equations<sup>(3,4)</sup> (STIFF) is available in CSMP III. The solution is computed by the following step by step procedure. Given the differential equation  $\dot{y} = f(t, y)$ ,  $y(t_0) = y_0$ 

(1) 
$$\dot{y}_{A}(t) = [y(t) - y(t - h_{0})]/h_{0}$$
  
(2)  $d_{1} = \dot{y}(t) - \dot{y}_{A}(t)$   
(3)  $y_{p}(t + \delta) = y(t) + \delta \dot{y}(t)$  where  $\delta \le h/4$   
(4)  $\dot{y}_{p}(t + \delta) = f[t + \delta, y_{p}(t + \delta)]$   
(5)  $d_{2} = [\dot{y}_{p}(t + \delta) - \dot{y}(t)]/\delta$   
(6)  $\lambda = \begin{cases} d_{2}/d_{1} & d_{1} \ne 0, \\ 0 & d_{1} = 0, \end{cases}$   $c_{1} = \begin{cases} (e^{\lambda h} - 1)/\lambda h & \lambda < 0, \\ 1 + \lambda h/2 & \lambda \ge 0 \end{cases}$   
 $c_{0} = \begin{cases} e^{\lambda h} & \lambda < 0 \\ 1 + \lambda h & \lambda \ge 0 \end{cases}$   
(7)  $y_{c}(t + h) = y(t) + h\dot{y}_{A}(t) + hc_{1}d_{1}$   
(8)  $\dot{y}_{c}(t + h) = f[t + h, y_{c}(t + h)]$   
(9)  $E = h[\dot{y}_{c}(t + h) - (\dot{y}_{A}(t) + c_{0}d_{1})]$   
(10)  $E_{e} = 2\delta[\dot{y}_{p}(t + \delta) - \dot{y}(t)]$ 

Note that  $y, y_c, y_p, y_A, y_{pe}, d_1, d_2, c_0, c_1$ , and  $\lambda$  are vector quantities.

| Step 1        | To start up   |
|---------------|---|
|               | $h_0 = 0$   |
|               | $\dot{y}_A(0) = \dot{y}(0)$   |
| Step 2        | y is assumed to be the sum of an asymptotic part and a perturbation from the asymptote.                         |
| Steps 3 and 4 | These steps constitute Euler integration with step size $\delta$ .  |
| Step 5        | $d_2 \approx \ddot{y}(t)$ . It is assumed that the form of $f(t, y)$ makes calculation of $\ddot{y}$ difficult. |
| Step 6        | $y_c$ is computed solution at end of current step; h is step-size.  |
| Step 7        | E is used to monitor step-size h.   |
| Step 8        | $E_e$ is used to monitor Euler step-size.   |

The section on integration methods in Chap. 3 contains details for using the various methods. Information on accuracy and computer time is also included in this section.

In the event that none of the methods satisfies the user's requirements, the user can supply his own integration method. This method is entered in the system by the name of CENTRL. Example 3.2 illustrates the procedure for using a user-supplied integration method.

App. III

#### REFERENCES

- 1. System/360 Continuous System Modeling Program, User's Manual GH20-0367-4, Program Number 360A-CX-16X. IBM Corporation, Technical Publications, White Plains, N. Y.
- 2. Continuous System Modeling Program III (CSMP III), Program Reference Manual SH19-7001-2, Program Number 5734-XS9, IBM Corporation, Data Processing Division, White Plains, N. Y.
- 3. Fox, LESLIE and D. F. MAYERS, Computing Methods for Scientists and Engineers, Clarendon Press at Oxford, 1968, p. 215.
- 4. FOWLER, M. E., and R. M. WARTEN, "A Numerical Integration Technique for Ordinary Differential Equations with Widely Separated Eigenvalues," *IBM Journal of Research and Development*, II, No. 5, Sept. 1967, 537-43.

## INDEX

#### A

**ABSEER** (absolute error): definition, 82, 318 effect on problem solution, 84 program application, 91, 116, 117 resetting during simulation, 114, 112 Accelerometer (simulation), 247 ADAMS (integration): accuracy, 87 application, 85 mathematics of, 318 time requirements, 88 AFGEN function: definition, 31 illustration, 291 program application, 32-34, 204 Algebraic loop: definition, 171 diagnostic message, 313 program application, 48, 176-78 Algorithm: digital filter, 241, 243 for digital control, 216, 219, 220 PID digital controller, 221-24 ALOG10 function, 203, 234 AND (logic): definition, 226, 296 program application, 160-61, 229, 232 Arbitrary function generators (see also AFGEN, NLFGEN, FUNGEN) CSMP III, 262-63, 301 CSMP/360, 291, 292 Array integration: general discussion, 103-4, 268 program application, 104-7, 197-203 ATAN2 (arc tangent), 196, 201

#### B

Beam deflection simulation, 60-65 Block diagram: digital control system, 209, 210, 213, 214, 216 position control system, 40 simulation of, 18-22 temperature control system, 52 Bode diagram (*see* Frequency response) Boundary value problem: endpoint calculations, 64-65 program application, 60

#### С

CALL ARRAY statement, 302 CALL CONTIN statement, 267 CALL DEBUG subroutine: description, 129, 130, 132 program application 132, 133 CALL FGLOAD subroutine, 262, 263 CALL FINISH instruction, 267 CALL OUTPUT instruction, 260 **CALL PRINT** instruction, 260 **CALL RERUN statement:** definition of, 64 program application, 63 CALL TVLOAD subroutine, 264, 265 Cam follower simulation, 65-68 **CENTRAL** (integration): application, 93-95 description, 93 Chemical process, 52-58 Circuit simulation, 42-52 CMPXPL function (complex poles): application using, 46 definition, 45, 284

Coil spring mfg. simulation, 118 COMMON MEN statement, 124 COMMON statement, 21, 34, 124 COMPARATOR (logic), 226 COMPAR function (switching), 295 Complex poles (see also CMPXPL): transfer function for, 45 Constants (in CSMP), 7, 8 **CONSTANT** statement: definition, 15, 28 limitations on use, 95, 120 program application, 14-17, 54, 89 **CONTINUE** statement: CSMP application, 29 description, 119, 120, 122, 123 FORTRAN application, 63, 64 program illustration, 92, 122, 201 **CONTINUE** statement (FORTRAN): description, 120 program application, 63, 64, 120 CONTOR parameter: application, 257, 258 description, 254, 256 Control statements: CSMP III, 266-70 CSMP/360, 112-24 CSMP III: control statements, 266-67 differences between S/360 CSMP, 244 functions, 260-66 general comment, 2 program examples: accelerometer simulation, 247 heat transfer, 254, 270 spring-mass-damper system, 253 CSMP/S360: basic structure, 10-14 general comment, 2

CSMP/S360 (continued) overview, 5-7 program without integration, 65 system installation of, 7

#### D

Data output: CSMP III, 245-60 CSMP/360, 124-238 **DATA statement:** description, 101, 244 program application, 102 DÂTĂ statement (FORTRAN): description and application, 100 DEADSP function (dead space): definition, 58, 292 program application, 60 DÊBŬG (see CALL DEBUG) DECK: description, 135-38 example of, 140, 141 DELAY function (time delay): description, 53, 286 program application, 53-54 used with z-transforms, 212 DELMAX symbol, 268 **DELMIN** symbol, 18, 85-86 DELT symbol: application, 89 definition, 18, 85-87 for logic stepping, 232 for program stepping, 196 Derivative (differentiation) (see also DERIV): **DERIV** function: application 48, 50 definition, 48, 282 Diagnostic messages: listing of, 304-14 program application, 176 Difference equation, 215-25 Differential equation solution, 151, 167-68 Digital controller: cascade realization, 218 direct realization, 215 parallel realization, 219 PID, 221-24 Digital control systems: diagram illustrating, 209 general discussion, 209-20 Digital logic: program application, 224, 228 simulation, 224-32 table of functions, 226 **DIMENSION** statement: description, 97-99 examples using, 102, 106, 201, 247 DO loop (with CSMP), 201 Double-precision operations: description, 268-70 example, 270 restriction on using, 8 DYNAMIC segment: definition, 12 general use, 2

in digital control, 217 in digital logic, 232 program application, 34, 38, 63, 196, 201

#### Е

Electric circuit simulation, 42-52 END card: definition, 18, 113 typical application, 21, 38, 111-15, 122 END CONTINUE statement, 119, 266 ENDDATA statement, 101-2 ENDINPUT statement, 101, 267 ENDJOB card: definition, 18, 124 typical application, 21, 38, 123 ENDJOB STACK card, 124 ENDMAC card: description, 142 illustration, 145 ENDPROCEDURE: application, 156, 217, 220 description, 157-58 EOR function (logic), 226, 297 EQUIVALENCE statement: description, 103, 105, 106 examples, 106, 109, 201 used in CSMP III, 268 EQUIVALENT function (logic), 226, 297 Examples using CSMP/360: amortization schedule for home mortgage, 147-51 automobile traffic-flow simulation, 158-65 beam deflection simulation, 60-65 coil spring mfg. (random distribution), 118-19 compounding interest in saving account (user supplied integration), 93-95 control system with compensation, 39-42 feedback system with digital controller, 211-15 feedback system with sample and hold, 210-11 frequency response, 196-205 gear train containing backlash, 58-60 heat transfer in air duct, 104-7 impact dynamics of two railroad cars, 90-93 modulo two up-down counter, 228-332 Nixie light logic simulation, 224-28 orbital trajectory simulation of space vehicle, 126-29 PID digital controller, 221-24 position control system, 18-25 response of piston driven by air cylinder, 134-35 RLC circuit, 42-52

Examples using CSMP/360 (continued) simulation of system involving an algebraic loop, 176-77 solution of nonlinear, time-varying, simultaneous differential equations, 167-69 spring-mass-damper system, 14-18 stress analysis of cam follower, 65-68 temperature control for a chemical process, 52-58 three-stage Saturn vehicle, 35-39 transfer function simulation, 151-54 transient temperature response, 30-35 Van der Pol Equation, 25-30 ventricular pressure simulation of human heart, 110-12 Examples using CSMP III: dynamics of accelerometer transducer, 247-48 spring-mass-damper system, 253-54

transient heat distribution, 254-59

#### F

FCNSW function (function switch), 295 FINISH label: definition. 34 program application, 34, 63-64, 196 resetting of, 114, 117 FINTIM symbol: definition. 18 typical application, 17-18, 18-25 used with a CONTINUE statement, 120 FIXED statement: application, 102, 106, 257 description, 101 double precision, 269 Flip-flop (RST), 228-32, 296 Format (card columns), 9-10 FORMAT statements: program application, 102, 128, 129, 229 use in CSMP 9, 101, 125, 126, 201 FORTRAN: as used in CSMP, 6 continuation cards, 125 functions, 297-300 output, 63-64, 124-26 specification statement, 97-98 subprograms, 138, 165-68 FORTRAN functions: CONTINUE, 37-38 FORMAT, 38, 201, 204, 229 GO TO, 229 IF, 35 WRITE, 38, 201, 204, 229 Frequency response: general discussion, 194 program for calculation of, 196, 201 using array integrators, 197 with Bode diagram, 196-97 without integration, 195

Function generators (see Arbitrary function generators) FUNCTION statement (generation): program application, 34, 67, 204-5 used with AFGEN, 30-31 used with NLFGEN, 30-31 Function blocks, 6-7 FUNGEN function, 262, 301

#### G

GAUSS (distribution function): application, 119, 120 description, 291 Gear train (simulation), 58 GO TO statement, 229 GROUP parameter: application, 260, 261 description, 257

#### H

Heat transfer simulation, 34, 104, 105, 254, 270 HEIGHT variable, 252 HISTORY function, 171 HSTRSS function (hysteresis), 294

#### I

IF statement: program application, 128, 217, 219, 220, 224, 229 with CSMP, 35, 126 IMPL statement (implicit function) (see also Algebraic loop): application, 176-78 description, 172, 173, 286 IMPULS function: definition, 44, 289 in sampled data, 210-11 program application, 46, 86 Inclusive OR (see IOR) INCON: description, 28 illustrations, 29 limitation on use of, 95, 120 program application, 28, 54 Independent variable: other than TIME, 66 renaming of, 62 **INITIAL** segment: definition, 11 general comment, 2 in logic simulation, 232 program application, 34, 38, 63, 196, 201 with digital control simulation, 217 INPUT statement, 101, 244, 267 INSW function (switch), 295 Integers: example, 106 specified by, 101 Integration: accuracy of, 84, 86, 87 array, 103, 268

Integration (continued) changing integration technique during run, 90 choosing the method, 85 CSMP III, 267-68 double precision, 268 error requirement, 82-84, 86 fixed step method, 85 mathematics of, 317-19 methods, 85 mode-controlled, 163, 284 specification form, 103 step size, 82-87, 129 stiff equation, 268 time requirements, 88 user-supplied integration method, 03 variable step method, 82 Interest on investment, 93, 147 INTGRU (integration): description, 25, 281-82 program application (typical), 14, 18, 42, 54, 60, 91, 106 specification form, 103, 107 with subscripted variables, 99 IOR function (logic): description, 226, 297 program application, 229

#### J

Job control language cards (JCL), 137, 138, 245

#### K

KEEP symbol: description, 89 program application, 89, 125, 217

#### L

LABEL statement: definition, 25 program application, 21, 122 resetting of, 114, 117, 123 using more than one, 46 Laplace transform, 19 LEDLAG function: definition, 41, 283 program application, 42 LIMIT function, 293 Logic functions, 226, 296, 297 LOG parameter, 257

#### Μ

MACRO function: description, 139-54 fundamental rules, 142-45 in digital control, 212 program application, 146-54, 196 MAIN subroutine, 136 MEMORY statement, 168, 171 MERGE instruction: description, 253 example, 254, 255 METHOD statement: description, 82, 85 program application, 89 MILNE integration method: accuracy, 86 description of mathematics, 317 general description, 88 program application, 82 MODINT function: description, 163, 284 program application, 164

#### N

NAND function (logic), 226, 296 **NLFGEN** function: definition 31, 292 program application, 63, 67, 111 Nonlinear function generator (see NLFGEN) Nonlinear system characteristics, 292-94 Nonlinear systems: differential equation solution, 25-30 function generators for, 292-94 use of dead space in, 58 NOR function (logic), 226, 297 NOSORT section: definition, 12-14 general comments, 6 program application, 38, 196, 201 used in digital logic, 232 NOT function (logic), 226, 297 NPLOT parameter, 257 NTAB parameter: description, 257 example, 260-61

#### 0

Offline plotters, 132, 133, 135 Operators (with CSMP), OUTDEL parameter: definition, 24 program application, 18-25 relationship to FINTIM, 24 used with CONTINUE, 120, 122 used with integration, 67 used with PREPARE, 133 OUTPUT statement: description, 246-47 program application, 247-51 OUTSW function, 294 OVERLAY statement: description, 109, 110 example, 111

#### P

Page height/width control (see HEIGHT, WIDTH,) PAGE statement: description, 252 example, 254 PARAMETER card: definition, 28 illustrations, 26, 28

PARAMETER card (continued) limitation on use of, 95, 120 multiple values for parameter, 53 program application, 201, 211 PI continuous controller, 52 PID digital controller, 221-24 PIPE function, 301 Piston-cylinder system, 134 PREPARE statement: description, 132, 133 problem application, 134, 136, 137 resetting of, 114, 117 PRTPLT (printer-plot) computer output of (typical), 23, 28 35, 40, 42, 47, 49, 56, 65 CSMP III (see OUTPUT), 247-48 description, 22 of integers, 101 program application (typical), 21, 34, 38, 46, 54, 63, 67, 196, 201 resetting, 114, 117, 122, 123 scaling of, 54 subscripted variables, 99, 107 with log stepping, 197-98 PRINT (FORTRAN), 124, 126 **PRINTPAGE statement**, 246 PRINT statement: column output (typical), 17, 27, 54, 60 computer logic output, 232 description, 16 equation type output, 17, 61 integers, 101 maximum number of variables, 126 program application (typical), 15, 21, 54, 60 resetting, 114, 117, 122, 123 subscripted variables 99, 107 **PROCEDURE** function: description, 154-64 fundamental rules, 156-58 typical application, 161, 164, 196 used in digital control, 217 Program restrictions, 311, 312, 314, 315. 316 **PULSE** function: application program, 46 definition, 44, 288 Pulse generation (with STEP), 200 Pulse train: application program, 46 generation of, 43-44 random generated, 224-26 PUNCH statement, 124

#### Q

QNTZR function (quantization), 203-94

#### R

RAMP function, 287 Random number generator (see GAUSS and RNDGEN function)

**RANGE** statement: description (CSMP/360), 20 description (CSMP III), 260 resetting of, 114, 117 simulation using, 58-60 **READ** statement: example, 102 use in CSMP, 101, 267 REALPL function (real pole): definition, 20, 283 program application (typical), 21, 42, 54 REAL\*8 statement, 269-70 **RECT** integration (rectangular): accuracy of, 87 mathematics of, 318 time requirements, 88 use of, 85 Recursive difference equation, 215-21 Relay device, 145, 146 **RELERR** statement: application 91, 116, 117 definition of, 82, 318 effect on program accuracy, 84 resetting, 114, 117 **RENAME** statement: description, 62 program application, 62-65 with a MACRO, 142 **RERUN** statement, 246 Reserve words, 315-16 **RESET** statement: description, 117 example, 120, 122 Resettable flip-flip (RST): definition, 226 program application, 228-32 Restrictions (see Program restrictions) **RKS** integration: accuracy of, 84, 86 description, 82 mathematical formulation, 318 time requirements, 88 **RKSDP** integration (double precision): description, 269 example, 270 RKSFX (fixed-step integration): accuracy of, 86-87 application in digital control, 211-18 description, 85 mathematical formulation, 318 time requirements, 88 RNDGEN function (random number generator): application with digital logic, 229

#### S

Sample data control, 209-24 SAMPLE function (switch), 302 SCALAR function (array-to-scalar converter), 303 SHADE parameter (gray-tone print output):

description, 119, 290

description, 256 example output, 257, 259 Signal sources, 287-91 SIMP integration (Simpson): accuracy of, 87 description, 85 example, 89 mathematical formulation, 93-95, 318 time requirement, 88 SINE function, 290 SLOPE function, 265, 302 SORT section: basic use, 6 definition, 12-14 typical application, 38 Space vehicle simulation, 35-37, 126 Specification statement: description, 97, 98 example, 106 Spring-mass system, 107, 253 SQRT (square root), 63, 194, 201 Standard deviation (expression), 119 State variables: circuit simulation using, 43 transfer function representation in, 205-8 **STEP** function: definition, 24, 288 in typical example programs, 21, 54, 155 STIFF integration: description of, 267, 268 mathematical formulation, 318-19 **STOP** statement: description, 123 example, 18, 122, 169 STORAGE statement: description, 98-99, 106 example, 109, 196, 248 Subscripted variables: CSMP III integration with, 254-55 CSMP/360 integration with, 99, 103 output using, 125, 245-48 use in CSMP, 95, 97-103, 201 Switching functions, 294-96 SYMBOL parameter: description, 257 example, 260-61 Symbols (in CSMP), 7-8

#### Т

TABLE statement:<br/>description, 99-100, 106<br/>program application, 109, 196, 257TERMINAL segment:<br/>definition, 12<br/>general comments, 2<br/>program application, 34, 38, 63, 201Thermodynamics, 134TIME (independent variable):<br/>double precision, 269<br/>with PREPARE statement, 133<br/>resetting to zero, 113<br/>setting starting value, 268, 281

Time delay function (see DELAY FUNCTION) TIMER card: description, 18 typical application, 14-17, 60 TITLE statement: description, 16, 18, 245-46 resetting of, 114, 117 typical application, 14-17, 60, 122-23 Traffic flow (simulation) 158-65 Transfer function: general application, 43, 195-96 state variable form, 205-8 TRANSF function, 265-66, 300 Translation control statement (see Control statements) TRAPZ integration (trapezoidal): accuracy, 87 description, 85 mathematical formulation, 318 time requirement, 88 Two-point boundary value problem, 60 TWOVAR function (two variable), 263-64, 302

#### U

UPDATE subroutine, 136-38 User defined functions and subroutines, 138-40

#### v

Ventricular pressure (heart), 110-11

#### W

Wegstein's algorithm, 173 WIDTH variable, 252 WRITE statement: program application, 127-29, 201, 229 use in CSMP, 124-26 XYPLOT instruction, 252

#### Z

Х

ZHOLD function (zero order hold): definition, 210, 285 program application, 217, 219, 220, 224
Z-transform: algorithm simulation for inverse, 215-20 represented by DELAY function, 211-15
ZZRND instruction, 269-70, 303

ZZTIME symbol, 269

Other books of interest . . .

## THE APPLICATION OF GPSS V TO DISCRETE SYSTEM SIMULATION

**Geoffrey Gordon** 

This book provides a very practical and easy-to-follow guide to the widely used General Purpose Simulation System, based on the latest version of the language issued by IBM, GPSS V.

Three chapters are devoted to modeling, discrete simulation and programming techniques; a series of thirteen chapters explain all features of the GPSS V language; seven valuable appendices summarize programming details of the language and its assembly program, describe the internal operations of the program, and compare GPSS V with previous versions of the language.

Published 1975

320 pages

## MINICOMPUTER SYSTEMS: Organization and Programming (PDP-11)

Richard H. Eckhouse, Jr.

A diverse group of readers will find MINICOMPUTER SYSTEMS to be an excellent guide to the effective use of the inexpensive, yet powerful, small computers now available.

There are discussions of the fundamental concepts of computer hardware and software independent of any particular language or machine, programming fundamentals, PDP-11 organization and structure, programming techniques, introduction to data structures, system software, operating systems, and an applications environment.

Published 1975

343 pages

### ENGINEERING SIMULATION USING SMALL SCIENTIFIC COMPUTERS

Manesh J. Shah

This is a practical book, written to bring the convenience and economy of today's compact digital computers to virtually anyone who needs to simulate and solve dynamic systems problems in engineering and the physical sciences.

For example, it treats control systems of various types, mechanical systems and related design problems, chemical processing, simulations of different kinds of chemical reactor systems, and many others.

Published 1976

416 pages

PRENTICE-HALL, Inc., Englewood Cliffs, New Jersey

0-13-371377-6