



AT&T

**AT&T UNIX[®] PC
System Software**

Installation Guide

© 1985, 1986, 1987 AT&T
All Rights Reserved
Printed in USA

NOTICE

The information in this document is subject to change without notice. AT&T assumes no responsibility for any errors that may appear in this document.

IMPORTANT!

**READ BEFORE YOU INSTALL VERSION 3.51 OF
THE SYSTEM SOFTWARE!**

If you plan to load Version 3.51 of the system Software on your **UNIX**® PC without preserving any existing files, you can proceed directly to the AT&T UNIX PC Software Installation Guide and begin installing the software.

If you wish to preserve existing user files and installed applications, you **MUST** follow the instructions below **BEFORE** you upgrade to Version 3.51.

- 1 Login as **install**.
- 2 Select |Administration| and press <Enter>.
- 3 Select |Software Setup| and press <Enter>.
- 4 Select |Remove Installed Software| and press |Enter|.

Compare the installed software with the following list. If any of the following items appear on your screen, remove them now, **BEFORE** you upgrade your **UNIX** PC to Version 3.51.

IPC Fix
Custom Kernel
DOS-73^{T.M.} SYSTEM VER. 1.0
IRMA^{T.M.} 3278 - Ver. 1.0 August 5, 1986
STARLAN NETWORK PROGRAM - Version 1.0
STARLAN NETWORK PROGRAM - Version 1.1
TAPE BACKUP 1.0
VOICE POWER: System Software REL 1.0
WIN^{T.M.} /3B-LAN interface Version 1.0
WIN^{T.M.} /3B-LAN interface Version 1.1
3270 Emulator + Version 1.0

All languages (upgrades from Version 2.0 and 3.0 only). You do not need to remove languages when upgrading from Version 3.5 .

To remove a package:

- 5 Select the package in the Remove Installed Software window and press <Enter>. Do this for each package you need to remove.

Note

The following items are removed automatically when your system is upgraded to Version 3.51:

DEVELOPMENT SET
RS-232 EXPANSION
Telephone Manager
ATE
Encryption

You may now proceed with the upgrade to Version 3.51. Please see the AT&T UNIX PC Software Installation Guide for instructions.

You may reinstall the following items once you have completed the upgrade:

DOS-73 SYSTEM VER. 1.0
IRMA 3278 - VER. 1.0 August 5, 1986
STARLAN NETWORK PROGRAM - Version 1.1
TAPE BACKUP 1.0
VOICE POWER: System Software REL 1.0
WIN/3B-LAN interface Version 1.1

You should NOT reinstall the following items; contact your AT&T Sales Representative for instructions on how to receive free replacements for:

WIN/3B-LAN interface Version 1.0
STARLAN NETWORK PROGRAM - Version 1.0
3270 Emulator + Version 1.0

In addition, you should not reinstall the following items; they are no longer necessary in Version 3.51:

IPC Fix
Custom Kernel

Also, you cannot use previous versions (2.0, 3.0 or 3.5) of DEVELOPMENT SET or RS-232 EXPANSION. Software for RS-232 EXPANSION is included in the Version 3.51 system software. Please call your AT&T Sales Representative for information on upgrading to DEVELOPMENT SET 3.51 of the AT&T **UNIX** PC utilities.

DOS-73 is a trademark of ALLOY COMPUTER PRODUCTS, INC.

IRMA is a trademark of Digital Communications Associates, Inc.

WIN is a trademark of the Wollongong Group, Inc.

**Important Information for Users of
The AT&T UNIX PC System Software Installation Guide**

This section contains important information for the installation of Version 3.51 software. Please review this information before installing this version, and keep it with your AT&T UNIX PC System Software Installation Guide.

- 1 Version 1.0 of STARLAN Network cannot be used with Version 3.51 of the System Software.
- 2 If you have 3270+ Version 1.0 installed on your **UNIX PC**, contact your authorized AT&T Service Representative BEFORE you upgrade to Version 3.51 for a free copy of 3270+ Version 1.16. You need this new version with Version 3.51. Once you have received the free upgrade, upgrade your **UNIX PC** to Version 3.51 and then install 3270+ Version 1.16.
- 3 If your system has 2.0 or 3.0 UNIX Utilities and any languages installed and you are not installing the Version 3.51 UNIX Utilities, remove the languages before upgrading to Version 3.51 System Software and then reinstall them.
- 4 After you have installed the **UNIX PC Foundation Set**, install Tape Backup software if you have it. It is particularly important for you to install Tape Backup software BEFORE you install any other software which has a loadable device driver, such as the Combo Board set, STARLAN, etc.
- 5 After installing the Version 3.51 Foundation Set, install the following software from floppy disk:

Communications Patch (Version 3.51)

This is found in the Communications Management binder.

Preface

This **AT&T UNIX[®] PC System Software Installation Guide** shows you how to install your **UNIX PC System Software**. This guide is divided into the following chapters:

- o **Single User to Multiuser Conversion** shows you how to convert a **UNIX PC** configured for a single user to a multiuser system.
- o **Initializing the Hard Disk and Installing Software** shows you how to prepare the **UNIX PC** and install system software.
- o **Updating System Software and Saving Files** shows you how to update system software and save the user files on a **UNIX PC** that contains an earlier version of system software.
- o **Installing the AT&T UNIX PC Curses/Terminfo End User Package** shows you how to install this package for enhanced terminal support. You only need to install Curses/Terminfo if you are running a software application that requires it.

Contents

1	Introduction	1
2	Single User to Multiuser Conversion	3
	Before You Begin	3
	Backing Up the System Files	4
	Initializing the Hard Disk for a Multiuser System	5
	Reinstalling 2.0, 3.0 or 3.5 System Software and Applications	12
	Restoring Files from Backup	13
3	Initializing the Hard Disk and Installing Software	15
	Before You Begin	15
	The System Software Disks	16
	Starting Up a New UNIX PC	18
	Initializing the Hard Disk	20
	Installing the Boot Set Disks	26
	Installing the Foundation Set	29
	Setting the Date and Time	31
	Entering a Root Password	35
	Installing the Encryption Disks (U.S. Only)	38
	What Next?	39
4	Updating System Software and Saving Files	41
	Before You Begin	41
	The System Software Disks	42
	Updating Software and Saving Files	43
	Installing the Foundation Set	50
	Installing the Encryption Disks (U.S. Only)	55
5	Installing the AT&T UNIX PC Curses/Terminfo Package	59
	Installing Curses/Terminfo	59
	Core Terminals List	62

Introduction

This AT&T UNIX[®] PC System Software Installation Guide shows you how to install your UNIX PC System Software.

You do not need any tools or special computer experience to follow the instructions. You will be shown everything you need to know.

Keep this guide after you finish installing the system software. It will be useful if you decide to update your system software at a later date.

You can use this guide for three different purposes:

- o To convert a single user system to a multiuser system.
- o To install system software on a new UNIX PC.
- o To update system software and save the user files on a UNIX PC that contains an earlier version of system software.

If you already have a UNIX PC that is set up for a single user and you want to convert it to a multiuser system, use this guide to follow these steps:

- 1 Back up an existing 2.0, 3.0 or 3.5 system
- 2 Reinitialize your hard disk for a multiuser system.
- 3 Reinstall your 2.0, 3.0 or 3.5 System Software.
- 4 Restore your user files from the backup.
- 5 Upgrade your system from 2.0, 3.0 or 3.5 to the new 3.51 System Software.

Introduction

If you have a brand new UNIX PC, use this guide to follow these steps:

- 1 Initialize the hard disk and install the system software.
- 2 Complete the system software installation by setting the correct date and time and entering a system password.

If you have a UNIX PC that already contains user files and application software, use this guide to follow these steps:

- 1 Update your system software and save your user files and application software.
- 2 Go directly to the **Updating System Software and Saving Files** section of this guide. DO NOT INITIALIZE THE HARD DISK.

Each chapter of this guide is set up to lead you through a particular procedure. When you're ready, go to the chapter that best suits your needs.

Note

Version 2.0, 3.0 or 3.5 Full System Backups CANNOT be restored on a 3.51 system.

Single User to Multiuser Conversion

This chapter shows you how to change your **UNIX** PC from a single user system to a multiuser system. Use this chapter only if you want to implement this conversion on a system that is presently set up as a single user system. All standard Version 2.0 systems are configured as single user.

If you are installing system software on a new machine, do not use this chapter. Go to the next chapter, titled **Initializing the Hard Disk and Installing Software**, for installation procedures.

If you want to save files that already exist on your hard disk and update your system software from 2.0, 3.0 or 3.5 to 3.51, and if you do not want to convert your system from single to multiuser, do not use this chapter. Go to the chapter titled **Updating System Software and Saving Files** for updating procedures.

Before You Begin

To convert your system from single user to multiuser, you will need to reinitialize your hard disk. Since this operation destroys all of the files currently on your hard disk, procedures for backing up your files must be followed very carefully.

Here is a brief outline of the procedures you will be following:

- 1 Perform a complete system backup and verify the readability of the backups.
- 2 Reinitialize the hard disk for multiuser.
- 3 Reinstall your 2.0, 3.0 or 3.5 system software.
- 4 Restore your files from the backup.
- 5 Upgrade your system from 2.0, 3.0 or 3.5 to 3.51.

Single User to Multiuser Conversion

This procedure takes anywhere from one to two hours to complete. DO NOT START THIS PROCEDURE UNLESS YOU HAVE THE TIME TO FINISH IT IN ONE SESSION. Do not turn off the power and try to start where you left off. If you make a mistake during steps 1 - 4, you must start that step over from the beginning. If you make a mistake on step 5, repeat steps 3 - 5.

Backing Up the System Files

Before you perform a system backup, remove any of the following application software that is installed on your system.

Version 2.0, 3.0 or 3.5 Development Set
EIA/RAM Combo Board software
IPC Fix
Custom Kernel
DOS-73 SYSTEM VER. 1.0
IRMA 3278 - Ver. 1.0 August 5, 1986
STARLAN NETWORK PROGRAM - Version 1.0
STARLAN NETWORK PROGRAM - Version 1.1
TAPE BACKUP 1.0
VOICE POWER: System Software REL 1.0
WIN /3B-LAN interface Version 1.0
WIN /3B-LAN interface Version 1.1
3270 Emulator + Version 1.0

All languages (upgrades from Version 2.0 and 3.0 only). You do not have to remove languages when upgrading from Version 3.5.

Removal of these packages will substantially decrease the number of floppy disks or tape cartridges you will need for your system backup. Additionally, all applications that have a loadable device driver should also be removed and reinstalled after the upgrade to version 3.51. This is relevant only under Version 3.0 or 3.5 (not 2.0). These packages can be identified by logging in as **install**, selecting |Administration|, selecting |Software Setup| and then selecting either |Configure Loadable Device Drivers| or |Setup Loadable Device Drivers|, depending on your system software version.

Note

The EIA/RAM Combo Board software is displayed in the Loadable Device Driver, Software and System Information windows as **RS232 Expansion**.

Backup Procedures

After removing the software listed above, do a complete system backup. Since reinitializing the hard disk destroys all existing files, it is essential that your system is properly backed up and that the entire backup set is readable. You can verify that the backup set is readable by doing a Restore by filename. For an extra margin of safety, you can back up the files of each individual by selecting the **Backup One User** option. For backup procedures, see the **Managing the UNIX PC** section of the AT&T UNIX PC Owner's Manual or the Tape Backup User's Guide.

Initializing the Hard Disk for a Multiuser System

To initialize the hard disk for a multiuser system:

- 1 Insert the **Diagnostics Disk 1** of 12 into the floppy drive with the label up.

Note


If you are unfamiliar with handling or inserting floppy disks, please refer to "Handling Floppy Disks" and "Inserting Floppy Disks" in the **Initializing the Hard Disk and Installing Software** chapter of this guide.

- 2 Turn the floppy drive lever down and to the left to close the floppy drive.
- 3 Turn the power switch **ON** (toward the I).

Single User to Multiuser Conversion

The power switch is located above the power cord on the rear of the UNIX PC.

If the power is already on, press the Reset button located on the rear of the UNIX PC, as shown in the following illustration:

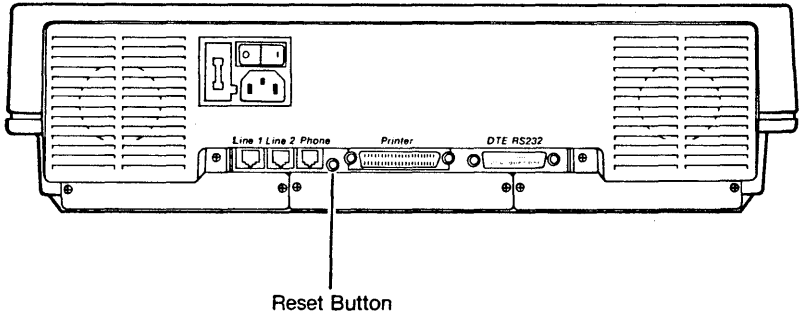

The copyright and version number screen is displayed briefly. Following the copyright screen, the total amount of memory is displayed (this varies depending upon your system configuration):


SYSTEM CONFIGURATION

524287 bytes On-board memory.
524287 bytes Expansion memory.
Type any key to continue.

- 4 Press the space bar on your keyboard.


Single User to Multiuser Conversion

You see the following Diagnostics menu:

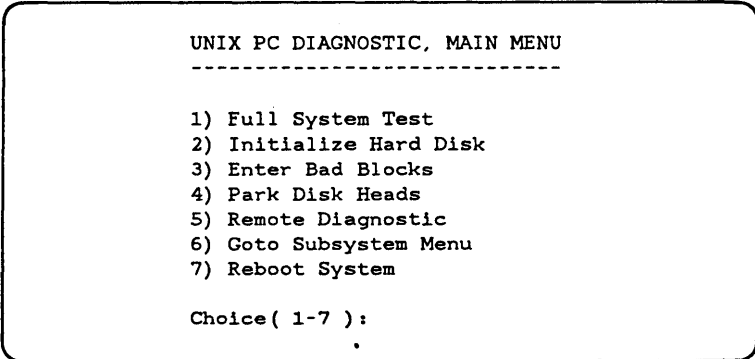

5 To select **Initialize Hard Disk**, type 2 and press the <Return> key.

The Return key is located to the right of the alphabetic keys as shown in the following illustration:

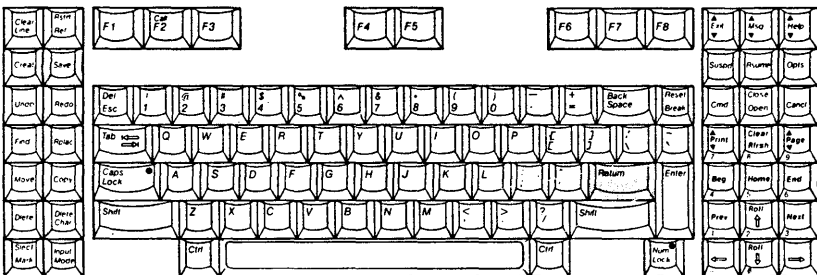

Single User to Multiuser Conversion

You see the following screen:

Select disk type:

	Drive Type	Formatted Capacity	Cyls	Heads
	-----	-----	---	---
0	- Miniscribe	(10 Megabyte)	612	2
1	- Atasi	(36 Megabyte)	645	7
2	- Maxtor	(36 Megabyte)	903	5
3	- Seagate	(10 Megabyte)	306	4
4	- Miniscribe	(20 Megabyte)	612	4
5	- Rodime	(40 Megabyte)	640	8
6	- Atasi	(40 Megabyte)	704	7
7	- Hitachi	(40 Megabyte)	714	7
8	- Miniscribe	(40 Megabyte)	1024	5
9	- Miniscribe	(64 Megabyte)	1024	8
10	- MicroSci1050	(40 Megabyte)	1024	5
11	- CDC Wren	(40 Megabyte)	989	5
12	- Others			

Please select a number: (Current selection is 4)

- 6 Type in the number that corresponds to the type of hard disk drive in your **UNIX** PC and press <Return>. The number listed as the current selection is the default.

If you are unsure of the type of hard disk drive in your **UNIX** PC, you may determine it this way:

- (1) From the Disk Type menu, press <Break>. The Break key is right below the F8 key near the upper right of your keyboard.

The system responds **Do you want to abort testing(Yes or No) ?**

- (2) Type **Y** and press <Return>.

The Diagnostic menu reappears.

Single User to Multiuser Conversion

- (3) Type **s4test** and press <Return>
You see the prompt **expert>** on the screen.
- (4) Type **6,12** and press <Return>.
You will see detailed information about your hard disk drive on the screen, such as number of cylinders, number of heads per cylinder, bad blocks, and so forth.
- (5) To determine the type of hard disk you have, look at the first 5 lines displayed:

```
WINCHESTER DISK TEST
Volume Name: WINCHE
Winchester Disk
Volume Name: WINCHE
CCC Cylinders. H Heads per Cylinder.
```

Note the number of cylinders, **CCC**, and the number of heads per cylinder, **H**. You will use these numbers to identify your hard disk drive.
- (6) You see the message **Type any key to continue.** Press the space bar. The **expert>** prompt appears.
- (7) Type an uppercase U and press <Return>. The Diagnostic menu appears.
- (8) Type **2** and press <Return>. When the Disk Type menu appears, match the number of cylinders, **CCC**, and the number of heads per cylinder, **H**, to the corresponding numbers at the right of the screen. Select your drive type, enter the selection number and press <Return>.

Single User to Multiuser Conversion

You see the following message:

Will this system be used by more than one user (Yes or No)?

- 7 Type **y** and press <Return> to initialize the disk for multiuser.

You see the message:

Initialize the WINCHESTER disk ?
(ALL DATA WILL BE ERASED !) Y/N :

Initialization of the hard disk formats it and prepares it to accept the software you are going to install.

- 8 Type **y** and press <Return>.

Note

Once you press <Return>, all information on the disk is erased.

You see the following message:

Formatting cylinder nnn

After a few moments, you see the message:

You can now choose to do a surface test
to ensure that all bad spots have been detected.
This is recommended and takes at least 10 minutes.
Do surface test(ALL DATA WILL BE ERASED) Yes or No?

9 Type **y**, and press <Return>.

The system checks the hard disk for bad blocks and enters any bad blocks in the Bad Block Table. Do not be concerned if your system finds a number of bad blocks. These do not affect the performance of your **UNIX** PC.

Note

Surface test time depends on the size of the hard disk. Ten minutes is the minimum; the larger the disk, the longer it will take.

After the system performs the surface check passes, you see the following Diagnostics menu:

UNIX PC DIAGNOSTIC, MAIN MENU

- 1) Full System Test
- 2) Initialize Hard Disk
- 3) Enter Bad Blocks
- 4) Park Disk Heads
- 5) Remote Diagnostic
- 6) Goto Subsystem Menu
- 7) Reboot System

Choice(1-7):

Single User to Multiuser Conversion

You have completed the procedure for initializing the hard disk for a multiuser system. You are now ready to reinstall your 2.0, 3.0 or 3.5 system software. DO NOT install 3.51 system software at this time. You cannot restore your 2.0, 3.0 or 3.5 full system backup onto a system that has had 3.51 system software installed.

Reinstalling 2.0, 3.0 or 3.5 System Software and Applications

The next step in the single user to multiuser conversion is the reinstallation of your 2.0, 3.0 or 3.5 system software and applications. You must reinstall the system software on which your backup files were created in order to restore them from your backup set. You cannot restore files created on a 2.0, 3.0 or a 3.5 system onto a system installed with 3.51 system software.

To begin installing 2.0, 3.0 or 3.5 system software:

- 1 Remove the Diagnostics Disk from the floppy disk drive.
- 2 Insert the 2.0, 3.0 or 3.5 Floppy Boot Disk into the floppy disk drive.
- 3 Turn the floppy drive lever down and to the left to close the floppy drive.

You should still see the Diagnostic menu that was displayed at the end of the hard disk initialization procedure.

- 4 Type 7
- 5 Press <Return> to reset the system.
- 6 Follow the steps in your 2.0, 3.0 or 3.5 System Software Installation Guide to install the Boot Set Disks and the Foundation Set.

- 7 Reinstall all software applications that you removed before doing your backup (Development Set, EIA/RAM Combo Board software, STARLAN, Voice Power, and so on). If you are upgrading your system to Version 3.51, this step must be postponed until after the upgrade procedure is completed.

Restoring Files from Backup

Once you have reinstalled your original system software and applications, you are ready to use your system backup set to restore your files.

To restore files from backup, refer to the Managing the UNIX PC section of the AT&T UNIX PC Owner's Manual or the Tape Backup User's Guide.

When you have finished restoring the backed-up files, the conversion from a single user to a multiuser system is complete. If you plan to update your system to 3.51 System Software, refer to the Updating System Software and Saving Files chapter in this guide for procedures.

Initializing the Hard Disk and Installing Software

This chapter shows you how to initialize the hard disk and install system software. Use this chapter if you are installing software for the first time on a new **UNIX** PC.

If you want to update a system that is currently running 2.0, 3.0 or 3.5 system software, go to the **Updating System Software and Saving Files** chapter of this guide.

Before You Begin

You will be initializing the hard disk, which destroys all existing files on the hard disk, and then installing system software from floppy disks.

If your system is brand new, and you are installing the system software for the first time, you do not need to worry about destroying existing files.

Caution

If you want to update system software and save files that already exist on the hard disk (on a single-user system), DO NOT INITIALIZE THE HARD DISK. Go directly to the **Updating System Software and Saving Files** chapter of this guide.

Initializing the hard disk and installing system software takes approximately one hour to complete.

DO NOT START THIS PROCEDURE UNLESS YOU HAVE THE TIME TO FINISH IT IN ONE SESSION. Do not turn off the power and try to start where you left off.

Please follow the steps very carefully to ensure a proper installation.

Initializing the Hard Disk and Installing Software

The System Software Disks

The System Software floppy disks are located in the back of the System Software binder. You should have the following System Software floppy disks on hand:

System Software - Diagnostics Disk	1 of 12
System Software - Boot Set (Floppy Boot Disk)	2 of 12
System Software - Boot Set (Floppy File System)	3 of 12
System Software - Boot Set (Hard Disk Boot)	4 of 12
System Software - Foundation Set (Disk 1)	5 of 13
System Software - Foundation Set (Disk 2)	6 of 12
System Software - Foundation Set (Disk 3)	7 of 12
System Software - Foundation Set (Disk 4)	8 of 12
System Software - Foundation Set (Disk 5)	9 of 12
System Software - Foundation Set (Disk 6)	10 of 12
System Software - Foundation Set (Disk 7)	11 of 12
System Software - Foundation Set (Disk 8)	12 of 12

The other floppy disks included with your UNIX PC are:

Telephone Manager	- Disk 1 of 1
Asynchronous Terminal Emulation	- Disk 1 of 1
EIA/RAM Combo Board Expansion	- Disk 1 of 1
Communications Patch Version 3.51	- Disk 1 of 1

(Telephone Manager, Terminal Emulation, Combo Board Expansion and Communications Patch diskettes are packaged in the Communications Management binder.)

Curses/Terminfo End User Package	- Disk 1 of 1
Terminfo Database	- Disk 1 of 1
Encryption Set (USA only)	- Disk 1 of 2
Encryption Set (USA only)	- Disk 2 of 2
GSS Drivers	- Disk 1 of 2
GSS Drivers	- Disk 2 of 2
VDI Library	- Disk 1 of 1

Handling Floppy Disks


Keep the following in mind when handling the System Software floppy disks:

Initializing the Hard Disk and Installing Software

- o Handle floppy disks by the protective jacket only. Do not touch the magnetic surface that shows through the jacket.
- o Keep contaminants such as food, beverages, smoke, and dust away from floppy disks.
- o Do not bend or crease floppy disks.
- o Keep floppy disks away from magnets that can erase data stored on floppy disks. Never place them close to a telephone, because the telephone receiver contains a magnet. Paper clips can become magnetized when kept in a magnetized container.

Inserting Floppy Disks

Insert floppy disks into the floppy disk drive with the label up as shown in the following illustration:

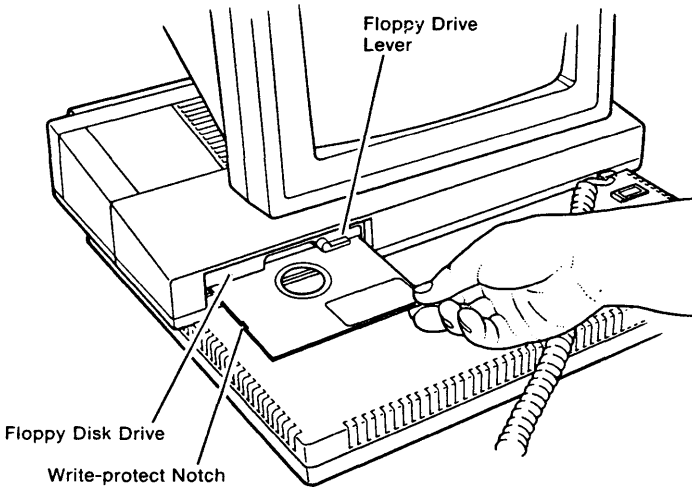


Starting Up a New UNIX PC

When you turn a new UNIX PC ON for the first time, you are instructed to load the system software. Follow the instructions in this guide as well as the instructions on your screen very carefully to ensure that your system is loaded properly.

To start up the UNIX PC:


- 1 Turn the power switch ON (toward the I). The power switch is located above the power cord on the rear of the UNIX PC.

You see the message:

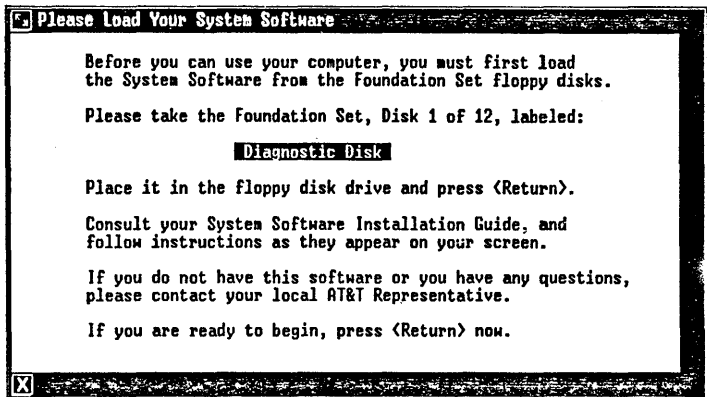

- 2 Insert the **Diagnostics Disk** 1 of 12 into the floppy drive with the label up as shown in the previous illustration.
- 3 Turn the floppy drive lever down and to the left to close the floppy drive.
- 4 Press the <Return> key.

The Return key is located to the right of the alphabetic keys, as shown in the following illustration:

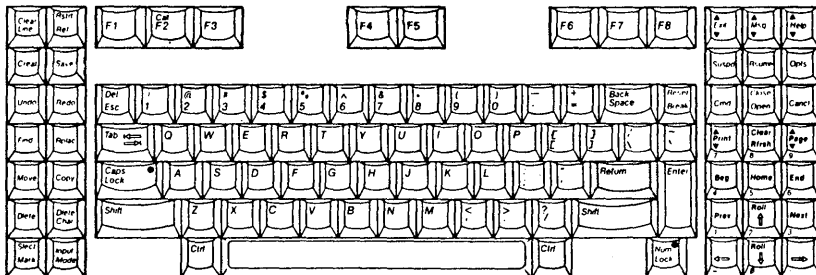

The copyright and version number screen is displayed briefly. Then, the total amount of memory is displayed. This varies depending on your system configuration:

SYSTEM CONFIGURATION

524287 bytes On-board memory.
524287 bytes Expansion memory.
Type any key to continue.

5 Press the Enter key on your keyboard.

You see the following Diagnostics menu:

UNIX PC DIAGNOSTIC, MAIN MENU

- 1) Full System Test
- 2) Initialize Hard Disk
- 3) Enter Bad Blocks
- 4) Park Disk Heads
- 5) Remote Diagnostic
- 6) Goto Subsystem Menu
- 7) Reboot System

Choice(1-7):

If your **UNIX** PC will be used by one user only, the hard disk can be initialized to recover additional space, if needed. If this is the case, continue the hard disk initialization procedure.

Initializing the Hard Disk

Initialization of the hard disk formats the disk and prepares it to accept the software you are going to install.

Caution

DO NOT INITIALIZE THE HARD DISK IF IT CONTAINS USER FILES YOU WANT TO KEEP. Go directly to the Updating System Software and Saving Files chapter of this guide.

Initializing the Hard Disk and Installing Software

To initialize the hard disk:

- 1 To select **Initialize Hard Disk** from the Diagnostics menu shown in the previous illustration, type 2 and press <Return>.

You see the following menu:

Select disk type:

Drive Type	Formatted Capacity	Cyls	Heads
-----	-----	----	-----
0 - Miniscribe	(10 Megabyte)	612	2
1 - Atasi	(36 Megabyte)	645	7
2 - Maxtor	(36 Megabyte)	903	5
3 - Seagate	(10 Megabyte)	306	4
4 - Miniscribe	(20 Megabyte)	612	4
5 - Rodime	(40 Megabyte)	640	8
6 - Atasi	(40 Megabyte)	704	7
7 - Hitachi	(40 Megabyte)	714	7
8 - Miniscribe	(40 Megabyte)	1024	5
9 - Miniscribe	(64 Megabyte)	1024	8
10 - MicroSci1050	(40 Megabyte)	1024	5
11 - CDC Wren	(40 Megabyte)	989	5
12 - Others			

Please select a number: (Current selection is 4)

- 2 Type in the number that corresponds to the type of hard disk drive in your **UNIX** PC and press <Return>. The number listed as the current selection is the default.

If you are unsure of the type of hard disk drive in your **UNIX** PC, you may determine it this way:

- (1) From the Disk Type menu, press <Break>. The Break key is right below the F8 key near the upper right of your keyboard.

Initializing the Hard Disk and Installing Software

The system responds **Do you want to abort testing(Yes or No) ?**

- (2) Type **y** and press <Return>.

The Diagnostic menu reappears.

- (3) Type **s4test** and press <Return>

You see the prompt **expert>** on the screen.

- (4) Type **6,12** and press <Return>.

You will see detailed information about your hard disk drive on the screen, such as number of cylinders, number of heads per cylinder, bad blocks, and so forth.

- (5) To determine the type of hard disk you have, look at the first 5 lines displayed:

```
WINCHESTER DISK TEST
Volume Name: WINCHE
Winchester Disk
Volume Name: WINCHE
CCC Cylinders. H Heads per Cylinder.
```

Note the number of cylinders, **CCC**, and the number of heads per cylinder, **H**. You will use these numbers to identify your hard disk drive.

- (6) You see the message **Type any key to continue.** Press the space bar. The **expert>** prompt appears.

- (7) Type an uppercase U and press <Return>. The Diagnostic menu appears.

- (8) Type **2** and press <Return>. When the Disk Type menu appears, match the number of cylinders, **CCC**, and the number of heads per cylinder, **H**, to the corresponding numbers at the right of the screen. Select your drive type, enter the selection number and press <Return>.

Initializing the Hard Disk and Installing Software

You see the following message:

Will this system be used by more than one user(Yes or No)?

- 3 Type **n** and press <Return> to initialize the disk for a single user.

You see the message:

Initialize the WINCHESTER disk ?
(ALL DATA WILL BE ERASED !) Y/N :

- 4 Type **y** and press <Return>.

You see the following message:

Formatting cylinder nnn

Initializing the Hard Disk and Installing Software

After a few moments, you see the message:

The Bad Block Table contains **n** entries.
Format completed.

Surface Test

Volume Name:	WINCHE			
Total Space =	19584	Blocks		
Partition 0 =	32	Blocks		
Partition 1 =	40000	Blocks	(SWAP)	Single-user
User space =	15552	Blocks		

You can now choose to do a surface test to ensure that all bad spots have been detected. This is recommended and takes at least 10 minutes. Do surface test (ALL DATA WILL BE ERASED) Yes or No?

5 Type **y**, and press <Return>.

The system checks the hard disk for bad blocks and enters any bad blocks in the Bad Block Table. Do not be concerned if your system finds a number of bad blocks. These do not affect the performance of your UNIX PC.

Note

Surface test time depends on the size of the hard disk. Ten minutes is the minimum; the larger the disk, the longer it will take.

Initializing the Hard Disk and Installing Software

After the system performs the surface check passes, you see the following message:

The Bad Block Table contains n entries.
Press RETURN to continue:

6 Press <Return>.

You see the message:

Park Disk Heads
Hard Disk parking done!

The following diagnostics menu appears:

UNIX PC DIAGNOSTIC, MAIN MENU

- 1) Full System Test
- 2) Initialize Hard Disk
- 3) Enter Bad Blocks
- 4) Park Disk Heads
- 5) Remote Diagnostic
- 6) Goto Subsystem Menu
- 7) Reboot System

Choice(1-7):

Initializing the Hard Disk and Installing Software

You have completed the hard disk initialization procedure. You are now ready to install the system software boot set disks.

Installing the Boot Set Disks

This section shows you how to install system software from floppy disks.

To install the boot set disks:

- 1 Remove the Diagnostics Disk from the floppy disk drive.
- 2 Insert the Boot Set (Floppy Boot Disk) Disk 2 of 12 into the floppy disk drive.
- 3 Turn the floppy drive lever down and to the left to close the floppy drive.
You should still see the Diagnostics menu that was displayed at the end of the hard disk initialization procedure.
- 4 Type 7
- 5 Press <Return> to reset the system.

The system is reset. You see the copyright and version number screen, followed by a display of installed memory.

After a few moments, you see the following message:

```
Floppy Unix
Please insert Floppy File System disk - disk 3 of 12
Press any key when ready
```

Initializing the Hard Disk and Installing Software

- 6 Remove the Boot Set (Floppy Boot Disk) Disk 2 of 12 from the floppy drive.
- 7 Insert the Boot Set (Floppy File System) Disk 3 of 12 into the floppy drive and close the floppy drive.
- 8 Press the Enter key on your keyboard.

The **working** indicator appears on the screen and the floppy disk light turns on.

You see the following message:

If you have been running an older version of software and want to retain your user files and installed programs, you will need to follow the UPGRADE procedure. Otherwise, all data on your UNIX PC will be replaced by the Version 3.51 Foundation Set.

Do you want to preserve any user files or installed software already on this hard disk (yes or no)?

Since you just initialized your hard disk, you need not worry about erasing files.

- 9 Type n
- 10 Press <Return>.

You see the following message:

WARNING: If you continue all files currently
on the hard disk will be erased!!

Do you really want to continue (yes or no)?

Initializing the Hard Disk and Installing Software

- 11 Type **y**
- 12 Press <Return>

You see a list of messages informing you of the files being created on your hard disk.

After about two minutes, you see:

You will be asked to insert the Hard Disk Boot floppy disk momentarily. Please insert the floppy labeled Hard Disk Boot now. Press <Return> when ready.

- 13 Remove the Boot Set (Floppy File System) disk from the floppy disk drive.
- 14 Insert the Boot Set (Hard Disk Boot) Disk 4 of 12 into the floppy drive and close the drive.
- 15 Press <Return>.

The screen clears. The copyright screen appears momentarily while the floppy disk is searched. The following message is displayed:

Please insert the floppy disk labelled:
System Software - Foundation Set (1) - 5 of 12
Touch <Return> to continue when ready

This means you are ready to install the system software Foundation Set.

Installing the Foundation Set

When you install the Foundation software, you are installing UNIX utilities and programs.

To install the Foundation Set:

- 1 Remove the Boot Set (Hard Disk Boot) disk from the floppy disk drive.
- 2 Insert the Foundation Set (Disk 1) Disk 5 of 12 into the floppy drive and close the floppy drive.
- 3 Press <Return>.

You see the **Reading in progress** message. The **working** indicator and the disk drive light are on. The system takes about a minute to copy the information from the floppy disk, and then displays the following message:

It is safe to remove the floppy diskette.
To EXIT - press <E> followed by <RETURN>.
To continue - insert floppy disk #2 and press the
<RETURN> key.

- 4 Remove the Foundation Set (Disk 1) disk from the floppy drive.
- 5 Insert the Foundation Set (Disk 2) Disk 6 of 12 into the floppy drive and close the floppy drive.
- 6 Press <Return>.

You see the **Reading in progress** message.


After the system is finished with Foundation Set (Disk 2), you see the message:


It is safe to remove the floppy diskette.
To EXIT - press <E> followed by <RETURN>.
To continue - insert floppy disk #3 and press the
<RETURN> key.

- 7 Remove the disk and insert the next disk of the Foundation Set.

Follow this procedure for the remainder of the floppy disks in the Foundation Set. Make sure you insert the disks in the proper numerical order. If you make a mistake, you will be given an opportunity to insert the proper floppy disk. If you make an unrecoverable mistake, start over at the beginning of "Installing the Boot Set Disks" in this chapter.

When the system is done loading the Foundation Set, it displays the copyright screen again and follows that with a search of the hard disk. Upon completion, the total memory is displayed briefly, followed by four messages:

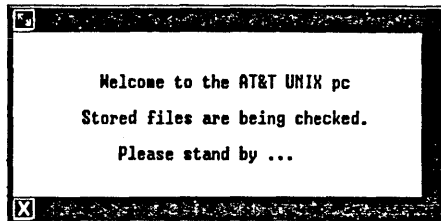

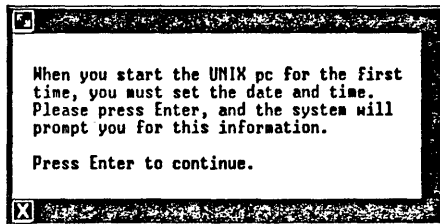


- 8 Remove the last Foundation Set disk, then press <Enter>.

Setting the Date and Time

To complete the system software installation, you must set the date and time, and then enter a password for the system's `root` directory.

You see the following Date and Time window:

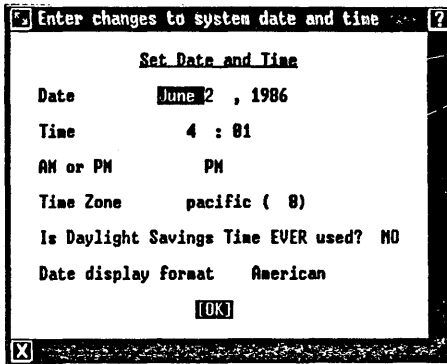

Note

It is only necessary to change incorrect entries when setting the date and time. Use the Next key or the Return key to move between entries.

When you first see the Date and Time screen, the **month** entry is highlighted.

To change the date and time:

- 1 Press the <Mark> key until the abbreviation for the correct month is displayed in the month entry.

The Mark key is located in the lower-left corner of the keyboard.

- 2 Press <Return> to move to the **date** entry.
- 3 Type the current date.

The date you type is entered over the existing date.

If you make a mistake when typing the date, use the Back Space key to correct it. The Back Space key is located immediately below the F7 key.

- 4 Press <Return> to move to the **year** entry.
- 5 Type the two numbers for the current year (**84** for 1984, **85** for 1985, and so on).

The numbers you type are entered over the existing numbers.

- 6 Press <Return> to move to the **hour** entry.
- 7 Type the current hour of the day (**1** for both 1 a.m. and 1 p.m., and so on).

It is a good idea to set the minute entry a couple of minutes ahead of the current time, so the time is correct when you've completed your changes.

- 8 Press <Return> to move to the **minutes** entry.
- 9 Type the current minutes past the hour.
- 10 Press <Return> to move to the **AM or PM** entry.
- 11 Press <Mark> until the correct entry is displayed.
- 12 Press <Return> to move to the **Time Zone** entry.

If the time zone displayed is not correct, press <Mark> until the correct time zone is displayed.

If you are unsure of the correct time zone for your area, see your AT&T UNIX PC Owner's Manual for complete time zone information.

- 13 Press <Return> to move to the **Daylight Savings** entry.


Automatic time changes due to Daylight Savings Time should be disabled due to changes in the dates for Daylight Savings Time.

- o Press <Mark> until **NO** is displayed.

Check the Date and Time form. If you need to go back and make a change, use the <Next> key or the <Return> key. When you have completed your changes:

- 14 Press <Return> to move to the **Date Display Format** entry.
- 15 Press <Mark> until the correct entry is displayed.
- 16 Press <Enter>.

You see a window similar to this:

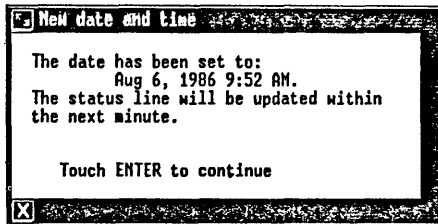


- 17 Press <Enter> to continue.

The following message is displayed:

System will now be rebooted to synchronize the system clock.

- 18 Press <Enter> to continue.

After a few moments, you see the following window:

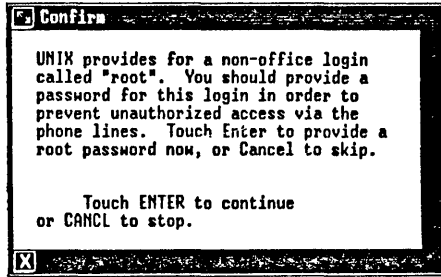

This window informs you that you should provide a password to protect the **root** login.

Entering a Root Password


Although you are requested to enter a **root** password during the system software installation, you can always change it later by using the Administration menu of the **install** login. For this reason, and if you are not too familiar with passwords, make the **root** password easy to remember.

If you decide you do not want to enter a password at this time, press the <Cancl> key located near the upper-right corner of your keyboard.

To enter a root password:

- 1 Press <Enter>.

You see this window:

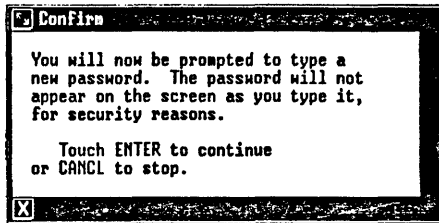

- 2 Press <Enter>.

You are prompted to type your password. The system accepts a combination of up to eight alphabetic and numeric characters. You should avoid using special characters such as @, *, backspace, ", #, etc. Do not forget your **root** password.

- 3 Type your **root** password and then press <Return>.


You are required to type the same password twice to protect against a typing error.

- 4 Type your password again.
- 5 Press <Return>.

If you did not type the same password, you see **They don't match; try again.** Carefully reenter the desired password.

The password you typed is now the password for the **root** directory. The next time you try to login as **root**, you must use the password.

After entering a password, you see the following window:

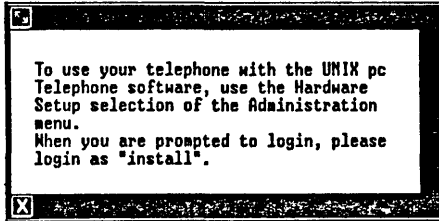

This window tells you to use the Administration menu of the **install** login to set up your telephone software. However, you can still use your telephone as you did before attaching it to the UNIX PC.

For complete instructions on how to install and set up your Telephone software, see "Setting Up the Telephone Lines" in the **Managing the UNIX PC** section of the AT&T UNIX PC Owner's Manual.

- 6 Press <Enter> to continue.

After a few moments, you see the following login display:

Welcome to the AT&T UNIX pc

Please login:

You have completed the installation of your UNIX PC hardware and system software.


Installing the Encryption Disks (U.S. Only)

If your **UNIX PC** was purchased in the U.S., the Encryption disks are included. If you do not plan to install the Development Set and/or the Enhanced Editors (part of the optional **UNIX PC UNIX Utilities** package), the Encryption disks can be installed now. If you do plan to install the Development Set and/or the Enhanced Editors, you need to do so **BEFORE** you install Encryption. Follow the installation procedures outlined below. If the Encryption disks were not included, skip to the section titled **What Next?**.

To install the Encryption disks:

- 1 At the **Please login:** prompt, type **install**.
- 2 Press <Enter>.
- 3 Select |Administration| from the Office and press <Enter>.
- 4 Select |Software Setup| from the Administration menu and press <Enter>.

The Software menu appears as shown below.

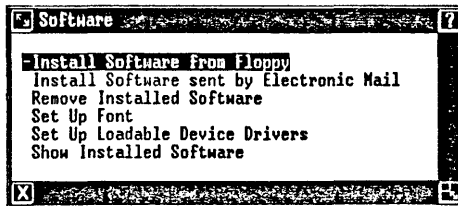

- 5 Select |Install Software from Floppy| and press <Enter>.

A message prompting you to install the first floppy disk appears.

Initializing the Hard Disk and Installing Software

- 6 Insert the Encryption Set disk labeled Disk 1 of 2 and press <Enter>.

Several messages appear briefly, followed by the message **Checking for Size file**.

The message **Install in progress** appears.

After a moment, you see the following message:

**It is safe to remove the floppy diskette.
To Exit - press <E> followed by <Return>.
To continue - insert floppy disk #2 and
press the <Return> key.**

- 7 Insert the Encryption Set disk labeled Disk 2 of 2 and press <Return>.

After a moment, you see the message: **Installing the Crypt Replacement Software**. A window appears telling you the installation is complete.

- 8 Remove the floppy disk and replace it in its envelope.
- 9 Press <Enter>.
- 10 Close the installation windows and log out of the Office.

This completes the Encryption Set software installation.

What Next?

If you plan to use the Telephone Manager or the Asynchronous Terminal Emulator (ATE), you should install them now. See your AT&T UNIX PC Telephone Manager User's Guide and your AT&T UNIX PC Terminal Emulation User's Guide in the Communications Management binder for installation and setup instructions.

Initializing the Hard Disk and Installing Software

If you are unsure about the Telephone Manager or ATE, refer to the respective manuals for introductions and functional descriptions.

To get acquainted with the UNIX PC, you should read the AT&T UNIX PC Getting Started Guide and follow the examples. You'll find the UNIX PC makes it easy to use a computer.

If you are an experienced computer user, you'll want to read the AT&T UNIX PC Owner's Manual and learn how to use the install login and the Administration menu to set up your communications ports and printers. This information is found under "Setting Up the UNIX PC" in the **Managing the UNIX PC** section of the Owner's Manual.

The Owner's Manual also contains information on how to install application software. This information is found under "Updating the UNIX PC" in the **Managing the UNIX PC** section of the Owner's Manual.

If you are looking for information on using your application software, see the application guides that come with each software package.

Updating System Software and Saving Files

This chapter shows you how to install a new version of system software and save the user files you have created.

When you update your **UNIX** PC to Version 3.51, you must also update your Telephone Manager and your Asynchronous Terminal Emulator (ATE). See the AT&T UNIX PC Telephone Manager User's Guide and the AT&T UNIX PC Terminal Emulation User's Guide for installation procedures.

Please follow the steps very carefully to ensure a proper installation.

Before You Begin

Although you can save existing user files when installing a new version of system software, it is recommended that you do the following before updating your system software:

- 1 Save your telephone directories by using the Save Directory command in the Call Screen Telephone Commands menu.
- 2 Remove any of the following software that you currently have installed:

- Version 2.0, 3.0 or 3.5 Development Set
- EIA/RAM Combo board software
- IPC Fix
- Custom Kernel
- DOS-73 SYSTEM VER. 1.0
- IRMA 3278 - Ver. 1.0 August 5, 1986
- STARLAN NETWORK PROGRAM - Version 1.0
- STARLAN NETWORK PROGRAM - Version 1.1
- TAPE BACKUP 1.0
- VOICE POWER: System Software REL 1.0
- WIN /3B-LAN interface Version 1.0
- WIN /3B-LAN interface Version 1.1
- 3270 Emulator + Version 1.0

All languages (upgrades from Version 2.0 and 3.0 only) You do not need to remove languages when upgrading from Version 3.5.

Removal of these packages substantially decreases the number of floppy disks or tape cartridges you will need to back up the system. In addition, all 3.0 and 3.5 applications with loadable device drivers should also be removed and reinstalled after the upgrade to 3.51. These packages can be identified by logging in as **install**, selecting |Administration|, selecting |Software Setup| and then selecting either |Configure Loadable Device Drivers| or |Set Up Loadable Device Drivers|, depending on your system software version.

- 3 After removing the software listed above, do a complete backup. For an extra margin of safety, back up each user using the **Backup One User** option. Refer to the **Managing the UNIX PC** section of the **AT&T UNIX PC Owner's Manual** or the Tape Backup User's Guide for backup procedures.

The System Software Disks

The System Software floppy disks are located in the back of the System Software binder. You should have the following System Software floppy disks on hand:

System Software - Diagnostics Disk	1 of 12
System Software - Boot Set (Floppy Boot Disk)	2 of 12
System Software - Boot Set (Floppy File System)	3 of 12
System Software - Boot Set (Hard Disk Boot)	4 of 12
System Software - Foundation Set (Disk 1)	5 of 12
System Software - Foundation Set (Disk 2)	6 of 12
System Software - Foundation Set (Disk 3)	7 of 12
System Software - Foundation Set (Disk 4)	8 of 12
System Software - Foundation Set (Disk 5)	9 of 12
System Software - Foundation Set (Disk 6)	10 of 12
System Software - Foundation Set (Disk 7)	11 of 12
System Software - Foundation Set (Disk 8)	12 of 12

Updating System Software and Saving Files

The other floppy disks included with your **UNIX** PC are:

Telephone Manager	- Disk 1 of 1
Asynchronous Terminal Emulation	- Disk 1 of 1
EIA/RAM Combo Board Expansion	- Disk 1 of 1
Communications Patch Version 3.51	- Disk 1 of 1

(Telephone Manager, Terminal Emulation, Combo Board Expansion and Communications Patch diskettes are packaged in the Communications Management binder.)

Curses/Terminfo End User Package	- Disk 1 of 1
Terminfo Database	- Disk 1 of 1
Encryption Set (USA only)	- Disk 1 of 2
Encryption Set (USA only)	- Disk 2 of 2
GSS Drivers	- Disk 1 of 2
GSS Drivers	- Disk 2 of 2


Updating Software and Saving Files

You can update your system software and save any user files that already exist on your hard disk at the same time. If you are installing a new version of system software on a **UNIX** PC that you have been using, this is the update procedure you should follow.

To update system software while saving existing files:

- 1 Insert the Boot Set (Floppy Boot Disk) Disk 2 of 12 into the floppy disk drive.
- 2 Turn the floppy drive lever down and to the left to close the floppy drive.

- 3 Press the reset button on the rear of the UNIX PC, as shown in the following illustration:

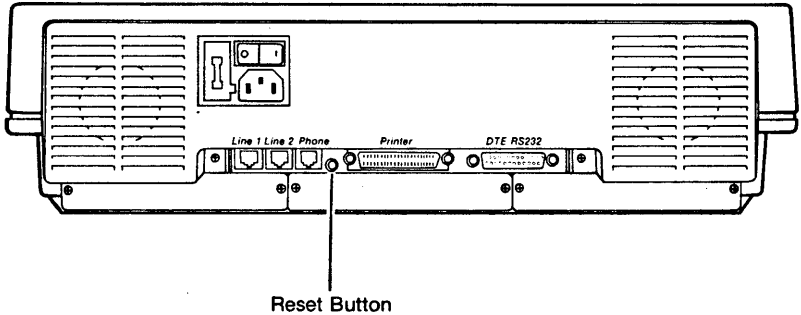

The system is reset. The copyright and version number screen is briefly displayed, followed by a display of installed memory.

After a few moments, you see the following message:

```
Floppy Unix
Please insert Floppy File System disk - disk 3 of 12
Press any key when ready
```

Updating System Software and Saving Files

- 4 Remove the Boot Set (Floppy Boot Disk) Disk 2 of 12 from the floppy drive.
- 5 Insert the Boot Set (Floppy File System) Disk 3 of 12 into the floppy drive and close the floppy drive.
- 6 Press the <Return> key on your keyboard.

The **working** indicator appears on the screen and the floppy disk light turns on.

You see the message:

If you have been running an older version of software and want to retain your user files and installed programs, you will need to follow the UPGRADE procedure. Otherwise, all data on your UNIX PC will be replaced by the Version 3.51 Foundation Set.

Do you want to preserve any user files or installed software already on this hard disk (yes or no)?

- 7 Type **y** and press <Return>.

Updating System Software and Saving Files

You see the message:

WARNING: Consult your Installation Guide before you upgrade your UNIX PC to Version 3.51. You MUST follow the recommended procedures for backing your data and applications software.

NOTE: If you have any of these software sets installed on your UNIX PC, they will be removed by the upgrade procedure:

UNIX Utilities Development Set
RS-232 Expansion Board

You will need to replace this software with the Version 3.51 software. Consult your Installation Guide for further information.

Do you want to continue loading the version 3.51 software?

This message is meant simply as a precaution. In general, it is always recommended that you back up your user files before upgrading your system.

If you want to reboot your system and perform a system backup, type **n**, then press <Return>.

Updating System Software and Saving Files

If you want to continue with the upgrade:

8 Type **y** and press <Return>.

The system checks to be sure there is sufficient space on the hard disk. Then you see the message:

There is sufficient space on the system to install 3.51
.... installation will proceed.

If you do not have enough space on the hard disk, you see the following message:

Unfortunately there is insufficient space on your system to perform the upgrade to version 3.51 while saving user files.

2000 free blocks are required for this conversion.

The state of the system remains unchanged and will be rebooted now. When the system comes up, please remove some files and try again.

Please wait

No changes are made to your existing files, and the update procedure is canceled.

Updating System Software and Saving Files

If you see this message, wait until the system has rebooted automatically, then remove some files from the hard disk before updating. After removing some files, restart the procedure from the beginning of this chapter at step 1. If you have the 2.0, 3.0 or 3.5 Development Set or EIA/RAM Combo Board software installed, you can remove them to secure additional disk space.

If you do have sufficient space:

You see the following message:

The installation procedure will now save special system files which may require modification as a result of the upgrade to Version 3.51 ... please wait

You see a list of messages informing you of the files being saved on your hard disk. After about two minutes (depending upon the number of files that are saved), you see the following message:

You will be asked to insert the Hard Disk Boot floppy disk momentarily.

Please insert the floppy labeled Hard Disk Boot now.
Press <Return> when ready.

Updating System Software and Saving Files

- 9 Remove the Boot Set (Floppy File System) disk from the floppy disk drive.
- 10 Insert the Boot Set (Hard Disk Boot) Disk 4 of 12 into the floppy drive and close the drive.
- 11 Press <Return>.

The screen clears. The Copyright screen appears momentarily while the floppy disk is searched.

You see the following message:

The telephone manager, terminal emulator, development set, and encryption software are now separately installable. The old versions of the above software will now be removed. If you use any of the above software, you will need to install it after you have completed installing this foundation set.

This message simply informs you that some of the software that used to be part of the Foundation Set must now be installed separately.

After a few moments, you see the message:

Please insert the floppy disk labelled:
System Software - Foundation Set (1) - 5 of 12
Touch <Return> to continue when ready

This message informs you to begin installing the Foundation Set software. Go on to the next section, **Installing the Foundation Set**.

Installing the Foundation Set

To install the Foundation Set:

- 1 Remove the Boot Set (Hard Disk Boot) Disk 4 of 12 from the floppy disk drive.
- 2 Insert the Foundation Set (Disk 1) Disk 5 of 12 into the floppy drive and close the floppy drive.
- 3 Press <Return>.

You see the **Reading in progress** message. The **working** indicator and the disk drive light are on. The system takes about one minute to copy the information from the floppy disk, and then displays the message:

It is safe to remove the floppy diskette.
To EXIT - press <E> followed by <RETURN>.
To continue - insert floppy disk #2 and press the
<RETURN> key.

- 4 Remove the Foundation Set (Disk 1) Disk 5 of 12 from the floppy drive.
- 5 Insert the Foundation Set (Disk 2) Disk 6 of 12 into the floppy drive and close the floppy drive.
- 6 Press <Return>.

You see the **Reading in progress** message.

After the system is finished with Foundation Set (Disk 2), you see the following message:

It is safe to remove the floppy diskette.
To EXIT - press <E> followed by <RETURN>.
To continue - insert floppy disk #3 and press the
<RETURN> key.

Updating System Software and Saving Files

- 7 Remove the disk and insert the next disk of the Foundation Set.

Follow this procedure for the remainder of the disks in the Foundation Set. Make sure you insert the disks in the proper numerical order. If you make a mistake, you will be given an opportunity to insert the proper floppy disk. If you make an unrecoverable mistake, you must recreate your original environment (by reinstalling 2.0, 3.0 or 3.5) and start over at the beginning of "Updating Software and Saving Files" in this section.




After the Foundation Set is installed, the system converts a variety of existing files, and displays messages similar to the following:

System files will be converted - please wait...

If there are any system files that were unexpectedly modified, they are stored in the directory `/u/SAVE`. If you are not familiar with UNIX commands, you do not need to be concerned with these files.

Updating System Software and Saving Files

When the system is done with the conversion, it displays the copyright screen again and follows that with a search of the hard disk. Upon completion, the total memory is displayed briefly, followed by three messages:

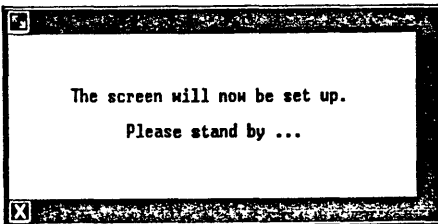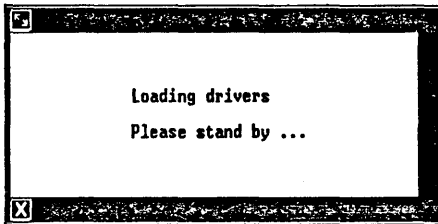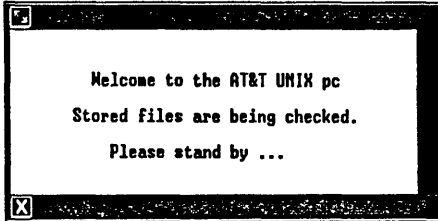

Note

After you see the copyright screen, you may see a **system panic** message followed by a prompt to press the reset button. This may be due to failure to remove all applications that have loadable device drivers, and should not cause alarm. No damage has occurred.

If you see this message, press the reset button and continue with the instructions. Several resets may be necessary to clear the problem.

After a few moments, you see the following login display:

Welcome to the AT&T UNIX pc

Please login:

The system software update procedure is complete. Remove the last Foundation Set disk, and log in to the system with your user login id.

For a complete update to 3.51, you must also update your Telephone Manager and your Asynchronous Terminal Emulator. For installation procedures, refer to your Telephone Manager User's Guide and your Terminal Emulation User's Guide.

Updating System Software and Saving Files

You must also replace any software that was removed for the upgrade procedure. This includes Development Set, EIA/RAM Combo board software, STARLAN Network software, Voice Power software, and so on. Versions compatible with 3.51 are required for the Development Set, STARLAN Network, EIA/RAM Combo Board, and Voice Power software. The DOS-73 system should be reloaded. For installation instructions, refer to the corresponding user's manual for each package or see the **Updating the UNIX PC** section in your AT&T UNIX PC Owner's Manual.

Installing the Encryption Disks (U.S. Only)


If your UNIX PC was purchased in the U.S., the Encryption disks are included. If you do not plan to install the Development Set and/or the Enhanced Editors (part of the optional UNIX PC UNIX Utilities package), the Encryption disks can be installed now. If you do plan to install the Development Set and/or the Enhanced Editors, you need to do so before you install Encryption. Follow the installation procedures outlined below. If the Encryption disks were not included, disregard this section.

To install the Encryption disks:

- 1 At the **Please login:** prompt, type **install**.
- 2 Press <Enter>.
- 3 Select |Administration| from the Office and press <Enter>.
- 4 Select |Software Setup| and press <Enter>.

Updating System Software and Saving Files

The Software menu appears as shown below.

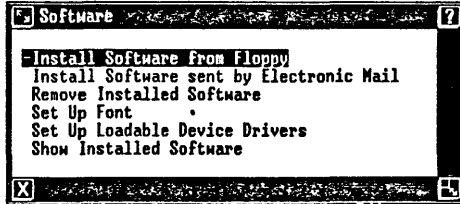

- 5 Select |Install Software from Floppy| and press <Enter>.

A message prompting you to install the first floppy disk appears.

- 6 Insert the Encryption disk labeled Disk 1 of 2 and press <Enter>.

Several messages appear briefly, followed by the message **Checking for Size file.**

The message **Install in progress** appears.

After a moment, you see the following message:

It is safe to remove the floppy diskette.
To EXIT - press <E> followed by <RETURN>.
To continue - insert floppy disk #2 and press the
<RETURN> key.

Updating System Software and Saving Files

- 7 Insert the Encryption disk labeled Disk 2 of 2 and press <Return>.

After a moment, you see the message:

Installing the Crypt Replacement Software.

A window appears telling you that installation is complete.

- 8 Remove the floppy disk and replace it in its envelope.
- 9 Press <Enter>.
- 10 Close the installation windows and log out of the Office.

This completes the Encryption software installation.

Installing the AT&T UNIX PC Curses/Terminfo Package

Version 3.51 of the System Software for the UNIX PC provides enhanced terminal support using the AT&T UNIX PC Curses/Terminfo End User package. This package allows you to run application programs that are compiled with a version of curses that uses the terminfo database. You need to install this package only if you run an application that requires it. Your application will inform you if terminfo is required.

Installing Curses/Terminfo

This package consists of one installable disk containing a core set of terminals and one noninstallable mountable disk containing a database of 1,260 terminals.

If your terminal appears on the list of terminals in the Core Terminals List at the end of these procedures, you need to install only the disk labeled **Curses/Terminfo End User Package**. If your terminal is not on the list, you still need to install the **Curses/Terminfo End User** disk, and you will need to use the disk labeled **Terminfo Database**.

Installing the Curses/Terminfo End User Disk

The Curses/Terminfo End User disk is installed using the standard Software Setup entry from the Administration menu.

To install the disk:

- 1 From the Office of **install**, select |Administration| and press <Enter>.

You see the Administration menu.

- 2 Select |Software Setup| and press <Enter>.

You see the Software Setup menu.

Installing the AT&T UNIX PC Curses/Terminfo Package

- 3 Select |Install Software from Floppy| and press <Enter>. You see a window asking you to insert the floppy disk.
- 4 Insert the disk and press <Enter>. You see the **Checking for Size file** message, then the message **Install in progress**.
- 5 You are notified when to remove the floppy disk and when the installation is complete.
- 6 When the installation is complete, close the Software windows.

Using the Terminfo Database Disk

If your terminal is not part of the core set on the Curses/Terminfo End User disk, you need to use the Terminfo Database disk to select a terminal(s). You must first install the Curses/Terminfo End User disk before you can use this disk.

To select terminal(s) from the Terminfo Database disk:

- 1 Open |Administration|. You see the Administration menu.
- 2 Select |Update Terminfo Database| and press <Enter>. You see a Confirm message asking you to insert the Terminfo Database disk.
- 3 Insert the disk and press <Enter>. You see the Add Terminals to Terminfo Database window containing a list of terminal manufacturers.

- 4 Select the desired manufacturer and press <Enter>.

You see the message **Entries being gathered from diskette**

After a minute or so, you see a list of the terminals supported by the selected manufacturer.

- 5 Select the desired terminal and press <Enter>.

Note

Use the <Slect/Mark> key to select more than one terminal.

You see a message that the entries are being installed.

Once the entries have been installed, you are returned to the Administration menu. Remove the floppy disk and return it to its sleeve for safekeeping. You can use this disk to install more terminals at a later time, if needed.

This completes the instructions for installing the AT&T UNIX PC Curses/Terminfo End User package.

Installing the AT&T UNIX PC Curses/Terminfo Package

Core Terminals List

1620	1640					
2621	2621a	2623	2624-4p	2626	2626a	2640a
2645	2648a	2621-wl	2622	2623a	2624a	2626A
2626p	2640b	2648	2621A	2622a	2624	2624b
2626P	2640	2644a	2648A			
31	36	3a				
4012	4015	4025	4027cu	4113	42	4418
4424-2	4426	4013	4023	4025cu	4112	4114
4410	4424	4424-3	450	4014	4024	4027
4112-nd	4115	4415	4424-1	4425		
510	510a	513	513bct	5410	5418	5420
5420_2	5425	5620				
610	610bct	6300PLUS	6300plus			
7300						
925	950					
ATT4410	ATT4424-2	ATT5410	ATT5425	ATTPTS10	ATT4415	ATT4425
ATT5418	ATT5620	ATTPTS10A	ATT4418	ATT4426	ATT5420	ATT610BCT
ATT4424	ATT513	ATT5420_2	ATTPTS05			
PC6300PLUS	PC7300					
S4						
adm3	att4410	att4425	att5410	att5620	adm31	att4415
att4426	att5418	att610bct	adm36	att4418	att510	att5420
attpt505	adm3a	att4424	att510a	att5420_2	attpt510	adm42
att4424-2	att513	att5425	attpt510a			
bantam						
c100	c104	c108-8p	concept100	concept108-8p	c100-4p	c108
concept	concept108					
decwriter	dmd	dw	dw2	dw4	diablo	dumb
dw1	dw3					
fviewpoint						
hp2621	hp2622a	hp2624b	hp262x	hp2648	hp2621-wl	hp2623
hp2624b-4p	hp2640a	hp2648a	hp2621A	hp2623a	hp2626	hp2640b
hp45	hp2621a	hp2624	hp2626a	hp2644a	hp2622	hp2624a
hp2626p	hp2645					
intext	intext2	intextii				
lal20	lp	lpr				
pc6300plus	pe550	print	printing	pt510	pc7300	pe6100
printer	pt505	pt510a				
regent100	regent200	regent40	regent20	regent25	regent60	
s4						
tek	tek4023	teletec	tty4426	ttydmd	tek4012	tek4024
televideo950	tty5410	twi925	tek4013	tek4025	tex	tty5420
tvj950	tek4014	tek4027	tty4424	tty5425	tek4015	tek4112
tty4424-2	tty5620					
unix_pc	unixpc					
viewpoint	vt100	vt100-am	vt52			

999-801-0251S