

The image displays a grid of 120 small, illegible data plots or charts arranged in 10 rows and 12 columns. Each plot appears to contain technical data, possibly related to the TSV05 system, but the text and figures within are too small to be discernible. The plots are organized in a regular grid pattern across the left side of the page.



B1

D  
W  
A [C

SEQ 000

5  
6  
7  
8  
9  
10  
11  
12  
13  
14  
15  
16  
17  
18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46

.REM\_

IDENTIFICATION  
-----

PRODUCT ID: AC-T178D-MC  
PRODUCT TITLE: CVTSEDO TSV05 DATA RELIABILITY  
PRODUCT DATE: 4-JUN-87  
MAINTAINER: CSS/PGG DIAGNOSTICS  
AUTHOR: DICK GORDON

THE INFORMATION IN THIS DOCUMENT IS SUBJECT TO CHANGE WITHOUT NOTICE AND SHOULD NOT BE CONSTRUED AS A COMMITMENT BY DIGITAL EQUIPMENT CORPORATION. DIGITAL EQUIPMENT CORPORATION ASSUMES NO RESPONSIBILITY FOR ANY ERRORS THAT MAY APPEAR IN THIS DOCUMENT.

NO RESPONSIBILITY IS ASSUMED FOR THE USE OR RELIABILITY OF SOFTWARE ON EQUIPMENT THAT IS NOT SUPPLIED BY DIGITAL OR ITS AFFILIATED COMPANIES.

COPYRIGHT (C) 1982, 1983, 1987 BY DIGITAL EQUIPMENT CORPORATION

THE FOLLOWING ARE TRADEMARKS OF DIGITAL EQUIPMENT CORPORATION:

DIGITAL	PDP	UNIBUS	MASSBUS
DEC	DECUS	DECTAPE	



48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67  
68  
69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100  
101  
102  
103  
104

USER DOCUMENTATION TABLE OF CONTENTS

-----  
GLOSSARY

1.0 GENERAL INFORMATION

1.1 PROGRAM ABSTRACT

- 1.1.1 FUNCTIONAL DESCRIPTION
- 1.1.2 STRUCTURE OF PROGRAM
- 1.1.3 MEMORY MAP
- 1.1.4 DIAGNOSTIC INFORMATION
  - 1.1.4.1 SCOPE
  - 1.1.4.2 ERROR RECOVERY
  - 1.1.4.3 WRITE ERROR RECOVERY
    - 1.1.4.3.1 MEDIA/OPERATIONAL  
SELECTIVE WRITE-ERROR-RECOVERY
    - 1.1.4.3.2 OPERATIONAL WRITE-ERROR-RECOVERY
  - 1.1.4.4 DIAGNOSTIC TIMING ADJUSTMENT

1.2 SYSTEM REQUIREMENTS

- 1.2.1 HARDWARE REQUIREMENTS
- 1.2.2 SOFTWARE REQUIREMENTS

1.3 RELATED DOCUMENTS AND STANDARDS

1.4 DIAGNOSTIC HIERARCHY PREREQUISITES

1.5 ASSUMPTIONS

2.0 OPERATING INSTRUCTIONS

2.1 HARDWARE PARAMETERS

2.2 SOFTWARE PARAMETERS

- 2.2.1 TSV05 COMMAND LIST
- 2.2.2 DATA PATTERNS

2.3 EXAMPLES OF SOFTWARE PARAMETER DIALOGUE

- 2.3.1 BASIC FUNCTION AND DATA RELIABILITY  
WITH ALL ERROR REPORTING ENABLED
- 2.3.2 SCOPE LOOP SET UP IN BASIC FUNCTIONS
- 2.3.3 SCOPE LOOP SET UP IN DATA RELIABILITY

.PAGE

2.4 EXECUTION TIMES



105  
106  
107  
108  
109  
110  
111  
112  
113  
114  
115  
116  
117  
118  
119  
120  
121  
122  
123  
124  
125  
126  
127  
128  
129  
130  
131  
132  
133  
134  
135  
136  
137  
138  
139  
140  
141  
142  
143  
144  
145  
146  
147  
148  
149  
150  
151  
152  
153  
154  
155  
156  
157  
158  
159  
160  
161

2.4.1 SYSTEM CONFIGURATION  
2.4.2 TEST EXECUTION TIMES

### 3.0 ERROR INFORMATION

#### 3.1 ERROR REPORTING

3.1.1 ERROR #1 - COMMAND PACKET ADDRESS IS NOT ON A  
MODULO 4 BOUNDARY  
3.1.2 ERROR #2 - TS05 NOT READY  
3.1.3 ERROR #3 - NO RESPONSE ERRORS  
3.1.4 ERROR #4 - NO INTERRUPT ERROR  
3.1.5 SPECIAL CONDITION ERRORS  
3.1.5.1 ERROR #5 - TCC0, UNDEFINED SPECIAL CONDITION  
3.1.5.2 ERROR #6 - TCC1, ATTENTION CONDITION  
3.1.5.3 ERROR #7 - TCC2, TAPE STATUS ALERT  
3.1.5.4 ERROR #8 - TCC3, FUNCTION REJECT  
3.1.5.5 ERROR #9 - TCC4, RECOVERABLE ERROR  
3.1.5.6 ERROR #10- TCC5, RECOVERABLE ERROR  
3.1.5.7 ERROR #11- TCC6, UNRECOVERABLE ERROR  
3.1.5.8 ERROR #12- TCC7, FATAL SUBSYSTEM ERROR  
3.1.6 ERROR #13 - RFC NON-ZERO ERROR  
3.1.7 ERROR #14 - RETRY LIMIT EXCEEDED  
3.1.8 ERROR #15 - TOO MANY INTERRUPTS  
3.1.9 ERROR #16 - CAPSTAN RUNAWAY  
3.1.10 ERROR #17 - DATA COMPARE ERRORS

#### 3.2 ERROR HALTS

### 4.0 PERFORMANCE REPORT

### 5.0 TEST SUMMARIES

5.1 TEST 1 - BASIC FUNCTIONS  
5.2 TEST 2 - DATA RELIABILITY  
5.3 TEST 3 - WRITE COMPATABILITY/WRITE UTILITY  
5.4 TEST 4 - READ COMPATABILITY/READ UTILITY  
5.5 TEST 5 - RANDOM/OPERATOR SELECTED COMMAND SEQUENCE

### 6.0 DEVICE INFORMATION

6.1 GENERAL  
6.2 Q-BUS INTERFACE SPECIFICATIONS  
6.3 BIT DEFINITIONS FOR TSV05/TS05 REGISTERS  
6.3.1 TSV05/TS05 REGISTER SUMMARY  
6.3.2 TSV05 STATUS REGISTER (TSSR)  
6.3.2.1 TSV05 EXTENDED DATA BUFFER REGISTER (TSDBX)  
6.3.3 EXTENDED STATUS REGISTER 0 (XSTAT0)  
6.3.4 EXTENDED STATUS REGISTER 1 (XSTAT1)



162  
163  
164  
165  
166  
167  
168  
169  
170  
171  
172  
173  
174  
175  
176  
177  
178  
179  
180  
181  
182  
183  
184  
185  
186  
187  
188  
189  
190  
191  
192  
193  
194  
195  
196  
197  
198  
199  
200  
201  
202  
203  
204  
205  
206  
207  
208  
209  
210  
211  
212  
213  
214  
215  
216  
217  
218

6.3.5 EXTENDED STATUS REGISTER 2 (XSTAT2)  
6.3.6 EXTENDED STATUS REGISTER 3 (XSTAT3)  
6.3.7 EXTENDED STATUS REGISTER 4 (XSTAT4)

7.0 DIAGNOSTIC HISTORY

1.0 GENERAL INFORMATION  
-----

1.1 PROGRAM ABSTRACT  
-----


1.1.1 FUNCTIONAL DESCRIPTION  
-----

THIS PROGRAM CAN BE USED AS A BASIC FUNCTION TEST, A DATA RELIABILITY TEST, OR A COMPATABILITY TEST.

1.1.2 STRUCTURE OF PROGRAM  
-----

THIS DIAGNOSTIC IS A SINGLE PROGRAM FROM THE STANDPOINT OF THE DIAGNOSTIC USER, BUT IT CONTAINS A CONTROL MODULE RELEASED INDEPENDENTLY AS A DIAGNOSTIC SUPERVISOR.

1.1.3 MEMORY MAP  
-----

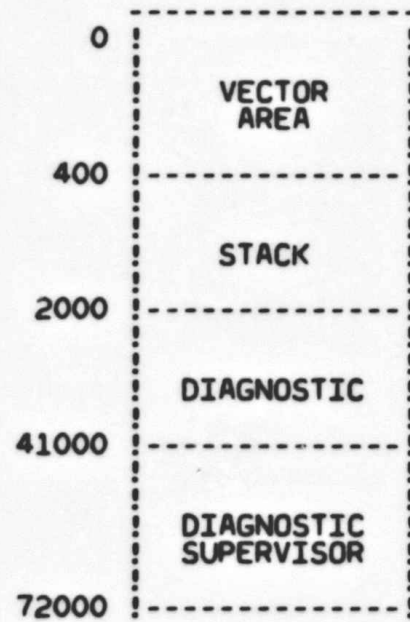







276 OPERATIONAL ONES.

277 ALGORITHM

278 A WRITE RETRY SUBROUTINE IS CALLED BY THE RECOVERABLE ERROR SUBROUTINE WHICH IS  
279 ENTERED UPON DETECTION OF A WRITE RECOVERABLE ERROR.  
280 THE WRITE RETRY SUBROUTINE ATTEMPTS TO REWRITE THE RECORD IN SAME SPOT ON TAPE  
281 4 TIMES.

282 IF ALL 4 REPEATS ARE GOOD, THE RECORD IS CONSIDERED AS RECOVERED AND  
283 A RECOVERABLE WRITE ERROR IS LOGGED AT THAT RECORD NUMBER.

284 IF ANY OF THE 4 REWRITE ATTEMPTS FAIL, THE ROUTINE WILL ERASE THE BAD RECORD, AND LO

285 BAD SPOT AT THAT RECORD NUMBER, THE ROUTINE WILL THEN ATTEMPT TO  
286 WRITE THE RECORD AGAIN 3 INCHES FURTHER DOWN TAPE AND  
287 RETRY THIS SEQUENCE 4 TIMES, FOR UP TO 4 REPEATS EACH.

288 IF A RECORD CANNOT BE WRITTEN WITHOUT RECOVERABLE ERRORS AFTER 4 RETRIES,  
289 THEN THE ROUTINE WILL ERASE THE RECORD AND REPORT RETRY FAILED ON BAD SPOT.

290 THE RECOVERABLE ERROR SUBROUTINE THEN CONTINUES TO CALL THE WRITE  
291 RETRY SUBROUTINE, WHICH REISSUES THE GROUP OF 4 RETRIES,  
292 UNTIL THE RECORD IS RECOVERED OR 20 BAD SPOTS HAVE BEEN LOGGED .

293 TWENTY (20) BAD SPOTS MAXIMUM ARE ALLOWED PER BOT TO EOT PASS OF TAPE.  
294 WHEN 20 BAD SPOTS HAVE BEEN LOGGED, WHETHER ON THE SAME RECORD NUMBER OR NOT,  
295 TAPE IS CONSIDERED DEFECTIVE: A BAD TAPE OVERFLOW MESSAGE IS PRINTED  
296 AND THE UNIT IS REWOUND, THEN DROPPED.

297 DURING THE RECOVERY PROCESS, IT IS NECESSARY TO PERFORM SEVERAL TAPE  
298 POSITIONING OPERATIONS: SPACE REVERSE, ERASE. IF A POSITION ERROR  
299 IS DETECTED IN THE STATUS WORD DURING THOSE OPERATIONS, THEN THE RECOVERY ATTEMPT IS

300 AN APPROPRIATE UNRECOVERABLE ERROR MESSAGE IS PRINTED AND THE UNIT IS DROPPED.

301 ALL BADLY WRITTEN RECORDS LOGGED WITH RECOVERABLE ERRORS ARE ERASED  
302 UNTIL RECOVERED, INCLUDING THE RECORD AT THE 20TH BAD SPOT,  
303 SO THAT ALL RECORDS LEFT ON TAPE ARE KNOWN GOOD WRITTEN RECORDS.

304 BAD SPOTS ARE ERASED WITH ERASE GAPS FROM 3 TO 12 INCHES PER RETRY GROUP.  
305 UP TO 20 FEET OF ERASE GAP COULD RESULT WHEN RETRYING TO RECOVER  
306 A SINGLE RECORD.

307 THAT LONG STRETCH OF BAD TAPE WOULD THEN BE LOGGED WITH 20  
308 BAD SPOTS AT SAME RECORD NUMBER AND THE TAPE CONSIDERED DEFECTIVE.

309 BAD SPOTS REPORTS

310 IF THE PRINTING OF RECOVERABLE ERRORS IS ENABLED, THE BAD SPOTS ON TAPE ARE  
311 IDENTIFIED AS THEY ARE DETECTED. SINCE THE BAD RECORDS ARE ERASED UNTIL RECOVERED,  
312 THE BAD SPOT ACTUALLY PRECEDES THE RECORD NUMBER THAT IDENTIFIES IT.  
313 THE NUMBER OF REPEATS AND RETRIES ATTEMPTED IS PRINTED, FROM WHICH THE  
314 LENGTH OF ERASE GAPS CAN BE DETERMINED: APPROXIMATELY 3 INCHES PER RETRY.

315 THE STATISTICAL REPORT PRINTED AT THE END OF TEST 2 OR UPON A "PRINT" REQUEST,  
316 CONTAINS A SUMMARY OF THE BAD SPOTS LOGGED ON THE CURRENT PASS OF TAPE.  
317 IN THAT REPORT, ALL COUNTS ARE CUMULATIVE FROM PASS TO PASS, EXCEPT FOR  
318 THE NUMBER OF BAD SPOTS: IT RELATES TO A "BOT TO EOT TAPE PASS" ONLY.  
319 FOR THIS PURPOSE, A "TAPE PASS" IS A WRITE PASS FROM BOT TO EOT, OR FROM

276  
277  
278  
279  
280  
281  
282  
283  
284  
285  
286  
287  
288  
G SUSPECTED

289  
290  
291  
292  
293  
294  
295  
296  
297  
298  
299  
300  
301  
302  
303  
304  
305  
306  
307  
ABORTED.

308  
309  
310  
311  
312  
313  
314  
315  
316  
317  
318  
319  
320  
321  
322  
323  
324  
325  
326  
327  
328  
329  
330  
331  
332



333  
 334  
 LL THE TESTS REQUESTED  
 335  
 336  
 337  
 338  
 339  
 340  
 341  
 342  
 343  
 344  
 345  
 346  
 347  
 348  
 349  
 350  
 351  
 352  
 353  
 354  
 355  
 356  
 357  
 358  
 359  
 360  
 361  
 362  
 363  
 364  
 365  
 366  
 367  
 368  
 369  
 370  
 371  
 372  
 373  
 374  
 375  
 376  
 377  
 378  
 379  
 380  
 381  
 382  
 383  
 384  
 385  
 386  
 387  
 388  
 389

BOT TO WHERE THE DIAGNOSTIC IS HALTED BEFORE REACHING EOT.  
 DON'T CONFUSE THIS WITH A PASS BY THE SUPERVISOR WHICH IS DEFINED AS A RUN THROUGH A  
 ON ALL UNITS SELECTED. THOSE PASSES ARE IDENTIFIED AS "PASS" AND "EOP".  
 THE NUMBER OF WRITE RETRIES, CUMULATIVE FROM PASS TO PASS, IS A GLOBAL  
 COUNT OF HOW MANY TIMES THE GROUP OF 4 RETRIES HAS BEEN CALLED.  
 THE NUMBER OF WRITE RECOVERABLE ERRORS EXCLUDES BAD TAPE SPOTS  
 AND REFLECTS THE SPECIFICATIONS OF THE HARDWARE UNDER TEST.  
 TO CLEAR CUMULATIVE COUNTS, ANSWER 'Y' TO: CLEAR COUNTERS (L) Y ?.  
 THE BAD TAPE SPOTS COUNT IS THEN CLEARED WHEN WRITING THE TAPE FROM BOT.  
 IF TEST 2 IS HALTED, THEN RESTARTED OR CONTINUED, THE RECORD COUNT  
 IS RESET TO ZERO AND THE BAD SPOT ID SHALL FOLLOW THAT RESET COUNT.  
 SINCE ALL WRITTEN RECORDS ARE KNOWN GOOD, THE READ ERRORS CAN  
 BE ATTRIBUTED TO TRANSIENT NOISE, TRANSIENT ELECTRICAL MALFUNCTIONS,  
 OR CONTAMINANTS ON TAPE AS OPPOSED TO TAPE DEFECTS.  
 THE SAME RECORDS MUST BE WRITTEN FROM TAPE PASS TO TAPE PASS  
 FOR THE BAD SPOTS ID TO REMAIN CONSISTENT IN THOSE TAPE PASSES.

EXAMPLE OF A PRINT OUT FOR A BAD SPOT ON TAPE:

```

CVTSE SFT ERR 00009 ON UNIT 00 TST 002 SUB 000 PC: 012100
RECOVERABLE ERROR
WRT CMD FAILED - UNIT 0 PASS: 1 RECORD: 6
PREVIOUS CMD WAS WRT
CMDPKT TSBA RFC TSSR TCC
100205 002406 000000 100210 4
026600
000000
003107
XST0 XST1 XST2 XST3 XST4
000350 000002 100400 000000 000000
SUSPECT BAD SPOT AFTER 1 RETRY, 2 REPEAT
SUSPECT BAD SPOT AFTER 2 RETRY, 1 REPEAT
SUSPECT BAD SPOT AFTER 3 RETRY, 1 REPEAT
SUSPECT BAD SPOT AFTER 4 RETRY, 3 REPEAT
RETRY FAILED ON BAD SPOT...ERASED!
SUSPECT BAD SPOT AFTER 1 RETRY, 1 REPEAT
SUSPECT BAD SPOT AFTER 2 RETRY, 1 REPEAT

```

```

CVTSE SFT ERR 00009 ON UNIT 00 TST 002 SUB 000 PC: 012100
RECOVERABLE ERROR
WRT CMD FAILED - UNIT 0 PASS: 1 RECORD:10210
PREVIOUS CMD WAS WRT
CMDPKT TSBA RFC TSSR TCC
100205 002406 000000 100210 4
026600
000000
004000
XST0 XST1 XST2 XST3 XST4
000350 000002 100010 000000 000000
RECOVERED ON RETRY # 1

```



390 †C  
391 DR>PRI  
392  
393 UNIT 0 PASS: 1 RECORD:10210  
394 BYTES WRITTEN 0,272,279,691  
395 BYTES READ REV 0,301,123,654  
396 BYTES READ REV 0,301,120,381  
397 WRT RDR RDF  
398 RECOVERABLE ERRORS 1 0 0  
399 UNRECOVERABLE ERRORS 0 0 0  
400 WRITE RETRIES 3

401  
402 2 BAD SPOTS THIS TAPE PASS PRECEDING RECORD #:

403 6 6  
404 SPEC COND HARD FATAL COMPARE  
405 2 0 0 0  
406 DR>

407  
408 THIS EXAMPLE SHOWS:

409 RECORD 6 RECOVERED ON 2ND RETRY GROUP  
410 THE 2 BAD SPOTS RESIDE IN A 18 INCH ERASE GAP BETWEEN RECORDS 5 AND 6  
411 RECORD 10210 RECOVERED ON 1ST RETRY OF 4 GOOD REPEATS  
412 3 WRITE GROUP RETRIES ATTEMPTED, RESULTING IN:  
413 1 RECOVERABLE WRT ERR FROM RECORD 10210  
414 2 BAD SPOTS BETWEEN RECORDS 5 AND 6  
415

416  
417  
418 1.1.4.3.2 OPERATIONAL WRITE-ERROR-RECOVERY ALGORITHM

419  
420 WHEN THIS ALGORITHM IS SELECTED, THE TSV05 WRITE RETRY COMMAND  
421 IS ISSUED UP TO 16 TIMES OR UNTIL RECORD IS RECOVERED, ON  
422 A WRITE RECOVERABLE ERROR. THE WRITE RETRY COMMAND CONSISTS  
423 OF A SPACE REVERSE OVER THE BAD RECORD, THEN AN ERASE OF 3 INCHES  
424 OF TAPE AND REWRITE OF THE RECORD. THAT COMPOSITE COMMAND  
425 DOES NOT ALLOW THE DETECTION OF BAD SPOTS ON TAPE.  
426 THEREFORE NO BAD TAPE SPOTS STATUS IS PRINTED.  
427

428 IF RECORD CANNOT BE RECOVERED AFTER 16 WRITE RETRY COMMANDS,  
429 A RETRY LIMIT EXCEEDED IS FLAGGED AND UNIT IS DROPPED.  
430

431  
432 1.1.4.4 DIAGNOSTIC TIMING ADJUSTMENT

433  
434 A NUMBER OF SUPERVISOR TIMING DELAY MACROS, KNOWN AS WATCH DOG  
435 DELAYS, ARE CALLED BY THE DIAGNOSTIC TO WAIT FOR VARIOUS COMMANDS  
436 COMPLETION. THESE DELAYS ARE NOT CALIBRATED AND SIMPLY EXPANDS  
437 INTO AN INLINE NESTED LOOP PAIR. THE COUNT FOR THE OUTER LOOP  
438 COMES FROM THE VARIABLE ARGUMENT SUPPLIED BY THE DELAY CALLS.  
439 THE COUNT FOR THE INNER LOOP COMES FROM THE FIXED "HEADER"  
440 ELEMENT "L#DLY".  
441 AS THE DIAGNOSTIC IS RUN ON DIFFERENT CPU'S, THESE DELAYS WILL  
442 VARY IN LENGTH WITH MEMORY SPEED.  
443

444 IF TIME-OUT OCCURS WHEN NO APPARENT MALFUNCTIONS IN THE TAPE  
445 UNIT IS EVIDENT, ALL TIMINGS OF THE DIAGNOSTIC MAY BE ADJUSTED  
446 TO MATCH MEMORY SPEED AND NOT RESULT IN TIME-OUTS, BY PATCHING



447  
448  
449  
450  
451  
452  
453  
454  
455  
456  
457  
458  
459  
460  
461  
462  
463  
464  
465  
466  
467  
468  
469  
470  
471  
472  
473  
474  
475  
476  
477  
478  
479  
480  
481  
482  
483  
484  
485  
486  
487  
488  
489  
490  
491  
492  
493  
494  
495  
496  
497  
498  
499  
500  
501  
502  
503

THAT FIXED DELAY ELEMENT "L4DLY".

A PRESET COUNT OF 500 RESIDES AT "L4DLY" IN LOCATION 2116 OF THE  
"HEADER" SECTION.

## 1.2 SYSTEM REQUIREMENTS

-----

### 1.2.1 HARDWARE REQUIREMENTS

-----

PDP-11/23 PROCESSOR WITH 32K OR MORE OF MEMORY  
CONSOLE DEVICE (VT52,LA36,ETC.)  
PROGRAM LOAD DEVICE  
TSV05/TS05

### 1.2.2 SOFTWARE REQUIREMENTS

-----

DIAGNOSTIC SUPERVISOR

## 1.3 RELATED DOCUMENTS AND STANDARDS

-----

DIGITAL EQUIPMENT CORPORATION DOCUMENTS:

1. CIQPMAO XXDP+ PROGRAMMER'S MANUAL; DOCUMENT NUMBER AC-S296A-AC  
DATE: 14 JULY 1980.
2. TSV05 TRANSPORT SUBSYSTEM USER'S GUIDE; DOCUMENT NUMBER EK-TSV05-UG-001  
DATE: AUGUST 1982
3. TSV05 TRANSPORT SUBSYSTEM TECHNICAL MANUAL; DOCUMENT NUMBER EK-TSV05-TM-001  
DATE: AUGUST 1982
4. TSV05 TRANSPORT SUBSYSTEM INSTALLATION MANUAL; DOCUMENT NUMBER EK-TSV05-IN-001  
DATE: AUGUST 1982

## 1.4 DIAGNOSTIC HIERARCHY PREREQUISITES

-----

ORDER OF HOST CPU DIAGNOSTIC USAGE:

- 1) CONTROL LOGIC PROGRAM - ALL TESTS.  
(VTSA,VTSE,VTSC,VTSD)
- 2) DATA RELIABILITY PROGRAM:
  - A) BASIC FUNCTION TEST.
  - B) DATA RELIABILITY TEST.

K1

504  
505  
506  
507  
508  
509  
510  
511  
512  
513  
514

1.5 ASSUMPTIONS  
-----

THE HARDWARE OTHER THAN THE SUBSYSTEM BEING TESTED IS ASSUMED TO WORK PROPERLY. FALSE ERRORS MAY BE REPORTED IF THE PROCESSOR, MEMORY, ETC., DO NOT FUNCTION PROPERLY.  
VTSA, VTSB, VTSC, AND VTSD HAVE ALL SUCESSFULLY RUN WITHOUT ERRORS.



## 2.0 OPERATING INSTRUCTIONS

THIS SECTION CONTAINS A BRIEF DESCRIPTION OF THE RUNTIME SERVICES.  
FOR DETAILED INFORMATION, REFER TO THE XXDP+ USER'S MANUAL (CHQUS).

## COMMANDS

THERE ARE ELEVEN LEGAL COMMANDS FOR THE DIAGNOSTIC RUNTIME SERVICES  
(SUPERVISOR). THIS SECTION LISTS THE COMMANDS AND GIVES A VERY  
BRIEF DESCRIPTION OF THEM. THE XXDP+ USER'S MANUAL HAS MORE DETAILS.

COMMAND	EFFECT
START	START THE DIAGNOSTIC FROM AN INITIAL STATE
RESTART	START THE DIAGNOSTIC WITHOUT INITIALIZING
CONTINUE	CONTINUE AT TEST THAT WAS INTERRUPTED (AFTER ↑C)
PROCEED	CONTINUE FROM AN ERROR HALT
EXIT	RETURN TO XXDP+ MONITOR (XXDP+ OPERATION ONLY!)
ADD	ACTIVATE A UNIT FOR TESTING (ALL UNITS ARE CONSIDERED TO BE ACTIVE AT START TIME)
DROP	DEACTIVATE A UNIT
PRINT	PRINT STATISTICAL INFORMATION (IF IMPLEMENTED BY THE DIAGNOSTIC)
DISPLAY	TYPE A LIST OF ALL DEVICE INFORMATION
FLAGS	TYPE THE STATE OF ALL FLAGS
ZFLAGS	CLEAR ALL FLAGS

A COMMAND CAN BE RECOGNIZED BY THE FIRST THREE CHARACTERS. SO  
YOU MAY, FOR EXAMPLE, TYPE "STA" INSTEAD OF "START".

## OPERATOR COMMANDS

THE TSV05 DIAGNOSTIC IS A PDP-11/23 DIAGNOSTIC SUPERVISOR COMPATIBLE  
PROGRAM. ALL LOADING AND RUNTIME INSTRUCTIONS CAN BE REFERENCED IN THE  
PDP-11 PROGRAMMER'S MANUAL "CIQPMAO XXDP+ PROGRAMMERS MANUAL, NUMBER  
AC-S296A-AC. THE USER ENTRY IS IN QUOTES.

## BOOT THE DIAGNOSTIC XXDP MEDIA

```
CHMDLBO XXDP+ DL MONITOR 28K
BOOTED VIA UNIT 0
ENTER DATE (DD-MMM-YR): " enter date or just <cr> "
RESTART ADDRESS: 153726
50 HZ? N " <cr> "
LSI? N " y<cr> "
THIS IS XXDP+. TYPE "H" OR "H/L" FOR DETAILS
R VTSE??
VTSEAOPINDRS LOADED
DIAG. RUN-TIME SERVICES REV D. APR 79
CVTSE-D-0
TSV05 DATA RELIABILITY
UNIT IS TSV05
```

573  
574  
575  
576  
577  
578  
579  
580  
581  
582  
583  
584  
585  
586  
587  
588  
589  
590  
591  
592  
593  
594  
595  
596  
597  
598  
599  
600  
601  
602  
603  
604  
605  
606  
607  
608  
609  
610  
611  
612  
613  
614  
615  
616  
617  
618  
619  
620  
621  
622  
623  
624  
625  
626  
627  
628  
629

SWITCHES  
-----

THERE ARE SEVERAL SWITCHES WHICH ARE USED TO MODIFY SUPERVISOR OPERATION. THESE SWITCHES ARE APPENDED TO THE LEGAL COMMANDS. ALL OF THE LEGAL SWITCHES ARE TABULATED BELOW WITH A BRIEF DESCRIPTION OF EACH. IN THE DESCRIPTIONS BELOW, A DECIMAL NUMBER IS DESIGNATED BY "DDDDD".

SWITCH	EFFECT
/TESTS:LIST	EXECUTE ONLY THOSE TESTS SPECIFIED IN THE LIST. LIST IS A STRING OF TEST NUMBERS, FOR EXAMPLE - /TESTS:1:5:7-10. THIS LIST WILL CAUSE TESTS 1,5,7,8,9,10 TO BE RUN. ALL OTHER TESTS WILL NOT BE RUN.
/PASS:DDDDD	EXECUTE DDDDD PASSES (DDDDD = 1 TO 64000)
/FLAGS:FLGS	SET SPECIFIED FLAGS.
/EOP:DDDDD	REPORT END OF PASS MESSAGE AFTER EVERY DDDDD PASSES ONLY. (DDDDD = 1 TO 64000)
/UNITS:LIST	TEST/ADD/DROP ONLY THOSE UNITS SPECIFIED IN THE LIST. LIST EXAMPLE - /UNITS:0:5:10-12 USE UNITS 0,5,10,11,12 (UNIT NUMBERS = 0-63)

EXAMPLE OF SWITCH USAGE:

START/TESTS:1-5/PASS:1000/EOP:100

THE EFFECT OF THIS COMMAND WILL BE: 1) TESTS 1 THROUGH 5 WILL BE EXECUTED, 2) ALL UNITS WILL TESTED 1000 TIMES AND 3) THE END OF PASS MESSAGES WILL BE PRINTED AFTER EACH 100 PASSES ONLY. A SWITCH CAN BE RECOGNIZED BY THE FIRST THREE CHARACTERS. YOU MAY, FOR EXAMPLE, TYPE "/TES:1-5" INSTEAD OF "/TESTS:1-5".

BELOW IS A TABLE THAT SPECIFIES WHICH SWITCHES CAN BE USED BY EACH COMMAND.

	TESTS	PASS	FLAGS	EOP	UNITS
START	X	X	X	X	X
RESTART	X	X	X	X	X
CONTINUE		X	X	X	
PROCEED			X		
DROP					X
ADD					X
PRINT					
DISPLAY					X
FLAGS					
ZFLAGS					
EXIT					

FLAGS  
-----

FLAGS ARE USED TO SET UP CERTAIN OPERATIONAL PARAMETERS SUCH AS



630  
631  
632  
633  
634  
635  
636  
637  
638  
639  
640  
641  
642  
643  
644  
645  
646  
647  
648  
649  
650  
651  
652  
653  
654  
655  
656  
657  
658  
659  
660  
661  
662  
663  
664  
665  
666  
667  
668  
669  
670  
671  
672  
673  
674  
675  
676  
677  
678  
679  
680  
681  
682  
683  
684  
685  
686

LOOPING ON ERROR. ALL FLAGS ARE CLEARED AT STARTUP AND REMAIN CLEARED UNTIL EXPLICITLY SET USING THE FLAGS SWITCH. FLAGS ARE ALSO CLEARED AFTER A START COMMAND UNLESS SET USING THE FLAG SWITCH. THE ZFLAGS COMMAND MAY ALSO BE USED TO CLEAR ALL FLAGS. WITH THE EXCEPTION OF THE START AND ZFLAGS COMMANDS, NO COMMANDS AFFECT THE STATE OF THE FLAGS; THEY REMAIN SET OR CLEARED AS SPECIFIED BY THE LAST FLAG SWITCH.

FLAG	EFFECT
----	-----
HOE	HALT ON ERROR - CONTROL IS RETURNED TO RUNTIME SERVICES COMMAND MODE
LOE	LOOP ON ERROR
IER*	INHIBIT ALL ERROR REPORTS
IBR*	INHIBIT ALL ERROR REPORTS EXCEPT FIRST LEVEL (FIRST LEVEL CONTAINS ERROR TYPE, NUMBER, PC, TEST AND UNIT)
IXE*	INHIBIT EXTENDED ERROR REPORTS (THOSE CALLED BY PRINTX MACRO'S)
PRI	DIRECT MESSAGES TO LINE PRINTER
PNT	PRINT TEST NUMBER AS TEST EXECUTES
BOE	"BELL" ON ERROR
UAM	UNATTENDED MODE (NO MANUAL INTERVENTION)
ISR	INHIBIT STATISTICAL REPORTS (DOES NOT APPLY TO DIAGNOSTICS WHICH DO NOT SUPPORT STATISTICAL REPORTING)
IDR	INHIBIT PROGRAM DROPPING OF UNITS
ADR	EXECUTE AUTODROP CODE
LOT	LOOP ON TEST

\*ERROR MESSAGES ARE DESCRIBED IN SECTION 3.1

SEE THE XXDP+ USER'S MANUAL FOR MORE DETAILS ON FLAGS. YOU MAY SPECIFY MORE THAN ONE FLAG WITH THE FLAG SWITCH. FOR EXAMPLE, TO CAUSE THE PROGRAM TO LOOP ON ERROR, INHIBIT ERROR REPORTS AND TYPE A "BELL" ON ERROR, YOU MAY USE THE FOLLOWING STRING:

/FLAGS:LOE:IER:BOE

## 2.1 HARDWARE PARAMETERS

-----  
ON A "N" RESPONSE TO "CHANGE HW?", THE DIAG SHALL RUN ASSUMING ONE UNIT AT TSDB = 172520 WITH A VECTOR = 224 AND DRIVE=0.

ON A "Y" RESPONSE TO "CHANGE HW?" QUESTION, THEN THE FOLLOWING QUESTIONS WILL BE ASKED ON A START COMMAND. THE VALUE LOCATED TO THE LEFT OF THE QUESTION MARK IS THE DEFAULT VALUE THAT WILL BE TAKEN ON A CARRIAGE RETURN RESPONSE.

TSDB ADDRESS (0) 172520 ?

VECTOR (0) 224 ?

SELECT DRIVE 0-1 (0) ?

687 THE VALIDITY OF THESE PARAMETERS CAN BE CHECKED BEFORE RUNNING THE TESTS  
 688 BY SETTING THE FLAG "ADR" ON A STA, RES OR CON COMMAND.  
 689 THE SO CALLED AUTO DROP CODE SHALL THEN BE EXECUTED AFTER THE INIT CODE  
 690 AND BEFORE THE HARDWARE TESTS ARE RUN. THAT CODE FIRST TESTS THE ADDRESS  
 691 OF THE TSDB(S). IF NO RESPONSE, IT DROPS THE UNIT(S) IMMEDIATELY  
 692 WITH THE FOLLOWING MESSAGE:  
 693

694 BUS TRAP AT XXXXXX ( XXXXXX = TSDB AD )  
 695 INTERFACE BAD OR NOT SET TO ABOVE ADDRESS.  
 696

697 ON A RESPONSE FROM THE INTERFACE, THE UNITS THAT ARE NOT READY OR NOT  
 698 ON-LINE ARE DROPPED IMMEDIATELY. THE HARDWARE TESTS SHALL THEN  
 699 BE RUN ON RESPONDING UNITS.  
 700

701 IF THE "ADR" FLAG IS NOT SET, THE READY AND OFF-LINE STATUS OF THE  
 702 DRIVE IS CHECKED. A MESSAGE SHALL BE PRINTED EVERY SO OFTEN  
 703 TO WARN THE OPERATOR OF DRIVES BEING NOT READY OR OFF-LINE. THESE DRIVES  
 704 SHALL BE DROPPED AFTER A REASONABLE AMOUNT OF TIME.  
 705

## 706 2.2 SOFTWARE PARAMETERS

707 -----  
 708

709 THE FOLLOWING QUESTIONS ARE ASKED WHEN ONE ANSWERS YES TO THE CHANGE SOFTWARE  
 710 QUESTION ON A START, RESTART, OR CONTINUE.  
 711 THEY ALLOW FLEXIBILITY IN THE WAY THE PROGRAM BEHAVES.  
 712

713 CLEAR COUNTERS (L) Y ?  
 714 RESET RANDOM VARIABLES (L) N ?  
 715 PRINT RECOVERABLE ERRORS (L) N ?  
 716 HALT AFTER EACH CMD (L) N ?  
 717 INHIBIT RECOVERY (L) N ?  
 718 BAD TAPE SPOT DETECTION (L) Y ?  
 719 DISABLE INTERRUPTS (L) N ?  
 720 INHIBIT RFC ERROR REPORTS (L) N ?  
 721 CHANGE CMD SEQUENCE (L) N ? (SEE NOTE1:)  
 722 DEFAULT SWITCH SETTINGS (L) Y ?  
 723 100IPS (L) N ?  
 724 WRITE BUFFERING (L) N ?  
 725 READ BUFFERING (L) N ?  
 726  
 727  
 728  
 729  
 730  
 731  
 732  
 733  
 734  
 735  
 736  
 737  
 738  
 739  
 740  
 741  
 742  
 743

Answering no to the default switch question will cause the  
 100 ips question to be asked.

Answering yes to the 100 ips question will inhibit the last



744  
745  
746  
747  
748  
749  
750  
751  
752  
753  
754  
755  
756  
757  
758  
759  
760  
761  
762  
763  
764  
765  
766  
767  
768  
769  
770  
771  
772  
773  
774  
775  
776  
777  
778  
779  
780  
781  
782  
783  
784  
785  
786  
787  
788  
789  
790  
791  
792  
793  
794  
795  
796  
797  
798  
799  
800

two questions.

Answering no to the 100 ips question will cause the write buffering question to be asked.

Answering yes to the write buffering question will inhibit the last question.

Answering no to the write buffering question will cause the read buffering question to be asked.

NOTE1: THIS QUESTION SHOULD BE ANSWERED (N) UNLESS AN OPERATOR SELECTED SEQUENCE IS TO BE EXECUTED. IF THIS QUESTION WAS ANSWERED Y, THE FOLLOWING QUESTIONS MUST BE ANSWERED OR DEFAULTED WITH A <CR> ONLY:

CHARACTERISTICS CODE (D) 40 ?	(0,20,40,200)	(OCTAL)
CMD/2 (D) 13 ?	(1-27)	(DECIMAL)
BRF COUNT (D) 1 ?	(1-2K)	(DECIMAL)
# OF OPERATIONS (D) 1 ?	(1-32K)	(DECIMAL)
PATTERN (D) 7 ?	(0-8)	(DECIMAL)
CMD/3 (D) 4 ?	(1-27)	(DECIMAL)
BRF COUNT (D) 2048 ?	(1-2K)	(DECIMAL)
# OF OPERATIONS (D) 32000 ?	(1-32K)	(DECIMAL)
PATTERN (D) 7 ?	(0-8)	(DECIMAL)
CMD/4 (D) 3 ?	(1-27)	(DECIMAL)
BRF COUNT (D) 2048 ?	(1-2K)	(DECIMAL)
# OF OPERATIONS (D) 32000 ?	(1-32K)	(DECIMAL)
PATTERN (D) 7 ?	(0-8)	(DECIMAL)
CMD/5 (D) 2 ?	(1-27)	(DECIMAL)
BRF COUNT (D) 2048 ?	(1-2K)	(DECIMAL)
# OF OPERATIONS (D) 32000 ?	(1-32K)	(DECIMAL)
PATTERN (D) 7 ?	(0-8)	(DECIMAL)
CMD/6 (D) 13 ?	(1-27)	(DECIMAL)
BRF COUNT (D) 1 ?	(1-2K)	(DECIMAL)
# OF OPERATIONS (D) 1 ?	(1-32K)	(DECIMAL)
PATTERN (D) 7 ?	(0-8)	(DECIMAL)
CMD/7 (D) 27 ?	(1-27)	(DECIMAL)
BRF COUNT (D) 2048 ?	(1-2K)	(DECIMAL)
# OF OPERATIONS (D) 32000 ?	(1-32K)	(DECIMAL)
PATTERN (D) 7 ?	(0-8)	(DECIMAL)
CMD/8 (D) 27 ?	(1-27)	(DECIMAL)
BRF COUNT (D) 2048 ?	(1-2K)	(DECIMAL)
# OF OPERATIONS (D) 32000 ?	(1-32K)	(DECIMAL)
PATTERN (D) 7 ?	(0-8)	(DECIMAL)

NOTE: THE PROGRAM AUTOMATICALLY INSERTS A CHARACTERISTIC CODE OF 40 AS THE FIRST COMMAND IN THE SEQUENCE TABLE. IF A DIFFERENT CHARACTERISTIC IS DESIRED, THE OPERATOR SHOULD ENTER THAT CHARACTERISTIC CODE. A TOTAL OF 7 COMMANDS MAY BE ENTERED IN ADDITION TO THE SET CHARACTERISTICS COMMAND. IF THE OPERATOR WISHES TO USE LESS THAN 7 COMMANDS, AN END COMMAND MUST BE ENTERED AND THEN A CONTROL Z (+Z) CAN BE ENTERED TO TERMINATE SOFTWARE DIALOGUE.

#### 2.2.1 COMMAND LIST FOR USE IN SOFTWARE DIALOGUE.

	CODE	COMMAND	DESCRIPTION
801			
802			
803			
804	1 =	DRI	DRIVE INITIATE.
805	2 =	RDF	READ FORWARD.
806	3 =	RDR	READ REVERSE.
807	4 =	WRT	WRITE.
808	5 =	WTV	WRITE/VERIFY. IE. WRITE N RECORDS; READ REVERSE AND CHECK
809			N RECORDS OF DATA; READ FORWARD AND CHECK N RECORDS.
810	6 =	SRF	SPACE RECORDS FORWARD.
811	7 =	SRR	SPACE RECORDS REVERSE.
812	8 =	RNR	READ NEXT REVERSE, IE. SPACE FWD, READ REV.
813	9 =	RNF	READ NEXT FORWARD, IE. READ FWD, SPACE REV.
814	10 =	RPF	READ PREVIOUS FWD, IE. SPACE REV, READ FWD.
815	11 =	RPR	READ PREVIOUS REV, IE. READ REV, SPACE FWD.
816	12 =	WRR	WRITE RETRY.
817	13 =	RWD	REWIND.
818	14 =	MBR	MESSAGE BUFFER RELEASE.
819	15 =	WTM	WRITE TAPE MARK.
820	16 =	WTR	WRITE TAPE MARK RETRY.
821	17 =	SFF	SPACE FILES FORWARD.
822	18 =	SFR	SPACE FILES REVERSE.
823	19 =	GES	GET EXTENDED STATUS.
824	20 =	ERS	ERASE 3 INCHES OF TAPE.
825	21 =	UNL	UNLOAD.
826	22 =	CLN	CLEAN TAPE
827	23 =	SCH	SET DEVICE CHARACTERISTIC. WHERE BRF=200, 40, 20, 0.
828			200 = ENABLE SKIP TAPE MARKS STOP (STOP AT LOGICAL EOT)
829			40 = ENABLE ATTENTION INTERRUPTS.
830			20 = ENABLE MESSAGE BUFFER RELEASE INTERRUPTS.
831			SEE TSV05/TS05 PROGRAMMING SPECIFICATION FOR DESCRIPTION.
832	25 =	JMP	JUMP TO THE NTH COMMAND IN THE COMMAND SEQUENCE
833			TABLE, WHERE N IS DEFINED IN THE BRF FIELD.
834			THE NUMBER OF JUMPS IS ENTERED IN THE # OF OPERATIONS FIELD
835	26 =	DLY	DELAY "N" MILLISECONDS WHERE N IS DEFINED IN
836			THE # OF OPERATIONS.
837	27 =	END	END OF COMMAND SEQUENCE.
838			
839			

## 2.2.2 DATA PATTERN LIST FOR USE IN SOFTWARE DIALOGUE.

	PATTERN #	DESCRIPTION.
840		
841		
842		
843		
844	0	INCREMENTING PATTERN. 0 - 377.
845	1	ALL "1"'S PATTERN.
846	2	ALL "0"'S PATTERN.
847	3	"1" BIT WALKING FROM R TO L IN A FIELD OF "0"'S.
848	4	"0" BIT WALKING FROM R TO L IF A FIELD OF "1"'S.
849	5	ALTERNATING "1" AND "0" BITS WITH ALTERNATE BYTES COMPLIMENTED.
850	6	ALTERNATING BYTES OF 000 AND 377.
851	7	RANDOM DATA PATTERN.
852	8	NO PATTERN GENERATION.



854  
855  
856  
857  
858  
859  
860  
861  
862  
863  
864  
865  
866  
867  
868  
869  
870  
871  
872  
873  
874  
875  
876  
877  
878  
879  
880  
881  
882  
883  
884  
885  
886  
887  
888  
889  
890  
891  
892  
893  
894  
895  
896  
897  
898  
899  
900  
901  
902  
903  
904  
905  
906  
907  
908  
909  
910

## 2.3 EXAMPLES OF SOFTWARE DIALOGUE

```
-----
CHANGE HW (L) ?
#UNITS (D) ?
TSDB ADDRESS (O) 172520 ?
VECTOR (O) 224 ?
SELECT DRIVE 0-1 (O) ?
```

IN ADDITION, ON A START, RESTART OR CONTINUE THE SUPERVISOR REQUESTS CHANGES TO THE SOFTWARE OPERATING PARAMETERS, AS FOLLOWS:

```
CHANGE SW (L) ?
```

### 2.3.1 BASIC FUNCTION AND DATA RELIABILITY WITH ALL ERROR REPORTING ENABLED

- A) RECEIVE PROMPT (DR>)
- B) ENTER STA/TES:1-2<CR>
- C) ANSWER HARDWARE QUESTIONS.
- D) PROCEED WITH THE FOLLOWING DIALOGUE:

```
CHANGE SW (L) ? Y<CR>
CLEAR COUNTERS (L) N ? Y<CR>
RESET RANDOM VARIABLES (L) N ? <CR>
PRINT RECOVERABLE ERRORS (L) N ? Y<CR>
HALT AFTER EACH CMD (L) N ? <CR>
INHIBIT RECOVERY (L) N ? <CR>
BAD TAPE SPOT DETECTION (L) Y ? <CR>
DISABLE INTERRUPTS (L) N ? <CR>
INHIBIT RFC ERROR REPORT (L) N ? <CR>
CHANGE CMD SEQUENCE (L) N ? <CR>
DEFAULT SWITCH SETTINGS (L) Y ? <CR>
```

### 2.3.2 TO SET UP A SCOPE LOOP FOR A FAILURE IN BASIC FUNCTIONS.

- A) RECEIVE PROMPT (DR>)
- B) ENTER STA/TES:1/FLA:LOE:IER:ISR:IDU<CR>
- C) ANSWER HARDWARE QUESTIONS.
- D) PROCEED WITH THE FOLLOWING DIALOGUE:

```
CHANGE SW (L) ? Y<CR>
CLEAR COUNTERS (L) N ? Y<CR>
RESET RANDOM VARIABLES (L) N ? N<CR>
PRINT RECOVERABLE ERRORS (L) N ? N<CR>
HALT AFTER EACH CMD (L) N ? N<CR>
INHIBIT RECOVERY (L) N ? N<CR>
BAD TAPE SPOT DETECTION (L) Y ? N<CR>
DISABLE INTERRUPTS (L) N ? N<CR>
```

```

911          INHIBIT RFC ERROR REPORT (L) N ?          Y<CR>
912          CHANGE CMD SEQUENCE (L) N ?              N<CR>
913          DEFAULT SWITCH SETTINGS (L) Y ?          <CR>
914
915

```

### 2.3.3 TO SET UP A SCOPE LOOP FOR A FAILURE IN DATA RELIABILITY

- A) RECEIVE PROMPT (DR>)  
 B) ENTER STA/TES:5/FLA:IER:ISR:IDU/EOP:1000<CR>  
 C) ANSWER HARDWARE QUESTIONS.  
 D) PROCEED WITH THE FOLLOWING DIALOGUE:

```

          CHANGE SW (L) ?                               Y<CR>
          CLEAR COUNTERS (L) N ?                       Y<CR>
          RESET RANDOM VARIABLES (L) N ?               N<CR>
          PRINT RECOVERABLE ERRORS (L) N ?            N<CR>
          HALT AFTER EACH CMD (L) N ?                 N<CR>
          INHIBIT RECOVERY (L) N ?                   N<CR>
          BAD TAPE SPOT DETECTION (L) Y ?            N<CR>
          DISABLE INTERRUPTS (L) N ?                 Y<CR>
          INHIBIT RFC ERROR REPORT (L) N ?           Y<CR>
          CHANGE CMD SEQUENCE (L) N ?                 Y<CR>
          CHARACTERISTICS CODE (D) 40 ?              40<CR>
          CMD/2 (D) 5 ?                               13<CR>      (REWIND)
          BRF COUNT (D) 2048 ?                       1<CR>
          # OF OPERATIONS (D) 10 ?                   1<CR>
          PATTERN (D) 7 ?                             1<CR>
          CMD/3 (D) 5 ?                               4<CR>      (WRITE)
          BRF (D) 2048 ?                             1000<CR>
          # OF OPERATIONS (D) 10 ?                   10000<CR>
          PATTERN (D) 7 ?                             1<CR>
          CMD/4 (D) 5 ?                               27<CR>      (END)
          BRF (D) 2048 ?                             <↑Z>

```

### 2.4 EXECUTION TIMES

-----

#### 2.4.1 SYSTEM CONFIGURATION

-----

```

PDP11/23
MOS MEMORY
LA36
TSV05/TS05

```

#### 2.4.2 TEST EXECUTION TIMES (2400 FT. TAPE)

-----

```

TEST 1 - BASIC FUNCTIONS - 30 SECONDS PER PASS.
TEST 2 - DATA RELIABILITY - 45 MINUTES PER PASS.
TEST 3 - WRITE COMPATABILITY - 20 MINUTES PER PASS.
TEST 4 - READ COMPATABILITY - 20 MINUTES PER PASS.
TEST 5 - RANDOM/OPERATOR SELECTED SEQUENCE -20 MINUTES PER PASS.

```

NOTE: ALL EXECUTION TIMES ARE SHOWN FOR ONE DRIVE OPERATION.

```

916
917
918
919
920
921
922
923
924
925
926
927
928
929
930
931
932
933
934
935
936
937
938
939
940
941
942
943
944
945
946
947
948
949
950
951
952
953
954
955
956
957
958
959
960
961
962
963
964
965
966
967

```



968  
969  
970  
971  
972  
973  
974  
975  
976  
977  
978  
979  
980  
981  
982  
983  
984  
985  
986  
987  
988  
989  
990  
991  
992  
993  
994  
995  
996  
997  
998  
999

### 3.0 ERROR INFORMATION

-----

#### 3.1 ERROR REPORTING

-----

ALL ERROR REPORTS EXCEPT FOR ERRORS #1 AND #17 INCLUDE A DUMP OF THE FOLLOWING INFORMATION:

ERROR #, TEST #, SUBTEST #, PROGRAM COUNTER, UNIT #, COMMAND, PREVIOUS COMMAND, PASS COUNT, # OF RECORDS FROM BOT, RECORD READ COUNT, THE COMMAND PACKET, TSSR, TCC, TSBA, RFC, AND THE EXTENDED STATUS REGISTERS (SEE 2.3.14.1 FOR LIST OF COMMANDS).

#### STANDARD ERROR REPORT FORMAT:

```

CVTSE SFT ERR XXXXX TST XXX SUB XXX PC: XXXXXX
(ASCII ERROR MESSAGE)
XXX CMD FAILED - UNIT X PASS: XXXXX RECORD: XXXXX
PREVIOUS CMD WAS XXX * RECORD READ: XXXXX *
CNDPKT TSBA RFC TSSR TCC
XXXXXX XXXXXX XXXXXX XXXXXX X
XXXXXX
XXXXXX
XXXXXX
XST0 XST1 XST2 XST3 XST4
XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX

```

#### \* CAUTION \*

INTERPRET THAT "RECORD READ" COUNT WITH CAUTION. IF VERY DIFFERENT FROM RECORD COUNT TRACKED BY THE DIAGNOSTIC, TAPE POSITION IS NOT NECESSARELY LOST. ERRORS IN READING THAT RECORD MIGHT HAVE CAUSED RECORD COUNT TO BE ERRONEOUSLY READ FROM TAPE. IN TEST 2, IF DIAGNOSTIC IS RESTARTED OR CONTINUED, RECORD COUNT IS RESET TO ZERO ALTHOUGH THE TAPE IS NOT REWOUND. THIS IS NECESSARY BECAUSE THERE IS NO ACCURATE WAY TO DETERMINE ON WHAT RECORD COUNT OF WHICH UNIT THE DIAGNOSTIC WAS HALTED BEFORE RESTARTING OR CONTINUING. IT IS SUGGESTED THAT A "PRINT" BE REQUESTED WHEN HALTING DIAG TO GET A PRINT OF THE RECORD COUNT WHEN HALTED.

#### EXAMPLE OF AN ERROR REPORT:

```

CVTSE SFT ERR 00009 TST 002 SUB 000 PC: 010606
RECOVERABLE ERROR
WRT CMD FAILED - UNIT 2 PASS: 2 RECORD: 254
PREVIOUS CMD WAS WRT
CNDPKT TSBA RFC TSSR TCC
100005 002324 000000 100210 4
051766
000000

```

1000  
1001  
1002  
1003  
1004  
1005  
1006  
1007  
1008  
1009  
1010  
1011  
1012  
1013  
1014  
1015  
1016  
1017  
1018  
1019  
1020  
1021  
1022  
1023  
1024

1025  
1026  
1027  
1028  
1029  
1030  
1031  
1032  
1033  
1034  
1035  
1036  
1037  
1038  
1039  
1040  
1041  
1042  
1043  
1044  
1045  
1046  
1047  
1048  
1049  
1050  
1051  
1052  
1053  
1054  
1055  
1056  
1057  
1058  
1059  
1060  
1061  
1062  
1063  
1064  
1065  
1066  
1067  
1068  
1069  
1070  
1071  
1072  
1073  
1074  
1075  
1076  
1077  
1078  
1079  
1080  
1081

000371  
XST0 XST1 XST2 XST3 XST4  
000350 000002 100004 000000 040055

- 3.1.1 ERROR #1 - COMMAND PACKET ADDRESS NOT ON A MODULO 4 BOUNDARY:  
IF THIS ERROR IS REPORTED, THE PROGRAM DID NOT LOAD PROPERLY. THIS IS A SYSTEM FATAL ERROR AND THE PROGRAM MUST BE RELOADED TO CORRECT IT.
- 3.1.2 ERROR #2 - TS05 NOT READY:  
BEFORE ANY COMMAND IS ISSUED TO THE TS05, THE SUBSYSTEM READY BIT IN THE TSSR IS CHECKED. IF THE SSR IS NOT SET, THE PROGRAM REPORTS THE NOT READY ERROR. THIS IS A FATAL DEVICE ERROR AND THE DEVICE WILL BE DROPPED FROM THE TEST SEQUENCE UNLESS THE IDU OPTION IS USED.
- 3.1.3 ERROR #3 - NO RESPONSE ERROR:  
ONCE THE TSDB IS LOADED, THE TS05 HAS ONE MILLISECOND TO RESPOND OR THE PROGRAM REPORTS A NO RESPONSE ERROR. THIS IS A FATAL DEVICE ERROR AND THE DEVICE WILL BE DROPPED FROM THE TEST SEQUENCE UNLESS THE IDU OPTION IS USED.
- 3.1.4 ERROR #4 - NO INTERRUPT ERROR:  
COMMAND WAS ISSUED AND NO INTERRUPT RECEIVED. THE PROGRAM REPORTS THAT NO INTERRUPT OCCURRED. THIS IS A FATAL DEVICE ERROR AND THE DEVICE WILL BE DROPPED FROM THE TEST CYCLE UNLESS THE IDU OPTION IS USED.
- 3.1.5 SPECIAL CONDITION ERRORS:  
IF, DURING EXECUTION, AN INCIDENT OCCURS FORCING THE TSSR SPECIAL CONDITION BIT TO SET, THE PROGRAM WILL SELECT ONE OF 8 ERROR HANDLING ROUTINES, DEPENDING ON THE TERMINATION CLASS CODE.  
THE TERMINATION CLASS CODES IN THE TSSR ARE PROCESSED AS FOLLOWS WHEN SPECIAL CONDITION IS SET:
- 3.1.5.1 ERROR #5 - TERMINATION CLASS CODE 0, UNDEFINED SPECIAL CONDITION  
THE ERROR IS REPORTED, A HARD ERROR IS LOGGED AND THE PROGRAM PROCEEDS NORMALLY.
- 3.1.5.2 ERROR #6 - TERMINATION CLASS CODE 1, ATTENTION CONDITION  
THIS TCC INDICATES THAT THE DRIVE HAS UNDERGONE A STATUS CHANGE



1082  
1083  
1084  
1085  
1086  
1087  
1088  
1089  
1090  
1091  
1092  
1093  
1094  
1095  
1096  
1097  
1098  
1099  
1100  
1101  
1102  
1103  
1104  
1105  
1106  
1107  
1108  
1109  
1110  
1111  
1112  
1113  
1114  
1115  
1116  
1117  
1118  
1119  
1120  
1121  
1122  
1123  
1124  
1125  
1126  
1127  
1128  
1129  
1130  
1131  
1132  
1133  
1134  
1135  
1136  
1137  
1138

SUCH AS GOING OFFLINE OR COMING ONLINE. THIS IS A FATAL DEVICE ERROR AND THE DEVICE WILL BE DROPPED FROM THE TEST CYCLE UNLESS THE IDU OPTION IS USED.

3.1.5.3 ERROR #7 - TERMINATION CLASS CODE 2, TAPE STATUS ALERT

A STATUS CONDITION HAS BEEN ENCOUNTERED THAT MAY HAVE SIGNIFICANCE TO THE PROGRAM. BITS OF INTEREST INCLUDE TMK, RLS, LET, RLL, EOT. ACTION TAKEN DEPENDS ON THE TEST BEING EXECUTED. IF THE CONDITION IS UNEXPECTED, THE ERROR IS REPORTED AND A HARD ERROR IS LOGGED. THE PROGRAM PROCEEDS NORMALLY.

3.1.5.4 ERROR #8 - TERMINATION CLASS CODE 3, FUNCTION REJECT

THE SPECIFIED FUNCTION WAS NOT INITIATED. BITS OF INTEREST ARE RMR, OFL, VCK, BOT, ILC, WLE, ILA, AND NBA. THIS IS A FATAL DEVICE ERROR AND THE DEVICE WILL BE DROPPED FROM THE TEST CYCLE UNLESS THE IDU OPTION IS USED.

3.1.5.5 ERROR #9 - TERMINATION CLASS CODE 4, RECOVERABLE ERROR

TAPE POSITION IS ONE RECORD BEYOND WHAT ITS POSITION WAS WHEN THE FUNCTION WAS INITIATED. RECOVERY PROCEDURE IS TO LOG THE ERROR AND ISSUE THE APPROPRIATE RETRY COMMAND. IF RETRY LIMIT IS REACHED BEFORE THE ERROR IS RECOVERED, RETRY LIMIT EXCEEDED IS REPORTED AS DESCRIBED IN ERROR #14 BELOW.

3.1.5.6 ERROR #10 - TERMINATION CLASS CODE 5, RECOVERABLE ERROR

TAPE POSITION HAS NOT CHANGED. RECOVERY PROCEDURE IS TO LOG THE ERROR AND RE-ISSUE THE ORIGINAL COMMAND. IF RETRY LIMIT IS REACHED BEFORE THE ERROR IS RECOVERED, RETRY LIMIT EXCEEDED IS REPORTED AS DESCRIBED IN ERROR #14 BELOW.

3.1.5.7 ERROR #11 - TERMINATION CLASS CODE 6, UNRECOVERABLE ERROR

TAPE POSITION HAS BEEN LOST. THE ONLY VALID RECOVERY PROCEDURE IS TO REWIND AND START OVER AT BOT UNLESS THE TAPE HAS LABELS OR SEQUENCE NUMBERS. IF DENSITY CHECK IS SET THIS DIAGNOSTIC WILL REWIND AND RETRY THE COMMAND, OTHERWISE THIS IS A FATAL DEVICE ERROR AND THE DEVICE WILL BE DROPPED FROM THE TEST CYCLE UNLESS THE IDU OPTION IS USED.

3.1.5.8 ERROR #12 - TERMINATION CLASS CODE 7, FATAL SUBSYSTEM ERROR

THE SUBSYSTEM IS INCAPABLE OF PROPERLY PERFORMING COMMANDS OR AT LEAST ITS INTEGRITY IS SERIOUSLY QUESTIONABLE. REFER TO THE FATAL CLASS CODE FIELD IN THE TSSR REGISTER FOR ADDITIONAL INFORMATION ON THE TYPE OF FATAL ERROR. THE DEVICE WILL BE DROPPED FROM THE TEST CYCLE UNLESS THE IDU OPTION IS USED.

1139  
1140  
1141  
1142  
1143  
1144  
1145  
1146  
1147  
1148  
1149  
1150  
1151  
1152  
1153  
1154  
1155  
1156  
1157  
1158  
1159  
1160  
1161  
1162  
1163  
1164  
1165  
1166  
1167  
1168  
1169  
1170  
1171  
1172  
1173  
1174  
1175  
1176  
1177  
1178  
1179  
1180  
1181  
1182  
1183  
1184  
1185  
1186  
1187  
1188  
1189  
1190  
1191  
1192  
1193  
1194  
1195

### 3.1.6 ERROR #13 - RFC NON-ZERO ERROR:

IF, AFTER EXECUTION, THE RESIDUAL FRAME COUNT IS NON-ZERO, THE ERROR IS REPORTED AND A HARD ERROR IS LOGGED. THE PROGRAM THEN PROCEEDS NORMALLY. THE REPORTING AND LOGGING OF THESE ERRORS IS OPTIONAL.

### 3.1.7 ERROR #14 - RETRY LIMIT EXCEEDED:

ON A WRITE COMMAND THIS IS A FATAL DEVICE ERROR AND THE DEVICE WILL BE DROPPED FROM THE TEST CYCLE UNLESS THE IDU OPTION IS USED.

ON A READ COMMAND THIS ERROR IS LOGGED AS A HARD ERROR AND THE PROGRAM PROCEEDS NORMALLY.

### 3.1.8 ERROR #15 - TOO MANY INTERRUPTS:

IF MORE THAN ONE INTERRUPT OCCURS PER COMMAND, THIS ERROR IS REPORTED. THIS IS A FATAL DEVICE ERROR AND THE DEVICE WILL BE DROPPED FROM THE TEST CYCLE UNLESS THE IDU OPTION IS USED.

### 3.1.9 ERROR #16 - CAPSTAN RUNAWAY:

CAPSTAN DID NOT STOP WITHIN ACCEPTABLE WINDOW AFTER LAST COMMAND. THE PROGRAM WILL ISSUE A GET STATUS COMMAND BEFORE REPORTING THE ERROR SO THAT THE DEAD TRACK FIELD IN EXTENDED STATUS REGISTER 2 WILL CONTAIN THE TACH COUNT WHEN THE TAPE STOPPED. THIS IS A FATAL DEVICE ERROR AND THE DEVICE WILL BE DROPPED FROM THE TEST CYCLE UNLESS THE IDU OPTION IS USED.

### 3.1.10 ERROR #17 - DATA COMPARE ERROR:

IF A DATA VALIDATION ERROR OCCURS DURING A WRITE/VERIFY COMMAND, THE PROGRAM PRINTS WHAT THE DATA SHOULD HAVE BEEN AND WHAT THE DATA WAS, AND PRINTS THE BYTE AND RECORD NUMBER THE ERROR OCCURRED ON. ONLY THE FIRST 10 BYTES IN ERROR PER RECORD ARE PRINTED. THE TOTAL # OF BYTES IN ERROR PER RECORD IS ALSO PRINTED. A HARD ERROR IS LOGGED AND THE PROGRAM PROCEEDS NORMALLY.

## 3.2 ERROR HALTS

-----

ERROR HALTS ARE SUPPORTED PER DESCRIBED IN THE PREVIOUS SECTION WITH /FLAG:HOE. THERE ARE NO OTHER HALTS.

## 4.0 PERFORMANCE REPORT

-----

UNIT X PASS:XXXXX RECORD:XXXXX  
BYTES WRITTEN XXX,XXX,XXX,XXX  
BYTES READ REV XXX,XXX,XXX,XXX  
BYTES READ FWD XXX,XXX,XXX,XXX



1196  
1197  
1198  
1199  
1200  
1201  
1202  
1203  
1204  
1205  
1206  
1207  
1208  
1209  
1210  
1211  
1212  
1213  
1214  
1215  
1216  
1217  
1218  
1219  
1220  
1221  
1222  
1223  
1224  
1225  
1226  
1227  
1228  
1229  
1230  
1231  
1232  
1233  
1234  
1235  
1236  
1237  
1238  
1239  
1240  
1241  
1242  
1243  
1244  
1245  
1246  
1247  
1248  
1249  
1250  
1251  
1252

			WRT	RDR	RDF
RECOVERABLE ERRORS			XXXXX	XXXXX	XXXXX
UNRECOVERABLE ERRORS			XXXXX	XXXXX	XXXXX
SPEC COND	HARD	FATAL	COMPARE		
XXXXX	XXXXX	XXXXX	XXXXX		

## 5.0 TEST SUMMARIES

-----

### 5.1 TEST 1 -

#### BASIC FUNCTIONS.

EXECUTES AND VERIFIES CORRECT COMPLETION OF ALL TSV05 FUNCTIONS.

#### SUBTEST 1 - SET CHAR, DRIVE INIT, GET STATUS.

- SET CHARACTERISTIC 200.
- DRIVE INITIATE.
- SET CHARACTERISTIC 20.
- GET STATUS
- SET CHARACTERISTIC 40.
- PRINT TSV05 MICROCODE LEVEL (PASS 1 ONLY)

#### SUBTEST 2 - REWIND.

- REWIND.
- REWIND AT BOT.

#### SUBTEST 3 - WRITE/VERIFY.

- WRITE/VERIFY PATTERN 1.
- WRITE/VERIFY PATTERN 2.
- WRITE/VERIFY PATTERN 3.
- WRITE/VERIFY PATTERN 4.
- WRITE/VERIFY PATTERN 5.
- WRITE/VERIFY PATTERN 6.
- WRITE/VERIFY PATTERN 0.

#### SUBTEST 4 - WRITE TAPE MARK, ERASE.

- WRITE TAPE MARK.
- WRITE 10 RECORDS
- ERASE 10 TIMES
- WRITE TAPE MARK.
- WRITE TAPE MARK RETRY.

#### SUBTEST 5 - SPACE FILES.

- SPACE 2 FILES REVERSE.
- SPACE 2 FILES FORWARD.
- SPACE 2 FILES REVERSE.
- SPACE 2 FILES FORWARD.

#### SUBTEST 6 - SPACE RECORDS.

- REWIND.
- SPACE 7 RECORDS FORWARD.
- SPACE 7 RECORDS REVERSE.
- SPACE 7 RECORDS FORWARD.

1253  
1254  
1255  
1256  
1257  
1258  
1259  
1260  
1261  
1262  
1263  
1264  
1265  
1266  
1267  
1268  
1269  
1270  
1271  
1272  
1273  
1274  
1275  
1276  
1277  
1278  
1279  
1280  
1281  
1282  
1283  
1284  
1285  
1286  
1287  
1288  
1289  
1290  
1291  
1292

- SPACE 7 RECORDS REVERSE.
- SUBTEST 7 - WRITE RETRY.
  - REWIND.
  - WRITE DATA.
  - WRITE RETRY.
- SUBTEST 8 - READ REV RETRY.
  - READ REVERSE.
  - READ NEXT REVERSE.
  - READ NEXT FORWARD.
- SUBTEST 9 - READ FWD RETRY.
  - READ FORWARD.
  - READ PREVIOUS FORWARD.
  - READ PREVIOUS REVERSE.
- SUBTEST 10 - CLEAN.
  - CLEAN.
  - REWIND.
- SUBTEST 11 - WRITE/VERIFY SWAPPED DATA BYTES.
  - WRITE/VERIFY EVEN LENGTH (RECORD 1).
  - WRITE/VERIFY ODD LENGTH (RECORD 2).
  - SET DATA BYTE SWAP.
  - WRITE/VERIFY EVEN LENGTH (RECORD 3).
  - WRITE/VERIFY ODD LENGTH (RECORD 4).
  - CLEAR DATA BYTE SWAP.
- SUBTEST 12 - READ SWAPPED DATA BYTES.
  - READ REV RECORD 4.
  - READ REV RECORD 3.
  - SET DATA BYTE SWAP.
  - READ REV RECORD 2.
  - READ REV RECORD 1.
  - READ FWD RECORD 1.
  - READ FWD RECORD 2.
  - CLEAR DATA BYTE SWAP.
  - READ FWD RECORD 3.
  - READ FWD RECORD 4.



1294 5.2 TEST 2 - DATA RELIABILITY.  
 1295  
 1296 1. THE TAPE IS INITIATED WITH THE FOLLOWING COMMANDS:  
 1297 SET CHARACTERISTIC 40  
 1298 REWIND  
 1299 WRITE 64 RECORDS OF RANDOM LENGTH AND DATA  
 1300 2. WRITE AND READ COMMANDS ARE SELECTED AT RANDOM AND ARE  
 1301 EXECUTED A RANDOM NUMBER OF TIMES WITH RANDOM  
 1302 LENGTHS AND RANDOM PATTERN UNTIL END OF TAPE IS REACHED.  
 1303 3. AT THE END OF EACH PASS, A REWIND COMMAND IS ISSUED AND  
 1304 A PERFORMANCE REPORT IS PRINTED.  
 1305  
 1306 NOTE: IF A RESTART COMMAND IS USED TO INITIATE  
 1307 TEST 1, THE INITIAL REWIND COMMAND IS NOT ISSUED.  
 1308  
 1309  
 1310 5.3 TEST 3 - WRITE COMPATABILITY/WRITE UTILITY.  
 1311 REWINDS AND WRITES RECORDS OF RANDOM LENGTHS  
 1312 AND RANDOM DATA FROM BOT TO EOT.  
 1313  
 1314 5.4 TEST 4 - READ COMPATABILITY/READ UTILITY.  
 1315 REWINDS AND READS ENTIRE TAPE, FORWARD AND REVERSE.  
 1316  
 1317 5.5 TEST 5 - RANDOM/OPERATOR SELECTED COMMAND SEQUENCE.  
 1318 A DEFAULT SEQUENCE OF REWIND/WRITE/READ REV/READ FWD/REWIND  
 1319 OF ENTIRE TAPE IS EXECUTED WITH RANDOM PATTERN  
 1320 AND RECORD LENGTH OF 2048 BYTES. OPERATOR CAN ENTER  
 1321 SEQUENCE OF COMMANDS UP TO SEVEN IF THEY DON'T WANT  
 1322 DEFAULT SEQUENCE.  
 1323  
 1324 6.0 DEVICE INFORMATION TABLES  
 1325 -----  
 1326 6.1 GENERAL  
 1327 -----  
 1328 THE TSV05 TAPE SUBSYSTEM CONSISTS OF A TSV05 Q-BUS  
 1329 CONTROLLER CONNECTED TO A TSV05 DRIVE. FROM A SOFTWARE VIEWPOINT  
 1330 THIS CONFIGURATION IS UNIQUE (FOR A Q-BUS DEVICE) IN A NUMBER  
 1331 OF WAYS:  
 1332  
 1333 A. ONLY ONE REGISTER MAY BE WRITTEN - TSDB (TAPE SYSTEM  
 1334 DATA BUFFER),  
 1335  
 1336 B. TWO REGISTERS MAY BE READ - TSSR AND TSBA (TAPE SYSTEM STATUS  
 1337 REGISTER AND TAPE SYSTEM BUS ADDRESS REGISTER),  
 1338  
 1339 C. COMMANDS ARE NOT WRITTEN TO THE DRIVE; RATHER, COMMAND  
 1340 POINTERS ARE WRITTEN WHICH POINT TO COMMAND PACKETS SOME-  
 1341 WHERE IN CPU MEMORY. THE COMMAND POINTER IS USED BY  
 1342 THE TSV05 SUBSYSTEM TO FETCH THE WORD(S) WITHIN THE COMMAND  
 1343 PACKET. THE WORDS WITHIN THE COMMAND PACKET ARE:  
 1344  
 1345  
 1346  
 1347  
 1348  
 1349  
 1350

1351  
1352  
1353  
1354  
1355  
1356  
1357  
1358  
1359  
1360  
1361  
1362  
1363  
1364  
1365  
1366  
1367  
1368  
1369  
1370  
1371  
1372  
1373  
1374  
1375  
1376  
1377  
1378  
1379  
1380  
1381  
1382

1. COMMAND WORD
2. LOW ORDER BUFFER ADDRESS
3. HIGH ORDER BUFFER ADDRESS
4. BYTE COUNT

- D. THE TSSR CONTAINS ALL THE INFORMATION WHICH WILL BE NECESSARY TO DETERMINE WHETHER:
1. THE DRIVE IS READY TO ACCEPT ANOTHER COMMAND,
  2. THE PREVIOUS COMMAND WAS EXECUTED WITHOUT ERROR.
- IF EITHER OF THE ABOVE CONDITIONS IS UNTRUE AT "JOB DONE" OR "COMMAND INITIATION" TIME, IT MAY BE NECESSARY TO GET THE EXTENDED STATUS REGISTERS TO DETERMINE WHAT ACTION IS TO BE TAKEN AND/OR LOG THE ERROR INFORMATION.
- E. EXTENDED STATUS REGISTERS ARE NOT READ DIRECTLY FROM DRIVE REGISTERS; RATHER, A "GET STATUS" COMMAND IS ISSUED WHICH WILL CAUSE THE TSO5 TO TRANSFER EXTENDED STATUS INFORMATION TO THE MEMORY AREA POINTED TO BY THE BUFFER ADDRESS OF THE "GET STATUS" COMMAND. THERE ARE FIVE EXTENDED STATUS REGISTERS. SEE .3.
- F. THE TSDB MUST BE WRITTEN WITH A DATO INSTRUCTION TO PROPERLY WRITE THE COMMAND POINTER. A DATOB WILL CAUSE A MAINTENANCE FUNCTION. A DATO TO THE TSSR WILL CAUSE SUBSYSTEM INIT.
- G. COMMAND PACKETS MUST RESIDE ON DIVIDE BY FOUR MEMORY BOUNDARIES (AS OPPOSED TO DIVIDE BY 2 OR WORD BOUNDARIES) .



1384  
1385  
1386  
1387  
1388  
1389  
1390  
1391  
1392  
1393  
1394

6.2 Q-BUS INTERFACE SPECIFICATIONS  
-----

TSV05/ TS05 -----	INT. VECTOR -----	UNIBUS ADDRESS -----	REGISTER -----
FIRST	224	772520 772522	TSBA/TSDB TSSR

1396  
1397  
1398  
1399  
1400  
1401  
1402  
1403  
1404  
1405  
1406  
1407  
1408  
1409  
1410  
1411  
1412  
1413  
1414  
1415  
1416  
1417  
1418  
1419  
1420  
1421  
1422  
1423  
1424  
1425  
1426  
1427  
1428  
1429  
1430  
1431  
1432  
1433  
1434  
1435  
1436  
1437  
1438  
1439  
1440  
1441  
1442  
1443  
1444  
1445  
1446  
1447  
1448  
1449  
1450  
1451  
1452

6.3 BIT DEFINITIONS FOR TSV05/TS05 REGISTERS

6.3.1 TSV05/TS05 REGISTER SUMMARY

	15	14	13	12	11	10	09	08	07	06	05	04	03	02	01	00
(R/O) TSBA	A15	A14	A13	A12	A11	A10	A09	A08	A07	A06	A05	A04	A03	A02	A01	A00
(W/O) TSDB	P15	P14	P13	P12	P11	P10	P09	P08	P07	P06	P05	P04	P03	P02	P17	P16
(R/O) TSSR	SC	0	SCE	RMR	NXM	NBA	A17	A16	SSR	OFL	FC1	FC0	TC2	TC1	TC0	0
(W/O) TSDBX	BT	0	0	0	P21	P20	P19	P18	(TSDBX exists only when enabled by the Extended Features switch on the M7196)							
XST0	TMK	RLS	LET	RLI	WLE	NEF	ILC	ILA	MOT	ONL	IE	VCK	PED	WLK	BOT	EOT
XST1	DLT	0	COR	0	0	0	0	RBP	0	0	0	0	0	0	UNC	0
XST2	OPM	RCE	0	0	0	WCF	0	0	RL7	RL6	RL5	RL4	RL3	RL2	RL1	RL0
XST3	MICRO DIAGNOSTIC ERROR CODE								0	OPI	REV	TRF	DCK	0	0	RIB
XST4	HSP	RCE	0	0	0	0	0	0	WRITE RETRY COUNT							

TERMINATION CLASS CODES (TSSR TC0-TC2):

- 0 = NORMAL TERMINATION
- 1 = ATTENTION CONDITION
- 2 = TAPE STATUS ALERT
- 3 = FUNCTION REJECT
- 4 = RECOVERABLE ERROR - TAPE POSITION = ONE RECORD DOWN TAPE FROM START OF FUNCTION
- 5 = RECOVERABLE ERROR - TAPE NOT MOVED
- 6 = UNRECOVERABLE ERROR - TAPE POSITION LOST
- 7 = FATAL CONTROLLER ERROR

FATAL CLASS CODES (TSSR FC0-FC1):


- 0 = MICRO DIAGNOSTIC FAILURE. SEE ERROR CODE BYTE (XST3) FOR FAILED FUNCTION.
- 1 = RESERVED
- 2 = NOT USED
- 3 = RESERVED FOR FUTURE USE ALWAYS READ AS A 0



1454  
1455  
1456  
1457  
1458  
1459  
1460  
1461  
1462  
1463  
1464  
1465  
1466  
1467  
1468  
1469  
1470  
1471  
1472  
1473  
1474  
1475  
1476  
1477  
1478  
1479  
1480  
1481  
1482  
1483  
1484  
1485  
1486  
1487  
1488  
1489  
1490  
1491  
1492  
1493  
1494  
1495  
1496  
1497  
1498  
1499  
1500  
1501  
1502  
1503  
1504  
1505  
1506  
1507  
1508  
1509  
1510

6.3.2 TSV05 STATUS REGISTER (TSSR)

Q-BUS ADDRESS = 2 - READ ONLY

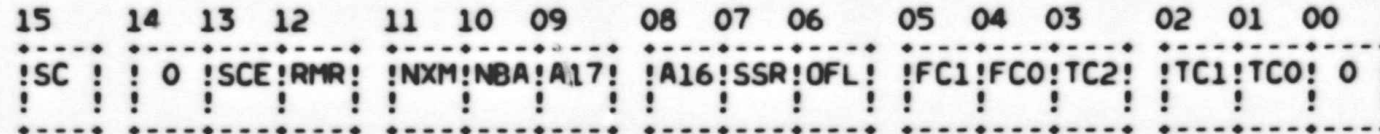

BIT	NAME	TCC	DEFINITION
15	SC	S	SPECIAL CONDITION. WHEN SET, INDICATES THAT THE LAST COMMAND DID NOT COMPLETE WITHOUT INCIDENT. SPECIFICALLY, EITHER AN ERROR WAS DETECTED OR AN EXCEPTION CONDITION OCCURRED. EXCEPTION CONDITIONS CAN BE TAPE MARKS ON READ COMMANDS, REVERSE MOTION AND AT BOT, EOT WHILE WRITING, ETC. MAY ALSO BE SET BY THE ERROR BITS CONTAINED IN THE TSSR REGISTER: SCE, RMR, AND NXM. THE TERMINATION CLASS BITS ARE SOMETHING OTHER THAN 0 (UNLESS RMR IS THE ONLY ERROR - SEE RMR).
14	-	-	RESERVED (ALWAYS A 0)
13	SCE	FC0	Sanity Check Error-Sets when the controller detects an abnormal condition within itself during execution of it's functions and the problem is serious enough that a Message Packet is not stored.
12	RMR	S	REGISTER MODIFICATION REFUSED. SET BY THE TSV05 WHEN A COMMAND POINTER IS LOADED INTO TSDB AND SUB-SYSTEM READY (SSR) IS NOT SET. NOTE THAT THIS BIT CAUSES SPECIAL CONDITION BUT NO TERMINATION CLASS (IN FACT, THE TS05 NEVER SEES THIS ERROR) BECAUSE ON A SYSTEM WITH NO BUGS, THIS BIT MAY COME UP ON AN ATTENTION MESSAGE. IF ATTNS ARE NOT ENABLED, THIS BIT COMING UP IS AN INDICATION OF EITHER A FATAL CONTROLLER ERROR OR A SOFTWARE BUG.
11	NXM	4/5	NON-EXISTENT MEMORY. SET BY THE TSV05 WHEN TRYING TO TRANSFER TO OR FROM A MEMORY LOCATION WHICH DOES NOT EXIST. MAY OCCUR WHEN FETCHING THE COMMAND PACKET, FETCHING OR STORING DATA, OR STORING THE MESSAGE PACKET.
10	NBA	S	NEED BUFFER ADDRESS. WHEN SET, INDICATES THAT THE TS05 NEEDS A MESSAGE BUFFER ADDRESS. THIS BIT IS CLEARED DURING THE SET CHARACTERISTICS

1511				COMMAND (IF A GOOD ADDRESS WAS GIVEN).
1512				
1513	09	A17	S	BUS ADDRESS BIT 17. A17 AND A16 (BIT 08) TRACK
1514				THE VALUES OF BITS 17 AND 16 OF THE TSBA
1515				REGISTER. LOADED FROM TSDB BITS 01-00 WHEN TSDB
1516				IS WRITTEN.
1517				
1518	08	A16	S	BUS ADDRESS BIT 16. SEE A17 (BIT 09).
1519				
1520	07	SSR	S	SUB-SYSTEM READY. WHEN SET, INDICATES THAT THE
1521				TSV05/TS05 SUBSYSTEM IS NOT BUSY AND IS READY TO
1522				ACCEPT A NEW COMMAND POINTER.
1523				
1524	06	OFL	S,1,3	OFF-LINE. WHEN SET, INDICATES THAT THE TS05 IS
1525				OFF-LINE AND UNAVAILABLE FOR ANY TAPE MOTION
1526				COMMANDS. THIS BIT CAN CAUSE A TERMINATION CLASS
1527				OF 1 (ON ATTN INTERRUPT) OR 3 (RESULTS IN NEF).
1528				
1529	05	FC1	7	FATAL TERMINATION CLASS 01. FC1 AND FC0 (BIT
1530				04) ARE USED TO INDICATE THE TYPE OF FATAL
1531				ERROR WHICH HAS OCCURRED ON THE TS05. THESE
1532				BITS ARE VALID ONLY WHEN SC IS SET AND THE
1533				TERMINATION CLASS CODE BITS ARE ALL SET (111).
1534				
1535	04	FC0	7	FATAL TERMINATION CLASS 00. SEE FC1 (BIT 05).
1536				
1537	03	TC2	S	TERMINATION CLASS BIT 02. THIS BIT, ALONG WITH
1538				THE TC1 AND TC0 BITS, ACT AS AN OFFSET VALUE
1539				WHENEVER AN ERROR OR EXCEPTION CONDITION OCCURS
1540				ON A COMMAND. EACH OF THE EIGHT POSSIBLE
1541				VALUES OF THIS FIELD REPRESENT A PARTICULAR
1542				CLASS OF ERRORS OR EXCEPTIONS. THE CONDITIONS
1543				IN EACH CLASS HAVE SIMILAR SIGNIFICANCE AND, AS
1544				APPLICABLE, RECOVERY PROCEDURES. THE CODE
1545				PROVIDED IN THIS FIELD IS EXPECTED TO BE
1546				UTILIZED AS AN OFFSET INTO A DISPATCH TABLE FOR
1547				HANDLING OF THE CONDITION.
1548				
1549	02	TC1	S	TERMINATION CLASS BIT 01. SEE TC2 (BIT 03).
1550				
1551	01	TC0	S	TERMINATION CLASS BIT 00. SEE TC2 (BIT 03).
1552				
1553	00	-	-	NOT USED. (ALWAYS A 0)
1554				
1555				
1556				
1557				
1558				
1559				
1560				


Q-BUS ADDRESS + 2 - WRITE ONLY

SUBSYSTEM INITIALIZE



1562  
1563  
1564  
1565  
1566  
1567  
1568  
1569  
1570  
1571  
1572  
1573  
1574  
1575  
1576  
1577  
1578  
1579  
1580  
1581  
1582  
1583  
1584  
1585  
1586  
1587  
1588  
1589  
1590  
1591  
1592  
1593  
1594  
1595  
1596  
1597  
1598  
1599  
1600  
1601  
1602  
1603  
1604  
1605  
1606  
1607  
1608  
1609  
1610  
1611  
1612  
1613  
1614  
1615  
1616  
1617  
1618


6.3.2.1 TSV05 EXTENDED DATA BUFFER REGISTER (TSDBX)



(TSDBX exists only when enabled by the Extended Features switch on the M7196)

BIT	NAME	TCC	DEFINITION
15	BT	-	BOOT COMMAND BIT. WHEN WRITTEN TO A 1, WITH SSR=1, CAUSES THE TAPE TO BE REWOUND TO BOT, THE FIRST TAPE RECORD TO BE SKIPPED, AND THE SECOND RECORD TO BE LOADED INTO CPU MEMORY SPACE STARTING AT LOCATION 0.
14-12			RESERVED (ALWAYS A 0)
11-08	P<21:18>		COMMAND POINTER BITS 21-18. WHEN THE TSDBX IS WRITTEN AND SSR=1, THE DATA IS LOADED INTO BITS 21-18 OF THE INTERNAL TSBA REGISTER.
07-00			RESERVED (ALWAYS A 0)

6.3.3 EXTENDED STATUS REGISTER 0 (XSTAT0)

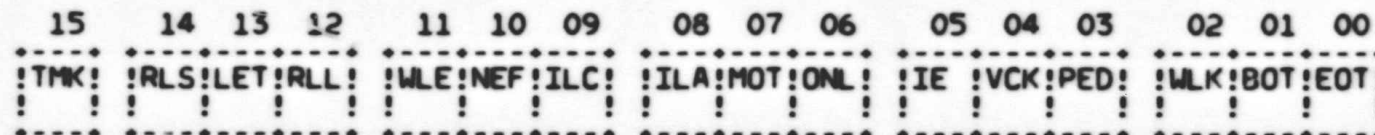

BIT	NAME	TCC	DEFINITION
15	TMK	S,2	TAPE MARK DETECTED. SET WHENEVER A TAPE MARK WAS DETECTED DURING A READ, SPACE, OR SKIP COMMAND AND AS A RESULT OF THE WRITE TAPE MARK OR WITE TAPE MARK RETRY COMMANDS.
14	RLS	2	RECORD LENGTH SHORT. THIS BIT INDICATES THAT EITHER THE RECORD'S LENGTH WAS SHORTER THAN THE BYTE COUNT ON READ OPERATIONS, A SPACE RECORD OPERATION ENCOUNTERED A TAPE MARK OR BOT BEFORE THE POSITION COUNT WAS EXHAUSTED, OR A SKIP TAPE MARKS COMMAND WAS TERMINATED BY ENCOUNTERING BOT OR A DOUBLE TAPE MARK (IF THAT OPERATIONAL MODE IS ENABLED, SEE LET) PRIOR TO EXHAUSTING THE POSITION COUNTER.

1619  
1620  
1621  
1622  
1623  
1624  
1625  
1626  
1627  
1628  
1629  
1630  
1631  
1632  
1633  
1634  
1635  
1636  
1637  
1638  
1639  
1640  
1641  
1642  
1643  
1644

13 LET 2

LOGICAL END OF TAPE. SET ONLY ON THE SKIP TAPE MARKS COMMAND WHEN EITHER TWO CONTIGUOUS TAPE MARKS ARE DETECTED OR WHEN MOVING OFF OF BOT AND THE FIRST RECORD ENCOUNTERED IS A TAPE MARK. THE SETTING OF THIS BIT WILL NOT OCCUR UNLESS THIS MODE OF TERMINATION IS ENABLED THROUGH USE OF THE SET CHARACTERISTICS COMMAND.

12 RLL 2

RECORD LENGTH LONG. WHEN SET, THIS BIT INDICATES THAT THE RECORD READ WAS LONGER THAN THE BYTE COUNT SPECIFIED.

11 WLE 3,6

WRITE LOCK ERROR. WHEN SET, INDICATES THAT A WRITE OPERATION WAS ISSUED BUT THE MOUNTED TAPE DID NOT CONTAIN A WRITE ENABLE RING OR THE WRT LOCK SWITCH ACTIVATED DURING THE OPERATION.

10 NEF 3

NON-EXECUTABLE FUNCTION. WHEN SET, INDICATES THAT THE COMMAND COULD NOT BE EXECUTED DUE TO ONE OF THE FOLLOWING CONDITIONS:

- THE COMMAND SPECIFIED REVERSE TAPE DIRECTION BUT THE TAPE WAS ALREADY POSITIONED AT BOT.
- THE ISSUING OF ANY MOTION COMMAND EXCEPT




1646  
1647  
1648  
1649  
1650  
1651  
1652  
1653  
1654  
1655  
1656  
1657  
1658  
1659  
1660  
1661  
1662  
1663  
1664  
1665  
1666  
1667  
1668  
1669  
1670  
1671  
1672  
1673  
1674  
1675  
1676  
1677  
1678  
1679  
1680  
1681  
1682  
1683  
1684  
1685  
1686  
1687  
1688  
1689  
1690  
1691  
1692  
1693  
1694

WHEN THE VOLUME CHECK BIT IS SET.  
- ANY COMMAND, EXCEPT GET STATUS OR DRIVE INITIALIZE, WHEN THE TS05 IS OFF-LINE.  
- ANY WRITE COMMAND WHEN THE TAPE DOES NOT CONTAIN A WRITE ENABLE RING (WRITE LOCK STATUS - WLS).

09	ILC	3	ILLEGAL COMMAND. SET WHEN A COMMAND IS ISSUED AND EITHER ITS COMMAND FIELD OR ITS COMMAND MODE FIELD CONTAINS CODES WHICH ARE NOT SUPPORTED BY THE TS05.
08	ILA	3	ILLEGAL ADDRESS. (MORE THAN 18 BITS OR ODD WHEN AN EVEN ADDRESS IS REQUIRED.)
07	MOT	S	TAPE IS MOVING.
06	ONL	S	ON LINE. WHEN SET, INDICATES THAT THE TS05 IS ON-LINE AND OPERABLE.
05	IE	S	INTERRUPT ENABLE. REFLECTS THE STATE OF THE INTERRUPT ENABLE BIT SUPPLIED ON THE LAST COMMAND.
04	VCK	S	VOLUME CHECK. WHEN SET, INDICATES THAT THE DRIVE HAS BEEN EITHER POWERED DOWN OR TURNED OFF-LINE. CLEARED BY THE CLEAR VOLUME CHECK (CVC) BIT IN THE COMMAND HEADER WORD. THIS BIT CAN CAUSE A TERMINATION CLASS OF 3.
03	PED	S	PHASE ENCODED DRIVE. ALWAYS SET, INDICATES THAT THE TS05 IS CAPABLE OF READING AND WRITING ONLY 1600 BPI PHASE ENCODED DATA.
02	WLK	S,3	WRITE LOCKED. WHEN SET, INDICATES THAT THE MOUNTED REEL OF TAPE DOES NOT HAVE A WRITE-ENABLE RING INSTALLED. THE TAPE IS, THEREFORE, WRITE PROTECTED.
01	BOT	S,3	BEGINNING OF TAPE. WHEN SET, INDICATES THAT THE TAPE IS POSITIONED AT THE LOAD POINT AS DENOTED BY THE BOT REFLECTIVE STRIP ON THE TAPE.
00	EOT	S,2	END OF TAPE. THIS BIT IS SET WHENEVER THE TAPE IS POSITIONED AT OR BEYOND THE END OF TAPE REFLECTIVE STRIP.

1696  
1697  
1698  
1699  
1700  
1701  
1702  
1703  
1704  
1705  
1706  
1707  
1708  
1709  
1710  
1711  
1712  
1713  
1714  
1715  
1716  
1717  
1718  
1719  
1720  
1721  
1722  
1723  
1724  
1725  
1726  
1727  
1728  
1729  
1730  
1731

6.3.4 EXTENDED STATUS REGISTER 1 (XSTAT1)

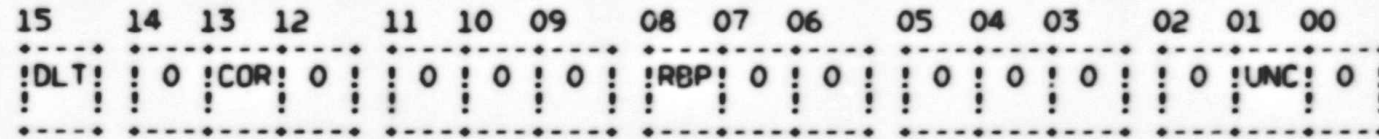


BIT	NAME	TCC	DEFINITION
15	DLT	4	DATA LATE. SET WHEN THE FIFO IS FULL ON A READ OR EMPTY ON A WRITE. THESE CONDITIONS OCCUR WHENEVER THE Q-BUS LATENCY EXCEEDS THE DATA TRANSFER RATE OF THE TS05.
14	-	-	NOT USED. (ALWAYS A 0)
13	COR	S	CORRECTABLE DATA. CORRECTABLE DATA ERROR HAS BEEN ENCOUNTERED.
12-09			RESERVED (ALWAYS A 0)
08	RBP	4	READ BUS PARITY ERROR. SET WHEN CONTROLLER DETECTS A PARITY ERROR ON THE READ DATA LINES OF THE TRANSPORT BUS.
07-02 & 00			RESERVED (ALWAYS A 0)
01	UNC	4	UNCORRECTABLE DATA ERROR.



1733  
1734  
1735  
1736  
1737  
1738  
1739  
1740  
1741  
1742  
1743  
1744  
1745  
1746  
1747  
1748  
1749  
1750  
1751  
1752  
1753  
1754  
1755  
1756  
1757  
1758  
1759  
1760  
1761  
1762  
1763


6.3.5 EXTENDED STATUS REGISTER 2 (XSTAT2)

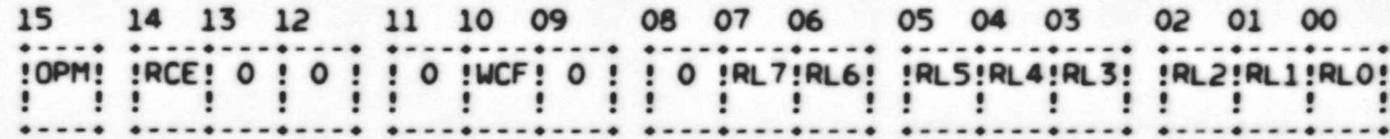

BIT	NAME	TCC	DEFINITION
15	OPM	S	OPERATION IN PROGRESS. (TAPE MOVING)
14	RCE	7,F2	RAM CHECKSUM ERROR. CAUSES FATAL CLASS 2 BECAUSE THE ERROR MIGHT HAVE OCCURRED DURING THE TRANSMISSION OF THE MESSAGE PACKET.
13-11			RESERVED (ALWAYS A 0)
10	WCF	7	WRITE CLOCK FAILURE. SET DURING A WRITE TO INDICATE THAT THE FIFO IS NOT BEING EMPTIED BY THE TRANSPORT.
09-08			RESERVED (ALWAYS A 0)
07-00	RL	-	REVISION LEVEL.
	7-0		


1765  
1766  
1767  
1768  
1769  
1770  
1771  
1772  
1773  
1774  
1775  
1776  
1777  
1778  
1779  
1780  
1781  
1782  
1783  
1784  
1785  
1786  
1787  
1788  
1789  
1790  
1791  
1792  
1793  
1794  
1795  
1796  
1797  
1798  
1799  
1800  
1801  
1802  
1803  
1804  
1805  
1806  
1807  
1808  
1809  
1810  
1811  
1812  
1813  
1814  
1815  
1816  
1817  
1818  
1819  
1820  
1821

6.3.6 EXTENDED STATUS REGISTER 3 (XSTAT3)

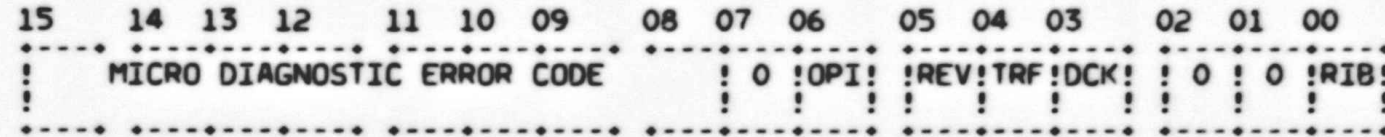

BIT	NAME	TCC	DEFINITION
15 TO 08			MICRO DIAGNOSTIC ERROR CODE. (SEE LIST OF CODES BELOW).
07			RESERVED (ALWAYS A 0)
06	OPI	6	OPERATION INCOMPLETE. SET WHEN A READ, SPACE, OR SKIP OPERATION HAS MOVED 25 FEET OF TAPE WITHOUT DETECTING ANY DATA ON THE TAPE.
05	REV	5	DIRECTION OF CURRENT OPERATION WAS REVERSE (BUT IS 0 IF REWIND OR FORWARD)
04	-	-	RESERVED (ALWAYS A 0)
03	DCK	5,6	DENSITY CHECK. SET WHEN A PE IDENTIFICATION BURST (IDB) WAS NOT DETECTED WHEN MOVING OFF OF BOT.
02-01			RESERVED (ALWAYS A 0)
00	RIB	2	REVERSE INTO BOT. A READ, SPACE, OR SKIP COMMAND ALREADY IN PROGRESS HAS ENCOUNTERED THE BOT MARKER WHEN MOVING TAPE IN THE REVERSE DIRECTION. TAPE MOTION WILL BE HALTED AT BOT.

6.3.7 EXTENDED STATUS REGISTER 4 (XSTAT4)

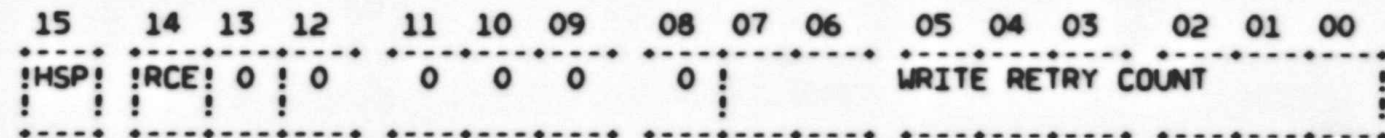

BIT	NAME	TCC	DEFINITION
-----	------	-----	------------



1822	15	HSP	S	High Speed. When set, indicates that the transport is operating in high speed mode.(100ips) When clear, the transport is operating in low speed mode.(25ips)
1823				
1824				
1825				
1826	14	RCE	6	Retry Count Exceeded. When set, indicates that the controller was buffering Write Data and could not successfully output the buffered record within the specified number of retries. Causes Tape Position Lost termination.
1827				
1828				
1829				
1830				
1831	13-8		-	RESERVED (ALWAYS A 0)
1832				
1833	7-0	WRC	S	Write Recount Count Statistic. This field indicates, when the controller is buffering write data records, the total number of controller initiated retries performed in order to write the previous buffered record. This count is cleared after it is displayed.
1834				
1835				
1836				
1837				
1838				
1839				

## 7.0 DIAGNOSTIC HISTORY

```

-----
REVISION A - MAR 1982
             - MODIFIED CZTSHC FROM TS11 FOR TSV05

REVISION B - APR 1983
             - UPDATED THE DIAGNOSTIC TO SUPPLY THE CORRECT
               RECORD NUMBER DURING EXECUTION OF TEST #2.
               REF: CHMIELECKI TO MITCHELL "TSV05 DATA
                 RELIABILITY PROBLEM"; 21-JAN-83.

REVISION C - JUN 1984
             MINOR CHANGES FOR "ORION" CPU

REVISION D - APRIL 1987
             CHANGES MADE TO ALLOW DIAGNOSTICS TO WORK WITH
               THE NEW TSV05 MICROCODE (REVISION 2). THE NEW
               TSV05 MICROCODE ALWAYS IN EXTENDED FEATURE MODE.

```

```

.TITLE PROGRAM HEADER AND TABLES
.SBTTL PROGRAM HEADER

```

```

.ENABL ABS,AMA
      = 2000
BGNMOD

```

```

; **
; THE PROGRAM HEADER IS THE INTERFACE BETWEEN
; THE DIAGNOSTIC PROGRAM AND THE SUPERVISOR.
; --

```

```

POINTER BGNRPT,BGNSW,BGNSFT,BGNAU,BGNDU

```

```

1877
1878
1907
1909 000000
1910          002000
1912 002000
1913
1914
1915
1916
1917
1918
1919 002000

```

M3

PROGRAM HEADER AND TABLES

MACRO V05.03 Friday 22-May-87 08:12 Page 14-2

SEQ 0038

PROGRAM HEADER

```

1920
1928
1929 002000          HEADER CVTSE,D,0,5000,1
002000          L$NAME::          ;DIAGNOSTIC NAME          .ASCII /C/
002000          103                                     .ASCII /V/
002001          126                                     .ASCII /T/
002002          124                                     .ASCII /S/
002003          123                                     .ASCII /E/
002004          105                                     .BYTE 0
002005          000                                     .BYTE 0
002006          000                                     .BYTE 0
002007          000
002010          L$REV::          ;REVISION LEVEL          .ASCII /D/
002010          104                                     .ASCII /O/
002011          L$DEPO::          ;0
002011          060                                     .ASCII /O/
002012          L$UNIT::          ;NUMBER OF UNITS          .WORD 0
002012          000000
002014          L$TIML::          ;LONGEST TEST TIME          .WORD 5000
002014          005000
002016          L$HPCP::          ;POINTER TO H.W. QUES.          .WORD L$HARD
002016          030014
002020          L$SPCP::          ;POINTER TO S.W. QUES.          .WORD L$SOFT
002020          030122
002022          L$HPTP::          ;PTR. TO DEF. H.W. PTABLE          .WORD L$HW
002022          002174
002024          L$SPTP::          ;PTR. TO S.W. PTABLE          .WORD L$SW
002024          002204
002026          L$LADP::          ;DIAG. END ADDRESS          .WORD L$LAST
002026          032004
002030          L$STA::          ;RESERVED FOR APT STATS          .WORD 0
002030          000000
002032          L$CO::          .WORD 0
002032          000000
002034          L$DTYP::          ;DIAGNOSTIC TYPE          .WORD 0
002034          000001
002036          L$APT::          ;APT EXPANSION          .WORD 1
002036          000000
002040          L$DTP::          ;PTR. TO DISPATCH TABLE          .WORD 0
002040          002124
002042          L$PRIO::          ;DIAGNOSTIC RUN PRIORITY          .WORD L$DISPATCH
002042          000000
002044          L$ENVI::          ;FLAGS DESCRIBE HOW IT WAS SETUP          .WORD 0
002044          000000
002046          L$EXP1::          ;EXPANSION WORD          .WORD 0
002046          000000
002050          L$MREV::          ;SVC REV AND EDIT #          .WORD 0
002050          003
002051          003
002052          L$EF::          ;DIAG. EVENT FLAGS          .BYTE C$REVISION
002052          000000
002054          000000
002056          L$SPC::          .BYTE C$EDIT
002056          000000
002060          L$DEVP::          ; POINTER TO DEVICE TYPE LIST          .WORD 0
002060          002164
002062          L$REPP::          ;PTR. TO REPORT CODE          .WORD L$DVTYP

```



N3

PROGRAM HEADER

002062	017630			.WORD	L\$RPT
002064		L\$EXP4::		.WORD	0
002064	000000			.WORD	0
002066		L\$EXP5::		.WORD	0
002066	000000			.WORD	0
002070		L\$AUT::	;PTR. TO ADD UNIT CODE	.WORD	L\$AU
002070	024112			.WORD	L\$DU
002072		L\$DUT::	;PTR. TO DROP UNIT CODE	.WORD	L\$DU
002072	024040			.WORD	0
002074		L\$LUN::	;LUN FOR EXERCISERS TO FILL	.WORD	0
002074	000000			.WORD	L\$DESC
002076		L\$DESP::	;POINTER TO DIAG. DESCRIPTION	.WORD	L\$DESC
002076	002136			.WORD	L\$LOAD
002100		L\$LOAD::	;GENERATE SPECIAL AUTOLOAD EMT	EMT	E\$LOAD
002100	104035			.WORD	0
002102		L\$ETP::	;POINTER TO ERR_TBL	.WORD	0
002102	000000			.WORD	L\$INIT
002104		L\$ICP::	;PTR. TO INIT CODE *	.WORD	L\$INIT
002104	021364			.WORD	L\$CLEAN
002106		L\$CCP::	;PTR. TO CLEAN-UP CODE	.WORD	L\$CLEAN
002106	023776			.WORD	L\$AUTO
002110		L\$ACP::	;PTR. TO AUTO CODE	.WORD	L\$AUTO
002110	023354			.WORD	L\$PROT
002112		L\$PRT::	;PTR. TO PROTECT TABLE	.WORD	L\$PROT
002112	021356			.WORD	0
002114		L\$TEST::	;TEST NUMBER	.WORD	0
002114	000000			.WORD	0
002116		L\$DLY::	;DELAY COUNT	.WORD	0
002116	000000			.WORD	0
002120		L\$HIME::	;PTR. TO HIGH MEM	.WORD	0
002120	000000			.WORD	0

1930

B4

DISPATCH TABLE

1937  
 1938  
 1939  
 1940  
 1941  
 1942  
 1943  
 1944 002122  
 002122 000005  
 002124  
 002124 024216  
 002126 025704  
 002130 026540  
 002132 026734  
 002134 027114

.SBTTL DISPATCH TABLE

\*\*\*  
 ; THE DISPATCH TABLE CONTAINS THE STARTING ADDRESS OF EACH TEST.  
 ; IT IS USED BY THE SUPERVISOR TO DISPATCH TO EACH TEST.  
 ;--

DISPATCH 5

L#DISPATCH::  
 .WORD 5  
 .WORD T1  
 .WORD T2  
 .WORD T3  
 .WORD T4  
 .WORD T5

1945  
 1952  
 1953  
 1954  
 1955  
 1956

.SBTTL DESCRIPTIVE TEXT

\*\*\*  
 ; 2 LINES OF TEXT PRINTED TO THE OPERATOR TO IDENTIFY THE DIAGNOSTIC AND THE DEVICE UNDER TEST  
 ;--

T  
 1957  
 1958  
 1959 002136  
 002136  
 002136 104 101 124  
 ST/  
 002141 101 040 122  
 002144 105 114 111  
 002147 101 102 111  
 002152 114 111 124  
 002155 131 040 124  
 002160 105 123 124  
 002163 000

DESCRIPT <DATA RELIABILITY TEST>

L#DESC::  
 .ASCIZ /DATA RELIABILITY TEST

1960 002164  
 002164  
 002164 124 123 126  
 002167 060 065 060

DEVTYP <TSV05>

L#DVTYP::  
 .EVEN  
 .ASCIZ /TSV05/  
 .EVEN



## DEFAULT HARDWARE P-TABLE

```

1962          .SBTTL  DEFAULT HARDWARE P-TABLE
1963
1964          ;**
1965          ; THE DEFAULT HARDWARE P-TABLE CONTAINS DEFAULT VALUES OF
1966          ; THE TEST-DEVICE PARAMETERS.  THE STRUCTURE OF THIS TABLE
1967          ; IS IDENTICAL TO THE STRUCTURE OF THE RUN-TIME P-TABLE.
1968          ;--
1969
1970          BGNHW  DFPTBL
1971          002172          .WORD  L10000-L$HW/2
1972          002172  000003
1973          002174
1974          002174
1975          002174  172520          ;TSDB ADDRESS.
1976          002176  000224          ;VECTOR ADDRESS.
1977          002200  000000          ;DRIVE #0 FOR DEFAULT
1978
1979          ENDHW
1980          L10000:

```

```

1981          .SBTTL  SOFTWARE P-TABLE
1982
1983          ;**
1984          ; THE SOFTWARE P-TABLE CONTAINS THE VALUES OF THE PROGRAM
1985          ; PARAMETERS THAT CAN BE CHANGED BY THE OPERATOR.
1986          ;--
1987
1988          BGNSW  SFPTBL
1989          002202          .WORD  L10001-L$SW/2
1990          002202  000052
1991          002204
1992          002204
1993          002204
1994          002204
1995          002204
1996          002204  001
1997          002205  000
1998          002206  000
1999          002207  000
2000          002210  001
2001          002211  000
2002          002212  000
2003          002213  000
2004          002214  000
2005          002215  000
2006          002216  000
2007          002217  000
2008          002220  000040
2009          002222  000015
2010          002224  000001
2011          002226  000001
2012          002230  000007
2013          002232  000004
2014          002234  004000
2015          002236  076400
2016          002240  000007
2017          002242  000003

```

```

CLRFLG:: .BYTE 1          ;CLEAR COUNTERS FLAG.
RRANV:: .BYTE 0          ;RESET RANDOM VARIABLES EACH PASS FLAG.
HAE:: .BYTE 0            ;HALT AFTER EACH COMMAND FLAG.
ERCVER:: .BYTE 0        ;ENABLE RECOVERABLE ERROR PRINTS FLAG.
BADTSW:: .BYTE 1        ;BAD TAPE SWITCH TO REWRITE ON SAME SPOT & DETECT BAD TAPE
          .BYTE 0        ;SPARE
DINT:: .BYTE 0          ;DISABLE INTERRUPTS FLAG.
IREC:: .BYTE 0          ;INHIBIT ERROR RECOVERY FLAG.
CHGFLG:: .BYTE 0        ;CHANGE CMD SEQ TABLE FLAG.
          .BYTE 0        ;SPARE.
PIRE:: .BYTE 0          ;INHIBIT RESIDUAL FRAMECOUNT ERROR REPORT FLAG.
          .BYTE 0        ;SPARE.
CHAR:: CH.EAI           ;CHARACTERISTICS CODE (DEFAULT = 40).
CMD0:: .WORD 13.        ;COMMAND 2 (DEFAULT = REWIND).
          .WORD 1        ;BYTE COUNT
          .WORD 1        ;NUMBER OF OPERATIONS
          .WORD RANP     ;PATTERN
          .WORD 4        ;COMMAND 3 (DEFAULT = WRITE)
          .WORD DATCNT   ;BYTE COUNT (DEFAULT = MAX BUFFER SIZE).
          .WORD 32000.   ;NUMBER OF OPERATIONS (DEFAULT = 32000).
          .WORD RANP     ;PATTERN (DEFAULT = RANDOM).
          .WORD 3        ;COMMAND 4 (DEFAULT = READ REV).

```

D4

SOFTWARE P-TABLE

2018	002244	004000	.WORD	DATCNT	;BYTE COUNT (DEFAULT = MAX BUFFER SIZE).
2019	002246	076400	.WORD	32000.	;NUMBER OF OPERATIONS (DEFAULT = 32,000).
2020	002250	000007	.WORD	RANP	;PATTERN (DEFAULT = RANDOM).
2021	002252	000002	.WORD	2	;COMMAND 5 (DEFAULT = READ FWD).
2022	002254	004000	.WORD	DATCNT	;BYTE COUNT (DEFAULT = MAX BUFFER SIZE).
2023	002256	076400	.WORD	32000.	;NUMBER OF OPERATIONS (DEFAULT = 32,000).
2024	002260	000007	.WORD	RANP	;PATTERN (DEFAULT = RANDOM).
2025	002262	000015	.WORD	13.	;COMMAND 6 (DEFAULT = REWIND).
2026	002264	000001	.WORD	1	;BYTE COUNT
2027	002266	000001	.WORD	1	;NUMBER OF OPERATIONS
2028	002270	000007	.WORD	RANP	;PATTERN
2029	002272	000033	.WORD	27.	;END OF CMD SEQ TABLE CODE (DEF) OR CMD 7
2030	002274	004000	.WORD	DATCNT	;BYTE COUNT (DEFAULT = MAX BUFFER SIZE).
2031	002276	076400	.WORD	32000.	;NUMBER OF OPERATIONS (DEFAULT = 32000).
2032	002300	000007	.WORD	RANP	;PATTERN (DEFAULT = RANDOM).
2033	002302	000033	.WORD	27.	;END OF CMD SEQ TABLE CODE (DEF) OR CMD 8
2034	002304	004000	.WORD	DATCNT	;BYTE COUNT (DEFAULT = MAX BUFFER SIZE).
2035	002306	076400	.WORD	32000.	;NUMBER OF OPERATIONS (DEFAULT = 32000).
2036	002310	000007	.WORD	RANP	;PATTERN (DEFAULT = RANDOM).
2037	002312	000001	TS1MD:: .WORD	1	;DEFAULT SWITCH SETTING
2038	002314	000000	RDBUF:: .WORD	0	;ENABLE READ BUFFERING
2039	002316	000000	WTBUF:: .WORD	0	;ENABLE WRITE BUFFERING
2040	002320	000000	HSSW:: .WORD	0	;RUN AT 100ips SWITCH
2041	002322	000000	EXTFEA:: .WORD	0	;EXTENDED FEATURES SOFTWARE SW 0=OFF;1=ON
2042	002324	000000	REV:: .WORD	0	;MICROCODE REVISION LEVEL
2043	002326	000000	BENBSW:: .WORD	0	;BUFFER ENABLE SOFTWARE SW 0=OFF;1=ON
2044					
2045	002330			ENDSW	
	002330		L10001:		
2046					
2047	002330			ENDMOD	



SOFTWARE P-TABLE

2060  
 2061  
 2062  
 2071  
 2072 002330  
 2073  
 2074  
 2075  
 2076  
 2077  
 2078  
 2079 002330

.TITLE GLOBAL AREAS  
 .SBTTL GLOBAL EQUATES SECTION

BGNMOD

\*\*\*  
 ; THE GLOBAL EQUATES SECTION CONTAINS PROGRAM EQUATES THAT  
 ; ARE USED IN MORE THAN ONE TEST.  
 ;--

EQUALS

; BIT DIFINITIONS

100000	BIT15== 100000
040000	BIT14== 40000
020000	BIT13== 20000
010000	BIT12== 10000
004000	BIT11== 4000
002000	BIT10== 2000
001000	BIT09== 1000
000400	BIT08== 400
000200	BIT07== 200
000100	BIT06== 100
000040	BIT05== 40
000020	BIT04== 20
000010	BIT03== 10
000004	BIT02== 4
000002	BIT01== 2
000001	BIT00== 1

BIT9== BIT09  
 BIT8== BIT08  
 BIT7== BIT07  
 BIT6== BIT06  
 BIT5== BIT05  
 BIT4== BIT04  
 BIT3== BIT03  
 BIT2== BIT02  
 BIT1== BIT01  
 BIT0== BIT00

; EVENT FLAG DEFINITIONS  
 ; EF32:EF17 RESERVED FOR SUPERVISOR TO PROGRAM COMMUNICATION

000040	EF.START== 32.	; START COMMAND WAS ISSUED
000037	EF.RESTART== 31.	; RESTART COMMAND WAS ISSUED
000036	EF.CONTINUE== 30.	; CONTINUE COMMAND WAS ISSUED
000035	EF.NEW== 29.	; A NEW PASS HAS BEEN STARTED
000034	EF.PWR== 28.	; A POWER-FAIL/POWER-UP OCCURRED

; PRIORITY LEVEL DEFINITIONS

000340	PRI07== 340
000300	PRI06== 300

GLOBAL EQUATES SECTION

```

000240      PRI05== 240
000200      PRI04== 200
000140      PRI03== 140
000100      PRI02== 100
000040      PRI01== 40
000000      PRI00== 0
;
;OPERATOR FLAG BITS
;
000004      EVL==      4
000010      LOT==     10
000020      ADR==     20
000040      IDU==     40
000100      ISR==    100
000200      UAM==    200
000400      BOE==    400
001000      PNT==   1000
002000      PRI==   2000
004000      IXE==   4000
010000      IBE==  10000
020000      IER==  20000
040000      LOE==  40000
100000      HOE== 100000

```

2080  
2088  
2089  
2090  
2091  
2092  
2093  
2094  
2095  
2096  
2097  
2098

```

; REGISTER USAGE.
;
; R0 - PASSES PARAMETERS TO/FROM DIAGNOSTIC SUPERVISOR.
; R1 - COMMAND SEQUENCE TABLE POINTER.
; R2 - GENERAL PURPOSE REGISTER.
; R3 - GENERAL PURPOSE REGISTER.
; R4 - GENERAL PURPOSE REGISTER.
; R5 - CURRENT LOGICAL DEVICE NUMBER X 2.
; R6 - STACK POINTER.
; R7 - PROGRAM COUNTER.

```



## GLOBAL EQUATES SECTION

```

2100
2101           ;THE FOLLOWING ARE BIT DEFINITIONS FOR THE TSSR REGISTERS.
2102
2103           100000      TS.SC==100000           ;SPECIAL CONDITION BIT.
2104           040000      TS.UPE==40000          ;UNIBUS PARITY ERROR
2105           020000      TS.SPE==20000          ;SERIAL BUS PARITY ERROR.
2106           010000      TS.RMR==10000          ;REGISTER MODIFICATION REFUSED.
2107           004000      TS.NXM==4000           ;NON-EXISTENT MEMORY.
2108           002000      TS.NBA==2000           ;NEED BUFFER ADDRESS.
2109           001000      TS.A17==1000           ;BUS ADDRESS BIT 17.
2110           000400      TS.A16==400            ;BUS ADDRESS BIT 16.
2111           000200      TS.SSR==200            ;UNIT READY BIT.
2112           000100      TS.OFL==100            ;OFF LINE.
2113           177717      TSC.FCC==177717         ;FATAL CLASS CODE MASK.
2114           177761      TSC.TCC==177761         ;TERMINATION CLASS CODE MASK.
2115
2116           ;THE FOLLOWING ARE BIT DEFINITIONS FOR THE COMMAND WORD
2117
2118           100000      ACK.C==100000           ;ACKNOWLEDGE BIT
2119           040000      CVC.C==40000            ;CLEAR VOLUME CHECK.
2120           020000      OPP.C==20000            ;OPPOSITE BIT
2121           010000      SWB.C==10000            ;SWAP BYTE BIT
2122           004000      MOD.C3==4000            ;MODE BIT 3
2123           004000      BRFC.C==4000            ;BYTE/RECORD/FILE COUNT FLAG BIT. NOT USED
2124                                           ;BY TS05 BUT USED INTERNALLY BY THIS PROGRAM ONLY.
2125           002000      MOD.C2==2000            ;MODE BIT 2
2126           001000      MOD.C1==1000            ;MODE BIT 1
2127           000400      MOD.C0==400             ;MODE BIT 0
2128           000200      IE.C==200              ;INTERRUPT ENABLE
2129           000100      FMT.C1==100            ;FORMAT BIT 1
2130           000100      VFY.C==100             ;WRITE VERIFY FLAG BIT. INTERNAL USE ONLY.
2131                                           ;NOT USED BY TS05.
2132           000040      FMT.C0==40              ;FORMAT BIT 0.
2133           000040      JMP.C==40              ;JUMP BIT-TO DIRECT THIS PROGRAM TO JUMP TO
2134                                           ;A CERTAIN LOCATION IN THE COMMAND SEQUENCE
2135                                           ;TABLE. INTERNAL USE ONLY.
2136           000020      CMD.C4==20              ;COMMAND BIT 4
2137           000020      DLY.C==20              ;INSERT DELAY. INTERNAL USE ONLY.
2138           000010      CMD.C3==10              ;COMMAND BIT 3
2139           000004      CMD.C2==4               ;COMMAND BIT 2
2140           000002      CMD.C1==2              ;COMMAND BIT 1
2141           000001      CMD.C0==1              ;COMMAND BIT 0
2142
2143           ;BIT DEFINITIONS FOR DEVICE CHARACTERISTICS.
2144
2145           000200      CH.ESS==200             ;ENABLE SKIP TAPE MARKS STOP (STOP AT LOGICAL EOT).
2146           000040      CH.EAI==40             ;ENABLE ATTENTION INTERRUPTS.
2147           000020      CH.ERI==20             ;ENABLE MESSAGE BUFFER RELEASE INTERRUPTS.
2148           000040      DFTSCH==CH.EAI          ;DEFAULT CHARACTERISTICS CODE.

```

## GLOBAL EQUATES SECTION

```

2150
2151           ;BIT DEFINITIONS FOR EXTENDED CONTROL WORD
2152
2153           000040 EF.HSS==40           ;ENABLE HIGH SPEED SELECT
2154           000030 EF.RWB==30          ;ENABLE BOTH READ & WRITE BUFFERING
2155           000020 EF.RBO==20          ;ENABLE READ BUFFERING ONLY
2156
2157           ;THE FOLLOWING INDICATES THE RELATIVE POSITIONS OF THE STATUS WORDS
2158           ;IN THE MESSAGE BUFFER.
2159
2160           000004 MS.RFC==4           ;RESIDUAL FRAME COUNT.
2161           000006 MS.XS0==6           ;EXT STATUS REG 0
2162           000010 MS.XS1==10          ;EXT STATUS REG 1
2163           000012 MS.XS2==12          ;EXT STATUS REG 2
2164           000014 MS.XS3==14          ;EXT STATUS REG 3
2165           000016 MS.XS4==16          ;EXT STATUS REG 4
2166
2167           ;THE FOLLOWING ARE BIT DEFINITIONS FOR EXTENDED STATUS REGISTER 0.
2168
2169           100000 X0.TMK==100000        ;TAPE MARK.
2170           040000 X0.RLS==40000        ;RECORD LENGTH SHORT.
2171           020000 X0.LET==20000        ;LOGICAL EOT.
2172           010000 X0.RLL==10000       ;RECORD LENGTH LONG.
2173           000100 X0.ONL==100          ;ON LINE BIT.
2174           000004 X0.WLK==4           ;WRITE LOCK BIT
2175           000002 X0.BOT==2           ;BOT BIT.
2176           000001 X0.EOT==1           ;EOT BIT.
2177
2178           ;THE FOLLOWING ARE BIT DEFINITIONS FOR EXTENDED STATUS REGISTER 2.
2179
2180           100000 X2.OPM==100000        ;OPERATION IN PROGRESS, TAPE MOVING
2181           000200 X2.EFE==200          ;EXTENDED FEATURES ENABLED
2182           000100 X2.BFE==100          ;BUFFERING ENABLED
2183
2184           ;THE FOLLOWING ARE BIT DEFINITIONS FOR EXTENDED STATUS REGISTER 3.
2185
2186           000010 X3.DCK==10           ;DENSITY CHECK.
2187           157400 X3.RNY==157400       ;CAPSTAN RUNAWAY UDIAG ERROR CODE.
2188
2189           ;THE FOLLOWING ARE BIT DEFINITIONS FOR EXTENDED STATUS REGISTER 4.
2190
2191           100000 X4.HSS==100000        ;HIGH SPEED SWITCH INDICATING 100ips
2192           040000 X4.RCE==40000        ;RETRY COUNT EXCEEDED
2193
2194           ;THE FOLLOWING DEFINITIONS SHOW THE RELATIVE POSITIONS OF THE COMMAND
2195           ;PACKET ENTRIES.
2196
2197
2198           000000 CP.CMD==0             ;CMDPKT.0==TS05 COMMAND.
2199           000002 CP.ADL==2             ;CMDPKT.2==BUFFER ADDRESS LOW.
2200           000004 CP.ADH==4             ;CMDPKT.4==BUFFER ADDRESS HIGH.
2201           000006 CP.CNT==6             ;CKDPKT.6==BYTE/FILE/RECORD COUNT

```



## GLOBAL EQUATES SECTION

```

2203
2204           ;MISCELLANEOUS DEFINITIONS.
2205
2206           000340 INTPRI==PRI07           ;PRIORITY TO BE USED IN INTERRUPT STATE.
2207           000012 SCHCNT==12             ;ARBITRARY BYTE LENGTH FOR CHARACTERISTIC
2208                                     ;BUFFER LENGTH. (EVEN #)
2209           000020 MSGCNT==20             ;MESSAGE BUFFER LENGTH IN BYTES. (EVEN #)
2210           000020 DIACNT==20            ;DIAGNOSTIC COMMAND BUFFER EXTENT.
2211           004000 DATCNT==2048.         ;MAXIMUM RECORD LENGTH IN BYTES.
2212                                     ;THIS COUNT SHOULD BE A MULTIPLE OF 256 TO INSURE
2213                                     ;PROPER READ/WRITE BUFFER ALLOCATION BY THE SUPER.
2214           177740 RNOPSC==177740        ;RANDOM # OF OPERATIONS MASK.
2215           000007 RANP==7               ;CODE TO SELECT RANDOM PATTERN.
2216           000020 RRECL==16.            ;READ RECOVERY ATTEMPT LIMIT.
2217           000020 WRECL==16.            ;WRITE RECOVERY ATTEMPT LIMIT.
2218           153624 RANBC==153624         ;CONSTANT USED TO RESET RANDOM # GENERATOR BASE.
2219           032561 RANSC==32561          ;CONSTANT USED TO RESET RANDOM # SAVE LOCATION.
2220           177774 NINUSE==177774        ;NOT IN USE CODE FOR DEVICE STATE TABLE.
2221           177740 NCMD.C==ACK.C!CVC.C!OPP.C!SWB.C!MOD.C3!MOD.C2!MOD.C1!MOD.CO!IE.C!FMT.C1!FMT.CO
2222                                     ;NOT "COMMAND" BITS.
2223
2224           ;THE FOLLOWING DEFINES THE COMMAND WORD FOR EACH TS05 COMMAND.
2225
2226           100013 DRI== ACK.C!CMD.C3!CMD.C1!CMD.CO
2227                                     ;DRIVE INIT.
2228
2229           104001 RDF== ACK.C!BRF.C!CMD.CO
2230                                     ;READ FORWARD
2231
2232           104401 RDR== ACK.C!BRF.C!MOD.CO!CMD.CO
2233                                     ;READ REVERSE
2234
2235           104005 WRT== ACK.C!BRF.C!CMD.CO!CMD.C2
2236                                     ;WRITE COMMAND
2237
2238           104105 WTV== ACK.C!BRF.C!VFY.C!CMD.CO!CMD.C2
2239                                     ;WRITE VERIFY
2240
2241           104010 SRF== ACK.C!BRF.C!CMD.C3
2242                                     ;SPACE RECORD FORWARD
2243
2244           104410 SRR== ACK.C!BRF.C!MOD.CO!CMD.C3
2245                                     ;SPACE RECORD REVERSE
2246
2247           105401 RNR== ACK.C!BRF.C!MOD.C1!MOD.CO!CMD.CO
2248                                     ;READ REV RETRY1 - REREAD NEXT REVERSE, IE. SPACE FWD, READ REVERSE
2249
2250           125401 RNF== ACK.C!BRF.C!OPP.C!MOD.C1!MOD.CO!CMD.CO
2251                                     ;READ REV RETRY2 - REREAD NEXT FORWARD, IE. READ FORWARD, SPACE REVERSE
2252
2253           105001 RPF== ACK.C!BRF.C!MOD.C1!CMD.CO
2254                                     ;READ FWD RETRY1 - REREAD PREVIOUS FORWARD, IE. SPACE REVERSE, READ FORWARD
2255
2256           125001 RPR== ACK.C!BRF.C!OPP.C!MOD.C1!CMD.CO
2257                                     ;READ FWD RETRY2 - REREAD PREVIOUS REVERSE, IE. READ REVERSE, SPACE FORWARD
2258
2259           105005 WRR== ACK.C!MOD.C1!BRF.C!CMD.C2!CMD.CO

```

## GLOBAL EQUATES SECTION

```

2260                                     ;WRITE RETRY
2261
2262      102010      RWD==  ACK.C!MOD.C2!CMD.C3      ;REWIND COMMAND
2263
2264      100012      MBR==  ACK.C!CMD.C3!CMD.C1      ;MESSAGE BUFFER RELEASE
2265
2266      100011      WTM==  ACK.C!CMD.C3!CMD.C0      ;WRITE TAPE MARK.
2267
2268      101011      WTR==  ACK.C!MOD.C1!CMD.C3!CMD.C0 ;WRITE TAPE MARK RETRY.
2269
2270      105010      SFF==  ACK.C!BRF.C!MOD.C1!CMD.C3 ;SPACE FILE FORWARD
2271
2272      105410      SFR==  ACK.C!BRF.C!MOD.C0!MOD.C1!CMD.C3 ;SPACE FILE REVERSE
2273
2274      100017      GES==  ACK.C!CMD.C0!CMD.C1!CMD.C2!CMD.C3 ;GET EXTENDED STATUS
2275
2276      100411      ERS==  ACK.C!MOD.C0!CMD.C3!CMD.C0 ;ERASE 3 INCHES OF TAPE
2277
2278      100412      UNL==  ACK.C!MOD.C0!CMD.C3!CMD.C1 ;UNLOAD COMMAND
2279
2280      101012      CLN==  ACK.C!MOD.C1!CMD.C3!CMD.C1 ;ERASE TAPE.
2281
2282      140004      SCH==  ACK.C!CVC.C!CMD.C2      ;SET DEVICE CHARACTERISTICS.
2283
2284      140006      WSM==  ACK.C!CVC.C!CMD.C2!CMD.C1 ;WRITE SUB-SYS MEM
2285
2286      100006      DIA==  ACK.C!CMD.C2!CMD.C1      ;DIAGNOSTICS.
2287
2288      000040      JMP==  JMP.C                    ;JUMP TO "N"TH COMMAND
2289
2290      000020      DLY==  DLY.C                    ;DELAY "N" MS.
2291
2292      177777      END==  177777                    ;END OF COMMAND SEQUENCES
2293
2294
2295
2296
2297
2298
2299
2300
2301
2302

```



## GLOBAL DATA SECTION

```

2304 .SBTTL GLOBAL DATA SECTION
2305 ;**
2306 ; THE GLOBAL DATA SECTION CONTAINS DATA THAT ARE USED
2307 ; IN MORE THAN ONE TEST.
2308 ;--
2309 ; COMMAND PACKET.
2310 = <..3>&177774 ;MUST BE ON MOD 4 BOUNDRY.
2311 002330 000000 CNDPKT:: 0 ;1ST WORD IS TS05 COMMAND.
2312 002332 000000 0 ;2ND WORD IS THE BUFFER LOW ADDRESS.
2313 002334 000000 0 ;3RD WORD IS THE BUFFER HIGH ADDRESS.
2314 002336 000000 0 ;4TH WORD IS THE BYTE/RECORD/FILE COUNT.
2315
2316 ; GET STATUS COMMAND PACKET.
2317
2318 = <..3>&177774 ;MUST BE ON MOD 4 BOUNDRY.
2319 002340 100017 GSCPK:: .WORD GES
2320
2321 ; MESSAGE BUFFER RELEASE COMMAND PACKET.
2322
2323 = <..3>&177774 ;MUST BE ON MOD 4 BOUNDRY.
2324 002344 100012 BRCPK:: .WORD MBR
2325
2326 ; REWIND COMMAND PACKET (USED IN ERROR RECOVERY ONLY)
2327
2328 = <..3>&177774 ;MUST BE ON MOD 4 BOUNDRY.
2329
2330 002350 102010 RWCPK:: .WORD RWD
2331 002352 000001 .WORD 1
2332
2333 ; WORK AREA FOR ANALYSIS OF MESSAGE PACKET CONTENTS.
2334
2335 002354 MSGPKT:: .BLKW 8. ;1ST WORD:: MESSAGE TYPE.
2336 ;2ND WORD:: DATA FIELD LENGTH.
2337 ;3RD WORD:: RESIDUAL FRAME COUNT.
2338 ;4TH WORD:: XSTAT0
2339 ;5TH WORD:: XSTAT1
2340 ;6TH WORD:: XSTAT2
2341 ;7TH WORD:: XSTAT3
2342 ;8TH WORD:: XSTAT4
2343
2344 ; MESSAGE PACKETS.
2345 002374 MSGPK0:: .BLKW 8. ;MESSAGE PACKET FOR DEVICE #0
2346 002414 MSGPK1:: .BLKW 8. ;MESSAGE PACKET FOR DEVICE #1
2347 002434 MSGPK2:: .BLKW 8. ;MESSAGE PACKET FOR DEVICE #2
2348 002454 MSGPK3:: .BLKW 8. ;MESSAGE PACKET FOR DEVICE #3
2349
2350 ; SET CHARACTERISTIC BLOCK.
2351 002474 002374 SCHBK:: MSGPK0 ;1ST WORD:: MSGPKT ADDR LO(SET UP BY EXECUTE ROUTINE).
2352 002476 000000 0 ;2ND WORD:: MSGPKT ADDR HI.
2353 002500 000020 MSGCNT ;3RD WORD:: MSG BUFFER LENGTH (BYTES)
2354 002502 000040 CH.EAI ;4TH WORD:: CHARACTERISTICS WORD(SET BY SETUP ROUTINE).
2355 002504 000000 0 ;5TH WORD:: HSP & BUFFER CONTROL ON EXT'D FEATURES
2356
2357 ; WRITE SUB-SYSTEM MEMORY CHARACTERISTIC BLOCK.
2358 002506 000000 WSMBK:: 0 ;1ST WORD:: SEL 0
2359 002510 000000 0 ;2ND WORD:: SEL 2
2360 002512 000000 0 ;3RD WORD:: SEL 4

```

## GLOBAL DATA SECTION

```

2361
2362
2363 002514
2364 002524
2365 002534
2366      002514
2367
2368
2369 002544 002374
2370 002546 002414
2371 002550 002434
2372 002552 002454
2373
2374
2375 002554 010074
2376 002556 010102
2377 002560 010110
2378 002562 010116
2379
2380
2381 002564 000000
2382 002566 000000
2383 002570 000000
2384 002572 000000
2385
2386
2387 002574 000000
2388 002576 000000
2389 002600 000000
2390 002602 000000
2391
2392
2393
2394
2395 002604 177774
2396 002606 177774
2397 002610 177774
2398 002612 177774
2399 002614 177774
2400
2401
2402
2403 002616 003046
2404 002620 003120
2405 002622 003172
2406 002624 003244

; TS05 REGISTER ADDRESSES.
;TSDB:: .BLKW 4 ;TS05 DATA BUFFER ADDRESSES.
;TSSR:: .BLKW 4 ;TS05 STATUS REGISTER ADDRESSES.
;TSVCT:: .BLKW 4 ;TS05 VECTOR ADDRESSES.
;TSBA==TSDB ;DATA BUFFER ADDRESS REGISTER.

; ADDRESSES OF MESSAGE PACKETS.
;MSGPKA:: MSGPK0 ;DEVICE 0.
;MSGPK1 ;DEVICE 1.
;MSGPK2 ;DEVICE 2.
;MSGPK3 ;DEVICE 3.

; ADDRESSES OF INTERRUPT HANDLING ROUTINES.
;TSSINT:: TSSINO ;DEVICE 0.
;TSSIN1 ;DEVICE 1.
;TSSIN2 ;DEVICE 2.
;TSSIN3 ;DEVICE 3.

; TS05 CODE LEVELS, WILL BE STORED AFTER SCH CMD IN BASIC FUNCTION TEST
;TSSCL:: 0 ;DEVICE 0
;0 ;DEVICE 1
;0 ;DEVICE 2
;0 ;DEVICE 3

; TS05 EXT. FEA & BUF. ENA SW'S, WILL BE STORED AFTER SCH CMD IN BASIC FUNCTION TEST
;TSSSW:: 0 ;DEVICE 0
;0 ;DEVICE 1
;0 ;DEVICE 2
;0 ;DEVICE 3

; UNIT NUMBERS OF ALL DEVICES BEING TESTED(1-4).
; WHEN DEVICE IS NOT IN USE, IT,S LOCATION WILL = -3.
; R5 WILL ALWAYS CONTAIN THE PRESENT LOGICAL UNIT NUMBER X 2.
;DEVTBL:: .WORD NINUSE
; .WORD NINUSE
; .WORD NINUSE
; .WORD NINUSE
; .WORD END

; BAD TAPE TABLE POINTER: USED BY WRITE RETRY ROUTINE
; "WRTY" TO LOG BAD TAPE SPOTS ON UNITS UNDER TEST
;BTADDR:: BT0
;BT1
;BT2
;BT3

```



## GLOBAL DATA SECTION

```

2408           ;          COUNTER AREA.
2409
2410           002626      CNTBGN=.
2411 002626      WRBC:: .BLKW 20          ;BYTES WRITTEN.
2412 002666      RRBC:: .BLKW 20          ;BYTES READ REV.
2413 002726      RFBC:: .BLKW 20          ;BYTES READ FWD.
2414 002766      WRREC:: .BLKW 4          ;RECOVERABLE WRITE ERRORS.
2415 002776      WRUNR:: .BLKW 4          ;UNRECOVERABLE WRITE ERRORS.
2416 003006      RRREC:: .BLKW 4          ;RECOVERABLE READ REV ERRORS.
2417 003016      RRUNR:: .BLKW 4          ;UNRECOVERABLE READ REV ERRORS.
2418 003026      RFREC:: .BLKW 4          ;RECOVERABLE READ FWD ERRORS.
2419 003036      RFUNR:: .BLKW 4          ;UNRECOVERABLE READ FWD ERRORS.
2420 003046      BT0:: .BLKW 21.          ;UNIT 0 BAT TAPE SPOTS LOG
2421 003120      BT1:: .BLKW 21.          ;UNIT 1 BAT TAPE SPOTS LOG
2422 003172      BT2:: .BLKW 21.          ;UNIT 2 BAT TAPE SPOTS LOG
2423 003244      BT3:: .BLKW 21.          ;UNIT 3 BAT TAPE SPOTS LOG
2424 003316      WRTYCT:: .BLKW 4          ;WRITE RETRY COUNTER
2425 003326      PASCNT:: .BLKW 4          ;PASS COUNT.
2426 003336      SCCNT:: .BLKW 4          ;SPECIAL CONDITION COUNT.
2427 003346      VFYCNT:: .BLKW 4          ;COUNT OF TS05 DATA COMPARE ERRORS.
2428 003356      HRDCNT:: .BLKW 4          ;COUNT OF HARD ERRORS.
2429 003366      FTLCNT:: .BLKW 4          ;COUNT OF FATAL ERRORS.
2430           003376      CNTEND=.          ;END OF STATISTICAL COUNTERS.
2431 003376      RECCNT:: .BLKW 4          ;NUMBER OF RECORDS FROM BOT: CLEARED ON REWIND
2432           ;          ;AND WHEN RESTARTING OR CONTINUING TEST 2.
2433           000550      CNTLEN==CNTEND-CNTBGN ;LENGTH OF STATISTICAL COUNTER AREA.
2434
2435
2436           ;          THE FOLLOWING ARE THE DEFINITIONS OF VARIABLES
2437           ;          USED BY THE PROGRAM.
2438
2439 003406 000000      DATAWT:: .WORD 0          ;WRITE BUFFER ADDRESS.
2440           003406      DIABLK==DATAWT          ;WRITE BUFFER ALSO USED FOR DIAG CMD.
2441 003410 000000      DATARD:: .WORD 0          ;READ BUFFER ADDRESS.
2442 003412 000000      NCNT:: .WORD 0          ;STORAGE FOR VALUE OF N.
2443 003414 000000      NCNT1:: .WORD 0          ;TEMP STORAGE FOR VALUE OF N.
2444 003416 000000      BRFCNT:: .WORD 0          ;STORAGE FOR BPCR VALUE.
2445 003420 177777      CMDWRD:: .WORD END          ;CONTAINS COMMAND WORD BEING EXECUTED PRESENTLY.
2446 003422 177777      CMDSAV:: .WORD END          ;SAVE LOCATION FOR CMD WORD DURING ERROR RECOVERY
2447 003424 177777      PCMDWD:: .WORD END          ;CONTAINS PREVIOUS COMMAND WORD.
2448 003426 000000      CMDLG:: .WORD 0          ;CURRENT COMMAND LOGGING CODE.
2449 003430 000000      LENMSK:: .WORD 0          ;RANDOM WRITE LENGTH MASK, TO BE SET UP BY TESTS
2450 003432 153624      RANB:: .WORD 153624          ;RANDOM # GENERATOR BASE.
2451 003434 032561      RANS:: .WORD 32561          ;RANDOM # SAVE LOCATION.
2452 003436 000000      TIME1:: .WORD 0          ;TIME COUNT 1.
2453 003440 000000      TIME2:: .WORD 0          ;TIME COUNT 2.
2454 003442 000000      JLOOP:: .WORD 0          ;JMP COMMAND LOOP COUNT.
2455 003444 000000      JLOC:: .WORD 0          ;JMP COMMAND LOCATION COUNT.
2456 003446 000000      PATERN:: .WORD 0          ;PATTERN SELECT CODE.
2457 003450 000000      CTCC:: .WORD 0          ;CURRENT TERMINATION CLASS CODE.
2458 003452 000000      RSSAVE:: .WORD 0          ;LOCATION FOR SAVING CURRENT DEVICE POINTER.
2459 003454 000000      TSSREG:: .WORD 0          ;CURRENT STATUS REGISTER.
2460 003456 000000      WTMFLG:: .WORD 0          ;WRITE TAPE MARK FLAG

```

## GLOBAL DATA SECTION

```

2462 ; ERROR FLAG AREA, THESE FLAGS ARE CLEARED DURING INITIALIZATION AND
2463 ; AFTER EACH COMMAND IS COMPLETED.
2464
2465 003460 BGNFLG=.
2466 003460 000000 RETRYC:: .WORD 0 ;# OF RECOVERY ATTEMPTS EXECUTED.
2467 003462 000 RPTCNT:: .BYTE 0 ;WRITE REPEAT ON SAME SPOT CNTR: 4 PER WRITE RETRY
2468 003463 000 WRTYFG:: .BYTE 0 ;WRITE RETRY ON SAME SPOT IN PROGRESS FLAG
2469 003464 000 WRTYER:: .BYTE 0 ;WRITE RETRY ON SAME SPOT ERROR FLAG
2470 003465 000 RECLOG:: .BYTE 0 ;RECORD COUNT HAS BEEN UPDATED FOR THIS RECORD.
2471 003466 000 ERLOG:: .BYTE 0 ;DATA BYTES AND ERRORS HAVE BEEN LOGGED FOR THIS RECORD.
2472 003467 000 RWERR:: .BYTE 0 ;READ/WRITE ERROR HAS OCCURED.
2473 003470 000 UNREC:: .BYTE 0 ;UNRECOVERABLE ERROR HAS OCCURED.
2474 003471 000 ERRREC:: .BYTE 0 ;ERROR RECOVERY MODE.
2475
2476 003472 ENDERF=.
2477
2478
2479 ; ADDITIONAL FLAGS, THESE FLAGS ARE CLEARED DURING INITIALIZATION.
2480
2481 003472 INTFLG:: .BLKW 4 ;INTERRUPT OCCURRED FLAGS FOR EACH DEVICE.
2482 003502 EOTFLG:: .BLKW 4 ;EOT/BOT FLAGS FOR EACH DEVICE (XSTATO).
2483 003512 000000 BTPT:: .WORD 0 ;BAD TAPE SPOT POINTER TO BTO-BT3 VIA BTADDR
2484 003514 000 EXPBOT:: .BYTE 0 ;BOT IS EXPECTED, DO NOT ABORT ON BOT/FUNC RTI.
2485 003515 000 RANDOM:: .BYTE 0 ;RANDOM EVERYTHING FLAG.
2486 003516 000 VFYFLG:: .BYTE 0 ;SET DURING WRITE/VERIFY COMMAND.
2487 003517 000 RPTFLG:: .BYTE 0 ;PERFORMANCE REPORT HAS BEEN REQUESTED.
2488 003520 000 SWBFLG:: .BYTE 0 ;ENABLES SWAP BYTE FUNCTION WHEN NOT EQUAL TO ZERO.
2489 003521 000 IRE:: .BYTE 0 ;INHIBIT RESIDUAL FRAME COUNT ERROR REPORT.
2490 003522 000 DROPED:: .BYTE 0 ;CURRENT UNIT HAS BEEN DROPPED
2491 003523 000 T1SWB:: .BYTE 0 ;TEST1 SWAP BYTES FLAG
2492 003524 000 ALLEOT:: .BYTE 0 ;ALL UNITS @ EOT FLAG
2493 003525 000 ERSFLG:: .BYTE 0 ;ERASE FLAG: DO ERASE AFTER A SPACE REV TO DELETE
2494 ;BADLY WRITTEN RECORD. 1 TO 4 ERASES LEAVING
2495 ;A 3 TO 12 INCH GAP MAY RESULT.
2496
2497 003526 ENDFLG=.
2498
2499 ; ADDITIONAL FLAGS, THESE FLAGS ARE CLEARED ONLY AFTER BEING CHECKED.
2500
2501 003526 000 STAFGL:: .BYTE 0 ;START FLAG - SET BY INIT CODE IF STARTING.
2502 003527 000 PWRFLG:: .BYTE 0 ;POWER FAILURE FLAG - SET ONLY DURING INIT.
2503 003530 000 TRAPD4:: .BYTE 0 ;TRAPED AT 4 FLAG
2504 003531 000 MISCFG:: .BYTE 0 ;MISCELLANEOUS FLAG
2505 003532 000000 TSUNT:: .WORD 0 ;NUMBER OF THE UNIT UNDER TEST PLUS HSSP&BUF
2506 003534 000000 TSNP:: .WORD 0 ;FOR PRINT OUT UNIT # ONLY
2507
2508 ; OPERATOR FLAG SETTINGS PASSED BY DIAG. SUPERVISOR IN A 16 BIT WORD
2509 ; SEE GLOBAL EQUATES SECTION FOR FLAG BIT LIST
2510
2511 003536 000000 OPFLAG:: .WORD 0 ;READ ONLY OPERATOR FLAG WORD
2512

```



## GLOBAL DATA SECTION

```

2514                                     ;THE FOLLOWING IS THE COMMAND SEQUENCE TABLE. THE TABLE
2515                                     ;HAS DEFAULT VALUES AT PROGRAM LOAD AS SHOWN. THESE VALUES
2516                                     ;CAN BE UPDATED BY A TEST OR BY OPERATOR INPUT.
2517
2518 003540 140004 CMDSEQ: .WORD SCH ;SET CHARACTERISTICS.
2519 003542 000040 .WORD CH.EAI
2520 003544 000001 .WORD 1
2521 003546 000000 .WORD 0
2522 003550 102010 CMDSE2: .WORD RWD ;REWIND.
2523 003552 000001 .WORD 1 ;BYTE COUNT.
2524 003554 000001 .WORD 1 ;ONCE.
2525 003556 000007 .WORD RANP ;PATTERN.
2526 003560 104005 .WORD WRT ;WRITE.
2527 003562 004000 .WORD DATCNT ;MAX BUFFER LENGTH.
2528 003564 076400 .WORD 32000. ;32,000 RECORDS.
2529 003566 000007 .WORD RANP ;RANDOM PATTERN.
2530 003570 104401 .WORD RDR ;READ REV.
2531 003572 004000 .WORD DATCNT ;MAX BUFFER LENGTH.
2532 003574 076400 .WORD 32000. ;32,000 RECORDS
2533 003576 000007 .WORD RANP ;RANDOM PATTERN.
2534 003600 104001 .WORD RDF ;READ FWD.
2535 003602 004000 .WORD DATCNT ;MAX BUFFER LENGTH.
2536 003604 076400 .WORD 32000. ;32,000 RECORDS.
2537 003606 000007 .WORD RANP ;RANDOM PATTERN.
2538 003610 102010 .WORD RWD ;REWIND.
2539 003612 000001 .WORD 1 ;BYTE COUNT.
2540 003614 000001 .WORD 1 ;ONCE.
2541 003616 000007 .WORD RANP ;PATTERN.
2542 003620 .BLKW 40. ;EXTENSION TO DOUBLE BUFFER SIZE
2543 003740 177777 SEQEND: .WORD END ;SOFT END OF SEQUENCE TABLE.
2544 003742 177777 .WORD END
2545 003744 177777 .WORD END
2546 003746 177777 .WORD END
2547 003750 177777 .WORD END ;HARD END OF SEQUENCE TABLE.
2548                                     ;THE FOLLOWING IS THE TS05 COMMAND TABLE
2549
2550 003752 100013 CMDTBL: .WORD DRI ;DRIVE INIT.
2551 003754 104001 .WORD RDF ;READ FORWARD.
2552 003756 104401 .WORD RDR ;READ REVERSE.
2553 003760 104005 .WORD WRT ;WRITE
2554 003762 104105 .WORD WTV ;WRITE/VERIFY. (WRITE ALL RECORDS, RDR AND
2555                                     ;CHECK DATA ON ALL RECORDS, RDF AND
2556                                     ;CHECK DATA ON ALL RECORDS.)
2557 003764 104010 .WORD SRF ;SPACE "N" RECORDS FORWARD.
2558 003766 104410 .WORD SRR ;SPACE "N" RECORDS REVERSE.
2559 003770 105401 .WORD RNR ;READ NEXT REVERSE. I.E., SPACE FWD, READ REVERSE.
2560 003772 125401 .WORD RNF ;READ NEXT FORWARD, I.E., READ FORWARD, SPACE REVERSE.
2561 003774 105001 .WORD RPF ;READ PREVIOUS FORWARD. I.E., SPACE REVERSE, READ FORWARD
2562 003776 125001 .WORD RPR ;READ PREVIOUS REVERSE. I.E., READ REVERSE, SPACE FORWARD
2563 004000 105005 .WORD WRR ;WRITE RETRY.
2564 004002 102010 .WORD RWD ;REWIND.
2565 004004 100012 .WORD MBR ;MESSAGE BUFFER RELEASE
2566 004006 100011 .WORD WTM ;WRITE TAPE MARK
2567 004010 101011 .WORD WTR ;WRITE TAPE MARK RETRY.
2568 004012 105010 .WORD SFF ;SPACE "N" FILES FORWARD.
2569 004014 105410 .WORD SFR ;SPACE "N" FILES REVERSE.
2570 004016 100017 .WORD GES ;GET EXTENDED STATUS.

```





## GLOBAL TEXT SECTION

```

2619          .SBTTL GLOBAL TEXT SECTION
2620
2621          ;**
2622          ; THE GLOBAL TEXT SECTION CONTAINS FORMAT STATEMENTS,
2623          ; MESSAGES, AND ASCII INFORMATION THAT ARE USED IN
2624          ; MORE THAN ONE TEST.
2625          ;--
2626
2627
2628          ;
2629          ; FORMAT STATEMENTS USED IN PRINT CALLS
2630          ;
2631          .NLIST BEX
2632
2633          045 CODELM:: .ASCIZ /%N%#AUNIT %D1%A TSO5 CODE LEVEL %03%#N%#N/
2634          045 SWSET:: .ASCIZ /%N%#AUNIT %D1%A TSO5 SWITCH SETTINGS %03%#N%#N/
2635          .EVEN
2636          130 HALTM:: .ASCIZ /XXX CMD - TYPE <CR> TO CONTINUE/
2637          104 CMDPKM:: .ASCIZ /CMD PACKET ADR NOT ON MODULO 4 BOUNDARY: RELOAD!/
2638          .EVEN
2639          104 WTVRM:: .ASCIZ /DATA COMPARE ERROR/
2640          116 TOERM:: .ASCIZ /NO TSV05 RESPONSE/
2641          116 SCERM:: .ASCIZ /UNDEFINED SPEC COND/
2642          125 RFCERM:: .ASCIZ /RFC NON ZERO/
2643          130 NSSRM:: .ASCIZ /TSV05 NOT READY/
2644          103 RLEXM:: .ASCIZ /RETRY LIMIT EXCEEDED/
2645          103 ATTNM:: .ASCIZ /DRIVE OFF LINE/
2646          104 FUNRM:: .ASCIZ /FUNCTION REJECT/
2647          104 FATSM:: .ASCIZ /FATAL SUBSYSTEM ERROR/
2648          106 NOINTM:: .ASCIZ /NO INTERRUPT/
2649          124 TSAM:: .ASCIZ /TAPE STATUS ALERT/
2650          124 TOOMM:: .ASCIZ /TOO MANY INTERRUPTS/
2651          103 RNYM:: .ASCIZ /CAPSTAN RUNAWAY-GET STATUS RESULTS:/
2652          122 RERM:: .ASCIZ /RECOVERABLE ERROR/
2653          106 URERM:: .ASCIZ /UNRECOVERABLE ERROR/
2654          045 DROPDM:: .ASCIZ /%N%#ADROPPED UNIT %D1%#N/
2655          045 AUDRPM:: .ASCIZ /%N%#AALL UNITS DROPPED%#N%#N/
2656          045 AUDRUN:: .ASCIZ /%N%#ADIAGNOSTIC ONLY SUPPORTS ONE CONTROLLER%#N%#N/
2657          045 DTAER2:: .ASCIZ "%N%#ABYTE:%D4%#S2%#AWAS:%B8%#S2%#AS/B:%B8%#N"
2658          045 DTAER3:: .ASCIZ "%D4%A BYTES IN ERROR OUT OF %D4%#N"
2659          045 DTAER4:: .ASCIZ /%AND DATA READ%#N/
2660          045 DTAER5:: .ASCIZ /%RECORD TOO LONG: >%04%A BYTES%#N/
2661          045 NURTY1:: .ASCIZ /%ARECOVERED ON RETRY @%D2%#N/
2662          045 OFLINM:: .ASCIZ /%ADRIVE %D1%A OFF LINE%#N/
2663          045 GETSTM:: .ASCIZ /%AGET STATUS CMD RESULTS:%#N/
2664          045 NODEV:: .ASCII /%N%#ABUS TRAP AT %06%#N/
2665          045 .ASCIZ /%AINTERFACE BAD OR TSOB NOT SET TO ABOVE ADDRESS%#N/
2666          040 UNILK: .ASCIZ / *****TAPE IS WRITE-LOCKED AND WILL CAUSE ERRORS*****/
2667          045 CRLF:: .ASCIZ /%N/
2668          045 CRLFSP:: .ASCIZ /%N%#S7/
2669          .LIST BEX
2670          .EVEN
2671
2672
2673
2674
2675
2676
2677

```

GLOBAL ERROR REPORT SECTION

```

2679          .SBTTL  GLOBAL ERROR REPORT SECTION
2680
2681          ;**
2682          ; THE GLOBAL ERROR REPORT SECTION CONTAINS THE PRINTB AND PRINTX CALLS
2683          ; THAT ARE USED IN MORE THAN ONE TEST.  IT ALSO INCLUDES THE ASCII MESSAGES
2684          ; THAT ARE USED BY THE PRINTB AND PRINTX CALLS..
2685          ;--
2686
2687
2688          BGNMSG  DTAERM
2694          DTAERM:
2694          DATERM:PRINTB  #STAER1,TSNP,PASCNT(R5),RECCNT(R5)
2694          MOV      RECCNT(R5),-(SP)
2694          MOV      PASCNT(R5),-(SP)
2694          MOV      TSNP, -(SP)
2694          MOV      #STAER1, -(SP)
2694          MOV      #4, -(SP)
2694          MOV      SP, R0
2694          TRAP    C#PNTB
2694          ADD     #12, SP
2695          PRINTB #STAER7
2695          MOV      #STAER7, -(SP)
2695          MOV      #1, -(SP)
2695          MOV      SP, R0
2695          TRAP    C#PNTB
2695          ADD     #4, SP
2696          MOV      R2, RECD
2696          MOV      R3, TIME1
2696          MOV      R4, TIME2
2696          JSR     PC, RECTAP
2696          MOV      RECD, R2
2696          MOV      R3, RECD
2696          MOV      TIME1, R3
2696          MOV      TIME2, R4
2696          PRINTB #STAER6, RECD
2696          ;SAVE R2
2696          ;SAVE R3
2696          ;SAVE R4
2696          ;RETRIEVE RECORD READ
2696          ;RESTORE R2
2696          ;SAVE RECORD READ
2696          ;RESTORE R3
2696          ;RESTORE R4
2696          ;PRINT RECORD READ
2696          MOV      RECD, -(SP)
2696          MOV      #STAER6, -(SP)
2696          MOV      #2, -(SP)
2696          MOV      SP, R0
2696          TRAP    C#PNTB
2696          ADD     #6, SP
2705          EXIT  MSG
2705          .WORD  J$JMP
2705          .WORD  L10002-2-.
2706          .EVEN
2707          ENDMSG
2708          L10002:
2708          TRAP    C#MSG
2709          BGNMSG  STAERM
2710          STAERM:
2710          STAERM:PRINTB  #STAER1,TSNP,PASCNT(R5),RECCNT(R5)
2711          MOV      RECCNT(R5),-(SP)
2711          MOV      PASCNT(R5),-(SP)
2711          MOV      TSNP, -(SP)
2711          MOV      #STAER1, -(SP)

```





## GLOBAL ERROR REPORT SECTION

```

006416 012746 000006
006422 010600
006424 104415
2725 006426 062706 000016
006432
006432 000167
006434 000432
2726
2727
2728 006436 045 101 130 STAER1: .NLIST BEX
                .ASCIZ /#AXXX CMD FAILED - UNIT #D1#S3#APASS:#D5#S3#ARECORD:#D5#N/
2729                .EVEN
2730 006530 045 101 120 STAER7: .ASCIZ /#APREVIOUS CMD WAS XXX /
2731 006562 045 123 061 STAER6: .ASCIZ /#S11#A* RECORD READ:#D5#A */
2732 006616 045 116 045 STAER2: .ASCIZ /#N#ACMDPKT#S2#ATSBA#S4#ARFC#S5#ATSSR#S3#ATCC#N/
2733 006675 045 117 066 STAER3: .ASCIZ /#06#S2#06#S2#06#S2#06#S2#D1#N/
2734 006733 045 117 066 STAER4: .ASCII /#06#N/
2735 006740 045 117 066 .ASCII /#06#N/
2736 006745 045 117 066 .ASCIZ /#06#N/
2737 006753 045 101 130 STAER5: .ASCII /#AXST0#S4#AXST1#S4#AXST2#S4#AXST3#S4#AXST4#N/
2738 007027 045 117 066 .ASCIZ /#06#S2#06#S2#06#S2#06#S2#06#N/
2739                .LIST BEX
2740                .EVEN
2741 007066 000000 RECRED: .WORD 0 ;RECORD READ FROM TAPE
2742
2743 007070
007070
007070 104423
                ENDMSG
                L10003:
                TRAP C#MSG
2744
2745 .SBTTL GLOBAL SUBROUTINES SECTION
2746
2747 ;**
2748 ; THE GLOBAL SUBROUTINES SECTION CONTAINS THE SUBROUTINES
2749 ; THAT ARE USED IN MORE THAN ONE TEST.
2750 ;--
2751
2752
2753
2754 ;*
2755 ;
2756 ;ROUTINE TO DO A SOFT INITIALIZE OF THE CONTROLLER
2757 ;BY WRITING INTO THE TSSR REGISTER. AFTER THE INIT,
2758 ;THE TSSR REGISTER IS TESTED FOR ERRORS. ANY ERRORS
2759 ;DETECTED SHOULD BE TREATED AS DEVICE FATAL ERRORS.
2760 ;
2761 ;INPUTS:
2762 ;
2763 ; R5 CURRENT UNIT NUMBER
2764 ;
2765 ;
2766 ;OUTPUTS:
2767 ;
2768 ; R0 CONTENTS OF TSSR, IF ERROR
2769 ; CARRY SET IF INIT WAS OKAY
2770 ; CLEAR IF FATAL ERROR
2771 ;
2772 ;CALLING SEQUENCE:
2773 ; JSR PC,FIRSTU

```



GLOBAL SUBROUTINES SECTION

```

2774      :      JSR      PC,SOFINIT
2775      :      BCS      CONTINUE
2776      :      ERRDF      ;REPORT FATAL ERROR
2777      :
2778      :-
2779
2780 007072      SOFINIT::
2781
2782 007072 012775 000000 002524      MOV      #0,@TSSR(R5)      ; (SAVREG) SAVE THE REGISTERS
2783 007100 004737 012740      JSR      PC,WSSR      ; DO THE INIT.
2784 007104 012703 000550      MOV      #360,R3      ;WAIT FOR UNIT TO BE READY
2785 007110 004737 007204      2$:      JSR      PC,WAITF      ; WAIT FOR SSR
2786 007114 103416      BCS      3$
2787 007116      DELAY      250
2788 007116 012727 000250      MOV      #250,(PC)+
2789 007122 000000      .WORD      0
2790 007124 013727 002116      MOV      L$DLY,(PC)+
2791 007130 000000      .WORD      0
2792 007132 005367 177772      DEC      -6(PC)
2793 007136 001375      BNE      -4
2794 007140 005367 177756      DEC      -22(PC)
2795 007144 001367      BNE      -20
2796
2797 007146 005303      DEC      R3
2798 007150 001357      BNE      2$
2799 007152 017500 002524      3$:      MOV      @TSSR(R5),R0      ;GET THE TSSR REGISTER
2800 007156 010004      MOV      R0,R4      ;TSSR CONTENTS
2801 007160 042704 176277      BIC      #C<TS.A17!TS.A16!TS.OFL>,R4
2802 007164 052704 002200      BIS      #TS.SSR!TS.NBA,R4      ;R4 HAS EXPECTED CONTENTS
2803 007170 020400      CMP      R4,R0      ;ONLY EXPECTED BITS SET ?
2804 007172 001402      BEQ      5$      ;BRANCH IF OKAY
2805 007174 000241      CLC      ;CLEAR THE CARRY FOR ERROR
2806 007176 000401      BR      10$      ;GO TO EXIT
2807 007200 000261      5$:      SEC      ;SET THE CARRY BIT
2808 007202 000207      10$:     RTS      PC      ;RETURN TO CALLER
2809
2810      ;
2811      ; SUBROUTINE TO WAIT FOR THE SUBSYSTEM READY FLAG
2812      ;
2813      ; INPUTS:
2814      ;
2815      ; R5      CURRENT UNIT NUMBER
2816      ;
2817      ; OUTPUTS:
2818      ;
2819      ; R0      CONTENTS OF LAST TSSR READ
2820      ; CARRY   SET - READY BIT SET
2821      ; CLR    - TIMEOUT WAITING FOR READY
2822
2823 007204      WAITF:: BREAK      ; DO A SUPVSR BREAK FIRST.
2824 007204 104422      TRAP      C$BRK
2825 007206 012746 005670      2$:      MOV      #3000,-(SP)      ; 300 MSEC TIMER.
2826 007212 017500 002524      MOV      @TSSR(R5),R0      ;READ THE TSSR REGISTER
2827 007216 105700      TSTB      R0      ;TEST FOR READY BIT SET
2828 007220 100420      BMI      3$      ; EXIT ON STOP FLAG.
2829 007222      DELAY      25      ; WAIT
2830 007222 012727 000025      MOV      #25,(PC)+

```

## GLOBAL SUBROUTINES SECTION

007226	000000					.WORD	0
007230	013727	002116				MOV	L#DLY,(PC)+
007234	000000					.WORD	0
007236	005367	177772				DEC	-6(PC)
007242	001375					BNE	-.4
007244	005367	177756				DEC	-22(PC)
007250	001367					BNE	.-20
2821	007252	005316		DEC	(SP)		
2822	007254	001356		BNE	2#		
2823	007256	000241		CLC			
2824	007260	000401		BR	4#		
2825	007262	000261	3#:	SEC			
2826	007264	005326	4#:	DEC	(SP)+		
2827	007266	000207		RTS	PC		
2828							
2829							
2830							
2831							
2832							
2833							
2834							
2835							
2836							
2837							
2838							
2839							
2840							
2841							
2842							
2843							
2844							
2845							
2846							
2847							
2848							
2849							
2850							
2851							
2852							
2853							
2854							
2855							
2856							
2857							
2858							
2859	007270						
2860	007270	010475	002514	10#:	MOV	R4,@TSDB(R5)	;SEND OUT COMMAND
2861	007274	004737	007204		JSR	PC,WAITF	;WAIT FOR SSR
2862	007300	103401			BCS	40#	;BR, IF SSR IS SET AND OK
2863	007302	000441			BR	60#	;BR IF TROUBLE CARRY = CLEAR
2864	007304	005724		40#:	TST	(R4)+	;STEP IT
2865	007306	011402			MOV	(R4),R2	;POINT TO WRT CHARA DATA PACKET
2866	007310	011203			MOV	(R2),R3	;GET ADDRESS OF MESSAGE BUFFER
2867	007312	032763	000200 000012		BIT	#X2.EFE,MS.XS2(R3)	;EXTENDED FEATURES BIT SET?
2868	007320	001402			BEQ	45#	;BR IF NO
2869	007322	005237	002322		INC	EXTFEA	;SET EXTENDED FEATURES SW SWITCH
2870	007326			45#:			

```

;*
;ROUTINE TO ISSUE A WRITE CHARACTERISTICS COMMAND AND CHECK FEATURES
;INPUT:
;
;   R4   ADDRESS OF COMMAND PACKET
;   R5   CURRENT UNIT NUMBER
;   REQUIRES A CALL TO SOFINIT BE DONE PREVIOUSLY
;OUTPUT:
;
;   R0   TSSR CONTENTS
;   CARRY SET - WRITE CHARACTERISTICS COMMAND OK
;         CLR - WRITE CHARACTERISTICS FAILED
;IMPLICIT OUTPUT:
;
;   SOFTWARE SWITCHES SET AS FOLLOWS:
;   EXTFEA = EXTENDED FEATURES PRESENT
;   BENBSW = BUFFER ENABLE SWITCH ON OR OFF
;SIDE EFFECTS:
;
;
;--
WRTCHK::
10#:  MOV   R4,@TSDB(R5)           ;SEND OUT COMMAND
      JSR   PC,WAITF             ;WAIT FOR SSR
      BCS  40#                   ;BR, IF SSR IS SET AND OK
      BR   60#                   ;BR IF TROUBLE CARRY = CLEAR
40#:  TST   (R4)+                 ;STEP IT
      MOV  (R4),R2               ;POINT TO WRT CHARA DATA PACKET
      MOV  (R2),R3               ;GET ADDRESS OF MESSAGE BUFFER
      BIT  #X2.EFE,MS.XS2(R3)    ;EXTENDED FEATURES BIT SET?
      BEQ  45#                   ;BR IF NO
      INC  EXTFEA                ;SET EXTENDED FEATURES SW SWITCH
45#:

```



GLOBAL SUBROUTINES SECTION

```

2871 007326 032763 000100 000012      BIT      #X2.BFE,MS.XS2(R3)      ;BUFFER ENABLE SWITCH SET
2872 007334 001402                      BEQ      50$                    ;BR, IF SWITCH NOT SET
2873 007336 005237 002326                      INC      BENBSW                 ;SET SOFTWARE SWITCH FOR ENABLED
2874 007342                      50$:
2875 007342 016337 000000G 002324      MOV      XST2(R3),REV           ;MICROCODE REV LEVEL
2876 007350 042737 017700 002324      BIC      #17700,REV           ;CLEAR UNWANTED BITS
2877 007356 022737 000001 002324      CMP      #1,REV               ;IS IT A NEW MICROCODE
2878 007364 001406                      BEQ      55$                    ;NO BR
2879 007366 012737 000001 002322      MOV      #1,EXTFEA            ;ALWAY EXTENDED FEATURE FOR NEW
2880                                ;MICROCODE
2881 007374 052763 000000G 000000G      BIS      #X2.EXTF,XST2(R3)    ;EXTENDED FEATURE ALWAYS SET IN
2882                                ;MICROCODE
2883 007402 000261                      55$: SEC                        ;SET CARRY NO TROUBLE
2884 007404 000401                      BR       70$                    ;EXIT
2885 007406 000241                      60$: CLC                        ;CARRY CLEAR = ERROR
2886 007410 017500 002524                      70$: MOV      @TSSR(R5),R0      ;RETURN TSSR CONTENTS
2887 007414 000207                      RTS      PC                      ;RETURN
2888
2889                                ;*
2890                                ;
2891                                ;ROUTINE TO CHECK WRITE LOCK CONDITION
2892                                ;
2893                                ;INPUT:
2894                                ;
2895                                ;      R4      ADDRESS OF COMMAND PACKET
2896                                ;      R5      CURRENT UNIT NUMBER
2897                                ;
2898                                ;-
2899 007416                                WLKCHK::
2900 007416 010475 002514 10$: MOV      R4,@TSDB(R5)      ;SEND OUT COMMAND
2901 007422 004737 007204      JSR      PC,WAITF             ;WAIT FOR SSR
2902 007426 103401                      BCS      40$                    ;BR, IF SSR IS SET AND OK
2903 007430 000420                      BR       60$                    ;BR IF TROUBLE CARRY = CLEAR
2904 007432 005724                      40$: TST      (R4)+            ;STEP IT
2905 007434 011402                      MOV      (R4),R2              ;POINT TO WRT CHARA DATA PACKET
2906 007436 011203                      MOV      (R2),R3              ;GET ADDRESS OF MESSAGE BUFFER
2907 007440 032763 000004 000006      BIT      #X0.WLK,MS.XS0(R3)   ;IS UNIT WRITE LOCKED?
2908 007446 001407                      BEQ      55$                    ;NO, PROCEED WITH TESTING
2909 007450                                ERRHRD  1,UNIWLK              ;TAPE IS WRITE LOCKED
2910                                TRAP    C$ERHRD
2911                                .WORD  1
2912                                .WORD  UNIWLK
2913                                .WORD  0
2914 007450 104456                                JSR      PC,DROPU             ;DROP IT
2915 007452 000001                                BR       60$                    ;EXIT WITH CARRY=0
2916 007454 005653                                55$: SEC                        ;SET CARRY NO TROUBLE
2917 007456 000000                                BR       70$                    ;EXIT
2918 007460 004737 017240                      60$: CLC                        ;CARRY CLEAR = ERROR
2919 007464 000402                                70$: RTS      PC                      ;RETURN
2920 007466 000261
2921 007470 000401
2922 007472 000241
2923 007474 000207
2924                                ;*
2925                                ;
2926                                ;ROUTINE TO ISSUE A WRITE CHARACTERISTICS COMMAND
2927                                ;
2928                                ;INPUT:

```

GLOBAL SUBROUTINES SECTION

```

2924
2925      ;
2926      ; R4 ADDRESS OF COMMAND PACKET
2927      ; R5 CURRENT UNIT NUMBER
2928      ; REQUIRES A CALL TO SOFINIT BE DONE PREVIOUSLY
2929      ;OUTPUT:
2930      ;
2931      ; R0 TSSR CONTENTS
2932      ; CARRY SET - WRITE CHARACTERISTICS COMMAND OK
2933      ; CLR - WRITE CHARACTERISTICS FAILED
2934      ;
2935      ;IMPLICIT OUTPUT:
2936      ;
2937      ;
2938      ;
2939      ;SIDE EFFECTS:
2940      ;
2941      ;
2942      ;-
2943
2944 007476 WRTCHR::
2945 007476 010475 002514 10$: MOV R4,@TSSDB(R5) ;SEND OUT COMMAND
2946 007502 004737 007204 JSR PC,WAITF ;WAIT FOR SSR
2947 007506 103401 BCS 50$ ;BR, IF SSR IS SET AND OK
2948 007510 000402 BR 60$ ;BR IF TROUBLE CARRY = CLEAR
2949 007512 50$:
2950 007512 000261 SEC ;SET CARRY NO TROUBLE
2951 007514 000401 BR 70$ ;EXIT
2952 007516 000241 60$: CLC ;CARRY CLEAR = ERROR
2953 007520 017500 002524 70$: MOV @TSSR(R5),R0 ;RETURN TSSR CONTENTS
2954 007524 000207 RTS PC ;RETURN
2955
2956
2957 ;*
2958 ;ROUTINE TO DO SET UP OF RUNNING CONDITIONS
2959 ;
2960 ;INPUTS:
2961 ;
2962 ; R5 CURRENT UNIT NUMBER
2963 ;
2964 ;
2965 ;OUTPUTS:
2966 ;
2967 ;
2968 ;
2969 ;CALLING SEQUENCE:
2970 ; JSR PC,FIRSTU
2971 ; JSR PC,SOFINIT
2972 ; BCS CONTINUE
2973 ; ERRDF ;REPORT FATAL ERROR
2974 ; JSR PC,MSET
2975 ;
2976 ;-
2977
2978 007526 MSET:: BREAK ; DO A SUPVSR BREAK FIRST.
2979 007526 104422 JSR PC,SETDEF ;RESTORE DEFAULT TRAP C$BRK
2979 007530 004737 010026

```



## GLOBAL SUBROUTINES SECTION

```

2980 007534 004737 007416      JSR    PC,WLKCHK      ;CHECK WRITE LOCK
2981 007540 103416             BCS    1$             ;C=1 IS O.K.
2982 007542                     DELAY  1               ;WAIT
                                MOV     #1,(PC)+
                                .WORD  0
                                MOV     L$DLY,(PC)+
                                .WORD  0
                                DEC     -6(PC)
                                BNE     .-4
                                DEC     -22(PC)
                                BNE     .-20
2983 007572                     BREAK   ;BREAK TO SUPER
                                TRAP    C$BRK
2984 007574                     DOCLN   ;DO CLEAN AND ABORT
                                TRAP    C$DCLN
2985 007576 005737 002312      1$:   TST    TS1MD        ;RUN IN DEFAULT MODE?
2986 007602 001064             BNE    10$           ;YES,RETURN
2987 007604 004737 010026      JSR    PC,SETDEF     ;RESTORE DEFAULT
2988 007610 004737 007270      JSR    PC,WRTCHK     ;GO DO SWITCH CHECK
2989 007614 005737 002320      TST    HSSW         ;DO WE RUN AT 100ips?
2990 007620 001415             BEQ    3$            ;NO
2991 007622 052737 000040 003532  BIS    #EF,HSS,TSUNT ;YES,SET THE BIT
2992 007630 005737 002322      TST    EXTFEA       ;ARE WE SET?
2993 007634 001002             BNE    2$            ;YES
2994 007636 004737 007764      JSR    PC,INVRT     ;INVERT THE SWITCH
2995 007642 004737 010026      2$:   JSR    PC,SETDEF ;NOW SET THE MODES
2996 007646 004737 007476      JSR    PC,WRTCHR    ;DO IT
2997 007652 000443             BR     11$
2998 007654 005737 002316      3$:   TST    WTBUF        ;RUN WITH WRITE BUFFERING?
2999 007660 001415             BEQ    5$            ;NO
3000 007662 052737 000030 003532  BIS    #EF,RWB,TSUNT ;YES SET THE BITS
3001 007670 005737 002322      TST    EXTFEA       ;ARE WE SET?
3002 007674 001002             BNE    4$            ;YES
3003 007676 004737 007764      JSR    PC,INVRT     ;INVERT THE SWITCH
3004 007702 004737 010026      4$:   JSR    PC,SETDEF ;NOW SET THE MODES
3005 007706 004737 007476      JSR    PC,WRTCHR    ;DO IT
3006 007712 000423             BR     11$
3007 007714 005737 002314      5$:   TST    RDBUF        ;RUN WITH READ BUFFERING?
3008 007720 001415             BEQ    10$           ;NO
3009 007722 052737 000020 003532  BIS    #EF,RBO,TSUNT ;YES SET THE BITS
3010 007730 005737 002322      TST    EXTFEA       ;ARE WE SET?
3011 007734 001002             BNE    6$            ;YES
3012 007736 004737 007764      JSR    PC,INVRT     ;INVERT THE SWITCH
3013 007742 004737 010026      6$:   JSR    PC,SETDEF ;NOW SET THE MODES
3014 007746 004737 007476      JSR    PC,WRTCHR    ;DO IT
3015 007752 000403             BR     11$
3016
3017 007754 013737 003532 002504 10$:   MOV    TSUNT,SCHBK*10 ;AND UNIT #
3018
3019 007762 000207             11$:   RTS    PC        ;RETURN
3020
3021
3022
3023      ; SUBROUTINE TO INVERT SENSE OF EXT'D FEATURES SWITCH
3024
3025      ;INPUTS:
3026

```

GLOBAL SUBROUTINES SECTION

```

3027
3028
3029      ;
3030      ;:OUTPUTS:
3031      ;
3032
3033      INVRT::
3034 007764 012737 140006 002330      MOV      #WSM,CMDPKT+CP.CMD      ;WRT SUB-SYS MEM
3035 007772 012737 002506 002332      MOV      #WSMBK,CMDPKT+CP.ADL      ;MSG BUF ADDR
3036 010000 012737 000006 002336      MOV      #6,CMDPKT+CP.CNT      ;BYTE COUNT
3037 010006 012737 100010 002506      MOV      #100010,WSMBK      ;INVERT THE SWITCH
3038 010014 012704 002330      MOV      #CMDPKT,R4      ;
3039 010020 004737 007476      JSR      PC,WRTCHR      ;DO IT
3040 010024 000207      RTS      PC      ;RETURN
3041
3042
3043      ; SUBROUTINE TO SETUP DEFAULT SET CHAR CMD
3044
3045      ;:INPUTS:
3046      ;
3047      ;
3048      ;:OUTPUTS:
3049      ;
3050      ;
3051      ;      R4      ADDRESS OF COMMAND PACKET
3052
3053      SETDEF::
3054 010026 012701 140004      MOV      #SCH,R1      ;WRITE CHAR CMD
3055 010032 010137 002330      MOV      R1,CMDPKT+CP.CMD      ;SET UP COMMAND
3056 010036 012737 002474 002332      MOV      #SCHBK,CMDPKT+CP.ADL      ;SET UP ADR LO TO POINT TO MSG BUF(MSGPKO)
3057 010044 012737 000012 002336      MOV      #SCHCNT,CMDPKT+CP.CNT      ;SET BUFFER EXTENT
3058 010052 012737 000040 002502      MOV      #DFTSCH,SCHBK+6      ;STORE CHARACTERISTIC CODE IN SCH BLOCK.
3059 010060 013737 003532 002504      MOV      TSUNT,SCHBK+10      ;UNIT #
3060 010066 012704 002330      MOV      #CMDPKT,R4      ;ADDRESS OF CMD PACKET
3061 010072 000207      RTS      PC      ;RETURN
3062
3063
3064      ;      MODULES TO HANDLE TSOS INTERRUPTS.
3065
3066
3067      BGNSRV TSSINO
3068 010074 005237 003472      TSSINO::      INC      INTFLG      ;SET INTERRUPT OCCURRED FLAG.
3069 010100      ENDSRV
3070 010100 000002      L10004:      RTI
3071 010102      BGNSRV TSSIN1
3072 010102 005237 003474      TSSIN1::      INC      INTFLG+2      ;SET INTERRUPT OCCURRED FLAG.
3073 010106      ENDSRV
3074 010106 000002      L10005:      RTI
3075 010110      BGNSRV TSSIN2
3076 010110 005237 003476      TSSIN2::      INC      INTFLG+4      ;SET INTERRUPT OCCURRED FLAG.
  
```



GLOBAL SUBROUTINES SECTION

```

3077 010114          ENDSRV
      010114          L10006:
      010114 000002          RTI
3078
3079 010116          BGNSRV  TSSIN3
      010116          TSSIN3:
3080 010116 005237 003500  INC  INTFLG+6      ;SET INTERRUPT OCCURRED FLAG.
3081 010122          ENDSRV
      010122          L10007:
      010122 000002          RTI
3082
3083 ; SUBROUTINE TO RETRIEVE RECORD COUNT READ FROM TAPE FOR ERROR
3084 ; PRINTS.
3085 ; INPUTS:
3086 ; OUTPUTS: R3 = RECORD COUNT READ
3087 ; REGISTERS: R2, R3, R4
3088 ; CALLS:
3089
3090 010124 032737 000400 003420 RECTAP::BIT  #MOD.CO,CMDWRD      ;READ REV FETCH
3091 010132 001430          BEQ  50001$
3092 010134 013702 002360          MOV  MSGPKT+MS.RFC,R2      ;FIND LAST READ AD.
3093 010140 063702 003410          ADD  DATARD,R2
3094 010144 032702 000001          BIT  #BIT00,R2      ;ODD AD., REASSEMBLE
3095 010150 001417          BEQ  50002$
3096 010152 005202          INC  R2      ;REC COUNT STARTING
3097 010154 111203          MOVB (R2),R3      ;WITH UPPER BYTE FETCH
3098 010156 142703 177400          BICB #177400,R3
3099 010162 000303          SWAB R3
3100 010164 005302          DEC  R2      ;LET R2 := R2 - #1      ;LOWER BYTE AD.
3101 010166 105737 003520          TSTB SWBFLG      ;IFB SWBFLG NE #0 THEN
3102 010172 001401          BEQ  50003$
3103 010174 005302          DEC  R2      ;LET R2 := R2 - #1      ;LOWER BYTE AD. ON SWAP
3104
3105 010176          50003$:
3106 010176 111204          MOVB (R2),R4      ;FETCH LOWER BYTE
3107 010200 142704 177400          BICB #177400,R4
3108 010204 050403          BIS  R4,R3
3109 010206 000401          BR   50004$
3110 010210          50002$:
3111 010210 011203          MOV  (R2),R3      ;LET R3 := (R2)      ;EVEN AD. FETCH
3112 010212          50004$:
3113 010212 000402          BR   50005$
3114 010214          50001$:
3115 010214 017703 173170          MOV  @DATARD,R3      ;LET R3 := @DATARD      ;READ FWD FETCH
3116
3117 010220          50005$:
3118 010220 000207          RTS  PC
3119
3120 ; SUBROUTINE TO STORE A SET CHARACTERISTIC COMMAND AS
3121 ; THE FIRST ENTRY IN THE SEQUENCE TABLE.
3122 ; INPUTS:
3123 ; OUTPUTS:
3124 ; REGISTERS:
3125 ; CALLS:
3126
3127 010222          SETCH::
3128 010222 012701 003540          MOV  #CMDSEQ,R1      ;INIT CMD SEQUENCE TABLE POINTER.

```

## GLOBAL SUBROUTINES SECTION

```

3129 010226 012721 140004      MOV     #SCH,(R1)+      ;THIS CODE SETS UP A SET CHARACTERISTIC
3130 010232 012721 000040      MOV     #DFTSCH,(R1)+  ;COMMAND AS THE FIRST COMMAND IN THE
3131 010236 012721 000001      MOV     #1,(R1)+      ;SEQUENCE TABLE.
3132 010242 005721              TST     (R1)+          ;SKIP PATTERN LOCATION.
3133 010244 000207              RTS     PC
3134
3135      ;      SUBROUTINE TO STORE A REWIND COMMAND IN THE SEQUENCE TABLE
3136      ;      INPUTS:
3137      ;      OUTPUTS:
3138      ;      REGISTERS:
3139      ;      CALLS:
3140
3141 010246 012721 102010      SETRW:: MOV     #RWD,(R1)+      ;CMD = REWIND.
3142 010252 012721 000001      MOV     #1,(R1)+      ;BRF.
3143 010256 012721 000001      MOV     #1,(R1)+      ;# OF OPERATIONS.
3144 010262 005721              TST     (R1)+          ;SKIP PATTERN.
3145 010264 000207              RTS     PC              ;RETURN
3146
3147      ;      SUBROUTINE TO EXECUTE ALL COMMANDS IN THE SEQUENCE TABLE ON ALL
3148      ;      DEVICES.
3149      ;      INPUTS:
3150      ;      OUTPUTS:      R2 = TERMINATION INDICATOR (0=END OF TABLE,1=EOT)
3151      ;      REGISTERS:
3152      ;      CALLS:      CMDAC,SETUP,EXSUB,CKHAE,NEXTU,FIRSTU,VFYDAT.
3153
3154 010266 012701 003540      EXALL:: MOV     #CMDSEQ,R1      ;INIT SEQUENCE TABLE POINTER.
3155 010272 50006$              50006$: CMP     (R1),#END      ;WHILE THERE ARE CMDS IN THE SEQUENCE TABLE.
3156 010272 021127 177777      CMP     (R1),#END      ;WHILE THERE ARE CMDS IN THE SEQUENCE TABLE.
3157 010276 001530              BEQ     50007$
3158 010300 004737 011232      JSR     PC,SETUP      ;GO SETUP THE COMMAND BLOCK.
3159 010304 50010$              50010$: BREAK        ; DO A SUPVSR BREAK FIRST.
3160 010304 104422              TRAP     C$BRK
3160 010306 023737 003412 003414      CMP     NCNT,NCNT1    ;WHILE THERE ARE RECORDS REMAINING:
3161 010314 002116              BGE     50011$
3162 010316 004737 011124      JSR     PC,CMDAC      ;STORE CMD ASCII IN ERROR MESSAGE.
3163 010322 105737 003515      TSTB   RANDOM        ;IF IN RANDOM MODE:
3164 010326 001435              BEQ     50012$
3165 010330 023727 003420 104005      CMP     CMDWRD,#WRT   ;IF CMD IS A WRITE THEN:
3166 010336 001031              BNE     50013$
3167 010340 105737 003516      TSTB   VFYFLG        ;IF DATA IS NOT TO BE VERIFIED THEN:
3168 010344 001026              BNE     50014$
3169 010346 063737 003434 003432      ADD     RANS,RANB     ;LET RANB := RANB + RANS ;GENERATE
3170 010354 063737 003432 003434      ADD     RANB,RANS     ;LET RANS := RANS + RANB ;RANDOM
3171 010362 013737 003434 003416      MOV     RANS,BRFCNT   ;LET BRFCNT := RANS ;LENGTH
3172 010370 043737 003430 003416      BIC     LENMSK,BRFCNT ;MASK RANDOM LENGTH.
3173 010376 023727 003416 000022      CMP     BRFCNT,#18.  ;DO NOT ALLOW BYTE COUNT OF LESS THAN 18
3174 010404 002003              BGE     50015$
3175 010406 012737 000022 003416      MOV     #18.,BRFCNT  ;CHANGE COUNT OF 0-17 TO 18.
3176
3177 010414 50015$              50015$:
3178 010414 013737 003416 002336      MOV     BRFCNT,CMDPKT+CP.CNT ;MOVE BRF TO CMD PACKET.
3179
3180 010422 50014$              50014$:
3181
3182 010422 50013$              50013$:
3183
3184 010422 50012$              50012$:

```



## GLOBAL SUBROUTINES SECTION

```

3185 010422 004737 010564 JSR PC,EXSUB ;ISSUE CMD TO ALL,AWAIT INTS,CHECK STATUS.
3186 010426 004737 017540 JSR PC,CKHAE ;CHECK HALT AFTER EACH CMD FLAG.
3187 010432 012702 000001 MOV #1,R2 ;LET R2 := #1 ;SET ALL UNITS AT BOT/EOT.
3188 010436 004737 017142 JSR PC,FIRSTU ;FIND FIRST UNIT.
3189
3190 010442 50016$:
3191 010442 026527 002604 177777 CMP DEVTBL(R5),#END ;WHILE THERE ARE MORE UNITS:
3192 010450 001426 BEQ 50017$
3193 010452 032737 000400 003420 BIT #MOD.CO,CMDWRD ;IF CMD IS REVERSE THEN:
3194 010460 001406 BEQ 50020$
3195 010462 032765 000002 003502 BIT #XO.BOT,EOTFLG(R5) ;IF NOT AT BOT THEN:
3196 010470 001001 BNE 50021$
3197 010472 005002 CLR R2 ;LET R2 := #0 ;CLEAR EOT/BOT FLAG.
3198
3199 010474 50021$:
3200 010474 000411 BR 50022$ ;ELSE IF CMD IS NOT REVERSE:
3201 010476 50020$:
3202 010476 032765 000001 003502 BIT #XO.EOT,EOTFLG(R5)
3203 010504 001404 BEQ 50023$
3204 010506 032737 000001 003420 BIT #CMD.CO,CMDWRD
3205 010514 001001 BNE 50024$
3206 010516 50023$:
3207 ;IF NOT AT EOT OR NOT A MOTION CMD THEN:
3208 010516 005002 CLR R2 ;CLEAR EOT/BOT FLAG.
3209
3210 010520 50024$:
3211
3212 010520 50022$:
3213 010520 004737 017210 JSR PC,NEXTU ;FIND NEXT UNIT
3214 010524 000746 BR 50016$
3215 010526 50017$:
3216 010526 020227 000001 CMP R2,#1 ;IF ALL UNIT ARE AT EOT/BOT THEN:
3217 010532 001001 BNE 50025$
3218 010534 000412 BR EXARTN ;RETURN WITH R2 = #1.
3219
3220 010536 50025$:
3221 010536 005237 003412 INC NCNT ;LET NCNT := NCNT + #1 ;UPDATE RECORD COUNT.
3222 010542 013737 003420 003424 MOV CMDWRD,PCMDWD ;SAVE PREVIOUS COMMAND WORD.
3223
3224 010550 000655 BR 50010$
3225 010552 50011$:
3226 010552 004737 016126 JSR PC,VFYDAT ;IF LAST CMD WAS A WRITE VERIFY, THEN GO
3227 ;VERIFY THE LAST N RECORDS OF DATA.
3228
3229 010556 000645 BR 50006$
3230 010560 50007$:
3231 010560 005002 CLR R2 ;LET R2 := #0 ;SET NORMAL RETURN INDICATOR.
3232 010562 000207 EXARTN: RTS PC ;RETURN.
3233
3234
3235
3236 ; SUBROUTINE TO ISSUE COMMAND TO ALL DEVICES, WAIT FOR
3237 ; ALL INTERRUPTS, AND CHECK ALL STATUS.
3238 ; INPUTS:
3239 ; OUTPUTS:
3240 ; REGISTERS:
3241 ; CALLS: EXCUTE,GOWAIT,NEXTU,FIRSTU.

```

## GLOBAL SUBROUTINES SECTION

```

3242
3243 010564 004737 017142      EXSUB:: JSR      PC,FIRSTU      ;SET UP FOR FIRST UNIT.
3244 010570      50026$:
3245 010570 026527 002604 177777      CMP      DEVTBL(R5),#END      ;WHILE THERE ARE MORE DEVICES:
3246 010576 001465      BEQ      50027$
3247 010600 032737 000400 003420      BIT      #MOD.CO,CMDWRD      ;IF CMD IS REVERSE THEN:
3248 010606 001421      BEQ      50030$
3249 010610 032765 000002 003502      BIT      #X0.BOT,EOTFLG(R5)  ;IF NOT AT BOT
3250 010616 001014      BNE      50031$
3251 010620 032765 000001 003502      BIT      #X0.EOT,EOTFLG(R5)  ;BUT IF AT EOT
3252 010626 001406      BEQ      50032$
3253 010630 105737 003524      TSTB    ALLEOT      ;AND ALL OTHERS AT EOT
3254 010634 001402      BEQ      50033$
3255 010636 004737 012114      JSR      PC,EXECUTE      ;THEN EXECUTE REV CMD
3256      ;IF NOT ALL AT EOT, FREEZE UNIT(S) AT EOT
3257 010642      50033$:
3258 010642 000402      BR      50034$      ;IF NOT AT BOT AND
3259 010644      50032$:
3260 010644 004737 012114      JSR      PC,EXECUTE      ;NOT AT EOT, EXEC REV CMD
3261
3262 010650      50034$:
3263
3264 010650      50031$:
3265 010650 000435      BR      50035$      ;ELSE IF CMD IS NOT REVERSE:
3266 010652      50030$:
3267 010652 023727 003426 000002      CMP      CMDLG,#2
3268 010660 001011      BNE      50036$
3269 010662 032765 000002 003502      BIT      #X0.BOT,EOTFLG(R5)
3270 010670 001405      BEQ      50036$
3271
3272 010672 016537 002616 003512      MOV      BTADDR(R5),BTPT      ;CLEAR BAD SPOT COUNTS WHEN WRITING FROM BOT
3273 010700 005077 172606      CLR      @BTPT      ;LET BTPT := BTADDR(R5)
3274      ;LET @BTPT := #0
3275 010704      50036$:
3276 010704 032765 000001 003502      BIT      #X0.EOT,EOTFLG(R5)
3277 010712 001404      BEQ      50037$
3278 010714 032737 000001 003420      BIT      #CMD.CO,CMDWRD
3279 010722 001003      BNE      50040$
3280 010724      50037$:
3281
3282 010724 004737 012114      JSR      PC,EXECUTE      ;IF NOT AT EOT OR NOT A MOTION CMD THEN:
3283      ;ISSUE CMD TO TS05
3284 010730 000405      BR      50041$
3285 010732      50040$:
3286 010732 105737 003524      TSTB    ALLEOT      ;IFB ALLEOT NE #0 THEN
3287 010736 001402      BEQ      50042$
3288 010740 004737 012114      JSR      PC,EXECUTE
3289
3290 010744      50042$:
3291
3292 010744      50041$:
3293
3294 010744      50035$:
3295 010744 004737 017210      JSR      PC,NEXTU      ;FIND NEXT UNIT IN TEST CYCLE.
3296
3297 010750 000707      BR      50026$
3298 010752      50027$:

```



## GLOBAL SUBROUTINES SECTION

```

3299 010752 105737 003517      TSTB   RPTFLG      ;IF REPORT HAS BEEN REQUESTED THEN:
3300 010756 001403      BEQ    50043$      ;
3301 010760 105037 003517      CLRB   RPTFLG      ;CLR THE FLAG.
3302 010764      DORPT          ;PRINT THE PERFORMANCE REPORT.      TRAP    C$DRPT
      010764 104424
3303 010766      50043$:
3304 010766 004737 017142      JSR    PC,FIRSTU   ;SET UP FOR FIRST UNIT.
3305 010772      50044$:
3306 010772 026527 002604 177777      CMP    DEVTBL(R5),#END ;WHILE THERE ARE MORE DEVICES:
3307 011000 001450      BEQ    50045$
3308 011002 032737 000400 003420      BIT    #MOD.CO,CMDWRD ;IF CMD IS REVERSE THEN:
3309 011010 001421      BEQ    50046$
3310 011012 032765 000002 003502      BIT    #X0.BOT,EOTFLG(R5) ;IF NOT AT BOT
3311 011020 001014      BNE   50047$
3312 011022 032765 000001 003502      BIT    #X0.EOT,EOTFLG(R5) ;BUT IF AT EOT
3313 011030 001406      BEQ    50050$
3314 011032 105737 003524      TSTB  ALLEOT        ;AND ALL OTHERS AT EOT
3315 011036 001402      BEQ    50051$
3316 011040 004737 012424      JSR    PC,GOWAIT   ;THEN WAIT FOR CMD END
3317                                     ;IF NOT ALL AT EOT, DO NOT WAIT
3318 011044      50051$:
3319                                     ;NOT AT BOT, AND NOT AT EOT
3320 011044 000402      BR    50052$
3321 011046      50050$:
3322 011046 004737 012424      JSR    PC,GOWAIT   ;WAIT FOR INT,CHECK STAT
3323
3324 011052      50052$:
3325
3326
3327 011052      50047$:
3328 011052 000420      BR    50053$        ;ELSE IF CMD IS FORWARD:
3329 011054      50046$:
3330 011054 032765 000001 003502      BIT    #X0.EOT,EOTFLG(R5)
3331 011062 001404      BEQ    50054$
3332 011064 032737 000001 003420      BIT    #CMD.CO,CMDWRD
3333 011072 001003      BNE   50055$
3334 011074      50054$:
3335                                     ;IF NOT AT EOT OR NOT A MOTION CMD THEN:
3336 011074 004737 012424      JSR    PC,GOWAIT   ;WAIT FOR INT,CHECK STATUS.
3337
3338 011100 000405      BR    50056$
3339 011102      50055$:
3340 011102 105737 003524      TSTB  ALLEOT        ;IFB ALLEOT NE #0 THEN
3341 011106 001402      BEQ    50057$
3342 011110 004737 012424      JSR    PC,GOWAIT
3343
3344 011114      50057$:
3345
3346 011114      50056$:
3347
3348 011114      50053$:
3349 011114 004737 017210      JSR    PC,NEXTU    ;FIND NEXT UNIT IN TEST CYCLE.
3350
3351 011120 000724      BR    50044$
3352 011122      50045$:
3353 011122 000207      RTS    PC          ;RETURN.
3354

```

## GLOBAL SUBROUTINES SECTION

```

3355 ; THIS SUBROUTINE STORES THE ASCII FOR THE CURRENT COMMAND AND PREVIOUS
3356 ; COMMAND IN THE STANDARD ERROR MESSAGE. ON ENTRY LOCATION CMDWRD
3357 ; CONTAINS CURRENT CMD AND LOCATION PCMDWD CONTAINS PREVIOUS CMD.
3358 ; INPUTS:
3359 ; OUTPUTS:
3360 ; REGISTERS: R3, R4.
3361 ; CALLS: GCMDA
3362
3363 011124 013704 003420 CMDAC:: MOV CMDWRD,R4;LET R4 := CMDWRD ;R4 = CMD BINARY.
3364 011130 004737 011176 JSR PC,GCMDA ;GET CMD ASCII.
3365 011134 112337 006440 MOV (R3)+,STAER1+2 ;MOVE CMD ASCII
3366 011140 112337 006441 MOV (R3)+,STAER1+3 ;
3367 011144 111337 006442 MOV (R3),STAER1+4 ;INTO MSG.
3368 011150 013704 003424 MOV PCMDWD,R4 ;R4 = PREVIOUS CMD BINARY.
3369 011154 004737 011176 JSR PC,GCMDA ;GET CMD ASCII.
3370 011160 112337 006554 MOV (R3)+,STAER7+24 ;MOVE CMD ASCII
3371 011164 112337 006555 MOV (R3)+,STAER7+25 ;
3372 011170 111337 006556 MOV (R3),STAER7+26 ;INTO MSG.
3373 011174 000207 RTS PC ;RETURN. GO EXECUTE NEXT FUNCTION.
3374
3375
3376 ; SUBROUTINE TO FIND THE ASCII EQUIVILENT OF THE COMMAND IN R4.
3377 ; ADDRESS OF ASCII 1ST WORD IS RETURNED IN R3.
3378 ; INPUTS: R4 = PRESENT COMMAND WORD.
3379 ; OUTPUTS: R3 = ADDRESS OF PRESENT COMMAND ASCII.
3380 ; REGISTERS:
3381 ; CALLS:
3382
3383 011176 005003 GCMDA:: CLR R3;LET R3 := #0 ;INIT CMD TBL POINTER.
3384 011200 500604: CMP CMDTBL(R3),R4 ;UNTIL CURRENT CMD IS FOUND:
3385 011200 026304 003752 BEQ 500614
3386 011204 001403 000002 ADD #2,R3 ;LET R3 := R3 + #2 ;SEARCH CMD TABLE.
3387 011206 062703 000002 BR 500604
3388 011212 000772
3389 011214 500614: MOV R3,R4 ;LET R4 := R3
3390 011214 010304 ASR R3 ;POINT TO ASCII FOR THAT COMMAND
3391 011216 006203 NOP
3392 011220 000240 ADD R4,R3
3393 011222 060403 004040 ADD #CMDASC,R3
3394 011224 062703 004040 RTS PC ;RETURN.
3395 011230 000207
3396
3397 ; THIS SUBROUTINE LOADS THE TS05 COMMAND PACKET FROM ONE
3398 ; ENTRY IN THE SEQUENCE TABLE.
3399 ; INPUTS:
3400 ; OUTPUTS:
3401 ; REGISTERS: R2, R3.
3402 ; CALLS: GENPAT.
3403
3404 011232 005037 003426 SETUP:: CLR CMDLG ;CLR CMD LOGGING CODE(DISABLES LOGGING)
3405 011236 012137 002330 MOV (R1)+,CMDPKT ;LOAD THE COMMAND WORD.
3406 011242 011137 002336 MOV (R1),CMDPKT+CP.CNT ;LOAD THE BYTE/RECORD/FILE COUNT.
3407 011246 011137 003416 MOV (R1),BRFCNT ;SAVE BRFCNT FOR THIS COMMAND.
3408 011252 013702 002330 MOV CMDPKT,R2 ;GET CMD.
3409 011256 042702 177740 BIC #NCMD.C,R2 ;CLR ALL BUT CMD BITS.
3410 011262 010203 MOV R2,R3 ;SAVE IT TWICE.
3411 011264 162703 000010 SUB #CMD.C3,R3 ;POSITION COMMAND?

```



## GLOBAL SUBROUTINES SECTION

3412	011270	001003				BNE	2\$		;BR IF NOT.
3413	011272	011137	002332			MOV	(R1),CMDPKT+2		;MOVE BPCR IN 2ND PKT WORD FOR POSITION CMD.
3414	011276	000464				BR	3\$		
3415	011300	023727	002330	100011	2\$:	CMP	CMDPKT,#WTM		;IF CMD IS A WRITE TAPE MARK THEN:
3416	011306	001003				BNE	50062\$		
3417	011310	012737	000002	003426		MOV	#2,CMDLG		;WTM LOGGING CODE IS 2.
3418									
3419	011316						50062\$:		
3420	011316	010203				MOV	R2,R3		
3421	011320	162703	000001			SUB	#CMD.CO,R3		;IS IT A READ?
3422	011324	001017				BNE	1\$		;BR IF NOT.
3423	011326	013737	003410	002332		MOV	DATARD,CMDPKT+CP.ADL		;IF SO, LOAD THE BUFFER ADDR.
3424	011334	032737	000400	002330		BIT	#MOD.CO,CMDPKT		;IF CMD IS A READ REV THEN:
3425	011342	001404				BEQ	50063\$		
3426	011344	012737	000004	003426		MOV	#4,CMDLG		;LOGGING CODE IS 4.
3427									;ELSE - IF CMD IS A READ FWD:
3428	011352	000403				BR	50064\$		
3429	011354						50063\$:		
3430	011354	012737	000006	003426		MOV	#6,CMDLG		;LOGGING CODE IS 6.
3431									
3432	011362						50064\$:		
3433	011362	000432				BR	3\$		;CONTINUE.
3434	011364	010203				MOV	R2,R3		;IS IT
3435	011366	162703	000004		1\$:	SUB	#CMD.C2,R3		;A SET CHARACTERISTICS CMD?
3436	011372	001014				BNE	4\$		;BR IF NOT.
3437	011374	012737	002474	002332		MOV	#SCHBK,CMDPKT+CP.ADL		;SET UP ADR LO FOR SET CHAR.
3438	011402	012737	000012	002336		MOV	#SCHCNT,CMDPKT+CP.CNT		;SET BUFFER EXTENT
3439	011410	011137	002502			MOV	(R1),SCHBK+6		;STORE CHARACTERISTIC CODE IN SCH BLOCK.
3440	011414	013737	003532	002504		MOV	TSUNT,SCHBK+10		;UNIT #
3441	011422	000412				BR	3\$		;CONTINUE.
3442	011424	010203				MOV	R2,R3		;IS IT
3443	011426	162703	000006		4\$:	SUB	#CMD.C1:CMD.C2,R3		;A DIAGNOSTIC (DIA) CMD?
3444	011432	001006				BNE	3\$		;BR IF NOT.
3445	011434	012737	000020	002336		MOV	#DIACNT,CMDPKT+CP.CNT		;LOAD BUFFER EXTENT.
3446	011442	012737	003406	002332		MOV	#DIABLK,CMDPKT+CP.ADL		;LOAD BUFFER ADR LOW.
3447	011450	005721				TST	(R1)+		;POINT TO N (NUMBER OF TIMES TO EXECUTE THIS INS
3448	011452	012137	003414		3\$:	MOV	(R1)+,NCNT1		;SAVE NUMBER OF OPERATIONS
3449	011456	005037	003412			CLR	NCNT		;CLEAR OPERATION COUNTER.
3450	011462	012137	003446			MOV	(R1)+,PATTERN		;SAVE PATTERN CODE FOR CURRENT CMD.
3451	011466	010203				MOV	R2,R3		;IS IT
3452	011470	162703	000005			SUB	#CMD.CO:CMD.C2,R3		;A WRITE?
3453	011474	001010				BNE	5\$		;BR IF NOT.
3454	011476	013737	003406	002332		MOV	DATAWT,CMDPKT+CP.ADL		;LOAD WRITE BUFFER LO ORDER.
3455	011504	004737	011616			JSR	PC,GENPAT		;GO GENERATE THE WRITE PATTERN.
3456	011510	012737	000002	003426		MOV	#2,CMDLG		;WRITE LOGGING CODE IS 2.
3457	011516	032737	000100	002330	5\$:	BIT	#VFY.C,CMDPKT		;IF DATA VERIFICATION IS REQUIRED:
3458	011524	001407				BEQ	50065\$		
3459	011526	112737	000001	003516		MOVB	#1,VFYFLG		;SET VERIFY FLAG.
3460	011534	042737	000100	002330		BIC	#VFY.C,CMDPKT		;CLEAR VERIFY BIT(NOT USED BY HARDWARE).
3461									;IF DATA VERIFICATION IS NOT REQUIRED:
3462	011542	000402				BR	50066\$		
3463	011544						50065\$:		
3464	011544	105037	003516			CLRB	VFYFLG		;CLR VERIFY FLAG.
3465									
3466	011550						50066\$:		
3467	011550	013737	003420	003424		MOV	CMDWRD,PCMDWD		;SAVE PREVIOUS CMD WORD.
3468	011556	013737	002330	003420		MOV	CMDPKT,CMDWRD		;SAVE PRESENT CMD WORD.

## GLOBAL SUBROUTINES SECTION

```

3469 011564 105737 003520          TSTB   SWBFLG          ;IF SWAP BYTES IS ENABLED:
3470 011570 001403                    BEQ    50067$         ;
3471 011572 052737 010000 002330    BIS    #SWB.C,CMDPKT ;SET SWAP BIT IN COMMAND.
3472
3473 011600                    50067$:
3474 011600 042737 004000 002330    BIC    #BRF.C,CMDPKT ;CLR BRF BIT (INTERNAL ONLY).
3475 011606 013737 002330 003422    MOV    CMDPKT,CMDSAV ;SAVE 1ST WORD OF COMMAND PACKET.
3476 011614 000207                    RTS    PC             ;RETURN.
3477
3478 ;
3479 ;   THIS SUBROUTINE SETS UP AND CALLS THE APPROPRIATE SUBROUTINE TO GENERATE
3480 ;   THE DESIRED PATTERN FOR THE WRITE AND WRITE/VERIFY COMMANDS.
3481 ;
3482 ;   INPUTS:
3483 ;   OUTPUTS:
3484 ;   REGISTERS:      R2, R3, R4.
3485 ;   CALLS:         PATR0 - PATR7
3485 011616 013703 003446    GENPAT::MOV    PATERN,R3 ;SETUP PATTERN ROUTINE POINTER
3486 011622 006303                    ASL    R3
3487 011624 013704 003416    MOV    BRFCNT,R4      ;SET LENGTH OF WRITE BFR
3488 011630 005204                    INC    R4
3489 011632 042704 000001    BIC    #1,R4          ;ROUNDED UP TO NEXT WORD
3490 011636 162704 000002    SUB    #2,R4          ;WITH FIRST WORD RESERVED
3491 011642 013702 003406    MOV    DATAW,R2     ;FOR RECORD COUNT
3492 011646 062702 000002    ADD    #2,R2
3493 011652 004773 011660    JSR    PC,@PATTBL(R3) ;GO GENERATE THE APPROPRIATE PATTERN.
3494 011656 000207                    RTS    PC             ;RETURN TO SETUP SUBROUTINE.
3495
3496 ;TS05 WRITE PATTERN LOOKUP TABLE. USED TO JSR TO THE
3497 ;CORRECT DATA PATTERN GENERATING ROUTINE.
3498
3499 011660 011702    PATTBL: PATR0
3500 011662 011740    PATR1
3501 011664 011760    PATR2
3502 011666 011770    PATR3
3503 011670 012014    PATR4
3504 011672 012026    PATR5
3505 011674 012040    PATR6
3506 011676 012060    PATR7
3507 011700 012112    PATR8
3508
3509 ;INCREMENTING PATTERN. 0 - 377.
3510
3511 011702 012703 000400    PATR0::MOV    #400,R3;LET R3 := #400
3512 011706 162704 000002    1$: SUB    #2,R4;LET R4 := R4 - #2 ;DECREMENT WORD COUNT.
3513 011712 100411                    BMI    2$           ;BR IF DONE.
3514 011714 010322                    MOV    R3,(R2)+     ;STORE DATA WORD.
3515 011716 062703 001002    ADD    #1002,R3     ;UPDATE PATTERN.
3516 011722 020327 001000    CMP    R3,#1000     ;IF PATTERN HAS WRAPPED AROUND THEN:
3517 011726 001002                    BNE    50070$
3518 011730 012703 000400    MOV    #400,R3      ;INIT THE PATTERN AGAIN.
3519
3520 011734                    50070$:
3521 011734 000764                    BR     1$           ;DO IT AGAIN.
3522
3523 011736 000207                    2$:  RTS    PC             ;RETURN.
3524
3525 ;ALL ONE'S PATTERN.

```



## GLOBAL SUBROUTINES SECTION

```

3526
3527 011740 012703 177777 PATR1:: MOV #1,R3 ;ALL ONES PATTERN;.
3528 011744 162704 000002 ZROPAT: SUB #2,R4 ;DECREMENT BYTE COUNT.
3529 011750 100402 BMI 1# ;DONE?,BR IF YES.
3530 011752 010322 MOV R3,(R2)+ ;IF NOT LOAD NEXT BYTE WITH PATTERN.
3531 011754 000773 BR ZROPAT ;DO IT AGAIN.
3532
3533 011756 000207 1#: RTS PC ;RETURN.
3534
3535 ;ALL ZEROES PATTERN.
3536
3537 011760 005003 PATR2:: CLR R3 ;CLR PATTERN REGISTER.
3538 011762 004737 011744 JSR PC,ZROPAT ;GO GENERATE IT.
3539 011766 000207 RTS PC ;RETURN.
3540
3541 ;ONE BIT WALKING FROM R TO L IN A FIELD OF ZEROES.
3542
3543 011770 012703 000401 PATR3:: MOV #401,R3 ;INIT PATTERN REGISTER.
3544 011774 162704 000002 WLKZRO: SUB #2,R4;LET R4 := R4 - #2 ;DECREMENT WORD COUNT.
3545 012000 100404 BMI 1# ;BR IF DONE.
3546 012002 010322 MOV R3,(R2)+ ;LOAD DATA.
3547 012004 006303 ASL R3 ;SHIFT PATTERN.
3548 012006 005503 ADC R3 ;ADD CARRY BACK INTO PATTERN.
3549 012010 000771 BR WLKZRO ;DO IT AGAIN.
3550 012012 000207 1#: RTS PC ;RETURN.
3551
3552 ;ZERO BIT WALKING FROM R TO L IN A FIELD OF 1'S.
3553
3554 012014 012703 177376 PATR4:: MOV #177376,R3 ;INIT PATTERN REGISTER.
3555 012020 004737 011774 JSR PC,WLKZRO ;GO GENERATE ;IT.
3556 012024 000207 RTS PC ;RETURN.
3557
3558 ;ALTERNATING ONE AND ZERO BITS WITH ALTERNATE BYTES
3559 ;COMPLEMENTED.
3560
3561 012026 012703 125125 PATR5:: MOV #125125,R3 ;INIT PATTERN REGISTER.
3562 012032 004737 011744 JSR PC,ZROPAT ;GO GENERATE IT.
3563 012036 000207 RTS PC ;RETURN.
3564
3565 ;ALTERNATING BYTES OF 000 AND 377.
3566
3567 012040 012703 177400 PATR6:: MOV #177400,R3 ;INIT PATTERN REGISTER.
3568 012044 162704 000002 1#: SUB #2,R4 ;DECREMENT WORD COUNT.
3569 012050 100402 BMI 2# ;BR IF DONE.
3570 012052 010322 MOV R3,(R2)+ ;LOAD DATA.
3571 012054 000773 BR 1# ;DO IT AGAIN.
3572 012056 000207 2#: RTS PC ;RETURN.
3573
3574 ;RANDOM PATTERN GENERATOR
3575
3576 012060 162704 000002 PATR7:: SUB #2,R4 ;DECREMENT WORD COUNT
3577 012064 100411 BMI GIT ;BR IF DONE.
3578 012066 063737 003434 003432 ADD RANB,RANB
3579 012074 063737 003432 003434 ADD RANB,RANS ;GET NEW #.
3580 012102 013722 003434 MOV RANS,(R2)+ ;SAVE #.
3581 012106 000764 BR PATR7 ;CONTINUE.
3582 012110 000207 GIT: RTS PC ;RETURN

```

GLOBAL SUBROUTINES SECTION

```

3583
3584
3585
3586 012112 000207
3587
3588
3589
3590
3591
3592
3593
3594
3595 012114 012737 177777 003436
3596 012122
3597 012122 005337 003436
3598 012126 005737 003436
3599 012132 001011
3600 012134 004737 012774
3601 012140
    012140 104455
    012142 000002
    012144 004536
    012146 006120
3602 012150 004737 017240
3603 012154 000522
3604
3605 012156
3606 012156 032775 000200 002524
3607 012164 001756
3608 012166 023727 003420 140004
3609 012174 001022
3610 012176 010537 003452
3611 012202 004737 017142
3612 012206
3613 012206 026527 002604 177777
3614 012214 001405
3615 012216 004737 012740
3616 012222 004737 017210
3617
3618 012226 000767
3619 012230
3620 012230 013705 003452
3621 012234 016537 002544 002474
3622
3623 012242
3624 012242 016503 002544
3625 012246 005002
3626 012250
3627 012250 020227 000020
3628 012254 001405
3629 012256 012723 177777
3630 012262 062702 000002
3631
3632 012266 000770
3633 012270
3634 012270 105737 002212
3635 012274 001023

```

```

: NO PATTERN GENERATION.
PATR8:: RTS PC ;RETURN.
: THIS SUBROUTINE INITIATES TS05 COMMAND EXECUTION
: AND CHECKS FOR TS05 RESPONSE.
: INPUTS:
: OUTPUTS:
: REGISTERS: R2, R3.
: CALLS: DROPU, MOVMSG, FIRSTU, NEXTU, WSSR.
EXCUTE:: MOV #-1, TIME1 ;INIT TIMEOUT COUNTER.
50071$: ;REPEAT ;WAIT -
DEC TIME1 ;UPDATE TIMEOUT COUNTER.
TST TIME1 ;IF TIMED OUT:
BNE 50072$
JSR PC, MOVMSG ;MOVE CURRENT PACKET MSG.
ERRDF 2, NSSRM, STAERM ;REPORT TS05 NOT READY
TRAP C$ERDF
.WORD 2
.WORD NSSRM
.WORD STAERM
JSR PC, DROPU ;DROP THE UNIT.
BR EXCRTN ;RETURN.
50072$: BIT #TS, SSR, @TSSR(R5) ;WAIT UNTIL DEVICE IS READY.
BEQ 50071$
CMP CMDWRD, #SCH ;IF WE ARE DOING A SET CHAR CMD THEN:
BNE 50073$
MOV R5, R5SAVE ;SAVE CURRENT DEVICE POINTER.
JSR PC, FIRSTU ;FIND FIRST UNIT.
50074$: CMP DEVTBL(R5), #END ;WHILE DEVTBL(R5) NE #END DO
BEQ 50075$
JSR PC, WSSR ;WAIT FOR UNIT READY OR TIME OUT.
JSR PC, NEXTU ;FIND NEXT UNIT.
BR 50074$
50075$: MOV R5SAVE, R5 ;RESTORE CURRENT DEVICE POINTER.
MOV MSGPKA(R5), SCHBK ;SET UP ADR OF MSG PKT IN SCH BLOCK.
50073$: MOV MSGPKA(R5), R3 ;ADR OF THIS UNIT'S MSG PACKET.
CLR R2 ;CLR COUNTER.
50076$: CMP R2, #MSGCNT ;WHILE THERE ARE MORE LOCATIONS:
BEQ 50077$
MOV #-1, (R3) ;INIT THE MSG PACKET WITH ALL 1'S
ADD #2, R2 ;UPDATE COUNTER.
BR 50076$
50077$: TSTB DINT ;ARE INTERRUPTS DISABLED.
BNE 1$ ;BR IF YES.

```



GLOBAL SUBROUTINES SECTION

```

3636 012276 126527 003472 000001      CMPB   INTFLG(R5),#1      ;IF MORE THAN ONE INTERRUPT HAS OCCURED:
3637 012304 003412                    BLE    50100$
3638 012306 017537 002524 003454      MOV    @TSSR(R5),TSSREG  ;FREEZE THE CURRENT STATUS REG FOR PRINT
3639 012314 104455 002524 003454      ERRDF 15,TOO MM,STAERM  ;REPORT TOO MANY INTERRUPTS.
                                TRAP   C$ERDF
                                .WORD  15
                                .WORD  TOO MM
                                .WORD  STAERM
3640 012324 004737 017240              JSR    PC,DROPU          ;DROP THE UNIT
3641 012330 000434                    BR     EXCRTN           ;RETURN - UNIT HAS BEEN DROPPED.
3642
3643 012332 005065 003472 002330      50100$: CLR    INTFLG(R5)      ;CLR INTERRUPT FLAG FOR THIS DEV.
3644 012332 052737 000200 002330      BIS    @IE.C,CMDPKT    ;SET INT ENABLE BIT.
3645 012336 105737 003471 002330      1$:   TSTB  ERRREC;IFB ERRREC EQ #0 THEN ;IF NOT RETRYING
3646 012344 001005 003376              BNE    50101$
3647 012350 005265 003376 171022      INC    RECCNT(R5)      ;LET RECCNT(R5) := RECCNT(R5) + #1
3648 012352 016577 003376 171022      MOV    RECCNT(R5),@DATAWT ;THEN UPDATE REC COUNT TO WRITE IT ON TAPE
3649 012356
3650
3651 012364 012775 002330 002514      50101$: MOV    #CMDPKT,@TSDB(R5) ;LOAD TSDB WITH CMDPKT ADDRESS
3652 012364 032775 000200 002524      BIT    @TS.SSR,@TSSR(R5) ;THIS INITIATES COMMAND EXECUTION.
3653                                ;IF READY DID NOT DROP THEN:
3654 012372 001410 012774              BEQ    50102$
3655 012400 004737 012774              JSR    PC,MOVMSG       ;MOVE CURRENT MESSAGE PACKET TO COMMON.
3656 012402 104455 004737 012774      ERRDF 3,TOERM,STAERM   ;REPORT NO TS05 RESPONSE.
                                TRAP   C$ERDF
                                .WORD  3
                                .WORD  TOERM
                                .WORD  STAERM
3657 012406 004737 017240              JSR    PC,DROPU          ;DROP THE UNIT
3658 012416
3659
3660 012422 000207 012774              50102$: EXCRTN: RTS    PC      ;RETURN.
3661 012422
3662
3663 ; THIS SUBROUTINE WAITS FOR THE TS05 INERRUPT OR DONE BIT TO SET AND ALLOWS THE
3664 ; OPERATOR TO TRANSFER CONROL TO THE SUPERVISOR.
3665 ; UPON APPEARANCE OF THE INTERRUPT OR DONE, CHECK TSSR FOR STATUS ERRORS,
3666 ; LOG BYTES AND ERRORS AND PERFORM ERROR RECOVERY IF NESSASARY.
3667 ; INPUTS:
3668 ; OUTPUTS:
3669 ; REGISTERS: R2, R3.
3670 ; CALLS: DROPU, MOVMSG, RECUD, CHKERR, LOG, CLRERR.
3671
3672 012424 012737 177777 003436      GOWAIT:: MOV    #-1,TIME1 ;INIT TIME OUT COUNTER.
3673 012432 003436 177777 003436      50103$: ;REPEAT
3674 012432 104422 003420 102010      BREAK ;REPEAT UNTIL INTERRUPT OCCURES:
                                ;GO TO THE SUPER TO ALLOW TTY INPUT.
                                TRAP   C$BRK
3675 012434 023727 003420 102010      CMP    CMDWRD,#RWD     ;IF COMMAND WAS REWIND THEN:
3676 012442 001014                    BNE    50104$
3677 012444 000012 002116                    DELAY 10.              ;WAIT EXTRA MSECS EACH LOOP.
                                MOV    #10.,(PC)+
                                .WORD  0
                                MOV    L$DLY,(PC)+
                                .WORD  0
                                DEC    -6(PC)
                                BNE    -.4

```

L6

## GLOBAL SUBROUTINES SECTION

```

012466 005367 177756                                DEC    -22(PC)
012472 001367                                BNE    -20
3678 012474                                50104$:
3679 012474 023727 003420 105010  CMP    CMDWRD,#SFF    ;IF CMDWRD EQ #SFF OR CMDWRD EQ #SFR THEN
3680 012502 001404                                BEQ    50105$
3681 012504 023727 003420 105410  CMP    CMDWRD,#SFR
3682 012512 001014                                BNE    50106$
3683 012514                                50105$:
3684 012514  DELAY    12.                                ;ADD DELAY FOR SPACE TAPE MARK COMMANDS
012514 012727 000014                                MOV    #12.,(PC)+
012520 000000                                .WORD 0
012522 013727 002116                                MOV    L#DLY,(PC)+
012526 000000                                .WORD 0
012530 005367 177772                                DEC    -6(PC)
012534 001375                                BNE    -4
012536 005367 177756                                DEC    -22(PC)
012542 001367                                BNE    -20
3685 012544                                50106$:
3686 012544 105737 002212  TSTB   DINT                ;IF INTERRUPTS ARE ENABLED.
3687 012550 001003  BNE    50107$
3688 012552 016502 003472  MOV    INTFLG(R5),R2    ;FETCH INTERRUPT OCCURRED FLAG.
3689
3690 012556 000406  BR     50110$
3691 012560                                50107$:
3692 012560 012703 000200  MOV    #TS.SSR,R3      ;SET UP A MASK FOR THE DONE BIT.
3693 012564 005103  COM    R3
3694 012566 017502 002524  MOV    @TSSR(R5),R2    ;FETCH DONE BIT.
3695 012572 040302  BIC   R3,R2
3696
3697 012574                                50110$:
3698 012574 005337 003436  DEC    TIME1           ;UPDATE TIMEOUT COUNTER.
3699 012600 005702  TST    R2              ;REPEAT UNTIL INTERRUPT OR READY OCCURES.
3700 012602 001003  BNE    50111$
3701 012604 005737 003436  TST    TIME1
3702 012610 001310  BNE    50103$
3703 012612                                50111$:
3704 012612 005737 003436  TST    TIME1           ;IF TIME OUT HAS OCCURRED:
3705 012616 001022  BNE    50112$
3706 012620 016577 003376 170560  MOV    RECCNT(R5),@DATAWT
3707 012626 005377 170554  DEC    @DATAWT
3708 012632 004737 012774  JSR    PC,MOVMSG      ;MOVE CURRENT MSG PACKET TO COMMON AREA.
3709 012636 104455  ERRDF  4,NOINTM,STAERM ;REPORT NO INTERRUPT.
012640 000004                                TRAP   C#ERDF
012642 004670                                .WORD 4
012644 006120                                .WORD NOINTM
3710 012646 004737 017240  JSR    PC,DROPU       ;DROP THE UNIT.
3711 012652 012703 003472  MOV    #ENDERF,R3     ;LET R3 := #ENDERF
3712 012656 004737 012724  JSR    PC,CLRERR      ;CLEAR ALL ERROR FLAGS
3713
3714 012662 000417  BR     50113$
3715 012664                                50112$:
3716 012664 004737 012774  JSR    PC,MOVMSG      ;MOVE CURRENT MSG. PACKET TO COMMON AREA.
3717 012670 004737 013060  JSR    PC,RECU        ;UPDATE THE RECORD COUNT.
3718 012674 004737 013250  JSR    PC,CHKERR      ;CHECK FOR STATUS ERRORS.
3719 012700 105737 003463  TSTB   WRTYFG
3720 012704 001006  BNE    50114$

```



## GLOBAL SUBROUTINES SECTION

```

3721 012706 004737 015626 JSR PC,LOG ;LOG BYTES AND ERRORS.
3722 012712 012703 003472 MOV #ENDERF,R3 ;LET R3 := #ENDERF
3723 012716 004737 012724 JSR PC,CLRERR ;CLEAR ALL ERROR FLAGS
3724
3725 012722 50114$:
3726
3727 012722 50113$:
3728 012722 000207 RTS PC ;RETURN IF DONE.
3729
3730 ; SUBROUTINE TO CLEAR FLAGS.
3731 ; INPUTS: R3 = LWA TO BE CLEARED + 2.
3732 ; OUTPUTS:
3733 ; REGISTERS: R2
3734 ; CALLS:
3735
3736 012724 012702 003460 CLRERR:: MOV #BGNFLG,R2 ;LET R2 := #BGNFLG
3737 012730 50115$: ;REPEAT
3738 012730 005022 CLR (R2)+ ;LET (R2)+ := #0
3739 012732 020203 CMP R2,R3 ;UNTIL R2 EQ R3
3740 012734 001375 BNE 50115$
3741 012736 000207 RTS PC
3742
3743
3744 ; SUBROUTINE TO WAIT UNTIL CURRENT UNIT IS READY OR UNTIL TIME OUT.
3745 ; INPUTS:
3746 ; OUTPUTS:
3747 ; REGISTERS:
3748 ; CALLS:
3749
3750 012740 WSSR::
3751 012740 012737 177777 003436 MOV #-1,TIME1 ;INIT TIMEOUT COUNTER.
3752 012746 50116$: ;REPEAT UNTIL DEV READY OR TIMEOUT:
3753 012746 BREAK ;BREAK TO THE SUPERVISOR. TRAP C$BRK
3754 012750 104422 DEC TIME1 ;UPDATE TIMEOUT COUNTER.
3755 012754 005337 003436 BIT #TS.SSR,@TSSR(R5) ;UNTIL #TS.SSR SET IN @TSSR(R5) OR TIME1 EQ #0
3756 012762 032775 000200 002524 BNE 50117$
3757 012764 001003 BNE 50117$
3758 012764 005737 003436 TST TIME1
3759 012770 001366 BNE 50116$
3760 012772 50117$:
3761 012772 000207 RTS PC ;RETURN.
3762
3763
3764 ; SUBROUTINE TO MOVE THE CURRENT MESSAGE PACKET TO THE COMMON AREA AND
3765 ; TO UPDATE THE CURRENT TERMINATION CLASS CODE.
3766 ; INPUTS:
3767 ; OUTPUTS:
3768 ; REGISTERS: R2, R3.
3769 ; CALLS:
3770
3771 012774 017537 002524 003454 MOVMSG:: MOV @TSSR(R5),TSSREG ;FREEZE THE STATUS REG CONTENTS
3772 013002 013702 003454 MOV TSSREG,R2 ;EXTRACT THE TERMINATION CLASS CODE.
3773 013006 042702 177761 BIC #TSC.TCC,R2
3774 013012 010237 003450 MOV R2,CTCC ;AND SAVE IT
3775 013016 006237 003450 ASR CTCC
3776 013022 016503 002544 MOV MSGPKA(R5),R3 ;ADR OF THIS DEVICE'S MSG.

```

## GLOBAL SUBROUTINES SECTION

```

3777 013026 005002
3778 013030
3779 013030 020227 000020
3780 013034 001405
3781 013036 012362 002354
3782 013042 062702 000002
3783
3784 013046 000770
3785 013050
3786 013050 013737 002362 003502
3787 013056 000207
3788
3789
3790
3791
3792
3793
3794
3795 013060 105737 003465
3796 013064 001070
3797 013066 005365 003376
3798 013072 032737 000001 003450
3799 013100 001057
3800 013102 032737 100000 002366
3801 013110 001453
3802 013112 105237 003465
3803 013116 023727 003420 102010
3804 013124 001003
3805 013126 005065 003376
3806
3807 013132 000442
3808 013134
3809 013134 032737 004000 003420
3810 013142 001436
3811 013144 032737 000400 003420
3812 013152 001007
3813 013154 032737 000400 003424
3814 013162 001002
3815 013164 005265 003376
3816
3817 013170
3818
3819 013170 000423
3820 013172
3821 013172 032737 000400 003424
3822 013200 001417
3823 013202 032765 000002 003502
3824 013210 001013
3825 013212 105737 003471
3826 013216 001406
3827 013220 105737 003516
3828 013224 001403
3829 013226 105737 003465
3830 013232 001002
3831 013234 005365 003376
3832 013240
3833

```

```

50120$: CLR R2 ;CLR COUNTER.
50120$: CMP R2,#MSGCNT ;WHILE THERE ARE MORE LOCATIONS:
50120$: BEQ 50121$
50120$: MOV (R3),MSGPKT(R2) ;MOVE MSG TO COMMON AREA.
50120$: ADD #2,R2 ;UPDATE COUNTER.
50121$: BR 50120$
50121$: MOV MSGPKT+MS.XS0,EOTFLG ;MOVE XSTATO TO EOT FLAG.
50121$: RTS PC
;
; SUBROUTINE TO ADJUST THE RECORD COUNT.
; INPUTS:
; OUTPUTS:
; REGISTERS:
; CALLS:
RECUD:: TSTB RECLOG ;IF RECORD HAS NOT BEEN LOGGED:
BNE 50122$
DEC RECCNT(R5) ;LET RECCNT(R5) := RECCNT(R5) - #1
BIT #BIT0,CTCC ;IF TAPE MOVED
BNE 50123$
BIT #X2.OPM,MSGPKT+MS.XS2
BEQ 50123$
INCB RECLOG ;SET RECORD LOGGED.
CMP CMDWRD,#RWD ;IF THIS IS A REWIND CMD:
BNE 50124$
CLR RECCNT(R5) ;CLEAR RECORD COUNT.
50124$: BR 50125$
50124$: BIT #BRF.C,CMDWRD ;IF BRF USED, UPDATE RECORD COUNT.
50124$: BEQ 50126$
50124$: BIT #MOD.CO,CMDWRD ;IF A FORWARD CMD:
50124$: BNE 50127$
50124$: BIT #MOD.CO,PCMDWD ;IF PREV CMD WAS A FWD ALSO:
50124$: BNE 50130$
50124$: INC RECCNT(R5) ;INCREMENT RECORD COUNT.
50130$:
;IF REVERSE CMD:
50130$: BR 50131$
50127$: BIT #MOD.CO,PCMDWD ;IF PREVIOUS CMD WAS A REV ALSO:
50127$: BEQ 50132$
50127$: BIT #X0.BOT,EOTFLG(R5) ;WHEN NOT AT BOT THEN
50127$: BNE 50133$
50127$: TSTB ERRREC ;CHECK THE ERROR RETRY INDICATOR
50127$: BEQ 2$ ;BR, IF WE ARE NOT NOW IN ERROR RETRY
50127$: TSTB VFYFLG ;CHECK THE WRITE VERIFY INDICATOR
50127$: BEQ 2$ ;BR, IF WE ARE NOT IN WRT/VFY MODE
50127$: TSTB RECLOG ;CHECK IF THIS RECORD HAS BEEN COUNTED
50127$: BNE 10$ ;BR, IF HAVE ALREADY BUMPED RECORD CNTR.
50127$: DEC RECCNT(R5) ;DECREMENT RECORD COUNT.
2$:
10$:

```



## GLOBAL SUBROUTINES SECTION

```

3834 013240          50133$:
3835
3836 013240          50132$:
3837
3838 013240          50131$:
3839
3840
3841 013240          50126$:
3842
3843 013240          50125$:
3844
3845 013240          50123$:
3846 013240 016577 003376 170140 MOV    REC CNT(R5),@DATAWT      ;LET @DATAWT := REC CNT(R5)
3847
3848 013246          50122$:
3849 013246 000207   RTS    PC                      ;RETURN.
3850
3851                ;   THIS IS THE ERROR CHECK SUBROUTINE.  AFTER INTERRUPT THIS
3852                ;   SUBROUTINE IS CALLED TO CHECK THE TS05 STATUS.
3853                ;   IF SPECIAL COND IS SET THEN THE TCC HANDLING SUBROUTINE IS ENTERED.
3854                ;   IF THE RFC IS NON ZERO FOR A COMMAND REQUIRING A BPCR,
3855                ;   THEN AN ERROR RFC IS REPORTED.
3856                ;   INPUTS:
3857                ;   OUTPUTS:
3858                ;   REGISTERS:      R2, R4.
3859                ;   CALLS:         TCC0-TCC7.
3860
3861 013250 032737 100000 003454 CHKERR: BIT    #TS.SC,TSSREG      ;IF SPECIAL COND STATUS IS SET THEN:
3862 013256 001441          BEQ    50134$
3863 013260 023727 003450 000002   CMP    CTCC,#2          ;IF TCC IS NOT 2 THEN:
3864 013266 001405          BEQ    50135$
3865 013270 105737 003471          TSTB  ERRREC          ;IF NOT IN ERROR RECOVERY:
3866 013274 001002          BNE   50136$
3867 013276 005265 003336          INC   SCCNT(R5)      ;INC SC COUNTER.
3868
3869 013302          50136$:
3870
3871 013302          50135$:
3872 013302 032737 004000 003454   BIT    #TS.NXM,TSSREG   ;WHEN NON-EXISTANT MEMO
3873 013310 001004          BNE   50137$
3874 013312 032737 040000 003454   BIT    #TS.UPE,TSSREG
3875 013320 001412          BEQ    50140$
3876 013322          50137$:
3877 013322 032737 100000 002366   BIT    #X2.OPM,MSGPKT+MS.XS2 ;AND TAPE NOT MOVED
3878 013330 001003          BNE   50141$
3879 013332 012702 000005          MOV   #5,R2          ;SET TCC5 INDEX
3880
3881 013336 000402          BR    50142$
3882 013340          50141$:
3883 013340 012702 000004          MOV   #4,R2          ;TAPE MOVED, SET TCC4 INDEX
3884
3885 013344          50142$:
3886
3887 013344 000402          BR    50143$
3888 013346          50140$:
3889 013346 013702 003450          MOV   CTCC,R2          ;SET DETECTED TCC INDEX
3890

```

GLOBAL SUBROUTINES SECTION

```

3891 013352          50143$:
3892 013352 006302   ASL      R2          ;CURRENT TCC X 2.
3893 013354 004772 013454 JSR      PC,@TCCRA(R2) ;GO TO THE TCC HANDLING SUBROUTINE.
3894
3895 013360 000426   BR       50144$
3896 013362          50134$:
3897 013362 032737 004000 003420 BIT      @BRF.C,CMDWRD ;IF BRF IS USED IN THIS CMD THEN:
3898 013370 001422   BEQ      50145$
3899 013372 005737 002360   TST      MSGPKT+MS.RFC ;IF THERE IS AN RFC THEN:
3900 013376 001417   BEQ      50146$
3901 013400 105737 003515   TSTB     RANDOM ;IFB RANDOM EQ #0 ORB VFYFLG NE #0 THEN
3902 013404 001403   BEQ      50147$
3903 013406 105737 003516   TSTB     VFYFLG
3904 013412 001411   BEQ      50150$
3905 013414          50147$:
3906
3907 013414 105737 003521   TSTB     IRE          ;IF NOT IN RANDOM OR IF CMD IS WTV:
3908 013420 001006   BNE      50151$       ;IF RFC ERROR REPORTS ARE ALLOWED:
3909 013422 005265 003356   INC      HRDCNT(R5) ;UPDATE HARD ERROR COUNT
3910 013426          ERRHRD 13,RFCERM,STAERM ;REPORT RFC ERROR
3911
3912 013426 104456          TRAP   C$ERHRD
3913 013430 000015          .WORD 13
3914 013432 004521          .WORD RFCERM
3915 013434 006120          .WORD STAERM
3916
3917 013436          50151$:
3918
3919 013436          50150$:
3920
3921 013436          50146$:
3922 013436          50145$:
3923 013436          50144$:
3924 013436 105737 003467   TSTB     RWERR        ;IF A READ/WRITE ERROR HAS OCCURRED THEN:
3925 013442 001403   BEQ      50152$
3926 013444 013737 003422 002330 MOV      CMDSAV,CMDPKT ;RESTORE CMD PACKET AFTER ERROR RECOV.
3927
3928 013452          50152$:
3929 013452 000207   RTS      PC          ;RETURN.
3930
3931 ; ADDRESSES OF TCC HANDLING ROUTINES FOR TERMINATION CLASS CODES 0 - 7.
3932
3933 TCCRA: TCC0
3934        TCC1
3935        TCC2
3936        TCC3
3937        TCC4
3938        TCC5
3939        TCC6
3940        TCC7
3941
3942 ; SUBROUTINE TO HANDLE TERMINATION CLASS CODE 0, UNDEFINED SPECIAL
3943 ; CONDITION ERROR.
3944 ; INPUTS:
3945 ; OUTPUTS:
3946 ; REGISTERS:

```



GLOBAL SUBROUTINES SECTION

```

3944      ; CALLS:
3945
3946 013474 005265 003356 TCC0:: INC HRDCNT(R5) ;UPDATE HARD ERROR COUNT.
3947 013500 ERRHRD 5,SCERM,STAERM ;REPORT SPECIAL CONDITION ERROR.
      013500 104456 TRAP C$ERHRD
      013502 000005 .WORD 5
      013504 004475 .WORD SCERM
      013506 006120 .WORD STAERM
3948 013510 000207 RTS PC ;RETURN.
3949
3950
3951      ; SUBROUTINE TO HANDLE TERMINATION CLASS CODE 1, ATTENTION CONDITION.
3952      ; THIS TCC INDICATES THAT THE DRIVE HAS UNDERGONE A STATUS CHANGE
3953      ; SUCH AS GOING OFFLINE OR COMING ONLINE.
3954      ; INPUTS:
3955      ; OUTPUTS:
3956      ; REGISTERS: R2,R4
3957      ; CALLS: DROPU
3958
3959 013512 TCC1:: ERRDF 6,ATTNM,STAERM ;REPORT ATTENTION-UNIT OFF LINE.
      013512 104455 TRAP C$ERDF
      013514 000006 .WORD 6
      013516 004603 .WORD ATNM
      013520 006120 .WORD STAERM
3960 013522 004737 017240 JSR PC,DROPU ;DROP THE UNIT.
3961 013526 000207 RTS PC ;RETURN.
3962
3963      ; SUBROUTINE TO HANDLE TERMINATION CLASS CODE 2, TAPE STATUS ALERT.
3964      ; A STATUS CONDITION HAS BEEN ENCOUNTERED THAT MAY HAVE SIGNIFICANCE
3965      ; TO THE PROGRAM. BITS OF INTEREST INCLUDE TMK, RLS, LET, RLL, BOT, EOT.
3966      ; INPUTS:
3967      ; OUTPUTS:
3968      ; REGISTERS:
3969      ; CALLS:
3970
3971 013530 032737 000002 002362 TCC2:: BIT #X0.BOT,MSGPKT*MS.XSO
3972 013536 001404 BEQ 50153$
3973 013540 105737 003514 TSTB EXPBOT
3974 013544 001401 BEQ 50153$
3975
3976 013546 000433 BR TC2RTN ;IF AT BOT AND BOT IS EXPECTED:
3977 ;RETURN-TCC2 CAUSED BY EXPECTED BOT.
3978 013550 50153$:
3979 013550 032737 170002 002362 BIT #X0.RLS!X0.RLL!X0.TMK!X0.LET!X0.BOT,MSGPKT*MS.XSO
3980 ;IF #X0.RLS!X0.RLL!X0.TMK!X0.LET!X0.BOT SETIN MSGPKT*MS.XSO THEN
3981
3982 013556 001427 BEQ 50154$
3983
3984 013560 105737 003515 TSTB RANDOM ;IF TCC2 CAUSED BY ANYTHING BUT EOT:
3985 013564 001403 BEQ 50155$ ;IFB RANDOM EQ #0 ORB VFYFLG NE #0 THEN
3986 013566 105737 003516 TSTB VFYFLG
3987 013572 001421 BEQ 50156$
3988 013574 50155$:
3989
3990 013574 105737 003521 TSTB IRE ;IF NOT IN RANDOM OR IF CMD IS WTV:
3991 013600 001016 BNE 50157$ ;IF RFC ERROR REPORTS ARE ALLOWED:
3992 013602 105737 003471 TSTB ERRREC ;IF WE ARE IN ERROR RECOVERY THEN:

```

E7

GLOBAL SUBROUTINES SECTION

```

3993 013606 001403          BEQ    50160$
3994 013610 105237 003470  INCB   UNREC          ;SET UNRECOVERABLE FLAG FOR LOG.
3995                                     ;ELSE - IF NOT IN ERROR RECOVERY:
3996 013614 000402          BR     50161$
3997 013616                                     50160$:
3998 013616 005265 003336  INC     SCCNT(R5)      ;INCREMENT THE SPEC COND COUNTER.
3999
4000 013622                                     50161$:
4001 013622 005265 003356  INC     HRDCNT(R5)     ;UPDATE HARD ERROR COUNT.
4002 013626                                     ERRHRD 7,TSAM,STAERM ;REPORT TAPE STATUS ALERT.
                                TRAP   C$ERHRD
                                .WORD  7
                                .WORD  TSAM
                                .WORD  STAERM
4003
4004 013636                                     50157$:
4005
4006 013636                                     50156$:
4007
4008 013636                                     50154$:
4009
4010 013636 000207  TC2RTN: RTS  PC          ;RETURN.
4011
4012
4013 ;      SUBROUTINE TO HANDLE TERMINATION CLASS CODE 3, FUNCTION REJECT.
4014 ;      THE SPECIFIED FUNCTION WAS NOT INITIATED. BITS OF INTEREST ARE
4015 ;      RMR, OFL, VCK, BOT, ILC, WLE, ILA, AND NBA.
4016 ;      INPUTS:
4017 ;      OUTPUTS:
4018 ;      REGISTERS:      R2,R4
4019 ;      CALLS:          DROPU
4020
4021 013640 000207  TCC3:: ERRDF 8,FUNRM,STAERM ;REPORT FUNCTION REJECT.
                                TRAP   C$ERDF
                                .WORD  8
                                .WORD  FUNRM
                                .WORD  STAERM
4022 013640 104455
4023 013642 000010
4024 013644 004622
4025 013646 006120
4026 013650 004737 017240 JSR    PC,DROPU        ;DROP THE UNIT.
4027 013654 000207  RTS     PC            ;RETURN.
4028
4029 ;      SUBROUTINE TO HANDLE TERMINATION CLASS CODE 4, RECOVERABLE ERROR.
4030 ;      TAPE POSITION IS ONE RECORD BEYOND WHAT ITS POSITION WAS WHEN
4031 ;      THE FUNCTION WAS INITIATED. RECOVERY PROCEDURE IS TO LOG THE
4032 ;      ERROR AND ISSUE THE APPROPRIATE RETRY COMMAND.
4033 ;      2 WRITE-ERROR-RECOVERY ALGORITHMS CAN BE SELECTED:
4034 ;      THE FIRST ONE, VIA BADTSW SWITCH, DOES DETECT BAD SPOTS ON TAPE.
4035 ;      IT CALLS A WRITE RETRY SUBR UNTIL THE RECORD IS RECOVERED
4036 ;      OR 20 BAD SPOTS HAVE BEEN LOGGED. ON REACHING 20 BAD
4037 ;      SPOTS LOGGED, A BAD TAPE OVERFLOW MSG IS PRINTED AND THE
4038 ;      UNIT DROPPED.
4039 ;      THE SECOND ALGORITHM ISSUES THE TS05 WRITE RETRY COMMAND
4040 ;      UP TO 16 TIMES BEFORE DROPPING THE UNIT OR PROCEEDING
4041 ;      WITH THE NEXT RECORD ON RECOVERY.
                                INPUTS:
                                OUTPUTS:
                                REGISTERS:      R2,R4.
                                CALLS:          RTLE, EXCUTE, GOWAIT, DROPU, WRTY

```



GLOBAL SUBROUTINES SECTION

```

4042
4043 013656 023727 003426 000002 TCC4:: CMP      CMDLG,#2      ;IF CMDLG EQ #2 ANDB BADTSW NE #0 THEN
4044 013664 001125                BNE      50162$
4045 013666 105737 002210                TSTB    BADTSW
4046 013672 001522                BEQ      50162$
4047 013674 105737 003471                TSTB    ERRREC      ;IFB ERRREC EQ #0 ANDB ERCVER NE #0 THEN
4048 013700 001007                BNE      50163$
4049 013702 105737 002207                TSTB    ERCVER
4050 013706 001404                BEQ      50163$
4051 013710                ERRSOFT 9,RERM,STAERM ;
                                TRAP      C$ERSOFT
                                .WORD     9
                                .WORD     RERM
                                .WORD     STAERM
4052
4053 013720                50163$: TSTB    IREC      ;IFB IREC EQ #0 THEN
4054 013720 105737 002213                BNE      50164$
4055 013724 001102                INCB    ERRREC      ;RETRY FLAG FOR EXECUTE SUBR: DON'T UPDATE REC CN
4056 013726 105237 003471                INCB    WRTYER      ;REWRITE ERROR FLAG FOR WRTY SUBR
4057 013732 105237 003464                INCB    WRTYFG      ;FIRST RETRY ON THIS RECORD: SUBSEQUENT
4058 013736 105737 003463                TSTB    WRTYFG
4059 013742 001072                BNE      50165$
4060                ;RETRIES WITH TCC4 ERRORS BY-PASS THIS SECTION
4061 013744 013737 003420 015146                MOV     CMDWRD,WTYWRD ;SAVE WRITE COMMAND PACKET
4062 013752 013737 002330 015144                MOV     CNDPKT,WTYCMD
4063 013760 013737 002336 015150                MOV     CNDPKT,CP.CNT,WTYBRF
4064 013766 105237 003467                INCB    RWERR      ;LOG SUBR FLAG: COUNT WRT ERRORS
4065 013772 105237 003463                INCB    WRTYFG      ;RETRY IN PROGRESS FLAG
4066
4067 013776                50166$: ;REPEAT
4068 013776 005265 003316                INC     WRTYCT(R5)  ;COUNT GLOBAL WRITE RETRIES
4069 014002 005037 003460                CLR     RETRYC      ;CLEAR # OF RETRIES PER RECORD
4070 014006 105037 003462                CLRB   RPTCNT      ;CLEAR # OF REPEATS
4071 014012 004737 014676                JSR    PC,WRTY      ;CALL WRITE RETRY
4072 014016 105737 003464                TSTB   WRTYER      ;REPEAT RETRIES ON SAME RECORD
4073 014022 001404                BEQ    50167$
4074 014024 027727 167462 000050                CMP     @BTPT,#40.
4075 014032 103761                BLO    50166$
4076 014034                50167$:
4077                ;UNTIL RECOVERED OR 20 BAD SPOTS
4078 014034 027727 167452 000050                CMP     @BTPT,#40.
4079 014042 103423                BLO    50170$
4080 014044                PRINTB @BTMSG2      ;PRINT BAD TAPE OVERFLOW MSG
                                MOV     #BTMSG2,-(SP)
                                MOV     #1,-(SP)
                                MOV     SP,RO
                                TRAP    C$PNTB
                                ADD     #4,SP
014044 012746 015237
014050 012746 000001
014054 010600
014056 104414
014060 062706 000004
4081 014064 004737 015356                JSR    PC,BORERS    ;ERASE BAD RECORD
4082 014070 005365 003376                DEC    RECCNT(R5)
4083 014074 004737 017240                JSR    PC,DROPU     ;DROP UNIT
4084 014100 005065 003376                CLR    RECCNT(R5)
4085 014104 012775 002350 002514                MOV    @RWCPK,@TSDB(R5) ;REWIND UNIT
4086
4087 014112                50170$:
4088 014112 105037 003463                CLRB   WRTYFG      ;RETRY COMPLETE FLAG
4089 014116 105237 003531                INCB   MISCFG      ;DO NOT HALT ON THIS CMD FLG

```

G7

## GLOBAL SUBROUTINES SECTION

```

4090 014122 013737 015146 003424      MOV      WTYWRD,PCMDWD      ;RESTORE ORIGINAL WRT CMD AFTER RECOVERY
4091
4092 014130                          501654:
4093
4094 014130 000402                          BR      501714
4095 014132                          501644:
4096 014132 105237 003470      INCB    UNREC      ;LET UNREC :B= UNREC * #1 ;
4097
4098 014136                          501714:
4099
4100 014136 000454                          BR      501724
4101 014140                          501624:
4102 014140 004737 014550      JSR     PC,RTLE      ;CHECK FOR RETRY LIMIT EXCEEDED.
4103 014144 023727 003426 000002      CMP     CMDLG,#2      ;IF READ CMD THEN:
4104 014152 003411                          BLE    501734
4105 014154 012702 000020      MOV     #RRECL,R2      ;R2=READ RETRY COUNT LIMIT / 2
4106 014160 006202                          ASR    R2
4107 014162 023702 003460      CMP     RETRYC,R2      ;IF RETRY COUNT IS MORE THAN HALF LIMIT:
4108 014166 002403                          BLT   501744
4109 014170 052737 020000 002330      BIS    #OPP.C,CMDPKT      ;SET OPPOSITE BIT FOR RETRY2.
4110
4111 014176                          501744:
4112
4113 014176                          501734:
4114 014176 005737 003460      TST     RETRYC      ;IF THIS IS THE ORIGINAL ERROR THEN:
4115 014202 001007                          BNE   501754
4116 014204 105737 002207      TSTB   ERVER
4117 014210 001404                          BEQ   501754
4118 014212                          ERRSOFT 9,RERM,STAERM ;REPORT RECOVERABLE ERROR
4119                                TRAP   C$ERSOFT
4120                                .WORD  9
4121                                .WORD  RERM
4122                                .WORD  STAERM
4123                                ;PROVIDED OPERATOR HAS ENABLED THE REPORT
4124 014222                          501754:
4125 014222 005237 003460      INC     RETRYC      ;UPDATE RETRY COUNT.
4126 014226 052737 001000 002330      BIS    #MOD.C1,CMDPKT ;SET RETRY BIT IN CMD PACKET.
4127 014234 105737 002213      TSTB   IREC      ;IF ERROR RECOVERY ENABLED:
4128 014240 001011                          BNE   501764
4129 014242 105237 003471      INCB   ERRREC      ;SET ERROR RECOVERY FLAG.
4130 014246 012602                          MOV   (SP)+,R2      ;POP 2 RTN ADRS FROM STACK.
4131 014250 012602                          MOV   (SP)+,R2
4132 014252 004737 012114      JSR    PC,EXECUTE      ;GO EXECUTE THE RETRY COMMAND.
4133 014256 000137 012424      JMP    GOWAIT      ;GO WAIT FOR INTERRUPT * CHECK STATUS.
4134                                ;ELSE IF ERROR RECOVERY IS NOT ENABLED:
4135 014262 000402                          BR    501774
4136 014264                          501764:
4137 014264 105237 003470      INCB   UNREC      ;SET UNRECOVERABLE ERROR FLAG.
4138
4139 014270                          501774:
4140 014270 000207                          501724:
4141                                RTS   PC      ;RETURN
4142                                ;
4143                                ; SUBROUTINE TO HANDLE TERMINATION CLASS CODE 5, RECOVERABLE ERROR.
4144                                ; TAPE POSITION HAS NOT CHANGED. RECOVERY PROCEDURE IS TO LOG THE
4145                                ; ERROR AND RE-ISSUE THE ORIGINAL COMMAND.

```



GLOBAL SUBROUTINES SECTION

```

4143      ;      INPUTS:
4144      ;      OUTPUTS:
4145      ;      REGISTERS:      R2,R4.
4146      ;      CALLS:      RTLE, EXECUTE, GOWAIT, DROPU.
4147
4148 014272 004737 014550      TCC5:: JSR      PC,RTLE      ;CHECK FOR RETRY LIMIT EXCEEDED
4149 014276 005737 003460      TST      RETRYC      ;IF THIS IS THE ORIGINAL ERROR THEN:
4150 014302 001004      BNE      50200$
4151 014304      ERRSOFT 10,RERM,STAERM ;REPORT RECOVERABLE ERROR.
      014304 104457      TRAP      C$ERSOFT
      014306 000012      .WORD    10
      014310 005017      .WORD    RERM
      014312 006120      .WORD    STAERM
4152 014314      50200$:
4153 014314 005237 003460      INC      RETRYC      ;UPDATE RETRY COUNTER.
4154 014320 105737 002213      TSTB     IREC      ;IF ERROR RECOVERY IS ENABLED:
4155 014324 001016      BNE      50201$
4156 014326 105237 003471      INCB     ERRREC      ;SET ERROR RECOVERY FLAG.
4157 014332 005265 003376      INC      RECCNT(R5) ;UPDATE REC COUNT
4158 014336 016577 003376 167042      MOV      RECCNT(R5),@DATAWT ;AND INSERT IT INTO WRT BFR
4159 014344 012602      MOV      (SP)+,R2      ;POP 2 RTN ADRS FROM STACK.
4160 014346 012602      MOV      (SP)+,R2
4161 014350 004737 012114      JSR      PC,EXECUTE      ;GO RE-ISSUE THE COMMAND.
4162 014354 000137 012424      JMP      GOWAIT      ;GO WAIT FOR INTERRUPT + CHECK STATUS.
4163      ;ELSE IF ERROR RECOVERY IS NOT ENABLED:
4164 014360 000402      BR      50202$
4165 014362      50201$:
4166 014362 105237 003470      INCB     UNREC      ;SET UNRECOVERABLE ERROR FLAG.
4167
4168 014366      50202$:
4169 014366 000207      RTS      PC      ;RETURN.
4170
4171      ;
4172      ;      SUBROUTINE TO HANDLE TERMINATION CLASS CODE 6, UNRECOVERABLE ERROR.
4173      ;      TAPE POSITION HAS BEEN LOST. THE ONLY VALID RECOVERY PROCEDURE
4174      ;      IS TO REWIND AND START OVER AT BOT UNLESS THE TAPE HAS LABELS OR
4175      ;      SEQUENCE NUMBERS. THIS DIAGNOSTIC WILL REWIND AND RETRY THE
4176      ;      COMMAND ONLY IF DENSITY CHECK IS SET, OTHERWISE THE UNIT WILL BE
4177      ;      DROPPED FROM THE TEST SEQUENCE.
4178      ;
4179      ;      INPUTS:
4180      ;      OUTPUTS:
4181      ;      REGISTERS:      R2, R4
4182      ;      CALLS:      RTLE, WSSR, EXECUTE, GOWAIT, DROPU
4183 014370 033737 000010 002370      TCC6:: BIT      X3.DCK,MSGPKT+MS.XS3;IF X3.DCK NOTSETIN MSGPKT+MS.XS3 THEN
4184 014376 001016      BNE      50203$
4185      ;IF THERE IS NO DENSITY CHECK THEN:
4186 014400 005737 003426      TST      CMDLG      ;IF CMD IS A READ OR WRITE THEN:
4187 014404 001404      BEQ      50204$
4188 014406 105237 003467      INCB     RWERR      ;SET RD/WR ERROR FLAG,
4189 014412 105237 003470      INCB     UNREC      ;SET UNRECOVERABLE ERROR FLAG.
4190
4191 014416      50204$:
4192 014416 000013      ERRDF    11,URERM,STAERM ;REPORT UNRECOVERABLE ERROR.
      014420 000013      TRAP      C$ERDF
      014422 005041      .WORD    11
      .WORD    URERM

```

## GLOBAL SUBROUTINES SECTION

```

4193 014424 006120
4194 014426 004737 017240 JSR PC,DROPU ;REPORT ERROR * DROP UNIT.
;ELSE-IF THERE IS DENSITY CHECK:
4195 014432 000436 BR 50205$
4196 014434
4197 014434 004737 014550 50203$: JSR PC,RTLE ;CHECK FOR RETRY LIMIT EXCEEDED.
4198 014440 005737 003460 TST RETRYC ;IF THIS IS THE ORIGINAL ERROR THEN:
4199 014444 001004 BNE 50206$
4200 014446 ERRSOFT 11,URERM,STAERM ;REPORT DENSITY CHECK ERROR
;TRAP C$ERSOFT
;WORD 11
;WORD URERM
;WORD STAERM
014446 104457
014450 000013
014452 005041
014454 006120

4201
4202 014456 50206$: INC RETRYC ;UPDATE RETRY COUNT.
4203 014456 005237 003460 TSTB IRE ;IF ERROR RECOVERY IS ENABLED THEN:
4204 014462 105737 003521 BNE 50207$
4205 014466 001016 INCB ERRREC ;SET ERROR RECOVERY FLAG,
4206 014470 105237 003471 INCB ERRREC ;ISSUE A REWIND COMMAND,
4207 014474 012775 002350 002514 MOV #RWCPK,@TSDB(R5) ;WAIT FOR SUBSYSTEM READY,
4208 014502 004737 012740 JSR PC,WSSR ;POP 2 RTN ADRS FROM STACK.
4209 014506 012602 MOV (SP)-,R2
4210 014510 012602 MOV (SP)-,R2
4211 014512 004737 012114 JSR PC,EXCUTE ;REISSUE THE COMMAND.
4212 014516 000137 012424 JMP GOWAIT ;WAIT FOR INTERRUPT
;ELSE-IF ERR REC DISABLED:
4213
4214 014522 000402 BR 50210$
4215 014524 50207$: INCB UNREC ;SET UNRECOVERABLE ERROR FLAG.
4216 014524 105237 003470
4217
4218 014530 50210$:
4219
4220 014530 50205$:
4221 014530 000207 RTS PC ;RETURN
4222
4223 ; SUBROUTINE TO HANDLE TERMINATION CLASS CODE 7, FATAL SUBSYSTEM
4224 ; ERROR. THE SUBSYSTEM IS INCAPABLE OF PROPERLY PERFORMING
4225 ; COMMANDS OR AT LEAST ITS INTEGRITY IS SERIOUSLY QUESTIONABLE.
4226 ; REFER TO THE FATAL CLASS CODE FIELD IN THE TSSR REGISTER FOR
4227 ; ADDITIONAL INFORMATION ON THE TYPE OF FATAL ERROR.
4228 ; INPUTS:
4229 ; OUTPUTS:
4230 ; REGISTERS: R2, R4
4231 ; CALLS:
4232
4233 014532 TCC7:: ERRDF 12,FATSM,STAERM ;REPORT FATAL SUBSYSTEM ERROR.
014532 104455 ;TRAP C$ERDF
014534 000014 ;WORD 12
014536 004642 ;WORD FATSM
014540 006120 ;WORD STAERM
4234 014542 004737 017240 JSR PC,DROPU ;DROP THE UNIT.
4235 014546 000207 RTS PC ;RETURN.
4236
4237
4238 ; SUBROUTINE TO CHECK FOR RETRY LIMIT EXCEEDED. PRINTS ERROR MESSAGE
4239 ; IF EXCEEDED AND DROP UNIT UNLESS COMMAND IS A READ.
4240 ; INPUTS:

```



GLOBAL SUBROUTINES SECTION

```

4241 ; OUTPUTS:
4242 ; REGISTERS: R2, R4.
4243 ; CALLS: DROPU
4244
4245 014550 005737 003426 RTLE:: TST CMDLG ;IF CMD IS NOT A READ OR WRITE THEN:
4246 014554 001010 BNE 50211$ ;
4247 014556 104455 ERRDF 11,URERM,STAERM ;REPORT UNRECOVERABLE ERROR. TRAP C$ERDF
; .WORD 11
; .WORD URERM
; .WORD STAERM
4248 014566 004737 017240 JSR PC,DROPU ;DROP THE UNIT.
4249 014572 012602 MOV (SP)-,R2 ;POP RTN ADRS FROM STACK.
4250 014574 000437 BR RTLRTN ;AND RETURN.
4251
4252 014576 105237 003467 50211$: INCB RWERR ;SET READ/WRITE ERROR FLAG.
4253 014576 023727 003426 000002 CMP CMDLG,#2 ;IF CMD IS A WRT OR WTM:
4254 014602 001016 BNE 50212$ ;
4255 014610 023727 003460 000020 CMP RETRYC,#WRECL ;IF RETRY COUNT HAS REACHED LIMIT:
4256 014612 001011 BNE 50213$ ;
4257 014620 105237 003470 INCB UNREC ;SET UNRECOVERABLE FLAG
4258 014622 004737 017240 ERRDF 14,RLEXM,STAERM ;REPORT RETRY LIMIT EXCEEDED. TRAP C$ERDF
; .WORD 14
; .WORD RLEXM
; .WORD STAERM
4260 014636 004737 017240 JSR PC,DROPU ;DROP THE UNIT.
4261 014642 012602 MOV (SP)-,R2 ;POP 2 RTN ADRS FROM STACK.
4262 014644 50213$: BR 50214$ ;ELSE - CMD IS A READ:
4263
4264 014644 000413 BR 50214$
4265 014646 023727 003460 000020 50212$: CMP RETRYC,#RRECL ;IF RETRY COUNT HAS REACHED LIMIT:
4266 014654 001007 BNE 50215$ ;
4267 014656 105237 003470 INCB UNREC ;SET UNRECOVERABLE FLAG
4268 014662 004737 017240 ERRHRD 14,RLEXM,STAERM ;REPORT RECOVERABLE ERROR. TRAP C$ERHRD
; .WORD 14
; .WORD RLEXM
; .WORD STAERM
4270 014672 012602 MOV (SP)-,R2 ;POP 2 RTN ADRS FROM STACK.
4271 014674 50215$:
4272
4273 014674 000207 50214$: RTS PC ;RETURN
4274 014674 000207 RTLRTN:
4275
4276 ; SUBR TO REWRITE A BAD, BUT RECOVERABLE WRITTEN RECORD.
4277 ; REWRITE RECORD ON SAME SPOT; REPEAT 4 TIMES.
4278 ; IF ALL 4 REPEATS GOOD, RECORD IS RECOVERED
4279 ; AND A RECOVERABLE WRITE ERROR IS LOGGED.
4280 ; IF ANY OF 4 REPEATS BAD, ERASE BAD RECORD, LOG SUSPECTED
4281 ; BAD SPOT, RETRY AGAIN. RETRY 4 TIMES, UP TO 4 REPEATS EACH.
4282 ; IF RECORD NOT GOOD AFTER 4 RETRIES, ERASE IT, EXIT WITH
4283 ; ERROR FLAG WRTYER SET, PRINTING RETRY FAILED.
4284 ; THIS ALL SCHEME IS REENTERED 20 TIMES MAX, IE 20 BAD
4285 ; SPOTS MAX ARE ALLOWED.

```

GLOBAL SUBROUTINES SECTION

```

4286      ;
4287      ; INPUTS:
4288      ; OUTPUTS:
4289      ; REGISTERS:      R3,R4
4290      ; CALLS:          BORERS, REWRT
4291
4292 014676 WRTY:: ;BEGIN RETRY      ;REPEAT
4293
4294 014676 50217$:
4295          ;BEGIN REPEAT          ;REPEAT
4296
4297 014676 50221$:
4298 014676 004737 015356 JSR      PC,BORERS          ;BACKSPACE/ERASE ONE RECORD
4299 014702 105037 003464 CLR      WRTYER            ;CLEAR WRITE RETRY ERROR
4300 014706 004737 015532 JSR      PC,REWRT          ;REWRITE RECORD ON SAME SPOT
4301 014712 105237 003462 INCB     RPTCNT            ;COUNT REPEATS
4302 014716 123727 003462 000004 CMPB     RPTCNT,#4         ;LIMIT: 4 REPEATS OR RECOVERED
4303 014724 001403 BEQ      50222$
4304 014726 105737 003464 TSTB     WRTYER
4305 014732 001761 BEQ      50221$
4306 014734 50222$:
4307          ;END REPEAT
4308 014734 50220$:
4309 014734 005237 003460 INC      RETRYC            ;COUNT RETRIES
4310 014740 105737 003464 TSTB     WRTYER
4311 014744 001001 BNE     50223$
4312 014746 000457 BR       50216$          ;EXIT RETRY LOOP IF RECOVERED
4313
4314 014750 50223$:
4315 014750 105737 002207 TSTB     ERCVER          ;IFB ERCVER NE #0 THEN
4316 014754 001415 BEQ      50225$
4317 014756 PRINTB  #BTMSG1,RETRYC,<B,RPTCNT> ;PRINT SUSPECTED BAD SPOT
      CLR      -(SP)
      BISB     RPTCNT,(SP)
      MOV      RETRYC,-(SP)
      MOV      #BTMSG1,-(SP)
      MOV      #3,-(SP)
      MOV      SP,R0
      TRAP     C#PNTB
      ADD      #10,SP
4318 015010 50225$:
4319 015010 023727 003460 000001 CMP      RETRYC,#1        ;ON FIRST RETRY, LOGG BAD SPOT
4320 015016 001021 BNE     50226$
4321 015020 016537 002616 003512 MOV      BTADDR(R5),BTPT ;BTPT IS BOTH THE BAD SPOT COUNTER
4322 015026 017704 166460 MOV      @BTPT,R4        ;AND THE LOGGING INDEX
4323 015032 062704 000002 ADD      #2,R4
4324 015036 010477 166450 MOV      R4,@BTPT
4325 015042 020427 000050 CMP      R4,#40         ;IF R4 LOS #40. THEN
4326 015046 101005 BHI     50227$
4327 015050 013703 003512 MOV      BTPT,R3        ;STORE FIRST 20 BAD SPOTS
4328 015054 060304 ADD      R3,R4          ;LET R4 := R4 + R3
4329 015056 016514 003376 MOV      RECCNT(R5),(R4) ;LET (R4) := RECCNT(R5)
4330
4331 015062 50227$:
4332
4333 015062 50226$:
4334 015062 105237 003525 INCB     ERSFLG          ;ERASE FLAG TO ERASE BAD RECORD

```



L7

GLOBAL SUBROUTINES SECTION

```

4335 015066 105037 003467          CLRB   RWERR          ;CANCEL "LOG" ERROR FLAG ON FAILING RET
4336 015072 105037 003462          CLRB   RPTCNT        ;CLEAR REPEAT COUNT FOR NEXT RETRY
4337
4338 015076
4339 015076 023727 003460 000004 50224$: CMP    RETRYC,#4          ;LIMIT: 4 RETRIES
4340 015104 001274          BNE    50217$
4341          ;END RETRY
4342 015106          50216$:
4343 015106 105737 003464          TSTB   WRTYER ;IFB WRTYER NE #0 THEN
4344 015112 001413          BEQ    50230$
4345 015114 105737 002207          TSTB   ERCVER ;IFB ERCVER NE #0 THEN
4346 015120 001410          BEQ    50231$
4347 015122          PRINTB #BTMSG3          ;PRINT RETRY FAILED
         015122 012746 015307          MOV    #BTMSG3,-(SP)
         015126 012746 000001          MOV    #1,-(SP)
         015132 010600          MOV    SP,RO
         015134 104414          TRAP  C:PNTB
         015136 062706 000004          ADD   #4,SP
4348
4349 015142          50231$:
4350
4351 015142          50230$:
4352 015142 000207          RTS    PC
4353
4354 015144 000000          WTYCMD: .WORD 0          ;STORAGE FOR WRITE CMD WHILE RETRYING
4355 015146 000000          WTYWRD: .WORD 0         ;STORAGE FOR WRITE CMD WORD WHILE RETRYING
4356 015150 000000          WTYBRF: .WORD 0         ;STORAGE FOR WRITE BPCR WHILE RETRYING
4357
4358 015152          045      101      123  BTMSG1: .ASCIZ /%ASUSPECT BAD SPOT AFTER #D1%A RETRY, #D1%A REPEAT#N/
         015155          125      123      120
         015160          105      103      124
         015163          040      102      101
         015166          104      040      123
         015171          120      117      124
         015174          040      101      106
         015177          124      105      122
         015202          040      045      104
         015205          061      045      101
         015210          040      122      105
         015213          124      122      131
         015216          054      040      045
         015221          104      061      045
         015224          101      040      122
         015227          105      120      105
         015232          101      124      045
         015235          116      000
4359 015237          045      116      045  BTMSG2: .ASCIZ /%N#ABAD TAPE OVERFLOW: CHANGE TAPE!#N#N/
         015242          101      102      101
         015245          104      040      124
         015250          101      120      105
         015253          040      117      126
         015256          105      122      106
         015261          114      117      127
         015264          072      040      103
         015267          110      101      116
         015272          107      105      040
         015275          124      101      120

```

## GLOBAL SUBROUTINES SECTION

```

015300      105      041      045
015303      116      045      116
015306      000
4360 015307      045      101      122  BTMSG3: .ASCIZ /#ARETRY FAILED ON BAD SPOT...ERASED!#N/
015312      105      124      122
015315      131      040      106
015320      101      111      114
015323      105      104      040
015326      117      116      040
015331      102      101      104
015334      040      123      120
015337      117      124      056
015342      056      056      105
015345      122      101      123
015350      105      104      041
015353      045      116      000

4361
4362
4363
4364
4365
4366
4367
4368
4369
4370 015356 013737 003420 003424 BORERS: :MOV      CMDWRD,PCMDWD ;SET COMMAND TO SPACE REV
4371 015364 012737 104410 003420      MOV      #SRR,CMDWRD ;LET CMDWRD := #SRR ;
4372 015372 013737 003420 002330      MOV      CMDWRD,CMDPKT ;LET CMDPKT := CMDWRD CLR.BY #BRF.C ;
4373 015400 042737 004000 002330      BIC      #BRF.C,CMDPKT
4374 015406 013737 002330 003422      MOV      CMDPKT,CMSAV ;LET CMSAV := CMDPKT ;
4375 015414 012737 000001 002332      MOV      #1,CMDPKT-CP.ADL ;LET CMDPKT-CP.ADL := #1 ;
4376 015422 005037 003426      CLR      CMDLG ;LET CMDLG := #0 ;
4377 015426 004737 011124      JSR      PC,CMDAC ;
4378 015432 004737 012114      JSR      PC,EXCUTE ;
4379 015436 004737 012424      JSR      PC,GOWAIT ;
4380 015442 004737 017540      JSR      PC,CKHAE ;
4381 015446 105737 003525      TSTB    ERSFLG ;WHEN ERASE FLAG IS SET, DO ERASE
4382 015452 001426      BEQ      502324
4383 015454 013737 003420 003424      MOV      CMDWRD,PCMDWD ;LET PCMDWD := CMDWRD ;
4384 015462 012737 100411 003420      MOV      #ERS,CMDWRD ;LET CMDWRD := #ERS ;
4385 015470 013737 003420 002330      MOV      CMDWRD,CMDPKT ;LET CMDPKT := CMDWRD ;
4386 015476 013737 002330 003422      MOV      CMDPKT,CMSAV ;LET CMSAV := CMDPKT ;
4387 015504 004737 011124      JSR      PC,CMDAC ;
4388 015510 004737 012114      JSR      PC,EXCUTE ;
4389 015514 004737 012424      JSR      PC,GOWAIT ;
4390 015520 004737 017540      JSR      PC,CKHAE ;
4391 015524 105037 003525      CLRB    ERSFLG ;LET ERSFLG := #0
4392
4393 015530      502324:
4394 015530 000207      RTS      PC
4395
4396
4397
4398 015532 013737 003420 003424 REWRT: :MOV      CMDWRD,PCMDWD ;RESTORE WRITE COMMAND PACKET
4399 015540 013737 015146 003420      MOV      WTYWRD,CMDWRD ;LET CMDWRD := WTYWRD ;
4400 015546 013737 015144 002330      MOV      WTYCMD,CMDPKT ;LET CMDPKT := WTYCMD ;
4401 015554 013737 002330 003422      MOV      CMDPKT,CMSAV ;LET CMSAV := CMDPKT ;

      .EVEN
; SUBR TO BACSPACE ONE RECORD
; IF THE ERASE FLAG IS SET, THEN ERASE THAT RECORD
; INPUTS: ERSFLG 1 = DO ERASE
; OUTPUTS:
; REGISTERS:
; CALLS: EXCUTE, GOWAIT, CKHAE

```



## GLOBAL SUBROUTINES SECTION

```

4402 015562 013737 003406 002332      MOV    DATAW,CMDPKT*CP.ADL      ;LET CMDPKT*CP.ADL := DATAW      ;
4403 015570 013737 015150 002336      MOV    WTYBRF,CMDPKT*CP.CNT     ;LET CMDPKT*CP.CNT := WTYBRF      ;
4404 015576 012737 000002 003426      MOV    #2,CMDLG                 ;LET CMDLG := #2                  ;
4405 015604 004737 011124                JSR    PC,CMDAC
4406 015610 004737 012114                JSR    PC,EXCUTE                ;RE-WRITE RECORD
4407 015614 004737 012424                JSR    PC,GOWAIT                ;
4408 015620 004737 017540                JSR    PC,CKHAE                 ;
4409 015624 000207                RTS    PC                        ;
4410
4411
4412      ;      SUBROUTINE TO LOG BYTES READ/WITTEN.
4413      ;      ALSO UPDATES READ/WRITE ERROR COUNTERS.
4414      ;      INPUTS:
4415      ;      OUTPUTS:
4416      ;      REGISTERS:      R2, R3, R4.
4417      ;      CALLS:
4418 015626 105737 003466      LOG::  TSTB   ERLOG                ;IF DATA AND ERRORS HAVE NOT BEEN LOGGED THEN:
4419 015632 001126                BNE    50233$
4420 015634 105237 003466      INCB   ERLOG                ;SET LOG DONE FLAG.
4421 015640 013704 003426      MOV    CMDLG,R4                ;GET CURRENT CMD LOGGING CODE.
4422 015644 005704                TST    R4                      ;IF THERE IS A CODE THEN:
4423 015646 001520                BEQ    50234$
4424 015650 162704 000002      SUB    #2,R4                    ;ADJUST THE CODE FOR TABLE INDEX.
4425 015654 010502                MOV    R5,R2                    ;R2 = ADR OF BYTE COUNT LSW.
4426 015656 066402 016112      ADD    BINC(R4),R2
4427 015662 062702 002626      ADD    #CNTBGN,R2
4428 015666 063712 003416      ADD    BRFCNT,(R2)              ;ADD BRFCNT TO LSW.
4429 015672 023737 002360 003416      CMP    MSGPKT*MS.RFC,BRFCNT     ;IF THE RFC IS LOWER OR THE SAME AS BRFC THEN
4430 015700 101002                BHI    50235$
4431 015702 163712 002360      SUB    MSGPKT*MS.RFC,(R2)       ;SUBTRACT RFC FROM EXPECTED BRFC.
4432
4433 015706                50235$:
4434 015706 010203                MOV    R2,R3                    ;R3 = ADR OF 2ND WORD.
4435 015710 062703 000010      ADD    #10,R3
4436
4437 015714                50236$:
4438 015714 021227 001747      ;WHILE (R2) GT #999. DO
4439 015720 003404                CMP    (R2),#999.
4440 015722 162712 001750      BLE    50237$
4441 015726 005213                SUB    #1000.,(R2)              ;UPDATE BYTE COUNT
4442                                INC    (R3)                      ;LET (R3) := (R3) + #1      ;2ND WORD.
4443 015730 000771                BR     50236$
4444 015732                50237$:
4445 015732 010302                MOV    R3,R2                    ;LET R2 := R3 + #10
4446 015734 062702 000010      ADD    #10,R2                    ;R2 = ADR OF 3RD WORD.
4447 015740                50240$:
4448 015740 021327 001747      ;WHILE (R3) GT #999. DO
4449 015744 003404                CMP    (R3),#999.
4450 015746 162713 001750      BLE    50241$
4451 015752 005212                SUB    #1000.,(R3)              ;UPDATE BYTE COUNT
4452                                INC    (R2)                      ;LET (R2) := (R2) + #1      ;3RD WORD.
4453 015754 000771                BR     50240$
4454 015756                50241$:
4455 015756 010203                MOV    R2,R3                    ;LET R3 := R2 + #10
4456 015760 062703 000010      ADD    #10,R3                    ;R3 = ADR OF 4TH WORD.
4457 015764                50242$:
4458 015764 021227 001747      ;WHILE (R2) GT #999. DO
                                CMP    (R2),#999.

```

GLOBAL SUBROUTINES SECTION

```

4459 015770 003404          BLE  50243$
4460 015772 162712 001750    SUB  #1000.,(R2)          ;UPDATE BYTE COUNT
4461 015776 005213          INC  (R3)                ;LET (R3) := (R3) + #1      ;4TH WORD.
4462
4463 016000 000771          BR   50242$
4464 016002
50243$:
4465 016002 105737 003467    TSTB RWERR                ;IF R/W ERROR, UPDATE ERROR COUNT.
4466 016006 001440          BEQ  50244$
4467 016010 010502          MOV  R5,R2                ;R2 = ADR OF COUNTER.
4468 016012 066402 016120    ADD  EINC(R4),R2
4469 016016 062702 002766    ADD  #WRREC,R2
4470 016022 105737 003470    TSTB UNREC                ;IS THE ERROR UNRECOVERABLE?
4471 016026 001404          BEQ  50245$
4472 016030 062702 000010    ADD  #10,R2                ;YES, POINT TO NEXT COUNTER.
4473 016034 005212          INC  (R2)                ;UPDATE THE ERROR COUNTER
4474
4475 016036 000424          BR   50246$
4476 016040
50245$:
4477 016040 005212          INC  (R2)                ;UPDATE THE ERROR COUNTER
4478 016042 105737 002213    TSTB IREC                ;IF ERROR RECOVERY IS ENABLED:
4479 016046 001020          BNE  50247$
4480 016050 105737 003522    TSTB DROPE$                ;IF UNIT HAS NOT BEEN DROPPED:
4481 016054 001015          BNE  50250$
4482 016056 105737 002207    TSTB ERCVER
4483 016062 001412          BEQ  50250$
4484 016064          PRINTB #NURTY1,RETRYC ;PRINT # OF RETRIES TO RECOVER
4485
4486 016064 013746 003460          MOV  RETRYC,-(SP)
4487 016070 012746 005422          MOV  #NURTY1,-(SP)
4488 016074 012746 000002          MOV  #2,-(SP)
4489 016100 010600          MOV  SP,R0
4490 016102 104414          TRAP C#PNTB
4491 016104 062706 000006          ADD  #6,SP
4492
4493 016110          ;PROVIDED PRINT HAS BEEN ENABLED
50250$:
4494
50247$:
4495
50246$:
4496
50244$:
4497
50234$:
4498 016110 000207          50233$:
4499          RTS  PC
4500
;
; BINC: INDEXES TO BYTE COUNTERS.
4501 016112 000000          0          ;WRITE.
4502 016114 000040          40         ;READ REV.
4503 016116 000100          100        ;READ FWD.
4504
;
; EINC: INDEXES TO READ/WRITE ERROR COUNTERS.
4505 016120 000000          0          ;WRITE.
4506 016122 000020          20         ;READ REV.
4507 016124 000040          40         ;READ FWD.
4508
;
; IF A WRITE/VERIFY COMMAND IS ISSUED, CONTROL IS THEN

```



## GLOBAL SUBROUTINES SECTION

```

4510      ;      TRANSFERRED TO THIS SUBROUTINE TO READ REVERSE, CHECK DATA,
4511      ;      READ FORWARD, CHECK DATA, THEN CONTINUE TO NEXT COMMAND.
4512      ;      INPUTS:
4513      ;      OUTPUTS:
4514      ;      REGISTERS:
4515      ;      CALLS:          VFEXC.
4516
4517 016126 105737 003516      VFYDAT: TSTB      VFYFLG          ;IF DATA IS TO BE VERIFIED:
4518 016132 001426          BEQ      50251$
4519 016134 013737 003420 003424      MOV      CMDWRD,PCMDWD      ;SAVE THE PREVIOUS COMMAND WORD.
4520 016142 012737 104401 003420      MOV      #RDR,CMDWRD      ;COMMAND IS READ REV.
4521 016150 012737 000004 003426      MOV      #4,CMDLG          ;SET UP CMD LOGGING INDEX.
4522 016156 004737 016212          JSR      PC,VFEXC          ;GO READ ALL THE RECORDS REV.
4523 016162 013737 003420 003424      MOV      CMDWRD,PCMDWD      ;SAVE THE PREVIOUS COMMAND WORD.
4524 016170 012737 104001 003420      MOV      #RDF,CMDWRD      ;COMMAND IS READ FWD.
4525 016176 012737 000006 003426      MOV      #6,CMDLG          ;SET UP CMD LOGGING INDEX.
4526 016204 004737 016212          JSR      PC,VFEXC          ;GO READ ALL RECORDS FWD.
4527
4528 016210          50251$:
4529 016210 000207          RTS      PC          ;RETURN.
4530
4531
4532
4533
4534      ;      SUBROUTINE TO EXECUTE THE READ AND VERIFY, FORWARD OR REVERSE.
4535      ;      INPUTS:
4536      ;      OUTPUTS:
4537      ;      REGISTERS:      R2
4538      ;      CALLS:          CMDAC, FIRSTU, VFISU, NEXTU, CKHAE.
4539
4540 016212 013737 003420 002330      VFEXC: MOV      CMDWRD,CMDPKT      ;COMMAND PACKET = READ REV OR FWD.
4541 016220 042737 004000 002330      BIC      #BRF.C,CMDPKT
4542 016226 105737 003520          TSTB      SWBFLG          ;IF BYTES ARE TO BE SWAPPED:
4543 016232 001403          BEQ      50252$
4544 016234 052737 010000 002330      BIS      #SWB.C,CMDPKT      ;SET SWAB BIT IN CMD PACKET.
4545
4546 016242          50252$:
4547 016242 013737 002330 003422      MOV      CMDPKT,CMDSAV      ;SAVE COMMAND PACKET 1ST WORD.
4548 016250 013737 003410 002332      MOV      DATARD,CMDPKT+CP.ADL ;SAVE BUFFER START ADDRESS.
4549 016256 005037 003412          CLR      NCNT              ;CLEAR NUMBER OF OPERATIONS.
4550
4551 016262          50253$: ;WHILE NCNT LT NCNT1 DO          ;WHILE THERE ARE RECORDS REMAINING:
4552 016262 023737 003412 003414      CMP      NCNT,NCNT1
4553 016270 002062          BGE      50254$
4554 016272 004737 011124          JSR      PC,CMDAC          ;STORE CMD ASCII IN ERROR MSG.
4555 016276 004737 017142          JSR      PC,FIRSTU        ;SET UP FOR FIRST UNIT.
4556 016302          50255$: ;WHILE DEVTBL(R5) NE #END DO ;WHILE THERE ARE DEVICES REMAINING:
4557 016302 026527 002604 177777      CMP      DEVTBL(R5),#END
4558 016310 001442          BEQ      50256$
4559 016312 032737 000400 003420      BIT      #MOD.CO,CMDWRD      ;IF CMD IS REVERSE THEN:
4560 016320 001421          BEQ      50257$
4561 016322 032765 000002 003502      BIT      #X0.BOT,EOTFLG(R5) ;IF NOT AT BOT
4562 016330 001014          BNE      50260$
4563 016332 032765 000001 003502      BIT      #X0.EOT,EOTFLG(R5) ;BUT IF AT EOT
4564 016340 001406          BEQ      50261$
4565 016342 105737 003524          TSTB      ALLEOT          ;AND ALL OTHERS AT EOT
4566 016346 001402          BEQ      50262$

```

GLOBAL SUBROUTINES SECTION

```

4567 016350 004737 016440 JSR PC,VFISU ;THEN READ VERIFY
4568 ;IF NOT ALL AT EOT, FREEZE UNIT(S)
4569 016354 50262$: ;IF NOT AT BOT AND
4570 ;IF NOT AT BOT AND
4571 016354 000402 BR 50263$
4572 016356 50261$: JSR PC,VFISU ;NOT AT EOT, READ VFY
4573 016356 004737 016440
4574
4575 016362 50263$:
4576
4577 016362 50260$:
4578 016362 000412 BR 50264$ ;ELSE IF CMD IS NOT REVERSE:
4579 016364 50257$:
4580 016364 032765 000001 003502 BIT #X0.EOT,EOTFLG(R5)
4581 016372 001404 BEQ 50265$
4582 016374 032737 000001 003420 BIT #CMD.CO,CMDWRD
4583 016402 001002 BNE 50266$
4584 016404
4585
4586 016404 004737 016440 JSR PC,VFISU ;IF NOT AT EOT OR NOT A MOTION CMD THEN:
4587 ;ISSUE CMD, CHECK STATUS AND DATA.
4588 016410 50266$:
4589
4590 016410 50264$:
4591 016410 004737 017210 JSR PC,NEXTU ;GO FIND THE NEXT UNIT.
4592
4593 016414 000732 BR 50255$
4594 016416 50256$:
4595 016416 004737 017540 JSR PC,CKHAE ;CHECK FOR HALT AFTER EACH CMD.
4596 016422 005237 003412 INC NCNT ;UPDATE THE RECORD COUNT.
4597 016426 013737 003420 003424 MOV CMDWRD,PCMDWD ;SAVE PREVIOUS COMMAND WORD.
4598
4599 016434 000712 BR 50253$
4600 016436 50254$:
4601 016436 000207 RTS PC ;RETURN.
4602
4603 ; SUBROUTINE TO ISSUE COMMAND, AWAIT INTERRUPT,
4604 ; CHECK STATUS, CHECK DATA.
4605 ; INPUTS:
4606 ; OUTPUTS:
4607 ; REGISTERS: R2
4608 ; CALLS: EXECUTE, GOWAIT, CKDATA.
4609
4610 016440 013702 003410 VFISU:: MOV DATARD,R2 ;INIT READ BUFFER POINTER.
4611 016444 062702 000010 ADD #8,R2
4612 016450 50267$: ;WHILE R2 NE DATARD DO ;UNTIL 8 BYTES HAVE BEEN SET,
4613 016450 020237 003410 CMP R2,DATARD
4614 016454 001403 BEQ 50270$
4615 016456 012742 177777 MOV #-1,-(R2) ;INIT READ BUFFER.
4616
4617 016462 000772 BR 50267$
4618 016464 50270$:
4619 016464 004737 012114 JSR PC,EXECUTE ;GO EXECUTE THE COMMAND.
4620 016470 105737 003522 TSTB DROPEL ;IF UNIT HAS NOT BEEN DROPPED THEN:
4621 016474 001002 BNE 50271$
4622 016476 004737 012424 JSR PC,GOWAIT ;GO WAIT FOR DONE BIT.
4623

```



GLOBAL SUBROUTINES SECTION

```

4624 016502          50271$:
4625 016502 105737 003522      TSTB   DROPED           ;IF UNIT HAS NOT BEEN DROPPED THEN:
4626 016506 001006                BNE    50272$
4627 016510 032765 000002 003502  BIT    @X0.BOT,EOTFLG(R5) ;WHEN NOT REVERSED INTO BOT, THEN
4628 016516 001002                BNE    50273$
4629 016520 004737 016526      JSR    PC,CKDATA       ;GO VERIFY DATA.
4630
4631 016524          50273$:
4632
4633 016524          50272$:
4634 016524 000207      RTS    PC
4635
4636
4637
4638 ;      SUBROUTINE TO COMPARE DATA BETWEEN READ AND WRITE BUFFERS
4639 ;      AND PRINT ERROR MESSAGE ON MISCOMPARE.
4640 ;      INPUTS:
4641 ;      OUTPUTS:
4642 ;      REGISTERS:      R2, R3, R4.
4643 ;      CALLS:         GCMDB
4644 016526 013703 003416      CKDATA: :MOV    BRFCNT,R3           ;COMPUTE REC LENGTH READ
4645 016532 163703 002360      SUB    MSGPKT*MS,RFC,R3
4646 016536 005703                TST    R3           ;WHEN NO DATA RECEIVED
4647 016540 001015                BNE    50274$
4648 016542                ERRHRD 17,WTVERM,DTAERM ;PRINT ERROR AND EXIT
4649 016552                PRINTB @DTAER4 ;COMPARE ROUTINE
4650 016552 012746 005337      MOV    @DTAER4,-(SP)
4651 016556 012746 000001      MOV    @1,-(SP)
4652 016562 010600                MOV    SP,RO
4653 016564 104414                TRAP  C$PNTB
4654 016566 062706 000004      ADD    @4,SP
4655 016572 000560          50274$:
4656 016574                BR    50275$
4657 016574 020337 003416      CMP    R3,BRFCNT       ;WHEN REC READ IS LONGER
4658 016600 101417                BLOS  50276$
4659 016602                ERRHRD 17,WTVERM,DTAERM ;THAN EXPECTED, PRINT
4660 016602 104456                PRINTB @DTAER5,CMDPKT*CP.CNT ;AN ERROR MESSAGE
4661 016604 000021                MOV    CMDPKT*CP.CNT,-(SP)
4662 016606 004430                MOV    @DTAER5,-(SP)
4663 016610 005752                MOV    @2,-(SP)
4664 016612                MOV    SP,RO
4665 016616 013746 002336      TRAP  C$PNTB
4666 016616 012746 005360      ADD    @6,SP
4667 016622 012746 000002      ;AND EXIT ROUTINE
4668 016626 010600          50276$:
4669 016630 104414                BR    50277$
4670 016632 062706 000006      MOV    R3,CKDCNT       ;SAVE VERIFICATION LENGTH - 1.
4671 016636 000536          50277$:
4672 016640                DEC    CKDCNT
4673 016644 005337 017136      CLR    CKDFF           ;CLEAR # OF BYTES IN ERROR COUNTER.
4674 016650 005037 017140

```

## GLOBAL SUBROUTINES SECTION

```

4662 016654 005002          CLR      R2          ;INIT BYTE COUNTER
4663 016656 013703 003406  MOV      DATAW,R3  ;GET WRITE BUFFER ADDRESS.
4664 016662 013704 003410  MOV      DATARD,R4  ;GET READ BUFFER ADDRESS.
4665 016666 105737 003523  TSTB    T1SWB       ;WHEN RUNNING TEST1-SUB 12,
4666 016672 001401          BEQ      50300$     ;
4667 016674 000313          SWAB     (R3)       ;SWAP FIRST WORD OF WRT BFR
4668                                ;WHICH CONTAINS THE RECORD COUNT
4669 016676          50300$:
4670                                ;REPEAT
4671 016676          50301$:      ;REPEAT UNTIL ALL DATA IS COMPARED:
4672 016676 020237 017136  CMP      R2,CKDCNT  ;IF THIS IS THE LAST BYTE THEN:
4673 016702 001011          BNE     50302$     ;
4674 016704 105737 003520  TSTB    SWBFLG     ;IF BYTE SWAPPING IS ENABLED THEN:
4675 016710 001406          BEQ     50303$     ;
4676 016712 032737 000001 017136 BIT     @BIT00,CKDCNT ;IF RECORD LENGTH IS ODD THEN:
4677 016720 001002          BNE     50304$     ;
4678 016722 105723          TSTB   (R3)       ;LAST BYTE WILL BE IN
4679 016724 105724          TSTB   (R4)       ;THE UPPER BYTE.
4680
4681 016726          50304$:
4682
4683 016726          50303$:
4684
4685 016726          50302$:
4686 016726 121314          CMPB   (R3),(R4)   ;ARE THEY EQUAL.
4687 016730 001452          BEQ    3$         ;BR IF SO.
4688 016732 005737 017140  TST    CKDFF      ;1 ST TIME THRU?
4689 016736 001010          BNE   2$         ;BR IF NOT.
4690 016740 005265 003346  INC    VFYCNT(R5) ;INC THE VERIFY ERROR COUNTER.
4691 016744 005265 003356  INC    HRDCNT(R5) ;INC THE HARD ERROR COUNT.
4692 016750          ERRHRD 17,WTVERM,DTAERM ;REPORT WRITE/VERIFY ERROR.
4693 016750 104456          TRAP   C$ERRHRD  ;
4694 016752 000021          .WORD 17         ;
4695 016754 004430          .WORD WTVERM     ;
4696 016756 005752          .WORD DTAERM     ;
4697 016760 005237 017140  2$:      INC    CKDFF;LET CKDFF := CKDFF + #1 ;INCREMENT # OF BYTES IN ERROR.
4698 016764 111437 003436  MOVB   (R4),TIME1 ;SAVE WAS DATA FOR TYPOUT.
4699 016770 042737 177400 003436  BIC    @177400,TIME1 ;CLEAR GARBAGE.
4700 016776 111337 003440  MOVB   (R3),TIME2 ;SAVE SHOULD BE DATA FOR TYPOUT.
4701 017002 042737 177400 003440  BIC    @177400,TIME2 ;CLEAR GARBAGE.
4702 017010 023727 017140 000013  CMP    CKDFF,#11. ;IF ERROR BYTE COUNT IS LESS THAN 11:
4703 017016 002017          BGE    50305$     ;
4704 017020          PRINTX @DTAER2,R2,<B,TIME1>,<B,TIME2>;PRINT ACTUAL & EXPECTED DATA
4705 017020 005046          CLR    -(SP)     ;
4706 017022 153716 003440  BISB   TIME2,(SP) ;
4707 017026 005046          CLR    -(SP)     ;
4708 017030 153716 003436  BISB   TIME1,(SP) ;
4709 017034 010246          MOV    R2,-(SP)  ;
4710 017036 012746 005226  MOV    @DTAER2,-(SP) ;
4711 017042 012746 003004  MOV    #4,-(SP)   ;
4712 017046 010600          MOV    SP,RO     ;
4713 017050 104415          TRAP  C$PNTX    ;
4714 017052 062706 000012  ADD    @12,SP    ;
4715 017056          50305$:
4716 017056 105723          3$:      TSTB   (R3)       ;UPDATE WRITE BUFFER ADDRESS.
4717 017060 105724          TSTB   (R4)       ;UPDATE READ BUFFER ADDRESS.

```



## GLOBAL SUBROUTINES SECTION

```

4705 017062 105722          TSTB   (R2)+           ;UPDATE BYTE COUNTER.
4706 017064 020237 017136  CMP    R2,CKDCNT      ;END OF DATA COMPARE REPEAT LOOP.
4707 017070 003702          BLE    50301$         ;CKDCNT EQUALS RECORD LENGTH.
4708 017072 005237 017136  INC    CKDCNT         ;IF COMPARE ERROR HAS OCCURED THEN:
4709 017076 005737 017140  TST    CKDFF          ;PRINT # OF BYTES IN ERROR.
4710 017102 001414          BEQ    50306$         ;PRINT # OF BYTES IN ERROR.
4711 017104          PRINTB #DTAER3,CKDFF,CKDCNT ;PRINT # OF BYTES IN ERROR.
                                MOV    CKDCNT,-(SP)
                                MOV    CKDFF,-(SP)
                                MOV    #DTAER3,-(SP)
                                MOV    #3,-(SP)
                                MOV    SP,RO
                                TRAP   C#PNTB
                                ADD    #10,SP
                                017104 013746 017136
                                017110 013746 017140
                                017114 012746 005275
                                017120 012746 000003
                                017124 010600
                                017126 104414
                                017130 062706 000010

4712
4713 017134          50306$:
4714
4715 017134          50277$:
4716
4717 017134          50275$:
4718 017134 000207      RTS     PC           ;OTHERWISE, RETURN.
4719
4720 017136 000000      CKDCNT: .WORD 0      ;# OF BYTES TO BE VERIFIED -1.
4721 017140 000000      CKDFF:  .WORD 0      ;# OF BYTES IN ERROR COUNTER.
4722
4723          ; SUBROUTINE TO FIND THE FIRST DEVICE IN THE TEST SEQUENCE.
4724          ; INPUTS:
4725          ; OUTPUTS:
4726          ; REGISTERS:
4727          ; CALLS:
4728
4729 017142 105037 003522  FIRSTU:: CLR B   DROPED          ;CLR UNIT DROPPED FLAG
4730 017146 005005          CLR    R5             ;CLR DEVICE POINTER.
4731 017150 026527 002604 177774 50307$: CMP    DEVTBL(R5),#NINUSE ;WHILE DEVICES ARE NOT IN USE:
4732 017156 001003          BNE    50310$
4733 017160 062705 000002          ADD    #2,R5         ;LET R5 := R5 + #2           ;POINT TO NEXT DEVICE.
4734 017164 000771          BR    50307$
4735 017166          50310$:
4736 017166 026527 002604 177777  CMP    DEVTBL(R5),#END   ;IF ALL UNITS HAVE BEEN DROPPED THEN:
4737 017174 001001          BNE    50311$
4738 017176          DOCLN          ;DO CLEAN CODE AND TERMINATE PASS.
                                TRAP   C#DCLN
                                017176 104444

4739
4740 017200          50311$:
4741 017200 016537 002604 002074  MOV    DEVTBL(R5),L#LUN ;SET UNIT # IN "HEADER" FOR ERROR REPORT
4742 017206 000207          RTS    PC           ;RETURN WITH 1ST DEVICE IN R5.
4743
4744
4745          ; SUBROUTINE TO FIND THE NEXT UNIT IN THE TEST CYCLE.
4746          ; INPUTS:
4747          ; OUTPUTS:
4748          ; REGISTERS:
4749          ; CALLS:
4750
4751 017210 105037 003522  NEXTU:: CLR B   DROPED          ;CLR UNIT DROPPED FLAG
4752          ;REPEAT          ;REPEAT UNTIL THE NEXT DEVICE IS FOUND.
4753 017214          50312$:

```

## GLOBAL SUBROUTINES SECTION

```

4754 017214 062705 000002          ADD    #2,R5          ;UPDATE DEVICE TABLE POINTER.
4755 017220 026527 002604 177774    CMP    DEVTBL(R5),#NINUSE ;UNTIL DEVTBL(R5) NE #NINUSE
4756 017226 001772                    BEQ    50312$
4757 017230 016537 002604 002074    MOV    DEVTBL(R5),L$LUN   ;SET UNIT # IN "HEADER" FOR ERROR REPORT
4758 017236 000207                    RTS    PC               ;RETURN.
4759
4760
4761                                ; SUBROUTINE TO DROP A DEVICE FROM THE TEST SEQUENCE.
4762                                ; INPUTS:
4763                                ; OUTPUTS:
4764                                ; REGISTERS:
4765                                ; CALLS:          MOVMSG, PRXST, LOG
4766
4767 017240 005265 003366    DROPU:: INC    FTLCNT(R5)      ;INCREMENT THE FATAL ERROR COUNT.
4768 017244 013704 002370    MOV    MSGPKT+MS.XS3,R4   ;GET UDIAG ERROR CODE FROM XSTAT3.
4769 017250 042704 000377    BIC    #377,R4
4770 017254 016503 002544    MOV    MSGPKA(R5),R3     ;ADR OF THIS UNIT'S MSG PACKET.
4771 017260 005002                    CLR    R2                ;CLR COUNTER.
4772 017262                    50313$: ;WHILE R2 NE #MSGCNT DO ;WHILE THERE ARE MORE LOCATIONS:
4773 017262 020227 000020    CMP    R2,#MSGCNT
4774 017266 001405                    BEQ    50314$
4775 017270 012723 177777    MOV    #-1,(R3)+        ;INIT THE MSG PACKET WITH ALL 1'S
4776 017274 062702 000002    ADD    #2,R2            ;LET R2 := R2 + #2 ;UPDATE COUNTER.
4777
4778 017300 000770                    BR     50313$
4779 017302                    50314$:
4780 017302 012775 002340 002514    MOV    #GSCPK,@TSDB(R5) ;INITIATE A GET STATUS COMMAND.
4781 017310 004737 012740    JSR    PC,WSSR          ;WAIT A WHILE FOR SSR=1
4782 017314 004737 012774    JSR    PC,MOVMSG       ;MOVE MSG PACKET TO COMMON AREA.
4783 017320 020427 157400    CMP    R4,#X3.RNY      ;IF WE HAVE A CAPSTAN RUNAWAY THEN:
4784 017324 001005                    BNE   50315$
4785 017326 104455                    ERDF  16,RNYM,STAERM   ;REPORT CAPSTAN RUNAWAY WITH TACH CNT.
                                TRAP    C$ERDF
                                .WORD   16
                                .WORD   RNYM
                                .WORD   STAERM
4786                                ;ELSE-IF NOT A RUNAWAY:
4787 017336 000402                    BR     50316$
4788 017340                    50315$:
4789 017340 004737 017452    JSR    PC,PRXST        ;PRINT EXTENDED STATUS REGISTERS.
4790
4791 017344                    50316$:
4792 017344 105737 003465    TSTB  RECLOG           ;IF THE RECORD HAS BEEN LOGGED THEN:
4793 017350 001404                    BEQ   50317$
4794 017352 105237 003522    INCB  DROPED          ;SET UNIT DROPPED FLAG.
4795 017356 004737 015626    JSR   PC,LOG          ;LOG DATA BYTES + RD/WR ERRORS.
4796
4797 017362                    50317$:
4798 017362 104424                    DORPT ;PRINT PERFORMANCE REPORT
                                TRAP    C$DRPT
4799 017364 005765 003326    DROPUA: TST  PASCNT(R5) ;IF PASCNT(R5) NE #0 THEN
4800 017370 001402                    BEQ  50320$
4801 017372 005365 003326    DEC   PASCNT(R5)      ;LET PASCNT(R5) := PASCNT(R5) - #1
4802
4803 017376                    50320$:
4804 017376 013737 003534 017450    MOV   TSNP,DROPN      ;SAVE # OF UNIT TO BE DROPPED.
4805 017404 013700 003534    MOV   TSNP,RO         ;RO=LOGICAL DEVICE NUMBER

```



GLOBAL SUBROUTINES SECTION

```

4806 017410          DODU   RO          ;DROP THE UNIT
      017410 104451          TRAP   C$DODU
4807          ;EXEC BGNDU-ENDDU CODE IF IDU = 0
4808
4809 017412 026527 002604 177774      CMP    DEVTBL(R5),#NINUSE      ;IF UNIT NOT DROPPED
4810 017420 001410          BEQ    50321$
4811 017422 105737 002213          TSTB  IREC                      ;IF RECOVERY IS ENABLED THEN:
4812 017426 001005          BNE    50322$
4813 017430 000240          NOP
4814 017432 000240          NOP
4815 017434 000240          NOP
4816 017436 105237 003526          INCB  STAF LG          ;SET START FLAG TO ENABLE REWIND.
4817
4818 017442          50322$:
4819
4820 017442          50321$:
4821 017442 105237 003522          DRORTN: INCB  DROPED          ;SET UNIT DROPPED FLAG.
4822 017446 000207          RTS    PC          ;RETURN.
4823
4824 017450 000000          DROPN: .WORD 0          ;# OF UNIT TO BE DROPPED
4825
4826          ; SUBROUTINE TO PRINT EXTENDED STATUS REGISTERS.
4827          ; INPUTS:
4828          ; OUTPUTS:
4829          ; REGISTERS:
4830          ; CALLS:
4831
4832          PRXST:: PRINTX #GETSTM
      017452 012746 005507          MOV    #GETSTM,-(SP)
      017456 012746 000001          MOV    #1,-(SP)
      017462 010600          MOV    SP,RO
      017464 104415          TRAP  C$PNTX
      017466 062706 000004          ADD   #4,SP
4833 017472          PRINTX #STAERS,MSGPKT*MS.XS0,MSGPKT*MS.XS1,MSGPKT*MS.XS2,MSGPKT*MS.XS3,MSGPKT*MS.XS
      017472 013746 002372          MOV    MSGPKT*MS.XS4,-(SP)
      017476 013746 002370          MOV    MSGPKT*MS.XS3,-(SP)
      017502 013746 002366          MOV    MSGPKT*MS.XS2,-(SP)
      017506 013746 002364          MOV    MSGPKT*MS.XS1,-(SP)
      017512 013746 002362          MOV    MSGPKT*MS.XS0,-(SP)
      017516 012746 006753          MOV    #STAERS,-(SP)
      017522 012746 000006          MOV    #6,-(SP)
      017526 010600          MOV    SP,RO
      017530 104415          TRAP  C$PNTX
      017532 062706 000016          ADD   #16,SP
4834 017536 000207          RTS PC
4835
4836          ; SUBROUTINE TO HALT AFTER EACH COMMAND.
4837          ; INPUTS:
4838          ; OUTPUTS:
4839          ; REGISTERS: R3, R4
4840          ; CALLS:
4841
4842 017540 105737 002206          CKHAE:: TSTB  HAE;IFB HAE NE #0 THEN          ;IF HALT FLAG IS SET:
4843 017544 001430          BEQ    50323$
4844 017546 105737 003531          TSTB  MISCFG          ;IFB MISCFG EQ #0 THEN          ;
4845 017552 001023          BNE    50324$
4846 017554          MANUAL          ;IS MANUAL INTERVENTION ALLOWED?

```

GLOBAL SUBROUTINES SECTION

```

4847 017554 104450
017556 103023
4848 017560 013704 003420
4849 017564 004737 011176
4850 017570 112337 004306
4851 017574 112337 004307
4852 017600 111337 004310
4853 017604
017604 104443
017606 000404
017610 003436
017612 000130
017614 004306
017616 000001
017620
4854 017620 100004:
4855 100004:
4856 017620 000402
4857 017622
4858 017622 105037 003531
4859
4860 017626
4861
4862 017626
4863 017626 000207
4864
4865
4866 017630
4867
4868
4869
4870
4871
4872
4873
4874
4875
4876
4877
4878 017630
017630
4879 017630 010537 003452
4880 017634 004737 017142
4881 017640
4882 017640 026527 002604 177777
4883 017646 001562
4884 017650
017650 016546 003376
017654 016546 003326
017660 016546 002604
017664 012746 020472
017670 012746 000004
017674 010600
017676 104416
017700 062706 000012
4885 017704

BNCOMPLETE CKHRTN ;BR IF NOT.
TRAP C$MANI
MOV CMDWRD,R4 ;LET R4 := CMDWRD
JSR PC,GCMDA ;FETCH ADR OF CMD ASCII.
BCC CKHRTN ;COMMAND WORD.
MOVB (R3)*,HALTM ;MOVE CMD ASCII
MOV (R3)*,HALTM+1 ;LET HALTM+1 :B= (R3)*
MOVB (R3),HALTM+2 ;INTO MESSAGE.
GMANIL HALTM,TIME1,1,YES ;HALT - WAIT FOR AN OEPRTOR INPUT.
TRAP C$GMAN
BR 100004
.WORD TIME1
.WORD T$CODE
.WORD HALTM
.WORD 1

503244: BR 503254
503244: CLRB MISCFCG ;LET MISCFCG :B= #0 ;
503254:
503234:
CKHRTN: RTS PC ;RETURN
.EVEN
ENDMOD

.TITLE MISCELLANEOUS SECTIONS
.SBTTL REPORT CODING SECTION

; **
; THE REPORT CODING SECTION CONTAINS THE
; "PRINTS" CALLS THAT GENERATE STATISTICAL REPORTS.
; --

L$RPT:: BGNRPT
MOV R5,RSSAVE ;SAVE CURRENT DEVICE POINTER.
JSR PC,FIRSTU ;FIND THE FIRST UNIT.
503264: ;WHILE DEVTBL(R5) NE #END DO ;WHILE THERE ARE MORE DEVICES:
CMP DEVTBL(R5),#END
BEQ 503274
PRINTS #RPT1A,DEVTBL(R5),PASCNT(R5),RECCNT(R5)
MOV RECCNT(R5),-(SP)
MOV PASCNT(R5),-(SP)
MOV DEVTBL(R5),-(SP)
MOV #RPT1A, -(SP)
MOV #4, -(SP)
MOV SP,R0
TRAP C$PNTS
ADD #12,SP

PRINTS #RPT1B,WRBC+30(R5),WRBC+20(R5),WRBC+10(R5),WRBC(R5)

```



REPORT CODING SECTION

017704	016546	002626				MOV	WRBC(R5),-(SP)
017710	016546	002636				MOV	WRBC+10(R5),-(SP)
017714	016546	002646				MOV	WRBC+20(R5),-(SP)
017720	016546	002656				MOV	WRBC+30(R5),-(SP)
017724	012746	020547				MOV	#RPT1B, -(SP)
017730	012746	000005				MOV	#5, -(SP)
017734	010600					MOV	SP, R0
017736	104416					TRAP	C#PNTS
017740	062706	000014				ADD	#14, SP
4886	017744		PRINTS	#RPT1C, RRBC+30(R5), RRBC+20(R5), RRBC+10(R5), RRBC(R5)		MOV	RRBC(R5), -(SP)
	017744	016546				MOV	RRBC+10(R5), -(SP)
	017750	016546				MOV	RRBC+20(R5), -(SP)
	017754	016546				MOV	RRBC+30(R5), -(SP)
	017760	016546				MOV	#RPT1C, -(SP)
	017764	012746				MOV	#5, -(SP)
	017770	012746				MOV	SP, R0
	017774	010600				TRAP	C#PNTS
	017776	104416				ADD	#14, SP
4887	020000	062706	000014				
	020004		PRINTS	#RPT1D, RFBC+30(R5), RFBC+20(R5), RFBC+10(R5), RFBC(R5)		MOV	RFBC(R5), -(SP)
	020004	016546				MOV	RFBC+10(R5), -(SP)
	020010	016546				MOV	RFBC+20(R5), -(SP)
	020014	016546				MOV	RFBC+30(R5), -(SP)
	020020	016546				MOV	#RPT1D, -(SP)
	020024	012746				MOV	#5, -(SP)
	020030	012746				MOV	SP, R0
	020034	010600				TRAP	C#PNTS
	020036	104416				ADD	#14, SP
4888	020040	062706	000014				
	020044		PRINTS	#RPT1F, WRREC(R5), RRREC(R5), RFREC(R5)		MOV	RFREC(R5), -(SP)
	020044	016546				MOV	RRREC(R5), -(SP)
	020050	016546				MOV	WRREC(R5), -(SP)
	020054	016546				MOV	#RPT1F, -(SP)
	020060	012746				MOV	#4, -(SP)
	020064	012746				MOV	SP, R0
	020070	010600				TRAP	C#PNTS
	020072	104416				ADD	#12, SP
4889	020074	062706	000012				
	020100		PRINTS	#RPT1G, WRUNR(R5), RRUNR(R5), RFUNR(R5)		MOV	RFUNR(R5), -(SP)
	020100	016546				MOV	RRUNR(R5), -(SP)
	020104	016546				MOV	WRUNR(R5), -(SP)
	020110	016546				MOV	#RPT1G, -(SP)
	020114	012746				MOV	#4, -(SP)
	020120	012746				MOV	SP, R0
	020124	010600				TRAP	C#PNTS
	020126	104416				ADD	#12, SP
	020130	062706	000012				
4890	020134	105737	002210	TSTB	BADTSW	;IFB BADTSW NE #0 THEN	
4891	020140	001402		BEQ	503304		
4892	020142	004737	020224	JSR	PC, BTRPT	;GO PRINT BAD TAPE SPOTS WHEN ENABLED	
4893							
4894	020146			503304:			
4895	020146		PRINTS	#RPT1I, SCCNT(R5), HRDCNT(R5), FTLCNT(R5), VFYCNT(R5)		MOV	VFYCNT(R5), -(SP)
	020146	016546				MOV	FTLCNT(R5), -(SP)
	020152	016546				MOV	HRDCNT(R5), -(SP)
	020156	016546				MOV	SCCNT(R5), -(SP)
	020162	016546					

REPORT CODING SECTION

```

020166 012746 021243
020172 012746 000005
020176 010600
020200 104416
020202 062706 000014
4896 020206 004737 017210
4897
4898 020212 000612
4899 020214
4900 020214 013705 003452
4901 020220
020220 000167
020222 001130
4902
4903
4904
4905
4906
4907
4908 020224
020224 016546 003316
020230 012746 021117
020234 012746 000002
020240 010600
020242 104416
020244 062706 000006
4909 020250 016537 002616 003512
4910 020256 017703 163230
4911 020262 006203
4912 020264
020264 010346
020266 012746 021147
020272 012746 000002
020276 010600
020300 104416
020302 062706 000006
4913 020306 005703
4914 020310 001457
4915 020312 020327 000024
4916 020316 101402
4917 020320 012703 000024
4918
4919 020324
4920 020324
020324 012746 005744
020330 012746 000001
020334 010600
020336 104416
020340 062706 000004
4921 020344 013704 003512
4922 020350 062704 000002
4923 020354 005002
4924 020356
4925 020356
020356 011446
020360 012746 021234
020364 012746 000002

```

```

                    JSR    PC,NEXTU                ;FIND THE NEXT UNIT.
50327$: BR          50326$
                    MOV    R5SAVE,R5              ;RESTORE CURRENT DEVICE POINTER.
                    EXIT   RPT
                    .WORD  J$JMP
                    .WORD  L10010-2-.
;
; SUBR TO PRINT BAD TAPES SPOTS DURING THE REPORT PRINTS
; WRITE RETRIES: CUMULATIVE COUNT
; BAD TAPE SPOTS: COUNT PER TAPE PASS ONLY, NOT CUMULATIVE.
; COUNT OF RECOVERABLE WRITE ERRORS EXCLUDES BAD TAPE SPOTS.
BTRPT:: PRINTS    #RPT1E,WRTYCT(R5)                ;PRINT GLOBAL WRITE RETRY COUNT
                    MOV    WRTYCT(R5),-(SP)
                    MOV    #RPT1E, -(SP)
                    MOV    #2, -(SP)
                    MOV    SP,R0
                    TRAP   C#PNTS
                    ADD    #6,SP
4909 020250 016537 002616 003512  MOV    BTADDR(R5),BTPT    ;BTPT IS BOTH THE BAD TAPE SPOT
4910 020256 017703 163230          MOV    @BTPT,R3          ;AND THE LOGGING INDEX
4911 020262 006203          ASR    R3
4912 020264          PRINTS   #RPT1J,R3          ;PRINT # OF BAD TAPE SPOTS
                    MOV    R3, -(SP)
                    MOV    #RPT1J, -(SP)
                    MOV    #2, -(SP)
                    MOV    SP,R0
                    TRAP   C#PNTS
                    ADD    #6,SP
4913 020306 005703          TST    R3                ;PRINT RECORD # IF BAD SPOTS DETECTED
4914 020310 001457          BEQ    50331$
4915 020312 020327 000024          CMP    R3,#20.          ;IF R3 HI #20. THEN
4916 020316 101402          BLOS  50332$
4917 020320 012703 000024          MOV    #20.,R3         ;20 BAD SPOTS IS THE LIMIT
4918
4919 020324
4920 020324          50332$: PRINTS    #CRLFSP
                    MOV    #CRLFSP, -(SP)
                    MOV    #1, -(SP)
                    MOV    SP,R0
                    TRAP   C#PNTS
                    ADD    #4,SP
4921 020344 013704 003512          MOV    BTPT,R4          ;LET R4 := BTPT + #2 ;FETCH A BAD SPOT ID
4922 020350 062704 000002          ADD    #2,R4
4923 020354 005002          CLR    R2              ;R2 = PRINT COUNT PER LINE: 10 MAX
4924 020356
4925 020356          50333$: ;REPEAT
                    PRINTS   #RPT1K,(R4)        ;PRINT A BAD SPOT ID
                    MOV    (R4), -(SP)
                    MOV    #RPT1K, -(SP)
                    MOV    #2, -(SP)

```



REPORT CODING SECTION

```

020370 010600
020372 104416
020374 062706 000006
4926 020400 005202
4927 020402 062704 000002
4928 020406 020227 000012
4929 020412 001014
4930 020414
020414 012746 005744
020420 012746 000001
020424 010600
020426 104416
020430 062706 000004
4931 020434 162703 000012
4932 020440 162702 000012
4933
4934 020444
4935 020444 020203
4936 020446 001343
4937
4938 020450
4939 020450
020450 012746 005741
020454 012746 000001
020460 010600
020462 104416
020464 062706 000004
4940 020470 000207
4941
4942
4943 020472 045 116 045 RPT1A: .NLIST BEX
4944 020547 045 101 102 RPT1B: .ASCIZ /#N#N#AUNIT #D1#S3#APASS:#D5#S3#ARECORD:#D5#N/
4945 020620 045 101 102 RPT1C: .ASCIZ /#ABYTES WRITTEN #D3#A,#Z3#A,#Z3#A,#Z3#N/
4946 020671 045 101 102 RPT1D: .ASCIZ /#ABYTES READ REV #D3#A,#Z3#A,#Z3#A,#Z3#N/
4947 020741 045 123 062 RPT1E: .ASCII /#ABYTES READ FWD #D3#A,#Z3#A,#Z3#A,#Z3#N/
4948 020775 045 101 122 RPT1F: .ASCIZ /#S23#AWRT#S4#ARDR#S4#ARDF#N/
4949 021046 045 101 125 RPT1G: .ASCIZ /#ARECOVERABLE ERRORS #D5#S2#D5#S2#D5#N/
4950 021117 045 101 127 RPT1H: .ASCIZ /#AUNRECOVERABLE ERRORS #D5#S2#D5#S2#D5#N/
4951 021147 045 116 045 RPT1I: .ASCIZ /#AWRITE RETRIES#S8#D5#N/
4952 021234 045 104 065 RPT1J: .ASCIZ /#N#D2#A BAD SPOTS THIS TAPE PASS PRECEDING RECORD #:/
4953 021243 045 101 123 RPT1K: .ASCIZ /#D5#S1/
4954 021317 045 123 063 RPT1L: .ASCIZ /#ASPEC COND#S3#AHARD#S3#AFATAL#S3#ACOMPARE#N"
4955 .ASCIZ /#S3#D5#S3#D5#S3#D5#S3#D5#N#N/
4956 .LIST BEX
4957 .EVEN
4958 021354 ENDRPT
021354 L10010:
021354 104425 TRAP C#RPT
4959
4960
4961
4962
4963
4964
4965
4966
4967 021356
.SBTTL LOAD DEVICE PROTECTION TABLE
;
;TABLE FOR SUPERVISOR TO IDENTIFY THE P-TBL FOR THE LOAD DEV
;THE SUPERVISOR USES THE TBL TO WARN THE OPERATOR WHEN HE TRIES TO TEST THE LOAD DEV
;
BGNPROT

```

LOAD DEVICE PROTECTION TABLE

```

021356          L$PROT::
4968          4969 021356 000000          .WORD 0          ;P-TBL OFFSET OF TSDB
4970 021360 177777          .WORD -1         ;P-TBL OFFSET OF MASS BUS UNIT #: -1 = NOT A MASS BUS DE
4971 021362 177777          .WORD -1         ;P-TBL OFFSET OF DRIVE #: -1 = NONE, THREE DRIVES PER CONTRO
LLER
4972 021364          ENDPROT
4973
4974          .SBTTL INITIALIZE SECTION
4975
4976          ;**
4977          ; THE INITIALIZE SECTION CONTAINS THE CODING THAT IS PERFORMED
4978          ; AT THE BEGINNING OF EACH PASS.
4979          ;--
4980
4981 021364          BGNINIT
021364          L$INIT::
4982
4983 021364 032727 000003 002330 INIT10: BIT    #BIT0!BIT1,#CMDPKT ;IF CMD PACKET IS NOT ON MODULO 4 BOUNDRY:
4984 021372 001421          BEQ    50335$
4985 021374          ERRSF 1,CMDPKM          ;PRINT ERROR MSG,
                                TRAP    C$ERSF
                                .WORD   1
                                .WORD   CMDPKM
                                .WORD   0
4986 021404          DELAY 200.          ;GO TO SUPERVISOR, WAIT 2 SECONDS.
                                MOV     #200..(PC)+
                                .WORD   0
                                MOV     L$DLY,(PC)+
                                .WORD   0
                                DEC     -6(PC)
                                BNE     -.4
                                DEC     -22(PC)
                                BNE     .-20
                                021374 104454
                                021376 000001
                                021400 004346
                                021402 000000
                                021404 012727 000310
                                021410 000000
                                021412 013727 002116
                                021416 000000
                                021420 005367 177772
                                021424 001375
                                021426 005367 177756
                                021432 001367
4987 021434 000753          BR     INIT10          ;
4988
4989 021436          50335$:
4990
4991 021436 105737 002204          TSTB  CLRFLG          ;IF CLR COUNTERS FLAG SET:
4992 021442 001413          BEQ    50336$
4993 021444 105037 002204          CLRB  CLRFLG          ;INIT CLR FLAG.
4994 021450 005002          CLR   R2              ;LET R2 := #0
4995 021452          50337$: ;WHILE R2 NE #CNTLEN DO
4996 021452 020227 000550          CMP   R2,#CNTLEN
4997 021456 001405          BEQ   50340$
4998 021460 005062 002626          CLR   WRBC(R2)       ;CLR ALL STATISTICAL COUNTERS.
4999 021464 062702 000002          ADD   #2,R2          ;LET R2 := R2 + #2
5000
5001 021470 000770          BR    50337$
5002 021472          50340$:
5003
5004 021472          50336$:
5005
5006 021472 105737 002205          TSTB  RRANV          ;IF RESET RANDOM VARIABLE FLAG IS SET THEN:
5007 021476 001406          BEQ   50341$
5008 021500 012737 153624 003432          MOV   #RANBC,RANB   ;RESET RANDOM BASE #.
5009
5010 021506 012737 032561 003434          MOV   #RANSC,RANS   ;RESET RANDOM SAVE LOCATION.

```



## INITIALIZE SECTION

```

5011
5012 021514
5013 021514          012700 000040
      021514          104447
5014 021522          103057
      021522          105237 003526
5015 021524          012705 000006
5016 021530          012705 000006
5017 021534
5018 021534          012765 177774 002604
5019 021542          162705 000002
5020 021546          005705
5021 021550          001371
5022 021552          022737 000001 002012
5023 021560          001425
5024 021562
      021562          012746 005146
      021566          012746 000001
      021572          010600
      021574          104417
      021576          062706 000004
5025 021602          012727 000025
      021602          000000
      021610          013727 002116
      021614          000000
      021616          005367 177772
      021622          001375
      021624          005367 177756
      021630          001367
5026 021632          104444
      021632          013705 002012
5027 021634          006305
5028 021640          162705 000002
5029 021642          010565 002604
5030 021642          006265 002604
5031 021646          005705
5032 021652          001370
5033 021656          001370
5034 021660
5035
5036 021662          012700 000034
      021662          104447
5037 021670          103004
      021670          105237 003526
5038 021672          105237 003527
5039 021676
5040
5041 021702          104421
      021702          010037 003536
      021704          005003
5042 021710          105737 003527
5043 021712          001020
5044 021716
5045 021720

```

```

50341$: REDEF #EF.START          ;READ START COMMAND EVENT FLAG.
      MOV #EF.START,RO
      TRAP C$REFG
      BNCOMPLETE INIT15          ;BRANCH IF NOT STARTING.
      BCC INIT15
      INCB STAF LG          ;SET START COMMAND FLAG.
      MOV #6,R5 ;LET R5 := #6
50342$: ;REPEAT          ;INITIATE UNIT NUMBER TABLE
      MOV #NINUSE,DEVTBL(R5) ;BY STORING NOT IN USE IN EACH LOCATION.
      SUB #2,R5 ;LET R5 := R5 - #2
      TST R5 ;UNTIL R5 EQ #0
      BNE 50342$
      CMP #1,L$UNIT          ;ONLY ONE UNIT ALLOWED
      BEQ 5034$
      PRINTF #AUDRUN          ;OK
      ;TELL THE MAN
      MOV #AUDRUN,-(SP)
      MOV #1,-(SP)
      MOV SP,RO
      TRAP C$PNTF
      ADD #4,SP
      DELAY 25          ;WAIT
      MOV #25,(PC)+
      .WORD 0
      MOV L$DLY,(PC)+
      .WORD 0
      DEC -6(PC)
      BNE -.4
      DEC -22(PC)
      BNE .-20
      DOCLN          ;ABORT
      TRAP C$DCLN
5034$: MOV L$UNIT,R5          ;LET R5 := L$UNIT SHIFT 1
      ASL R5
50343$: ;REPEAT          ;STORE ALL UNIT
      SUB #2,R5 ;LET R5 := R5 - #2 ;NUMBERS IN DEVTBL.
      MOV R5,DEVTBL(R5) ;LET DEVTBL(R5) := R5 SHIFT -1
      ASR DEVTBL(R5)
      TST R5 ;UNTIL R5 EQ #0
      BNE 50343$
INIT15: REDEF #EF.PWR          ;HAS THERE BE A POWER FAILURE?
      MOV #EF.PWR,RO
      TRAP C$REFG
      BNCOMPLETE INIT16          ;BRANCH IF NOT.
      BCC INIT16
      INCB STAF LG          ;IF SO - SET THE START FLAG.
      INCB PWRFLG          ;IF SO - SET THE POWER FAIL FLAG.
INIT16: RFLAGS OPFLAG          ;READ AND STORE FLAGS SET BY OPERATOR
      TRAP C$RFLA
      MOV RO,OPFLAG
      CLR R3 ;LET R3 := #0          ;CLEAR EVENT FLAG
      TSTB PWRFLG ;IF POWER FAIL HAS NOT OCCURRED THEN:
      BNE 50344$
      REDEF #EF.NEW          ;UPDATE PASS COUNT WHEN

```

## INITIALIZE SECTION

```

021720 012700 000035
021724 104447
5046 021726 103014
5047 021730 105737 003526
5048 021734 001010
5049 021736
021736 012700 000037
021742 104447
5050 021744 103402
5051 021746 005103
5052
5053 021750 000401
5054 021752
5055 021752 005203
5056
5057 021754
5058
5059 021754 000401
5060 021756
5061 021756 005203
5062
5063 021760
5064
5065 021760
5066
5067 021760
5068 021760 004737 017142
5069 021764 005002
5070 021766
5071 021766 026527 002604 177777
5072 021774 001456
5073 021776 005202
5074 022000 010500
5075 022002 006200
5076 022004
022004 104442
5077 022006 103044
5078 022010 011065 002514
5079 022014 012065 002524
5080 022020 062765 000002 002524
5081 022026 012065 002534
5082 022032 011065 003532
5083 022036 011037 003534
5084 022042
022042 012746 000340
022046 016546 002554
022052 016546 002534
022056 012746 000003
022062 104437
022064 062706 000010
5085
5086 022070 005065 003472
5087 022074 005703
5088 022076 001410
5089 022100 005703
5090 022102 002003
5091 022104 005265 003326

;SUPERVISOR IS IN NEW PASS
;AND DIAG WAS NEITHER STARTED
;NOR
;IFCOND CC THEN ;RESTARTED
;LET R3 := COMP R3 ;DO IT
;SET 1ST PASS IF NEW PASS AND
;RESTARTING
;SET 1ST PASS IF NEW PASS AND
;STARTING
;DO NOT UPDATE IT ON CONTINUE
;OR ON POWER FAIL
;INIT DEVICE POINTER.
;INIT DEVICE COUNTER.
;LET R2 := #0
;WHILE DEVTBL(R5) NE #END DO
;END DO
;LET R2 := R2 + #1
;LET R0 := R5 SHIFT -1
;GET HARDWARE P TABLE FROM SUPER.
TRAP C#GPHRD
;IFCOND CS THEN
;SAVE TSDB ADDRESS.
;SAVE TSSR ADDRESS.
;SAVE INTERRUPT VECTOR ADDRESS.
;SAVE NUMBER OF DRIVE
;SAVE FOR PRINT OUT'S
MOV #INTPRI, -(SP)
MOV TSSINT(R5), -(SP)
MOV TSVCT(R5), -(SP)
MOV #3, -(SP)
TRAP C#SVEC
ADD #10, SP
;SET UP INTERUPT PROCESSING CONDITIONS.
;CLEAR INTERRUPT FLAGS.
;ACTUAL PASSCOUNT UPDATE PER R3
;IF R3 LT #0 THEN
;LET PASCNT(R5) := PASCNT(R5) + #1

```



## INITIALIZE SECTION

```

5092
5093 022110 000403
5094 022112
5095 022112 012765 000001 003326 50356$: BR 50357$
5096
5097 022120 50357$:
5098
5099 022120 50355$:
5100
5101 022120 50354$:
5102 022120 005065 003376 CLR RECCNT(R5) ;CLEAR RECORD COUNT
5103 022124 004737 017210 JSR PC,NEXTU ;DO IT FOR ALL DEVICES.
5104
5105 022130 000716 BR 50352$
5106 022132 50353$:
5107
5108 022132 005702 TST R2 ;IF THERE ARE NO UNITS:
5109 022134 001026 BNE 50360$
5110 022136 PRINTF #AUDRPM ;PRINT ALL UNITS DROPPED,
022136 012746 005114 MOV #AUDRPM,-(SP)
022142 012746 000001 MOV #1,-(SP)
022146 010600 MOV SP,R0
022150 104417 TRAP C#PNTF
022152 062706 000004 ADD #4,SP
5111 022156 DELAY 200. ;GO TO SUPERVISOR, WAIT 2 SECONDS.
022156 012727 000310 MOV #200,(PC)+
022162 000000 .WORD 0
022164 013727 002116 MOV L#DLY,(PC)+
022170 000000 .WORD 0
022172 005367 177772 DEC -6(PC)
022176 001375 BNE -.4
022200 005367 177756 DEC -22(PC)
022204 001367 BNE -.20
5112 022206 BREAK ;GO TO SUPERVISOR, CHECK TTY.
022206 104422 DOCLN TRAP C#BRK
5113 022210 DOCLN ;DO CLEAN CODE + ABORT PASS.
022210 104444 TRAP C#DCLN
5114
5115 022212 50360$:
5116
5117
5118 022212 SETPRI #PRI00 ;LOWER CPU PRIORITY TO 0
022212 012700 000000 MOV #PRI00,R0
022216 104441 TRAP C#SPRI
5119 022220 105737 002213 TSTB IREC ;IF ERROR RECOVERY IS ENABLED
5120 022224 001033 BNE 1$
5121 022226 032737 000020 003536 BIT #ADR,OPFLAG
5122 022234 001027 BNE 1$
5123 022236 004737 017142 JSR PC,FIRSTU ;AND AUTO-DROP NOT CALLED, THEN SET UP FOR FIRST
5124 022242 50362$: ;WHILE THERE ARE MORE DEVICES:
5125 022242 026527 002604 177777 CMP DEVTBL(R5),#END
5126 022250 001421 BEQ 1$
5127 022252 105037 003530 CLRB TRAPD4 ;CLEAR TRAP FLAG
5128 022256 SETVEC #4,#TRAP4,#INTPRI ;SET VECTOR 4,PRIORITY #6
022256 012746 000340 MOV #INTPRI,-(SP)
022262 012746 023770 MOV #TRAP4,-(SP)
022266 012746 000004 MOV #4,-(SP)

```

## INITIALIZE SECTION

```

022272 012746 000003
022276 104437
022300 062706 000010
5129
5130 022304 012737 000001 003436      MOV    #1,TIME1
5131 022312 000404                    BR     50365$
5132 022314 000137 023142              1$:   JMP    50363$
5133
5134 022320
5135 022320 005237 003436              50366$: INC    TIME1
5136 022324
5137 022324 023727 003436 000025      50365$: CMP    TIME1,#25
5138 022332 003134                    BGT   4$
5139 022334 012775 002340 002514      MOV    #GSCPK,@TSDB(R5)
5140 022342                    DELAY 25
                                ;AND GET UNITS STATUS
                                ;WAIT
                                MOV    #25,(PC)+
                                .WORD 0
                                MOV    L$DLY,(PC)+
                                .WORD 0
                                DEC    -6(PC)
                                BNE   -.4
                                DEC    -22(PC)
                                BNE   .-20
022342 012727 000025
022346 000000
022350 013727 002116
022354 000000
022356 005367 177772
022362 001375
022364 005367 177756
022370 001367
5141 022372                    CLRVEC #4
                                ;CLEAR VECTOR AT 4
                                MOV    #4,R0
                                TRAP   C$CVEC
022372 012700 000004
022376 104436
5142 022400 105737 003530      TSTB  TRAPD4
5143 022404 001423                    BEQ   2$
5144 022406 005265 003366      INC   FTLCNT(R5)
5145 022412                    PRINTF #NODEV,TSSR(R5)
                                ;IFB TRAPD4 NE #0 THEN
                                ;LET FTLCNT(R5) := FTLCNT(R5) + #1
                                ;PRINT ERROR
                                MOV    TSSR(R5),-(SP)
                                MOV    #NODEV,-(SP)
                                MOV    #2,-(SP)
                                MOV    SP,R0
                                TRAP   C$PNTF
                                ADD    #6,SP
022412 016546 002524
022416 012746 005543
022422 012746 000002
022426 010600
022430 104417
022432 062706 000006
5146 022436 016537 002604 017450      MOV    DEVTBL(R5),DROPN
5147 022444 010500                    MOV    R5,R0
5148 022446 006200                    ASR   R0
5149 022450                    DODU  R0
                                ;SAVE # OF UNIT TO BE DROPPED.
                                ;R0=LOGICAL DEVICE NUMBER
                                ;DROP THE UNIT
                                TRAP   C$DODU
                                ; EXEC BGNDU-ENDDU CODE IF IDU = 0
                                ;DO CLEAN EABORT
                                TRAP   C$DCLN
022450 104451
5150
5151 022452                    DOCLN
                                TRAP   C$DCLN
022452 104444
5152
5153 022454 105037 003530              2$:   CLRB  TRAPD4
5154 022460                    SETVEC #4,#TRAP4,#INTPRI
                                ;CLEAR TRAP FLAG
                                ;SET VECTOR 4,PRIORITY @6
                                MOV    #INTPRI,-(SP)
                                MOV    #TRAP4,-(SP)
                                MOV    #4,-(SP)
                                MOV    #3,-(SP)
                                TRAP   C$SVEC
                                ADD    #10,SP
022460 012746 000340
022464 012746 023770
022470 012746 000004
022474 012746 000003
022500 104437
022502 062706 000010
5155 022506 005775 002524      TST   @TSSR(R5)
5156 022512                    DELAY 25
                                ;CHECK FOR ADDRESS
                                ;WAIT
                                MOV    #25,(PC)+
                                .WORD 0
022512 012727 000025
022516 000000

```



## INITIALIZE SECTION

```

022520 013727 002116
022524 000000
022526 005367 177772
022532 001375
022534 005367 177756
022540 001367
5157 022542          CLRVEC #4          ;CLEAR VECTOR AT 4
022542 012700 000004
022546 104436
5158 022550 105737 003530      TSTB   TRAPD4          ;IFB TRAPD4 NE #0 THEN
5159 022554 001424
5160 022556 005265 003366      BEQ    3#
5161 022562          INC    FTLCNT(R5)      ;LET FTLCNT(R5) := FTLCNT(R5) + #1
022562 016546 002524          PRINTF #NODEV,TSSR(R5) ;PRINT ERROR
022566 012746 005543
022572 012746 000002
022576 010600
022600 104417
022602 062706 000006
5162 022606 016537 002604 017450  MOV    DEVTBL(R5),DROPN ;SAVE # OF UNIT TO BE DROPPED.
5163 022614 010500          MOV    R5,R0           ;RO=LOGICAL DEVICE NUMBER
5164 022616 006200          ASR   R0
5165 022620          DODU  R0              ;DROP THE UNIT
022620 104451
5166
5167 022622          DOCLN
022622 104444
5168
5169 022624 003127          4#:   BGT    50367#
5170
5171 022626 004737 010026          3#:   JSR   PC,SETDEF   ;SET UNIT NUMBER
5172 022632 010475 002514          MOV   R4,@TSDB(R5)
5173 022636          DELAY 25
022636 012727 000025
022642 000000
022644 013727 002116
022650 000000
022652 005367 177772
022656 001375
022660 005367 177756
022664 001367
5174 022666 012775 002340 002514  MOV    #GSCP,#,@TSDB(R5) ;AND GET UNITS STATUS
5175 022674          DELAY 25           ;WAIT
022674 012727 000025
022700 000000
022702 013727 002116
022706 000000
022710 005367 177772
022714 001375
022716 005367 177756
022722 001367
5176 022724 032775 000200 002524  BIT    #TS.SSR,@TSSR(R5) ;IF #TS.SSR SETIN @TSSR(R5) THEN
5177 022732 001420          BEQ   50370#
5178 022734 032775 000100 002524  BIT    #TS.OFL,@TSSR(R5) ;IF #TS.OFL NOTSETIN @TSSR(R5) THEN
5179 022742 001001          BNE   50371#
5180 022744 000457          BR   50364#
5181

```

## INITIALIZE SECTION

```

5182 022746
5183 022746
      022746 013746 003534
      022752 012746 005456
      022756 012746 000002
      022762 010600
      022764 104417
      022766 062706 000006
5184
5185 022772
5186
5187 022772 000412
5188 022774
5189 022774
      022774 016546 002604
      023000 012746 023740
      023004 012746 000002
      023010 010600
      023012 104417
      023014 062706 000006
5190
5191 023020
5192 023020 012737 000001 003440
5193 023026 000402
5194 023030
5195 023030 005237 003440
5196 023034
5197 023034 023727 003440 000013
5198 023042 003016
5199 023044
      023044 012727 000144
      023050 000000
      023052 013727 002116
      023056 000000
      023060 005367 177772
      023064 001375
      023066 005367 177756
      023072 001367
5200 023074
      023074 104422
      023076 000754
5201 023076 000754
5202 023100
5203 023100 000137 022320
5204 023104
5205 023104
5206 023104
      023104 012700 000004
      023110 104436
5207 023112 023727 003436 000025
5208 023120 003404
5209 023122 004737 012774
5210 023126 004737 013512
5211
5212 023132
5213
5214 023132 004737 017210
5215
50371$: PRINTF #OFLINM,TSNP ;PRINT UNIT OFF LINE EVERY 10 SEC
      MOV TSNP,-(SP)
      MOV #OFLINM,-(SP)
      MOV #2,-(SP)
      MOV SP,R0
      TRAP C#PNTF
      ADD #6,SP
50372$:
50370$: BR 50373$
      PRINTF #NRDYM,DEVTBL(R5)
      MOV DEVTBL(R5),-(SP)
      MOV #NRDYM,-(SP)
      MOV #2,-(SP)
      MOV SP,R0
      TRAP C#PNTF
      ADD #6,SP
50373$: MOV #1,TIME2 ;INCR TIME2 FROM #1 TO #13 BY #1
      BR 50374$
50375$: INC TIME2
50374$: CMP TIME2,#13
      BGT 50376$
      DELAY 100. ;WAIT FOR UNIT TO BE SET ON-LINE
      MOV #100.,(PC)+0
      .WORD 0
      MOV L#DLY,(PC)+0
      .WORD 0
      DEC -6(PC)
      BNE -.4
      DEC -22(PC)
      BNE .-20
      TRAP C#BRK
      BREAK ;ALLOW TERMINAL INTERRUPT
50376$: BR 50375$
      JMP 50366$
50367$:
50364$: CLRVEC #4 ;CLEAR VECTOR AT 4
      MOV #4,R0
      TRAP C#CVEC
      CMP TIME1,#25 ;IF OFF LINE FOR 3.5 MINUTES
      BLE 50377$
      JSR PC,MOVMSG ;GET MESSAGE PACKET
      JSR PC,TCC1 ;PRINT ERROR AND DROP OFF LINE UNIT
50377$: ;REPEAT UNTIL ON LINE OR TIMED OUT.
      JSR PC,NEXTU ;SET UP FOR NEXT UNIT.

```



INITIALIZE SECTION

```

5216 023136 000137 022242          JMP      50362$
5217
5218 023142
5219 023142          50363$:
5220 023142 105737 003527          50361$:
5221 023146 001026          TSTB    PWRFLG ;IFB PWRFLG EQ #0 THEN
5222 023150          BNE     50400$
5223 023150 104431          MEMORY DATAWT ;REQUEST MEMORY FROM SUPER FOR RD/WR BUFFERS.
5224 023152 010037 003406          TRAP   C$MEM
5225 023156 013737 003406 003410          MOV    DATAWT,DATARD ;SET RD BFR ADDRESS
5226 023164 062737 004000 003410          ADD    #DATCNT,DATARD
5227 023172 027727 160210 004000          CMP    @DATAWT,#DATCNT ;WHEN NOT ENOUGH FREE MEMO AVAILABLE
5228 023200 002011          BGE    50401$
5229 023202          PRINTF #MEMOM ;WARN OPERATOR
5230 023202 012746 023250          MOV    #MEMOM,-(SP)
5231 023206 012746 000001          MOV    #1,-(SP)
5232 023212 010600          MOV    SP,RO
5233 023214 104417          TRAP  C$PNTF
5234 023216 062706 000004          ADD    #4,SP
5235 023222          DOCLN ;AND ABORT PASS
5236 023222 104444          TRAP  C$DCLN
5237          ;DIAG MUST BE RE-LOADED IN A CPU WITH LARGER MEMO
5238 50401$:
5239 50400$:
5240 023224 105037 002214          CLRB   CHGFLG ;CLR CHANGE CMD SEQ TBL FLAG.
5241 023230 012703 003526          MOV    #ENDFLG,R3 ;LET R3 := #ENDFLG
5242 023234 004737 012724          JSR    PC,CLRERR ;CLEAR ALL FLAGS.
5243 023240 105037 003527          CLRB   PWRFLG ;CLEAR THE POWER FAIL FLAG.
5244 023244          EXIT    INIT
5245 023244 104432          TRAP  C$EXIT
5246 023246 000104          .WORD L10012-.
5247 023250 045 101 106 MEMOM: .ASCII /#AFREE MEMO TOO SMALL FOR RD-WR BFRS#N/
5248 023253 122 105 105
5249 023256 040 115 105
5250 023261 115 117 040
5251 023264 124 117 117
5252 023267 040 123 115
5253 023272 101 114 114
5254 023275 040 106 117
5255 023300 122 040 122
5256 023303 104 055 127
5257 023306 122 040 102
5258 023311 106 122 123
5259 023314 045 116
5260 023316 045 101 122 .ASCIZ /#ARE-LOAD IN LARGER MEMO#N/
5261 023321 105 055 114
5262 023324 117 101 104
5263 023327 040 111 116
5264 023332 040 114 101
5265 023335 122 107 105
5266 023340 122 040 115
5267 023343 105 115 117
5268 023346 045 116 000
5269          .EVEN

```

## INITIALIZE SECTION

```

5243
5244 023352          ENDINIT
      023352          L10012:
      023352 104411          TRAP      C$INIT
5245
5246          .SBTTL  AUTO DROP SECTION
5247
5248          ;**
5249          ;SECTION EXECUTED AFTER THE INIT CODE WHEN "ADR" FLAG IS SET BY OPERATOR
5250          ;SECTION CHECKS FOR A VALID INTERFACE LOCATION.  DROPS UNIT IF NO RESPONSE
5251          ;FROM INTERFACE
5252          ;--
5253
5254 023354          BGNAUTO
      023354          L$AUTO::
5255
5256 023354 004737 017142          JSR PC,FIRSTU          ;FIND FIRST UNIT
5257 023360          ;WHILE DEVTBL(R5) NE #END DO          ;
5258 023360 026527 002604 177777 50402$: CMP  DEVTBL(R5),#END
5259 023366 001525          BEQ  50403$
5260 023370 105037 003530          CLR  TRAPD4          ;LET TRAPD4 :B= #0
5261 023374          SETVEC #4,#TRAP4,#INTPRI          ;SET VECTOR 4
      023374 012746 000340          MOV  #INTPRI,-(SP)
      023400 012746 023770          MOV  #TRAP4,-(SP)
      023404 012746 000004          MOV  #4,-(SP)
      023410 012746 000003          MOV  #3,-(SP)
      023414 104437          TRAP  C$SVEC
      023416 062706 000010          ADD  #10,SP
5262 023422 017502 002514          MOV  @TSDB(R5),R2          ;ADDRESS TS05 INTERFACE
5263 023426          CLRVEC #4          ;CLEAR VECTOR AT 4
      023426 012700 000004          MOV  #4,R0
      023432 104436          TRAP  C$CVEC
5264 023434 105737 003530          TSTB TRAPD4          ;IFB TRAPD4 NE #0 THEN
5265 023440 001423          BEQ  50404$
5266 023442 005265 003366          INC  FTLCNT(R5)          ;LET FTLCNT(R5) := FTLCNT(R5) + #1
5267 023446          PRINTF #AUTODM,TSDB(R5)          ;PRINT ERROR
      023446 016546 002514          MOV  TSDB(R5),-(SP)
      023452 012746 023644          MOV  #AUTODM,-(SP)
      023456 012746 000002          MOV  #2,-(SP)
      023462 010600          MOV  SP,R0
      023464 104417          TRAP  C$PNTF
      023466 062706 000006          ADD  #6,SP
5268 023472 016537 002604 017450          MOV  DEVTBL(R5),DROPN          ;SAVE # OF UNIT TO BE DROPPED.
5269 023500          MOV  R5,R0          ;R0=LOGICAL DEVICE NUMBER
5270 023502 006200          ASR  R0
5271 023504          DODU  R0          ;DROP THE UNIT: EXEC BGNDU-ENDDU CODE IF IDU = 0
      023504 104451          TRAP  C$DODU
5272
5273 023506 000452          BR  50405$
5274 023510          50404$:
5275 023510 012775 002340 002514          MOV  #GSCP,#@TSDB(R5)          ;SEND GET STATUS COMMAND
5276 023516 004737 012740          JSR  PC,WSSR          ;WAIT
5277 023522 032775 000200 002524          BIT  #TS.SSR,@TSSR(R5)          ;IF #TS.SSR SETIN @TSSR(R5) THEN
5278 023530 001423          BEQ  50406$
5279 023532 032775 000100 002524          BIT  #TS.OFL,@TSSR(R5)          ;IF #TS.OFL SETIN @TSSR(R5) THEN
5280 023540 001416          BEQ  50407$
5281 023542 005265 003366          INC  FTLCNT(R5)          ;LET FTLCNT(R5) := FTLCNT(R5) + #1

```



AUTO DROP SECTION

```

5282 023546          PRINTF #OFLINM,TSNP
      023546 013746 003534
      023552 012746 005456
      023556 012746 000002
      023562 010600
      023564 104417
      023566 062706 000006
5283 023572 004737 017364          JSR PC,DROPUA
5284
5285 023576          50407$:
5286
5287 023576 000416          BR      50410$
5288 023600          50406$:
5289 023600 005265 003366          INC      FTLCNT(R5) ;LET FTLCNT(R5) := FTLCNT(R5) * #1
5290 023604          PRINTF #NRDYM,DEVTBL(R5)
      023604 016546 002604
      023610 012746 023740
      023614 012746 000002
      023620 010600
      023622 104417
      023624 062706 000006
5291 023630 004737 017364          JSR PC,DROPUA
5292
5293 023634          50410$:
5294
5295 023634          50405$:
5296 023634 004737 017210          JSR PC,NEXTU
5297
5298 023640 000647          BR      50402$
5299 023642          50403$:
5300
5301 023642          ENDAUTO
      023642
      023642 104461          L10013:
5302
5303 023644          TRAP  C$AUTO
      023644 045 101 102 AUTODM: .ASCII /#ABUS TRAP AT #06#N/
      023647 125 123 040
      023652 124 122 101
      023655 120 040 101
      023660 124 040 045
      023663 117 066 045
      023666 116
5304 023667 045 101 111          .ASCIZ /#AINTERFACE BAD OR NOT SET TO ABOVE AD#N/
      023672 116 124 105
      023675 122 106 101
      023700 103 105 040
      023703 102 101 104
      023706 040 117 122
      023711 040 116 117
      023714 124 040 123
      023717 105 124 040
      023722 124 117 040
      023725 101 102 117
      023730 126 105 040
      023733 101 104 045
      023736 116 000
5305 023740 045 101 125 NRDYM: .ASCIZ /#AUNIT #D1#A NOT RDY#N/

```

## AUTO DROP SECTION

```

023743      116      111      124
023746      040      045      104
023751      061      045      101
023754      040      116      117
023757      124      040      122
023762      104      131      045
023765      116      000
5306
5307
5308
5309
5310
5311
5312 023770  105237  003530
5313 023774  000002
5314
5315
5316
5317
5318
5319
5320
5321
5322
5323 023776
023776
5324
5325 023776  004737  017142
5326 024002
5327 024002  026527  002604  177777
5328 024010  001410
5329 024012  004737  012740
5330 024016
024016  016500  002534
024022  104436
5331 024024  004737  017210
5332
5333 024030  000764
5334 024032
5335
5336 024032
024032  104432
024034  000002
5337
5338
5339 024036
024036
024036  104412
5340
5341
5342
5343
5344
5345
5346
5347
5348

      .EVEN
      ; DEVICE BUS TRAP HANDLER
      ; OUTPUT: TRAPD4 BYTE 1: TRAPED AT 4
      ;                               0: NO TRAP
TRAP4:: INCB   TRAPD4;LET TRAPD4 :B= TRAPD4 + #1
      RTI

      .SBTTL  CLEANUP CODING SECTION
      ;**
      ; THE CLEANUP CODING SECTION CONTAINS THE CODING THAT IS PERFORMED
      ; AT THE END OF EACH PASS.
      ;--
      BGNCLN
L$CLEAN::
      JSR   PC,FIRSTU           ;FIND FIRST UNIT.
50411$: ;WHILE DEVTBL(R5) NE #END DO
      CMP   DEVTBL(R5),#END
      BEQ   50412$
      JSR   PC,WSSR           ;WAIT FOR UNIT READY OR TIMEOUT.
      CLRVEC   TSVCT(R5)     ;RELEASE INTERRUPT VECTORS FOR ALL DEV.
      MOV   TSVCT(R5),R0
      TRAP C$CVEC
      JSR   PC,NEXTU           ;FIND NEXT UNIT.
      BR   50411$
50412$:
      EXIT   CLN
      TRAP  C$EXIT
      .WORD L10014-.
      .EVEN
      ENDCLN
L10014:
      TRAP  C$CLEAN

      .SBTTL  DROP UNIT SECTION
      ;**
      ; THE DROP-UNIT SECTION CONTAINS THE CODING THAT CAUSES A DEVICE
      ; TO NO LONGER BE TESTED. THAT CODE SHALL BE EXECUTED WHEN DODU
      ; MACRO IS CALLED WHILE IDU FLAG IS NOT SET BY OPERATOR
      ;--

```



## DROP UNIT SECTION

```

5349 024040          BGNDU
      024040          L#DU::
5350
5351 024040 010005          MOV      R0,R5          ;R5 = LOGICAL DEVICE NUMBER X 2.
5352 024042 006305          ASL      R5
5353 024044 012765 177774 002604  MOV      #NINUSE,DEVTBL(R5) ;SET NOT IN USE FLAG FOR THE DEVICE.
5354 024052          CLRVEC TSVCT(R5)          ;RELEASE THE INTERRUPT VECTOR.
      024052 016500 002534          MOV      TSVCT(R5),R0
      024056 104436          TRAP     C#CVEC
5355 024060          PRINTF #DROPPM,DROPN          ;PRINT DROP DEVICE MESSAGE
      024060 013746 017350          MOV      DROPN,-(SP)
      024064 012746 005065          MOV      #DROPPM,-(SP)
      024070 012746 000002          MOV      #2,-(SP)
      024074 010600          MOV      SP,R0
      024076 104417          TRAP     C#PNTF
      024100 062706 000006          ADD      #6,SP
5356 024104          EXIT      DU
      024104 000167          .WORD   J$JMP
      024106 000000          .WORD   L10015-2-.
5357
5358          .EVEN
5359 024110          ENDDU
      024110          L10015:
      024110 104453          TRAP     C#DU
5360
5361          .SBTTL  ADD UNIT SECTION
5362
5363          ;**
5364          ; THE ADD-UNIT SECTION CONTAINS THE CODING THAT CAUSES A DEVICE
5365          ; TO BE (A) TESTED FOR THE FIRST TIME, OR (B) RESUMED IN TESTING.  IF
5366          ; "EF.AUNIT" IS SET, THE UNIT WILL BE TESTED AS A NEW UNIT.
5367          ;--
5368
5369 024112          BGNAU
      024112          L#AU::
5370 024112 010005          MOV      R0,R5          ;R5 = LOGICAL DEVICE NUMBER X 2.
5371 024114 006305          ASL      R5
5372 024116 010065 002604  MOV      R0,DEVTBL(R5) ;STORE UNIT # IN DEVICE TABLE.
5373 024122          GPHARD R0,R0          ;GET HARDWARE P TABLE FROM SUPER.
      024122 104442          TRAP     C#GPHRD
5374 024124 011065 002514          MOV      (R0),TSDB(R5) ;SAVE TSDB ADDRESS.
5375 024130 012065 002524          MOV      (R0)+,TSSR(R5) ;SAVE TSSR ADDRESS.
5376 024134 062765 000002 002524  ADD      #2,TSSR(R5)
5377 024142 011065 002534          MOV      (R0),TSVCT(R5) ;SAVE INTERRUPT VECTOR ADDRESS.
5378 024146 011065 003532          MOV      (R0),TSUNT(R5) ;SAVE NUMBER OF DRIVE
5379 024152 011037 003534          MOV      (R0),TSNP          ;SAVE FOR PRINT OUT'S
5380 024156          SETVEC TSVCT(R5),TSSINT(R5),#INTPRI
      024156 012746 000340          MOV      #INTPRI,-(SP)
      024162 016546 002554          MOV      TSSINT(R5),-(SP)
      024166 016546 002534          MOV      TSVCT(R5),-(SP)
      024172 012746 000003          MOV      #3,-(SP)
      024176 104437          TRAP     C#SVEC
      024200 062706 000010          ADD      #10,SP
5381
5382 024204 005065 003472          CLR      INTFLG(R5)          ;SET UP INTERUPT PROCESSING CONDITIONS.
5383
5384 024210          EXIT      AU          ;CLEAR INTERRUPT FLAGS.

```





TEST 1: BASIC FUNCTIONS.

024352	012746	004162							
024356	012746	000003							
024362	010600								
024364	104417								
024366	062706	000010							
5429									
5430	024372			PRINTF	#SWSET,DEVTBL(R5),TSSSW(R5)				
	024372	016546	002574						
	024376	016546	002604						
	024402	012746	004231						
	024406	012746	000003						
	024412	010600							
	024414	104417							
	024416	062706	000010						
5431									
5432	024422			504154:					
5433	024422	004737	017210		JSR	PC,NEXTU			
5434									
5435	024426	000723			BR	504134			
5436	024430			504144:					
5437									
5438	024430				ENDSUB				
	024430			L10020:					
	024430	104403							
5439									
5440	024432				BGNSUB				
	024432			T1.2:					
	024432	104402							
5441									
5442	024434	012702	025206		MOV	#BFSEQ1,R2			
5443	024440	004737	025110		JSR	PC,BFSEQ			
5444	024444	004737	010266		JSR	PC,EXALL			
5445	024450	105037	003526		CLRB	STAF LG			
5446	024454				ENDSUB				
	024454			L10021:					
	024454	104403							
5447									
5448	024456				BGNSUB				
	024456			T1.3:					
	024456	104402							
5449									
5450	024460	012702	025220		MOV	#BFSEQ2,R2			
5451	024464	004737	025110		JSR	PC,BFSEQ			
5452	024470	004737	010266		JSR	PC,EXALL			
5453	024474				ENDSUB				
	024474			L10022:					
	024474	104403							
5454									
5455	024476				BGNSUB				
	024476			T1.4:					
	024476	104402							
5456									
5457	024500	012702	025312		MOV	#BFSEQ3,R2			
5458	024504	004737	025110		JSR	PC,BFSEQ			
5459	024510	004737	010266		JSR	PC,EXALL			
5460	024514				ENDSUB				
	024514			L10023:					

## TEST 1: BASIC FUNCTIONS.

5461	024514	104403				TRAP	C\$ESUB
5462	024516						
	024516		T1.5:	BGNSUB			;SUBTEST 5 - SPACE FILES.
	024516	104402				TRAP	C\$BSUB
5463							
5464	024520	012702	025364	MOV	#BFSEQ4,R2		;ADR OF CMD SEQ.
5465	024524	004737	025110	JSR	PC,BFSEQ		;SET UP CMD SEQ.
5466	024530	004737	010266	JSR	PC,EXALL		;EXECUTE CMD SEQ ON ALL DEVICES.
5467	024534			ENDSUB			
	024534		L10024:				
	024534	104403				TRAP	C\$ESUB
5468							
5469	024536						;SUBTEST 6 - SPACE RECORDS.
	024536		T1.6:	BGNSUB			
	024536	104402				TRAP	C\$BSUB
5470							
5471	024540	012702	025426	MOV	#BFSEQ5,R2		;ADR OF CMD SEQ.
5472	024544	004737	025110	JSR	PC,BFSEQ		;SET UP CMD SEQ.
5473	024550	004737	010266	JSR	PC,EXALL		;EXECUTE CMD SEQ ON ALL DEVICES.
5474	024554			ENDSUB			
	024554		L10025:				
	024554	104403				TRAP	C\$ESUB
5475							
5476	024556						;SUBTEST 7 - WRITE RETRY.
	024556		T1.7:	BGNSUB			
	024556	104402				TRAP	C\$BSUB
5477							
5478	024560	012702	025500	MOV	#BFSEQ6,R2		;ADR OF CMD SEQ.
5479	024564	004737	025110	JSR	PC,BFSEQ		;SET UP CMD SEQ.
5480	024570	004737	010266	JSR	PC,EXALL		;EXECUTE CMD SEQ ON ALL DEVICES.
5481	024574			ENDSUB			
	024574		L10026:				
	024574	104403				TRAP	C\$ESUB
5482							
5483	024576						;SUBTEST 8 - READ REV RETRY.
	024576		T1.8:	BGNSUB			
	024576	104402				TRAP	C\$BSUB
5484							
5485	024600	012702	025552	MOV	#BFSEQ7,R2		;ADR OF CMD SEQ.
5486	024604	004737	025110	JSR	PC,BFSEQ		;SET UP CMD SEQ.
5487	024610	004737	010266	JSR	PC,EXALL		;EXECUTE CMD SEQ ON ALL DEVICES.
5488	024614			ENDSUB			
	024614		L10027:				
	024614	104403				TRAP	C\$ESUB
5489							
5490	024616						;SUBTEST 9 - READ FWD RETRY.
	024616		T1.9:	BGNSUB			
	024616	104402				TRAP	C\$BSUB
5491							
5492	024620	012702	025604	MOV	#BFSEQ8,R2		;ADR OF CMD SEQ.
5493	024624	004737	025110	JSR	PC,BFSEQ		;SET UP CMD SEQ.
5494	024630	004737	010266	JSR	PC,EXALL		;EXECUTE CMD SEQ ON ALL DEVICES.
5495	024634			ENDSUB			
	024634		L10030:				
	024634	104403				TRAP	C\$ESUB
5496							



## TEST 1: BASIC FUNCTIONS.

```

5497 024636          BGNSUB          ;SUBTEST 10- CLEAN.
      024636          T1.10:
      024636 104402          TRAP      C#BSUB
5498
5499 024640 012702 025636          MOV      #BFSEQ9,R2          ;ADR OF CMD SEQ.
5500 024644 004737 025110          JSR      PC,BFSEQ          ;SET UP CMD SEQ.
5501 024650 004737 010266          JSR      PC,EXALL          ;EXECUTE CMD SEQ ON ALL DEVICES.
5502 024654          ENDSUB
      024654          L10031:
      024654 104403          TRAP      C#ESUB
5503
5504 024656          BGNSUB          ;SUBTEST 11 - WTV SWAPPED DATA BYTES.
      024656          T1.11:
      024656 104402          TRAP      C#BSUB
5505 024660 012702 025660          MOV      #BFSE10,R2         ;ADR OF CMD SEQ.
5506 024664 004737 025110          JSR      PC,BFSEQ          ;SET UP CMD SEQ.
5507 024670 004737 010266          JSR      PC,EXALL          ;WRITE/VERIFY RECORDS 1 AND 2.
5508 024674 112737 000001 003520  MOVB     #1,SWBFLG         ;ENABLE BYTE SWAPPING.
5509 024702 004737 010266          JSR      PC,EXALL          ;WRITE/VERIFY RECORDS 3 AND 4.
5510 024706 105037 003520          CLRB    SWBFLG           ;DISABLE BYTE SWAPPING.
5511 024712          ENDSUB
      024712          L10032:
      024712 104403          TRAP      C#ESUB
5512 024714 013702 003406          MOV      DATAW,R2        ;INIT WRITE BUFFER POINTER.
5513 024720 062702 000012          ADD     #10.,R2
5514 024724          ;WHILE R2 NE DATAW DO ;UNTIL 10 BYTES HAVE BEEN SWAPPED.
5515 024724 020237 003406          CMP     R2,DATAW
5516 024730 001402          BEQ     50417$
5517 024732 000342          SWAB   -(R2)            ;SWAP DATA BYTES IN WRITE BUFFER.
5518
5519 024734 000773          BR      50416$
5520 024736          ;
5521 024736 105237 003523          INCB   T1SWB            ;SET T1 SWAP BYTES FLAG FOR "CKDATA" SUBR
5522
5523 024742          BGNSUB          ;SUBTEST 12 - READ SWAPPED DATA BYTES.
      024742          T1.12:
      024742 104402          TRAP      C#BSUB
5524 024744 012737 104401 003420  MOV      #RDR,CMDWRD       ;CMD IS READ REV.
5525 024752 004737 016212          JSR      PC,VFEXC         ;VERIFY ODD LENGTH SWAP (RECORD 4).
5526 024756 012737 000012 002336  MOV      #12,CMDPKT*CP.CNT ;CHANGE BYTE COUNT TO 10.
5527 024764 004737 016212          JSR      PC,VFEXC         ;VERIFY EVEN LENGTH SWAP (RECORD 3).
5528 024770 112737 000001 003520  MOVB     #1,SWBFLG         ;ENABLE BYTE SWAPPING.
5529 024776 012737 000011 002336  MOV      #11,CMDPKT*CP.CNT ;CHANGE BYTE COUNT TO 9.
5530 025004 004737 016212          JSR      PC,VFEXC         ;VERIFY ODD LENGTH SWAP (RECORD 2).
5531 025010 012737 000012 002336  MOV      #12,CMDPKT*CP.CNT ;CHANGE BYTE COUNT TO 10.
5532 025016 004737 016212          JSR      PC,VFEXC         ;VERIFY EVEN LENGTH SWAP (RECORD 1).
5533 025022 012737 104001 003420  MOV      #RDF,CMDWRD       ;CMD IS READ FWD.
5534 025030 004737 016212          JSR      PC,VFEXC         ;VERIFY EVEN LENGTH SWAP (RECORD 1).
5535 025034 012737 000011 002336  MOV      #11,CMDPKT*CP.CNT ;CHANGE BYTE COUNT TO 9.
5536 025042 004737 016212          JSR      PC,VFEXC         ;VERIFY ODD LENGTH SWAP (RECORD 2).
5537 025046 105037 003520          CLRB    SWBFLG           ;DISABLE BYTE SWAPPING.
5538 025052 012737 000012 002336  MOV      #12,CMDPKT*CP.CNT ;CHANGE BYTE COUNT TO 10.
5539 025060 004737 016212          JSR      PC,VFEXC         ;VERIFY EVEN LENGTH SWAP (RECORD 3).
5540 025064 012737 000011 002336  MOV      #11,CMDPKT*CP.CNT ;CHANGE BYTE COUNT TO 9.
5541 025072 004737 016212          JSR      PC,VFEXC         ;VERIFY ODD LENGTH SWAP (RECORD 4).
5542
5543 025076          ENDSUB

```

## TEST 1: BASIC FUNCTIONS.

```

025076          L10033:
5544 025076 104403          TRAP      C#ESUB
5545 025100 105037 003523  CLRB    T1SWB          ;CLEAR T1 SWAP BYTES FLAG
5546 025104          EXIT    TST
5547 025104 104432          TRAP      C#EXIT
025104 000574          .WORD   L10017-.
5548
5549          ;          SUBROUTINE TO MOVE A COMMAND SEQUENCE TO THE SEQUENCE TABLE.
5550          ;          INPUTS:          R2 = FWA OF COMMAND SEQUENCE.
5551          ;          OUTPUTS:
5552          ;          REGISTERS:
5553          ;          CALLS:
5554
5555 025110 012701 003540  BFSEQ:: MOV    #CMDSEQ,R1          ;INIT SEQ TABLE ADDRESS.
5556 025114 50420$: ;WHILE (R2) NE #END DO          ;WHILE THERE ARE MORE COMMANDS:
5557 025114 021227 177777  CMP     (R2),#END
5558 025120 001402          BEQ     50421$
5559 025122 012221          MOV     (R2)+,(R1)+          ;MOVE COMMANDS TO SEQ TABLE.
5560
5561 025124 000773          BR     50420$
5562 025126 50421$:
5563 025126 012711 177777  MOV     #END,(R1)          ;STORE END OF SEQUENCE CODE.
5564 025132 000207          RTS     PC          ;RETURN.
5565
5566          ;          BASIC FUNCTION COMMAND SEQUENCE
5567
5568
5569 025134 140004          BFSEQ0: .WORD   SCH          ;SET CHAR. 200.          (1)
5570 025136 000200          200
5571 025140 000001          1
5572 025142 000000          0
5573 025144 100013          DRI          ;DRIVE INIT.          (2)
5574 025146 000001          1
5575 025150 000001          1
5576 025152 000000          0
5577 025154 140004          SCH          ;SET CHAR. 20          (3)
5578 025156 000020          20
5579 025160 000001          1
5580 025162 000000          0
5581 025164 100017          GES          ;GET STATUS.          (4)
5582 025166 000001          1
5583 025170 000001          1
5584 025172 000000          0
5585 025174 140004          SCH          ;SET CHAR. 40.          (5)
5586 025176 000040          40
5587 025200 000001          1
5588 025202 000000          0
5589 025204 177777          .WORD   END
5590
5591 025206 102010          BFSEQ1:          RWD          ;REWIND TWICE.          (6)
5592 025210 000001          1
5593 025212 000002          2
5594 025214 000000          0
5595 025216 177777          .WORD   END
5596

```



## TEST 1: BASIC FUNCTIONS.

5597	025220	104105	BFSEQ2:	WTV	;WRITE/VERIFY PAT 1.	(7)
5598	025222	004000		DATCNT		
5599	025224	000001		1		
5600	025226	000001		1		
5601	025230	104105		WTV	;WTV PAT 2.	(8)
5602	025232	004000		DATCNT		
5603	025234	000001		1		
5604	025236	000002		2		
5605	025240	104105		WTV	;WTV PAT 3.	(9)
5606	025242	004000		DATCNT		
5607	025244	000001		1		
5608	025246	000003		3		
5609	025250	104105		WTV	;WTV PAT 4.	(10)
5610	025252	004000		DATCNT		
5611	025254	000001		1		
5612	025256	000004		4		
5613	025260	104105		WTV	;WTV PAT 5.	(11)
5614	025262	004000		DATCNT		
5615	025264	000001		1		
5616	025266	000005		5		
5617	025270	104105		WTV	;WTV PAT 6.	(12)
5618	025272	004000		DATCNT		
5619	025274	000001		1		
5620	025276	000006		6		
5621	025300	104105		WTV	;WTV PAT 0.	(13)
5622	025302	004000		DATCNT		
5623	025304	000001		1		
5624	025306	000000		0		
5625	025310	177777	.WORD	END		
5626						
5627	025312	100011	BFSEQ3:	WTM	;WRITE TAPE MARK.	(14)
5628	025314	000001		1		
5629	025316	000001		1		
5630	025320	000000		0		
5631	025322	104005		WRT	;WRITE 10 RECORDS.	(15)
5632	025324	004000		DATCNT		
5633	025326	000010		10		
5634	025330	000001		1		
5635	025332	100411		ERS	;ERASE 10 TIMES.	(16)
5636	025334	000001		1		
5637	025336	000010		10		
5638	025340	000000		0		
5639	025342	100011		WTM	;WRITE TAPE MARK.	(17)
5640	025344	000001		1		
5641	025346	000001		1		
5642	025350	000000		0		
5643	025352	101011		WTR	;WTM RETRY	(18)
5644	025354	000001		1		
5645	025356	000001		1		
5646	025360	000000		0		
5647	025362	177777	.WORD	END		
5648						
5649	025364	105410	BFSEQ4:	SFR	;SPACE 2 FILES REV.	(19)
5650	025366	000002		2		
5651	025370	000001		1		
5652	025372	000000		0		
5653	025374	105010		SFF	;SPACE 2 FILES FWD.	(20)

## TEST 1: BASIC FUNCTIONS.

5654	025376	000002		2		
5655	025400	000001		1		
5656	025402	000000		0		
5657	025404	105410		SFR	;SPACE 2 FILES REV.	(21)
5658	025406	000001		1		
5659	025410	000002		2		
5660	025412	000000		0		
5661	025414	105010		SFF	;SPACE 2 FILES FWD.	(22)
5662	025416	000001		1		
5663	025420	000002		2		
5664	025422	000000		0		
5665	025424	177777	.WORD	END		
5666						
5667	025426	102010	BFSEQ5:	RWD	;REWIND.	(23)
5668	025430	000001		1		
5669	025432	000001		1		
5670	025434	000000		0		
5671	025436	104010		SRF	;SPACE 7 RECORDS FWD.	(24)
5672	025440	000007		7		
5673	025442	000001		1		
5674	025444	000000		0		
5675	025446	104410		SRR	;SPACE 7 RECORDS REV.	(25)
5676	025450	000007		7		
5677	025452	000001		1		
5678	025454	000000		0		
5679	025456	104010		SRF	;SPACE 7 RECORDS FWD.	(26)
5680	025460	000001		1		
5681	025462	000007		7		
5682	025464	000000		0		
5683	025466	104410		SRR	;SPACE 7 RECORDS REV.	(27)
5684	025470	000001		1		
5685	025472	000007		7		
5686	025474	000000		0		
5687	025476	177777	.WORD	END		
5688						
5689	025500	102010	BFSEQ6:	RWD	;REWIND.	(28)
5690	025502	000001		1		
5691	025504	000001		1		
5692	025506	000000		0		
5693	025510	104005		WRT	;WRITE.	(29)
5694	025512	004000		DATCNT		
5695	025514	000001		1		
5696	025516	000001		1		
5697	025520	105005		WRR	;WRITE RETRY.	(30)
5698	025522	004000		DATCNT		
5699	025524	000001		1		
5700	025526	000001		1		
5701	025530	100011		WTM	;WRITE TAPE MARK.	
5702	025532	000001		1		
5703	025534	000001		1		
5704	025536	000000		0		
5705	025540	105410		SFR	;SPACE 1 FILE REV.	
5706	025542	000001		1		
5707	025544	000001		1		
5708	025546	000000		0		
5709	025550	177777	.WORD	END		
5710						



## TEST 1: BASIC FUNCTIONS.

```

5711 025552 104401          BFSEQ7:          RDR          ;READ REV.          (31)
5712 025554 004000          DATCNT
5713 025556 000001          1
5714 025560 000001          1
5715 025562 105401          RNR          ;READ NEXT REV.    (32)
5716 025564 004000          DATCNT
5717 025566 000001          1
5718 025570 000001          1
5719 025572 125401          RNF          ;READ NEXT FWD.    (33)
5720 025574 004000          DATCNT
5721 025576 000001          1
5722 025600 000001          1
5723 025602 177777          .WORD        END
5724
5725 025604 104001          BFSEQ8:          RDF          ;READ FWD.          (34)
5726 025606 004000          DATCNT
5727 025610 000001          1
5728 025612 000001          1
5729 025614 105001          RPF          ;READ PREVIOUS FWD. (35)
5730 025616 004000          DATCNT
5731 025620 000001          1
5732 025622 000001          1
5733 025624 125001          RPR          ;READ PREVIOUS REV. (36)
5734 025626 004000          DATCNT
5735 025630 000001          1
5736 025632 000001          1
5737 025634 177777          .WORD        END
5738
5739 025636 101012          BFSEQ9: .WORD   CLN          ;CLEAN.              (37)
5740 025640 000001          1
5741 025642 000001          1
5742 025644 000000          0
5743 025646 102010          RWD          ;REWIND              (38)
5744 025650 000001          1
5745 025652 000001          1
5746 025654 000000          0
5747 025656 177777          .WORD        END          ;END OF SEQUENCE.
5748
5749 025660 104105          BFSEQ10:        WTV          ;WRITE/VERIFY EVEN LENGTH. (39)
5750 025662 000012          12
5751 025664 000001          1
5752 025666 000000          0
5753 025670 104105          WTV          ;WRITE/VERIFY ODD LENGTH.  (40)
5754 025672 000011          11
5755 025674 000001          1
5756 025676 000000          0
5757 025700 177777          .WORD        END
5758          .EVEN
5759
5760 025702          ENDTST
          L10017:
          025702
          025702 104401          TRAP          C$ETST

5761
5762          .SBTTL TEST 2: DATA RELIABILITY.
5763
5764          ;**
5765          ; TEST TO CHECK THE DATA RELIABILITY OF THE TS05.

```

## TEST 2: DATA RELIABILITY.

```

5766
5767 025704          ;--          BGNTST
      025704          T2::
5768
5769 025704 112737 000001 003515      MOVB    #1,RANDOM          ;SET THE RANDOM OPERATIONS FLAG.
5770 025712 105037 003514              CLR    EXPBOT             ;CLEAR EXPECT BOT FLAG.
5771 025716 005037 003456              CLR    WTMFLG            ;CLEAR WRITE TAPE MARK FLAG
5772 025722 004737 017142              JSR    PC,FIRSTU         ;FIND THE FIRST UNIT.
5773 025726 004737 007072              JSR    PC,SOFINIT        ;INIT DEVICE
5774 025732 103404              BCS    11$
5775 025734          ERRDF    2,NSSRM,STAERM          ;REPORT TS05 NOT READY
      025734 104455              TRAP    C$ERDF
      025736 000002              .WORD  2
      025740 004536              .WORD  NSSRM
      025742 006120              .WORD  STAERM

5776
5777 025744 004737 007526          11$:  JSR    PC,MDSET          ;GO DO SETUP'S
5778 025750 012702 004000          MOV    #DATCNT,R2        ;SET UP THE RECORD LENGTH MASK.
5779 025754 005302              DEC    R2
5780 025756 010237 003430          MOV    R2,LENMSK        ;ALLOW MAXIMUM BUFFER.
5781 025762 005137 003430          COM    LENMSK
5782 025766 004737 010222          JSR    PC,SETCH          ;CMD 1 = SET CHARACTERISTIC.
5783 025772 105737 003526          TSTB   STAFLG ;IFB STAFLG NE #0 THEN ;IF STARTING THEN:
5784 025776 001417              BEQ    50424$
5785 026000 004737 010246          JSR    PC,SETRW         ;CMD2=REWIND
5786 026004 105037 003526          CLR    STAFLG ;LET STAFLG :B= #0 ;CLR START FLAG.
5787
5788 026010          50422$:
5789 026010 012721 104105          MOV    #WTV,(R1)+
5790 026014 012721 004000          MOV    #DATCNT,(R1)+
5791 026020 012702 177740          MOV    #RNOPSC,R2
5792 026024 005102              COM    R2
5793 026026 010221              MOV    R2,(R1)+
5794 026030 012721 000007          MOV    #RANP,(R1)+
5795
5796 026034          50423$: BREAK          ; DO A SUPVSR BREAK FIRST.
      026034 104422              TRAP    C$BRK
5797
5798 026036          50424$:          ;FILL SEQ TBL WITH RANDOM CMDS.
5799 026036 020127 003740          CMP    R1,#SEQEND
5800 026042 002012              BGE    50425$
5801 026044 063737 003432 003434          ADD    RANB,RANS        ;LET RANS := RANS + RANB
5802 026052 013702 003434          MOV    RANS,R2
5803 026056 042702 177741          BIC    #177741,R2
5804 026062 004772 026220          JSR    PC,@RANCMD(R2)   ;SET UP A RANDOM CMD + BRF.
5805
5806 026066 000763              BR     50424$
5807 026070          50425$:
5808 026070 012711 177777          MOV    #END,(R1)        ;STORE END OF SEQUENCE CODE IN TABLE.
5809 026074 004737 010266          JSR    PC,EXALL         ;GO EXECUTE ALL CMDS IN SEQUENCE TABLE.
5810
5811 026100 012701 003540          MOV    #CMDSEQ,R1       ;INIT CMD SEQ TBL POINTER,
5812 026104 005702              TST    R2                ;REPEAT UNTIL EOT IS REACHED
5813 026106 001752              BEQ    50423$
5814 026110 105237 003524          INCB   ALLEOT           ;FLAG ALL UNITS @ EOT
5815 026114 000240              NOP
5816 026116 000240              NOP

```



## TEST 2: DATA RELIABILITY.

```

5817 026120 000240          NOP
5818 026122 004737 027674 JSR   PC,T5WEOT      ;WRITE ONE RECORD BEYOND EOT ON ALL UNITS
5819                                     ;SO THAT SHORTER READ STOP DISTANCE
5820                                     ;SHALL POSITION HEAD IN CLEAN IRG GAP
5821                                     ;READ REV THAT EXTRA REC TO RE-POSITION THE TAPE
5822 026126 004737 026260 JSR   PC,RANRD      ;SET UP READ REV/FWD CMDS,
5823 026132 012737 177740 MOV   #RNOPSC,CMDSEQ+4 ;# OF RECORDS FOR READ REV.
5824 026140 005137 003544 COM   CMDSEQ+4
5825 026144 013737 003544 MOV   CMDSEQ+4,CMDSEQ+14 ;# OF RECORDS FOR READ FORWARD.
5826 026152 012711 177777 MOV   #END,(R1)      ;STORE END OF SEQUENCE CODE IN SEQ TABLE.
5827 026156 004737 010266 JSR   PC,EXALL      ;GO EXECUTE READ REV/FWD OF LAST N RECORDS.
5828 026162 105037 003524 CLRB  ALLEOT        ;CLEAR ALL UNITS @ EOT FLAG
5829 026166 112737 000001 MOVB  #1,RPTFLG     ;REQUEST PERFORMANCE REPORT DURING REWIND.
5830 026174 012701 003540 MOV   #CMDSEQ,R1   ;INIT SEQ TBL POINTER,
5831 026200 004737 010246 JSR  PC,SETRW      ;STORE REWIND IN SEQ TBL.
5832 026204 012711 177777 MOV   #END,(R1)     ;STORE END IN SEQ TBL.
5833 026210 004737 010266 JSR  PC,EXALL      ;EXECUTE REWIND CMD ON ALL UNITS
5834
5835 026214          EXIT   TST
      026214 104432          TRAP   C$EXIT
      026216 000320          .WORD  L10034-.

5836
5837 ;
5838 ;   ADDRESSES OF SUBROUTINES USED TO SET UP RANDOM OPERATIONS IN
5839 ;   THE DATA RELIABILITY TEST.
5840 RANCMD: RANWV          ;WRITE
5841         RANWR          ;WRITE.
5842         RANWR          ;WRITE.
5843         RANWR          ;WRITE.
5844         RANWR          ;WRITE.
5845         RANWR          ;WRITE.
5846         RANWR          ;WRITE.
5847         RANWR          ;WRITE.
5848         RANRD          ;READ.
5849         RANRD          ;READ.
5850         RANRD          ;READ.
5851         RANRD          ;READ.
5852         RANRD          ;READ.
5853         RANRD          ;READ.
5854         RANRD          ;READ.
5855         RANRD          ;READ.
5856
5857 ;
5858 ;   SUBROUTINE TO SET UP READ COMMANDS IN SEQUENCE TABLE.
5859 ;
5860 ;   INPUTS:
5861 ;   OUTPUTS:
5862 ;   REGISTERS:      R2
5863 ;   CALLS:
5864 RANRD:: TST   WTMFLG      ;WAS LAST CMD A WRITE?
5865         BEQ   1$         ;NO,GO AHEAD
5866         JSR   PC,RAWTH   ;YES PUT DOWN TAPE MARK
5867         JSR   PC,RASFR   ;AND SPACE FILE REV
5868         CLR   WTMFLG     ;THEN CLEAR THE FLAG
5869 1$:     CMP   R1,#SEQEND
5870         BGE   2$
5871         MOV   #RDR,(R1)+ ;STORE READ REV CMD.

```

## TEST 2: DATA RELIABILITY.

```

5872 026314 012721 004000      MOV      #DATCNT,(R1)+      ;SET BRF TO MAX FOR READ RANDOM LENGTHS.
5873 026320 063737 003434 003432  ADD      RANS,RANB          ;LET RANB := RANB * RANS
5874 026326 013702 003432      MOV      RANB,R2           ;LET R2 := RANB CLR.BY #RNOPSC
5875 026332 042702 177740      BIC      #RNOPSC,R2
5876 026336 010221      MOV      R2,(R1)+         ;SET RANDOM # OF OPERATIONS.
5877 026340 012721 000007      MOV      #RANP,(R1)+      ;RANDOM PATTERN.
5878 026344 020127 003740      CMP      R1,#SEQEND
5879 026350 002007      BGE     2$
5880 026352 012721 104001      MOV      #RDF,(R1)+       ;STORE READ FWD CMD.
5881 026356 012721 004000      MOV      #DATCNT,(R1)+   ;SET BRF TO MAX TO READ RANDOM LENGTHS.
5882 026362 010221      MOV      R2,(R1)+         ;SET RANDOM # OF OPERATIONS.
5883 026364 012721 000007      MOV      #RANP,(R1)+      ;RANDOM PATTERN.
5884 026370 000207      2$:    RTS PC
5885
5886      ;      SUBROUTINE TO SET UP A WRITE COMMAND IN THE SEQUENCE TABLE.
5887      ;      THEN A WRITE TAPE MARK AND SPACE FILE REVERSE.
5888      ;
5889      ;      INPUTS:
5890      ;      OUTPUTS:
5891      ;      REGISTERS:
5892      ;      CALLS:
5893
5894 026372 012721 104005      RANWR:: MOV      #WRT,(R1)+   ;STORE WRITE CMD.
5895 026376 004737 026504      JSR PC,RANW              ;STORE BRF, # OF OPERATIONS, PATTERN.
5896 026402 005737 003456      TST     WTMFLG           ;LAST CMD A WRT?
5897 026406 001002      BNE     1$              ;YES,RETURN
5898 026410 005237 003456      INC     WTMFLG           ;NO,SET THE FLAG
5899 026414 000207      1$:    RTS PC
5900
5901      ;
5902      ;      SUBROUTINE TO SET UP A WRITE/VERIFY COMMAND IN THE SEQUENCE TABLE.
5903      ;      INPUTS:
5904      ;      OUTPUTS:
5905      ;      REGISTERS:
5906      ;      CALLS:
5907
5908 026416 012721 104105      RANWV:: MOV      #WTV,(R1)+   ;STORE WRITE/VERIFY CMD.
5909 026422 004737 026504      JSR PC,RANW              ;STORE BRF, # OF OPERATIONS, PATTERN.
5910 026426 000207      RTS     PC
5911
5912      ;
5913      ;      SUBROUTINE TO SET UP A WRITE TAPE MARK IN THE SEQUENCE TABLE.
5914      ;      INPUTS:
5915      ;      OUTPUTS:
5916      ;      REGISTERS:
5917      ;      CALLS:
5918
5919 026430 020127 003740      RAWTM:: CMP      R1,#SEQEND
5920 026434 002007      BGE     1$
5921 026436 012721 100011      MOV      #WTM,(R1)+      ;STORE WRITE TAPE MARK CMD.
5922 026442 012721 000001      MOV      #1,(R1)+        ;BRF
5923 026446 012721 000001      MOV      #1,(R1)+        ;# OF OPERATIONS
5924 026452 005721      TST     (R1)+            ;SKIP PATTERNS
5925 026454 000207      1$:    RTS PC
5926
5927      ;      SUBROUTINE TO SET UP A SPACE FILE REVERSE IN THE SEQUENCE TABLE.
5928      ;      INPUTS:

```



## TEST 2: DATA RELIABILITY.

```

5929          :      OUTPUTS:
5930          :      REGISTERS:
5931          :      CALLS:
5932
5933 026456 020127 003740 RASFR:: CMP      R1,#SEQEND
5934 026462 002007          BGE      1$
5935 026464 012721 105410          MOV      #SFR,(R1)+          ;STORE SPACE FILE REVERSE
5936 026470 012721 000001          MOV      #1,(R1)+          ;BRF
5937 026474 012721 000001          MOV      #1,(R1)+          ;# OF OPERATIONS
5938 026500 005721          TST      (R1)+          ;SKIP PATTERNS
5939 026502 000207          1$:      RTS PC
5940
5941
5942          :      SUBROUTINE TO STORE BRF, # OF OPERATIONS, PATTERN IN COMMAND
5943          :      SEQUENCE TABLE FOR WRITE AND WRITE/VERIFY COMMANDS.
5944          :      INPUTS:
5945          :      OUTPUTS:
5946          :      REGISTERS:      R2
5947          :      CALLS:
5948
5949 026504 012721 004000 RANW:: MOV      #DATCNT,(R1)+          ;SET BRF TO MAX FOR PATTERN GENERATION.
5950          :
5951 026510 063737 003434 003432          ADD      RANS,RANB          ;RANDOM BRF WILL BE GENERATED FOR EACH RECORD.
5952 026516 013702 003432          MOV      RANB,R2          ;LET RANB := RANB * RANS
5953 026522 042702 177740          BIC      #RNOPSC,R2          ;LET R2 := RANB CLR.BY #RNOPSC
5954 026526 010221          MOV      R2,(R1)+          ;SET RANDOM # OF OPERATIONS.
5955 026530 012721 000007          MOV      #RANP,(R1)+          ;RANDOM PATTERN.
5956 026534 000207          RTS PC          ;RETURN.
5957
5958          .EVEN
5959
5960 026536          ENDTST
5961 026536          L10034:
5962 026536 104401          TRAP      C#ETST
5963
5964          .SBTTL TEST 3: WRITE COMPATABILITY/WRITE UTILITY.
5965          :
5966          :** TEST TO WRITE RECORDS FROM BOT TO EOT.
5967          :--
5968 026540          BGNTST
5969 026540          T3::
5970 026540 112737 000001 003515          MOVB    #1,RANDOM          ;SET THE RANDOM OPERATIONS FLAG.
5971 026546 105037 003514          CLRB    EXPBOT          ;LET EXPBOT :B= #0          ;CLEAR EXPECT BOT FLAG.
5972
5973 026552 004737 017142          JSR     PC,FIRSTU          ;FIND THE FIRST UNIT.
5974 026556 004737 007072          JSR     PC,SOFINIT          ;INIT DEVICE
5975 026562 103404          BCS     11$
5976 026564          ERRDF 2,NSSRM,STAERM          ;REPORT TS05 NOT READY
5977          026564 104455          TRAP    C#ERDF
5978          026566 000002          .WORD  2
5979          026570 004536          .WORD  NSSRM
5980          026572 006120          .WORD  STAERM
5977
5978 026574 004737 007526          11$:   JSR     PC,MDSET          ;GO DO SETUP'S

```

## TEST 3: WRITE COMPATABILITY/WRITE UTILITY.

```

5979 026600 012702 004000      MOV      #DATCNT,R2      ;SET UP THE RECORD LENGTH MASK.
5980 026604 005302              DEC      R2
5981 026606 010237 003430      MOV      R2,LENMSK      ;ALLOW MAXIMUM BUFFER.
5982 026612 005137 003430      COM      LENMSK
5983 026616 004737 010222      JSR PC,SETCH            ;CMD 1 = SET CHARACTERISTIC.
5984 026622 004737 010246      JSR PC,SETRW           ;CMD2=REWIND
5985 026626 105037 003526      CLR      STAFLG ;LET STAFLG :B= #0 ;CLEAR START FLAG
5986 026632 104422 50426$: BREAK ; DO A SUPVSR BREAK FIRST.      TRAP  C$BRK
5987
5988 026634 50427$:              ;WHILE THERE IS MORE ROOM IN SEQ TABLE:
5989 026634 020127 003740      CMP      R1,#SEQEND
5990 026640 002003 50430$: BGE
5991 026642 004737 026372      JSR      PC,RANWR      ;STORE A WRITE CMD IN SEQUENCE TABLE.
5992 026646 000772 50427$: BR
5993 026650 50430$:
5994 026650 012711 177777      MOV      #END,(R1)      ;STORE END OF SEQUENCE CODE IN TABLE.
5995 026654 004737 010266      JSR      PC,EXALL      ;EXECUTE ALL CMDs IN SEQ TBL ON UNITS.
5996 026660 012701 003540      MOV      #CMDSEQ,R1    ;INIT SEQ TBL POINTER,
5997 026664 005702              TST      R2              ;REPEAT UNTIL EOT IS REACHED
5998 026666 001761              BEQ      50426$
5999 026670 105237 003524      INCB    ALLEOT          ;SET ALL UNITS @ EOT FLAG
6000 026674 000240      NOP
6001 026676 000240      NOP
6002 026700 000240      NOP
6003 026702 004737 027674      JSR      PC,TSWEOT      ;WRITE ONE RECORD BEYOND EOT ON ALL UNITS
6004
6005
6006
6007 026706 105037 003524      CLR      ALLEOT
6008 026712 004737 010246      JSR PC,SETRW           ;SO THAT SHORTER READ STOP DISTANCE
6009 026716 012711 177777      MOV      #END,(R1)     ;SHALL POSITION HEAD IN CLEAN IRG GAP
6010 026722 004737 010266      JSR PC,EXALL           ;READ REV THAT EXTRA REC TO RE-POSITION TAPE
6011
6012
6013 026726 104432 50426$: EXIT TST ;CLEAR ALL UNITS @ EOT FLAG
6014 026730 000002              .WORD   L10035-.
6015
6016
6017 026732 104401 50426$: .EVEN ;STORE REWIND IN SEQ TBL.
6018
6019
6020
6021
6022
6023
6024
6025
6026 026734 104401 50426$: .ENDTST ;STORE END IN SEQ TBL.
6027
6028 026734 112737 000001 003515  T4:: BGNTST ;EXECUTE REWIND CMD ON ALL UNITS
6029 026742 112737 000001 003514  MOV      #1,RANDOM      ;SET THE RANDOM OPERATIONS FLAG.
MOV      #1,EXPBOT       ;SET EXPECT BOT FLAG.

```



TEST 4: READ COMPATABILITY/READ UTILITY.

```

6030
6031 026750 004737 017142      JSR    PC,FIRSTU      ;FIND THE FIRST UNIT.
6032 026754 004737 007072      JSR    PC,SOFINIT    ;INIT DEVICE
6033 026760 103404              BCS    11$
6034 026762              ERRDF  2,NSSRM,STAERM ;REPORT TS05 NOT READY
                                TRAP   C$ERDF
                                .WORD  2
                                .WORD  NSSRM
                                .WORD  STAERM
6035
6036 026772 004737 007526      11$: JSR    PC,MDSET      ;GO DO SETUP'S
6037 026776 004737 010222      JSR    PC,SETCH      ;CMD 1 = SET CHARACTERISTIC.
6038 027002 004737 010246      JSR    PC,SETRW     ;CMD2=REWIND.
6039 027006 105037 003526      CLRB  STAF LG ;LET STAF LG :B= ;CLEAR START FLAG
6040 027012 012721 104001      MOV   @RDF,(R1) ;CMD3 = READ FORWARD.
6041 027016 012721 004000      MOV   @DATCNT,(R1) ;SET LENGTH TO MAX FOR UNKNOWN LENGTHS.
6042 027022 012721 077777      MOV   @77777,(R1) ;SET RECORD COUNT TO MAX FOR WHOLE TAPE.
6043 027026 012721 000007      MOV   @RANP,(R1) ;PATTERN = RANDOM.
6044 027032 012711 177777      MOV   @END,(R1) ;STORE END OF SEQUENCE CODE IN TABLE.
6045 027036 004737 010266      JSR   PC,EXALL     ;EXECUTE ALL CMDS IN SEQ TBL ON ALL UNITS.
6046 027042 105237 003524      INCB  ALLEOT      ;FLAG TO ALLOW ALL UNITS AT EOT TO READ REV
6047 027046 012701 003540      MOV   @CMDSEQ,R1  ;INIT CMD SEQ TBL POINTER.
6048 027052 012721 104401      MOV   @RDR,(R1) ;CMD1 = READ REVERSE.
6049 027056 012721 004000      MOV   @DATCNT,(R1) ;SET LENGTH TO MAX FOR UNKNOWN LENGTHS.
6050 027062 012721 077777      MOV   @77777,(R1) ;RECORD COUNT = MAX FOR WHOLE TAPE.
6051 027066 012721 000007      MOV   @RANP,(R1) ;PATTERN = RANDOM.
6052 027072 012711 177777      MOV   @END,(R1) ;STORE END OF SEQUENCE CODE IN TABLE.
6053 027076 004737 010266      JSR   PC,EXALL     ;GO EXECUTE READ REV. OF ENTIRE TAPE.
6054 027102 105037 003524      CLRB  ALLEOT      ;CLEAR ALL UNITS @ EOT FLAG
6055
6056 027106              EXIT   TST
                                TRAP   C$EXIT
                                .WORD  L10036-.
6057
6058              .EVEN
6059
6060 027112              ENDTST
                                L10036:
                                TRAP   C$ETST
6061
6062              .SBTTL TEST 5: EXECUTE OPERATOR SELECTED COMMAND SEQUENCE.
6063
6064              ;**
6065              ; TEST TO EXECUTE OPERATOR SELECTED COMMAND SEQUENCE.
6066              ;--
6067
6068 027114              BGNTST
                                TS::
                                027114
6069
6070 027114 105037 003515      CLRB  RANDOM      ;CLEAR RANDOM MODE FLAG.
6071 027120 112737 000001 003514 MOVB  @1,EXPBOT   ;SET EXPECT BOT FLAG.
6072
6073 027126 004737 017142      JSR   PC,FIRSTU    ;FIND THE FIRST UNIT.
6074 027132 004737 007072      JSR   PC,SOFINIT   ;INIT DEVICE
6075 027136 103404              BCS    11$
6076 027140              ERRDF  2,NSSRM,STAERM ;REPORT TS05 NOT READY
                                TRAP   C$ERDF
                                .WORD  2
                                .WORD  NSSRM
                                .WORD  STAERM

```

TEST 5: EXECUTE OPERATOR SELECTED COMMAND SEQUENCE.

```

027142 000002
027144 004536
027146 006120
6077
6078 027150 004737 007526 11#: JSR PC,MDSET ;GO DO SETUP'S
6079 027154 113737 002216 003521 MOV B PIRE,IRE ;MOVE INHIBIT RFC ERROR REPORT FLAG.
6080 027162 004737 010222 JSR PC,SETCH ;CMD 1 = SET CHARACTERISTIC.
6081 027166 013737 002220 003542 MOV CHAR,CMDSEQ+2 ;MOVE CHAR CODE FROM P TBL TO SEQ TBL.
6082 027174 012702 002222 MOV #CMD0,R2 ;R2 POINTS TO CMD2 IN SOFT P TABLE.
6083 027200 004737 027652 JSR PC,PTCMDS ;MOVE CMD 2 FROM P TBL TO SEQ TBL.
6084 027204 004737 027652 JSR PC,PTCMDS ;MOVE CMD 3 FROM P TBL TO SEQ TBL.
6085 027210 004737 027652 JSR PC,PTCMDS ;MOVE CMD 4 FROM P TBL TO SEQ TBL.
6086 027214 004737 027652 JSR PC,PTCMDS ;MOVE CMD 5 FROM P TBL TO SEQ TBL.
6087 027220 004737 027652 JSR PC,PTCMDS ;MOVE CMD 6 FROM P TBL TO SEQ TBL.
6088 027224 004737 027652 JSR PC,PTCMDS ;MOVE CMD 7 FROM P TBL TO SEQ TBL.
6089 027230 004737 027652 JSR PC,PTCMDS ;MOVE END CMD FROM P TBL TO SEQ TBL.
6090 027234 005037 003442 CLR JLOOP ;CLEAR JMP CMD LOOP COUNT.
6091 027240 105037 003526 CLR STAF LG ;CLEAR START FLAG
6092 027244 012701 003540 MOV #CMDSEQ,R1 ;INIT SEQUENCE TABLE POINTER.
6093 027250 3#: ;WHILE (R1) NE #END DO ;WHILE THERE ARE CMDS LEFT IN SEQUENCE TBLE:
6094 027250 50431#:
6095 027250 021127 177777 CMP (R1),#END
6096 027254 001574 BEQ 50432#
6097 027256 022711 000040 CMP #JMP.C,(R1) ;IS THIS A JUMP CMD?
6098 027262 001024 BNE 6# ;BR IF NOT.
6099 027264 062701 000002 ADD #2,R1 ;LET R1 := R1 + #2 ;POINT TO BR F.
6100 027270 012137 003444 MOV (R1)+,JLOC ;SAVE BR F (LOCATION).
6101 027274 022137 003442 CMP (R1)+,JLOOP ;HAS LOOP COUNT BE SATISFIED?
6102 027300 001003 BNE 1# ;IF NOT, JMP AGAIN.
6103 027302 062701 000002 ADD #2,R1 ;IF SO, ADJUST SEQ POINTER
6104 027306 000760 BR 3# ;AND GO TO NEXT COMMAND.
6105 027310 005237 003442 1#: INC JLOOP ;UPDATE THE LOOP COUNT.
6106 027314 012701 003540 MOV #CMDSEQ,R1 ;INIT CMD SEQ TABLE POINTER.
6107 027320 005337 003444 2#: DEC JLOC ;DECR LOCATION COUNTER.
6108 027324 001751 BEQ 3# ;IF THIS IS THE RIGHT LOCATION TO JMP TO, GO SET
6109 027326 062701 000010 ADD #10,R1 ;IF NOT, UPDATE SEQ POINTER TO NEXT CMD.
6110 027332 000772 BR 2# ;DO IT AGAIN.
6111
6112 027334 022711 000020 6#: CMP #DLY.C,(R1) ;DELAY?
6113 027340 001026 BNE 4# ;BR IF NOT.
6114 027342 062701 000004 ADD #4,R1 ;R1 = LOCATION OF N COUNT.
6115 027346 011137 003440 MOV (R1),TIME2 ;SAVE N COUNT.
6116 027352 7#: DELAY 1 ;GO TO SUPER-WAIT 1 MSEC.
027352 012727 000001 MOV #1,(PC)+
027356 000000 .WORD 0
027360 013727 002116 MOV L#DLY,(PC)+
027364 000000 .WORD 0
027366 005367 177772 DEC -6(PC)
027372 001375 BNE .-4
027374 005367 177756 DEC -22(PC)
027400 001367 BNE .-20
6117 027402 005337 003440 DEC TIME2
6118 027406 001361 BNE 7#
6119 027410 062701 000004 ADD #4,R1 ;LET R1 := R1 + #4 ;POINT TO NEXT CMD.
6120 027414 000715 BR 3# ;GO CHECK NEXT CMD.
6121 027416 004737 011232 4#: JSR PC,SETUP ;GO SETUP THE COMMAND BLOCK.
6122 027422 50433#: ;WHILE NCNT LT NCNT1 DO ;WHILE THERE ARE RECORDS REMAINING:

```



## TEST 5: EXECUTE OPERATOR SELECTED COMMAND SEQUENCE.

```

6123 027422 023737 003412 003414      CMP      NCNT,NCNT1
6124 027430 002103                    BGE      50434$
6125 027432 004737 011124              JSR PC,CMDAC      ;STORE CMD ASCII IN ERROR MSG.
6126 027436 004737 010564              JSR PC,EXSUB     ;ISSUE CMD TO ALL,AWAIT INTS,CHECK STATUS.
6127 027442 023727 003420 100017      CMP      CMDWRD,#GES ;IF CMD IS GET STATUS THEN:
6128 027450 001002                    BNE      50435$
6129 027452 004737 017452              JSR PC,PRXST     ;PRINT EXTENDED STATUS REGISTERS.
6130
6131 027456                    50435$:
6132 027456 004737 017540              JSR PC,CKHAE     ;CHECK HALT AFTER EACH CMD FLAG.
6133 027462 012702 000701              MOV      #1,R2   ;SET ALL UNITS AT BOT/EOT.
6134 027466 004737 017142              JSR PC,FIRSTU   ;FIND FIRST UNIT.
6135 027472                    50436$: ;WHILE DEVTBL(R5) NE #END DO ;WHILE THERE ARE MORE UNITS:
6136 027472 026527 002604 177777      CMP      DEVTBL(R5),#END
6137 027500 001426                    BEQ      50437$
6138 027502 032737 000400 003420      BIT      #MOD.CO,CMDWRD ;IF CMD IS REVERSE THEN:
6139 027510 001406                    BEQ      50440$
6140 027512 032765 000002 003502      BIT      #XO.BOT,EOTFLG(R5) ;IF NOT AT BOT THEN:
6141 027520 001001                    BNE      50441$
6142 027522 005002                    CLR      R2      ;CLEAR EOT/BOT FLAG.
6143
6144 027524                    50441$:
6145 027524 000411                    BR       50442$      ;ELSE IF CMD IS NOT REVERSE:
6146 027526                    50440$:
6147 027526 032765 000001 003502      BIT      #XO.EOT,EOTFLG(R5)
6148 027534 001404                    BEQ      50443$
6149 027536 032737 000001 003420      BIT      #CMD.CO,CMDWRD
6150 027544 001001                    BNE      50444$
6151 027546                    50443$:
6152
6153 027546 005002                    CLR      R2      ;IF NOT AT EOT OR NOT A MOTION CMD THEN:
6154
6155 027550                    50444$: ;LET R2 := #0 ;CLEAR EOT/BOT FLAG.
6156
6157 027550                    50442$:
6158 027550 004737 017210              JSR PC,NEXTU     ;FIND NEXT UNIT
6159
6160 027554 000746                    BR       50436$
6161 027556                    50437$:
6162 027556 020227 000001              CMP      R2,#1   ;IF ALL UNIT ARE AT EOT/BOT THEN:
6163 027562 001016                    BNE      50445$   ;FORCE TERMINATION OF COMMAND.
6164 027564 013737 003412 003414      MOV      NCNT,NCNT1
6165 027572 005237 003414              INC      NCNT1
6166 027576 105237 003524              INCB    ALLEOT   ;FLAG ALL UNITS AT EOT/BOT TO ALLOW VERIFY OF D
6167 027602 023727 003426 000002      CMP      CMDLG,#2 ;WHEN WRITING IS CURRENT COMMAND
6168 027610 001002                    BNE      50446$
6169 027612 004737 027674              JSR PC,T5WEOT   ;GO WRITE/READ REV ONE RECORD BEYOND EOT
6170
6171 027616                    50446$:
6172
6173 027616 000402                    BR       50447$
6174 027620                    50445$:
6175 027620 105037 003524              CLRB    ALLEOT   ;WHEN NOT ALL @EOT, CLEAR FLAG
6176
6177 027624                    50447$:
6178 027624 005237 003412              INC      NCNT    ;UPDATE RECORD COUNT.
6179 027630 013737 003420 003424      MOV      CMDWRD,PCMDWD ;SAVE PREVIOUS COMMAND WORD.

```

TEST 5: EXECUTE OPERATOR SELECTED COMMAND SEQUENCE.

```

6180
6181 027636 000671
6182 027640
6183 027640 004737 016126
6184
6185
6186 027644 000601
6187 027646
6188
6189 027646
027646 104432
027650 000140
TRAP C$EXIT
.WORD L10037-.

6190
6191 ; SUBROUTINE TO MOVE A COMMAND FROM THE SOFTWARE P TABLE TO
6192 ; THE COMMAND SEQUENCE TABLE.
6193 ; INPUTS: R2 = POINTER TO SOFT "P" TABLE
6194 ; OUTPUTS:
6195 ; REGISTERS: R3.
6196 ; CALLS:
6197
6198 027652 012203 PTCMDS: MOV (R2)+,R3 ;R3 = COMMAND TABLE INDEX.
6199 027654 005303 DEC R3
6200 027656 006303 ASL R3
6201 027660 016321 003752 MOV CMDTBL(R3),(R1)+ ;MOVE COMMAND WORD.
6202 027664 012221 MOV (R2)+,(R1)+ ;MOVE # OF BYTES.
6203 027666 012221 MOV (R2)+,(R1)+ ;MOVE # OF OPERATIONS.
6204 027670 012221 MOV (R2)+,(R1)+ ;MOVE PATTERN CODE.
6205 027672 000207 RTS PC
6206
6207 ; SUBROUTINE TO WRITE THEN READ REVERSE ONE RECORD BEYOND EOT
6208 ; INPUTS:
6209 ; OUTPUTS:
6210 ; REGISTERS:
6211 ; CALLS: CMDAC,EXSUB,CKHAE
6212
6213 027674 000240 TSWEOT: NOP
6214 027676 000240 NOP
6215 027700 004737 010564 JSR PC,EXSUB ;WRITE ONE RECORD BEYOND EOT
6216 027704 004737 017540 JSR PC,CKHAE ;SO THAT READ SHORTER STOP DISTANCE
6217 ;SHALL POSITION HEAD IN CLEAN IRG GAP
6218 027710 012700 000002 MOV #2,R0 ;SET UP COUNTER FOR EOT
6219 027714 013737 003420 003424 1$: MOV CMDWRD,PCMDWD ;LET PCMDWD := CMDWRD ;REPOSITION TAPE
6220 027722 012737 104401 003420 MOV #RDR,CMDWRD ;LET CMDWRD := #RDR ;BEFORE EXTRA RECORD
6221 027730 012737 000004 003426 MOV #4,CMDLG ;BY READING REVERSE
6222 027736 013737 003420 002330 MOV CMDWRD,CMDPKT ;LET CMDPKT := CMDWRD CLR.BY #BRF.C
6223 027744 042737 004000 002330 BIC #BRF.C,CMDPKT
6224 027752 013737 002330 003422 MOV CMDPKT,CMDSAV ;LET CMDSAV := CMDPKT ;THAT RECORD TO ALLOW
6225 027760 013737 003410 002332 MOV DATARD,CMDPKT+CP.ADL ;NEXT COMMAND IN THE
6226 027766 004737 011124 JSR PC,CMDAC ;TABLE TO BE EXECUTED
6227 027772 004737 010564 JSR PC,EXSUB
6228 027776 004737 017540 JSR PC,CKHAE
6229 030002 005300 DEC R0 ;FOUND EOT YET?
6230 030004 001343 BNE 1$ ;NO,KEEP GOING
6231 030006 000207 RTS PC ;YES,RETURN
6232
6233 .EVEN
6234

```



TEST 5: EXECUTE OPERATOR SELECTED COMMAND SEQUENCE.

```

6235 030010          ENDTST
      030010          L10037:
      030010 104401          TRAP      C$ETST
6236
6237 030012          ENDMOD
6238
6239          .TITLE  PARAMETER CODING
6240
6241          .SBTTL  HARDWARE PARAMETER CODING SECTION
6242
6243 030012          BGNMOD
6244
6245          ;**
6246          ; THE HARDWARE PARAMETER CODING SECTION CONTAINS MACROS
6247          ; THAT ARE USED BY THE SUPERVISOR TO BUILD P-TABLES.  THE
6248          ; MACROS ARE NOT EXECUTED AS MACHINE INSTRUCTIONS BUT ARE
6249          ; INTERPRETED BY THE SUPERVISOR AS DATA STRUCTURES.  THE
6250          ; MACROS ALLOW THE SUPERVISOR TO ESTABLISH COMMUNICATIONS
6251          ; WITH THE OPERATOR.
6252          ;--
6253
6254 030012          BGNHRD
      030012 000042          .WORD  L10040-L$HARD/2
      030014          L$HARD::
6255
6256 030014          GPRMA  TSSADR,0,0,160010,177564,YES
      030014 000031          .WORD  T$CODE
      030016 030052          .WORD  TSSADR
      030020 160010          .WORD  T$LLOLIM
      030022 177564          .WORD  T$HILIM
6257 030024          GPRMD  TSSVCT,2,0,777,60,776,YES
      030024 001032          .WORD  T$CODE
      030026 030067          .WORD  TSSVCT
      030030 000777          .WORD  777
      030032 000060          .WORD  T$LLOLIM
      030034 000776          .WORD  T$HILIM
6258 030036          GPRMD  TSSUNT,4,0,1,0,1,NO
      030036 002022          .WORD  T$CODE
      030040 030076          .WORD  TSSUNT
      030042 000001          .WORD  1
      030044 000000          .WORD  T$LLOLIM
      030046 000001          .WORD  T$HILIM
6259 030050          EXIT  HRD
      030050 024004          .WORD  T$CODE
6260
6261          .NLIST  BEX
6262 030052          124      123      104  TSSADR: .ASCIZ  /TSDB ADDRESS/
6263 030067          126      105      103  TSSVCT: .ASCIZ  /VECTOR/
6264 030076          123      105      114  TSSUNT: .ASCIZ  /SELECT DRIVE 0-1/
6265          .LIST  BEX
6266          .EVEN
6267
6268 030120          ENDHRD
      030120          .EVEN
6269
6270          L10040:
          .SBTTL  SOFTWARE PARAMETER CODING SECTION

```

## SOFTWARE PARAMETER CODING SECTION

```

6271
6272
6273
6274
6275
6276
6277
6278
6279
6280
6281 030120          BGNSFT
      030120 000302
      030122
6282 030122          L$SOFT::
      030122 000130      GPRML CLRM,0,1,YES
      030124 030726      .WORD L10041-L$SOFT/2
      030126 000001      .WORD T$CODE
6283 030130          .WORD CLRM
      030130 000130      GPRML RRVN,0,400,YES
      030132 030745      .WORD T$CODE
      030134 000400      .WORD RRVN
6284 030136          .WORD 400
      030136 001130      GPRML RCVERM,2,400,YES
      030140 031050      .WORD T$CODE
      030142 000400      .WORD RCVERM
6285 030144          .WORD 400
      030144 001130      GPRML HAEM,2,1,YES
      030146 030774      .WORD T$CODE
      030150 000001      .WORD HAEM
6285 030152          .WORD 1
      030152 003130      GPRML IRECM,6,400,YES
      030154 031124      .WORD T$CODE
      030156 000400      .WORD IRECM
6287 030160          .WORD 400
      030160 004024      XFERT NEXTSP
      030162          .WORD T$CODE
6288 030162          GPRML BADTM,4,1,YES
      030162 002130      .WORD T$CODE
      030164 031020      .WORD BADTM
      030166 000001      .WORD 1
6289 030170          NEXTSP: GPRML DINTM,6,1,YES
      030170 003130      .WORD T$CODE
      030172 031101      .WORD DINTM
      030174 000001      .WORD 1
6290 030176          GPRML IREM,12,1,YES
      030176 005130      .WORD T$CODE
      030200 031171      .WORD IREM
      030202 000001      .WORD 1
6291 030204          GPRML CHGM,10,1,YES
      030204 004130      .WORD T$CODE
      030206 031145      .WORD CHGM
      030210 000001      .WORD 1
6292 030212          XFERF ENDSP1
      030212 127044      .WORD T$CODE
6293 030214          GPRMD CHARM,14,0,377,0,777,YES
      030214 006032      .WORD T$CODE
      030216 031222      .WORD CHARM
      030220 000377      .WORD 377

```



## SOFTWARE PARAMETER CODING SECTION

	030222	000000			.WORD	T#LOLIM
	030224	000777			.WORD	T#HILIM
6294	030226		GPRMD	CMD2M,16,D,37,1,33,YES		
	030226	007052			.WORD	T#CODE
	030230	031247			.WORD	CMD2M
	030232	000037			.WORD	37
	030234	000001			.WORD	T#LOLIM
	030236	000033			.WORD	T#HILIM
6295	030240		GPRMD	BPCRM,20,D,-1,1,DATCNT,YES		
	030240	010052			.WORD	T#CODE
	030242	031255			.WORD	BPCRM
	030244	177777			.WORD	-1
	030246	000001			.WORD	T#LOLIM
	030250	004000			.WORD	T#HILIM
6296	030252		GPRMD	NUMBM,22,D,-1,1,77777,YES		
	030252	011052			.WORD	T#CODE
	030254	031267			.WORD	NUMBM
	030256	177777			.WORD	-1
	030260	000001			.WORD	T#LOLIM
	030262	077777			.WORD	T#HILIM
6297	030264		GPRMD	PATTM,24,D,17,0,10,YES		
	030264	012052			.WORD	T#CODE
	030266	031307			.WORD	PATTM
	030270	000017			.WORD	17
	030272	000000			.WORD	T#LOLIM
	030274	000010			.WORD	T#HILIM
6298	030276		GPRMD	CMD3M,26,D,37,1,33,YES		
	030276	013052			.WORD	T#CODE
	030300	031416			.WORD	CMD3M
	030302	000037			.WORD	37
	030304	000001			.WORD	T#LOLIM
	030306	000033			.WORD	T#HILIM
6299	030310		GPRMD	BPCRM,30,D,-1,1,DATCNT,YES		
	030310	014052			.WORD	T#CODE
	030312	031255			.WORD	BPCRM
	030314	177777			.WORD	-1
	030316	000001			.WORD	T#LOLIM
	030320	004000			.WORD	T#HILIM
6300	030322		GPRMD	NUMBM,32,D,-1,1,77777,YES		
	030322	015052			.WORD	T#CODE
	030324	031267			.WORD	NUMBM
	030326	177777			.WORD	-1
	030330	000001			.WORD	T#LOLIM
	030332	077777			.WORD	T#HILIM
6301	030334		GPRMD	PATTM,34,D,17,0,10,YES		
	030334	016052			.WORD	T#CODE
	030336	031307			.WORD	PATTM
	030340	000017			.WORD	17
	030342	000000			.WORD	T#LOLIM
	030344	000010			.WORD	T#HILIM
6302	030346		GPRMD	CMD4M,36,D,37,1,33,YES		
	030346	017052			.WORD	T#CODE
	030350	031424			.WORD	CMD4M
	030352	000037			.WORD	37
	030354	000001			.WORD	T#LOLIM
	030356	000033			.WORD	T#HILIM
6303	030360		GPRMD	BPCRM,40,D,-1,1,DATCNT,YES		

## SOFTWARE PARAMETER CODING SECTION

	030360	020052				.WORD	T#CODE
	030362	031255				.WORD	BPCRM
	030364	177777				.WORD	-1
	030366	000001				.WORD	T#LOLIM
	030370	004000				.WORD	T#HILIM
6304	030372		GPRMD	NUMBM,42,D,-1,1,77777,YES			
	030372	021052				.WORD	T#CODE
	030374	031267				.WORD	NUMBM
	030376	177777				.WORD	-1
	030400	000001				.WORD	T#LOLIM
	030402	077777				.WORD	T#HILIM
6305	030404		GPRMD	PATTM,44,D,17,0,10,YES			
	030404	022052				.WORD	T#CODE
	030406	031307				.WORD	PATTM
	030410	000017				.WORD	17
	030412	000000				.WORD	T#LOLIM
	030414	000010				.WORD	T#HILIM
6306	030416		GPRMD	CMD5M,46,D,37,1,33,YES			
	030416	023052				.WORD	T#CODE
	030420	031432				.WORD	CMD5M
	030422	000037				.WORD	37
	030424	000001				.WORD	T#LOLIM
	030426	000033				.WORD	T#HILIM
6307	030430		GPRMD	BPCRM,50,D,-1,1,DATCNT,YES			
	030430	024052				.WORD	T#CODE
	030432	031255				.WORD	BPCRM
	030434	177777				.WORD	-1
	030436	000001				.WORD	T#LOLIM
	030440	004000				.WORD	T#HILIM
6308	030442		GPRMD	NUMBM,52,D,-1,1,77777,YES			
	030442	025052				.WORD	T#CODE
	030444	031267				.WORD	NUMBM
	030446	177777				.WORD	-1
	030450	000001				.WORD	T#LOLIM
	030452	077777				.WORD	T#HILIM
6309	030454		GPRMD	PATTM,54,D,17,0,10,YES			
	030454	026052				.WORD	T#CODE
	030456	031307				.WORD	PATTM
	030460	000017				.WORD	17
	030462	000000				.WORD	T#LOLIM
	030464	000010				.WORD	T#HILIM
6310	030466		XFER	ENDSP2			
	030466	002004				.WORD	T#CODE
6311	030470		ENDSP1: XFER	ENDSP3			
	030470	076004				.WORD	T#CODE
6312	030472		ENDSP2: GPRMD	CMD6M,56,D,37,1,33,YES			
	030472	027052				.WORD	T#CODE
	030474	031440				.WORD	CMD6M
	030476	000037				.WORD	37
	030500	000001				.WORD	T#LOLIM
	030502	000033				.WORD	T#HILIM
6313	030504		GPRMD	BPCRM,60,D,-1,1,DATCNT,YES			
	030504	030052				.WORD	T#CODE
	030506	031255				.WORD	BPCRM
	030510	177777				.WORD	-1
	030512	000001				.WORD	T#LOLIM
	030514	004000				.WORD	T#HILIM



## SOFTWARE PARAMETER CODING SECTION

6314	030516		GPRMD	NUMBM,62,D,-1,1,77777,YES		
	030516	031052			.WORD	T\$CODE
	030520	031267			.WORD	NUMBM
	030522	177777			.WORD	-1
	030524	000001			.WORD	T\$LOLIM
	030526	077777			.WORD	T\$HILIM
6315	030530		GPRMD	PATTM,64,D,17,0,10,YES		
	030530	032052			.WORD	T\$CODE
	030532	031307			.WORD	PATTM
	030534	000017			.WORD	17
	030536	000000			.WORD	T\$LOLIM
	030540	000010			.WORD	T\$HILIM
6316	030542		GPRMD	CMD7M,66,D,37,1,33,YES		
	030542	033052			.WORD	T\$CODE
	030544	031446			.WORD	CMD7M
	030546	000037			.WORD	37
	030550	000001			.WORD	T\$LOLIM
	030552	000033			.WORD	T\$HILIM
6317	030554		GPRMD	BPCRM,70,D,-1,1,DATCNT,YES		
	030554	034052			.WORD	T\$CODE
	030556	031255			.WORD	BPCRM
	030560	177777			.WORD	-1
	030562	000001			.WORD	T\$LOLIM
	030564	004000			.WORD	T\$HILIM
6318	030566		GPRMD	NUMBM,72,D,-1,1,77777,YES		
	030566	035052			.WORD	T\$CODE
	030570	031267			.WORD	NUMBM
	030572	177777			.WORD	-1
	030574	000001			.WORD	T\$LOLIM
	030576	077777			.WORD	T\$HILIM
6319	030600		GPRMD	PATTM,74,D,17,0,10,YES		
	030600	036052			.WORD	T\$CODE
	030602	031307			.WORD	PATTM
	030604	000017			.WORD	17
	030606	000000			.WORD	T\$LOLIM
	030610	000010			.WORD	T\$HILIM
6320	030612		GPRMD	CMD8M,76,D,37,1,33,YES		
	030612	037052			.WORD	T\$CODE
	030614	031454			.WORD	CMD8M
	030616	000037			.WORD	37
	030620	000001			.WORD	T\$LOLIM
	030622	000033			.WORD	T\$HILIM
6321	030624		GPRMD	BPCRM,100,D,-1,1,DATCNT,YES		
	030624	040052			.WORD	T\$CODE
	030626	031255			.WORD	BPCRM
	030630	177777			.WORD	-1
	030632	000001			.WORD	T\$LOLIM
	030634	004000			.WORD	T\$HILIM
6322	030636		GPRMD	NUMBM,102,D,-1,1,77777,YES		
	030636	041052			.WORD	T\$CODE
	030640	031267			.WORD	NUMBM
	030642	177777			.WORD	-1
	030644	000001			.WORD	T\$LOLIM
	030646	077777			.WORD	T\$HILIM
6323	030650		GPRMD	PATTM,104,D,17,0,10,YES		
	030650	042052			.WORD	T\$CODE
	030652	031307			.WORD	PATTM

SOFTWARE PARAMETER CODING SECTION

030654	000017											.WORD	17
030656	000000											.WORD	T\$LOLIM
030660	000010											.WORD	T\$HILIM
6324	030662												
	030662												
	022004											.WORD	T\$CODE
6325	030664												
	030664											.WORD	T\$CODE
	030666											.WORD	T\$SMD
	030670											.WORD	1
6326	030672												
	030672											.WORD	T\$CODE
6327	030674												
	030674											.WORD	T\$CODE
	030676											.WORD	FAST
	030700											.WORD	1
6328	030702												
	030702											.WORD	T\$CODE
6329	030704												
	030704											.WORD	T\$CODE
	030706											.WORD	WTBF
	030710											.WORD	1
6330	030712												
	030712											.WORD	T\$CODE
6331	030714												
	030714											.WORD	T\$CODE
	030716											.WORD	RDBF
	030720											.WORD	1
6332	030722												
	030722											.WORD	T\$CODE
6333	030724												
	030724											.WORD	T\$CODE
6334	030726												
6335	030726												
	030726												
6336													
6337													
6338													
6339	030726	103	114	105	CLRM:	.NLIST	BEX						
6340	030745	122	105	123	RRVM:	.ASCIZ	/CLEAR COUNTERS/						
6341	030774	110	101	114	HAEM:	.ASCIZ	/RESET RANDOM VARIABLES/						
6342	031020	102	101	104	BADTM:	.ASCIZ	/HALT AFTER EACH CMD/						
6343	031050	120	122	111	RCVERM:	.ASCIZ	/BAD TAPE SPOT DETECTION/						
6344	031101	104	111	123	DINTM:	.ASCIZ	/PRINT RECOVERABLE ERRORS/						
6345	031124	111	116	110	IRECM:	.ASCIZ	/DISABLE INTERRUPTS/						
6346	031145	103	110	101	CHGM:	.ASCIZ	/INHIBIT RECOVERY/						
6347	031171	111	116	110	IREM:	.ASCIZ	/CHANGE CMD SEQUENCE/						
6348	031222	103	110	101	CHARM:	.ASCIZ	/INHIBIT RFC ERROR REPORT/						
6349	031247	103	115	104	CMD2M:	.ASCIZ	/CHARACTERISTICS CODE/						
6350	031255	102	122	106	BPCRM:	.ASCIZ	"CMD/2"						
6351	031267	043	040	117	NUMBM:	.ASCIZ	/BRF COUNT/						
6352	031307	120	101	124	PATM:	.ASCIZ	/# OF OPERATIONS/						
6353	031317	104	105	106	TSMD:	.ASCIZ	/PATTERN/						
6354	031350	122	105	101	RDBF:	.ASCIZ	/DEFAULT SWITCH SETTINGS?/						
6355	031367	127	122	111	WTBF:	.ASCIZ	/READ BUFFERING/						
6356	031407	061	060	060	FAST:	.ASCIZ	/WRITE BUFFERING/						
6357						.LIST	/100ips/						
							BEX						



SOFTWARE PARAMETER CODING SECTION

```

6358                                     .EVEN
6359
6360                                     .NLIST BEX
6361 031416      103      115      104 CMD3M: .ASCIZ "CMD/3"
6362 031424      103      115      104 CMD4M: .ASCIZ "CMD/4"
6363 031432      103      115      104 CMD5M: .ASCIZ "CMD/5"
6364 031440      103      115      104 CMD6M: .ASCIZ "CMD/6"
6365 031446      103      115      104 CMD7M: .ASCIZ "CMD/7"
6366 031454      103      115      104 CMD8M: .ASCIZ "CMD/8"
6367                                     .LIST BEX
6368                                     .EVEN
6369
6370
6371
6372                                     ;*****
6373                                     ;*****
6374                                     ;   PATCH AREA
6375                                     ; AND AN ADJUSTMENT TO ACCOUNT FOR THE "LASTAD BIT7" HACK
6376                                     ; DESCRIBED IN "SUPPRG.MEM" (FOR REV C).
6377                                     ;
6378
6379 031462      PATCH:: .BLKW 64.
6380
6382      032000      .=.!377+1
6384
6385 032000      LASTAD
6386
6387      032000 000000      .EVEN
6388      032002 000000      .WORD 0
6389      032004      L$LAST::
6390      032004      ENDMOD      .WORD 0
6391
6392      .SBTTL HARD CODED P-TBL
6393
6394      ;**
6395      ;DIAG IS PRE-PARAMETERIZED PER TBL
6396      ;--
6397      BGNSETUP 1
6398      BGNPTAB
6399
6400      L10042:
6401      172522
6402      224
6403      0
6404      ENDPTAB
6405      L10044:
6406      ENDSETUP
6407
6408      .END

```

Symbol table

ACK.C = 100000 G	BTADDR 002616 G	CP.CNT= 000006 G	C#TPRI= 000013	EXPBOT 003514 G
ADR = 000020 G	BTMSG1 015152	CRLF 005741 G	DATARD 003410 G	EXSUB 010564 G
ALLEOT 003524 G	BTMSG2 015237	CRLFSP 005744 G	DATAWT 003406 G	EXTFEA 002322 G
ASSEMB= 000010	BTMSG3 015307	CTCC 003450 G	DATCNT= 004000 G	E#END = 002100
ATTNM 004603 G	BTPT 003512 G	CVC.C = 040000 G	DATERM 005752 G	E#LOAD= 000035
AUDRPM 005114 G	BTRPT 020224 G	C#AU = 000052	DEVTBL 002604 G	FAST 031407
AUDRUN 005146 G	BT0 003046 G	C#AUTO= 000061	DFPTBL 002174 G	FATSM 004642 G
AUTODM 023644	BT1 003120 G	C#BRK = 000022	DFTSCH= 000040 G	FIRSTU 017142 G
BADTM 031020	BT2 003172 G	C#BSEG= 000004	DIA = 100006 G	FMT.CO= 000040 G
BADTSW 002210 G	BT3 003244 G	C#BSUB= 000002	DIABLK= 003406 G	FMT.C1= 000100 G
BENBSW 002326 G	CHAR 002220 G	C#CEFG= 000045	DIACNT= 000020 G	FTLCNT 003366 G
BFSEQ 025110 G	CHARM 031222	C#CLCK= 000062	DIAGMC= 000000	FUNRM 004622 G
BFSEQ0 025134	CHGFLG 002214 G	C#CLEA= 000012	DINT 002212 G	F#AU = 000015
BFSEQ1 025206	CHGM 031145	C#CLOS= 000035	DINTM 031101	F#AUTO= 000020
BFSEQ2 025220	CHKERR 013250 G	C#CLP1= 000006	DLY = 000020 G	F#BGN = 000040
BFSEQ3 025312	CH.EAI= 000040 G	C#CVC= 000036	DLY.C = 000020 G	F#CLEA= 000007
BFSEQ4 025364	CH.ERI= 000020 G	C#DCLN= 000044	DRI = 100013 G	F#DU = 000016
BFSEQ5 025426	CH.ESS= 000200 G	C#DODU= 000051	DROPDH 005065 G	F#END = 000041
BFSEQ6 025500	CKDATA 016526 G	C#DRPT= 000024	DROPED 003522 G	F#HARD= 000004
BFSEQ7 025552	CKDCNT 017136	C#DU = 000053	DROPN 017450	F#HW = 000013
BFSEQ8 025604	CKDFF 017140	C#EDIT= 000003	DROPU 017240 G	F#INIT= 000006
BFSEQ9 025636	CKHAE 017540 G	C#ERDF= 000055	DROPUA 017364	F#JMP = 000050
BFSE10 025660	CKHRTN 017626	C#ERHR= 000056	DRORTN 017442	F#MOD = 000000
BGNFLG= 003460	CLN = 101012 G	C#ERRO= 000060	DTAERM 005752 G	F#MSG = 000011
BINC 016112	CLRERR 012724 G	C#ERSF= 000054	DTAER2 005226 G	F#PROT= 000021
BIT0 = 000001 G	CLRFLG 002204 G	C#ERSO= 000057	DTAER3 005275 G	F#PWR = 000017
BIT00 = 000001 G	CLRM 030726	C#ESCA= 000010	DTAER4 005337 G	F#RPT = 000012
BIT01 = 000002 G	CMDAC 011124 G	C#ESEG= 000005	DTAER5 005360 G	F#SEG = 000003
BIT02 = 000004 G	CMDASC 004040 G	C#ESUB= 000003	EF.CON= 000036 G	F#SOFT= 000005
BIT03 = 000010 G	CMDD 002222 G	C#ETST= 000001	EF.HSS= 000040 G	F#SRV = 000010
BIT04 = 000020 G	CMDLG 003426 G	C#EXIT= 000032	EF.NEW= 000035 G	F#SUB = 000002
BIT05 = 000040 G	CMDPKM 004346 G	C#GETB= 000026	EF.PWR= 000034 G	F#SW = 000014
BIT06 = 000100 G	CMDPKT 002330 G	C#GETW= 000027	EF.RBO= 000020 G	F#TEST= 000001
BIT07 = 000200 G	CMDSAV 003422 G	C#GMAN= 000043	EF.RES= 000037 G	GCMDA 011176 G
BIT08 = 000400 G	CMDSEQ 003540 G	C#GPHR= 000042	EF.RWB= 000030 G	GENPAT 011616 G
BIT09 = 001000 G	CMDSE2 003550 G	C#GPLO= 000030	EF.STA= 000040 G	GES = 100017 G
BIT1 = 000002 G	CMDTBL 003752 G	C#GPRI= 000040	EINC 016120	GETSTM 005507 G
BIT10 = 002000 G	CMDWRD 003420 G	C#INIT= 000011	END = 177777 G	GIT 012110
BIT11 = 004000 G	CMD.CO= 000001 G	C#INLP= 000020	ENDERF= 003472	GOWAIT 012424 G
BIT12 = 010000 G	CMD.C1= 000002 G	C#MANI= 000050	ENDFLG= 003526	GSCPCK 002340 G
BIT13 = 020000 G	CMD.C2= 000004 G	C#MEM = 000031	ENDSP 030726	G#CNT0= 000200
BIT14 = 040000 G	CMD.C3= 000010 G	C#MSG = 000023	ENDSP1 030470	G#DELM= 000372
BIT15 = 100000 G	CMD.C4= 000020 G	C#OPEN= 000034	ENDSP2 030472	G#DISP= 000003
BIT2 = 000004 G	CMD2M 031247	C#PNTB= 000014	ENDSP3 030664	G#EXCP= 000400
BIT3 = 000010 G	CMD3M 031416	C#PNTF= 000017	ENDSP4 030724	G#HILI= 000002
BIT4 = 000020 G	CMD4M 031424	C#PNTS= 000016	ENDSP5 030722	G#LOLI= 000001
BIT5 = 000040 G	CMD5M 031432	C#PNTX= 000015	EOTFLG 003502 G	G#NO = 000000
BIT6 = 000100 G	CMD6M 031440	C#QIO = 000377	ERCVER 002207 G	G#OFFS= 000400
BIT7 = 000200 G	CMD7M 031446	C#RDBU= 000007	ERLOG 003466 G	G#OFSI= 000376
BIT8 = 000400 G	CMD8M 031454	C#REFG= 000047	ERRREC 003471 G	G#PRMA= 000001
BIT9 = 001000 G	CNTBGN= 002626	C#RESE= 000033	ERS = 100411 G	G#PRMD= 000002
BOE = 000400 G	CNTEND= 003376	C#REVI= 000003	ERSFLG 003525 G	G#PRML= 000000
BORERS 015356 G	CNTLEN= 000550 G	C#RFLA= 000021	EVL = 000004 G	G#RADA= 000140
BPCRM 031255	CODELM 004162 G	C#RPT = 000025	EXALL 010266 G	G#RADB= 000000
BRCPK 002344 G	CP.ADH= 000004 G	C#SEFG= 000046	EXARTN 010562	G#RADD= 000040
BRFCNT 003416 G	CP.ADL= 000002 G	C#SPRI= 000041	EXCRTN 012422	G#RADL= 000120
BRF.C = 004000 G	CP.CMD= 000000 G	C#SVEC= 000037	EXCUTE 012114 G	G#RADO= 000020



## Symbol table

G\$XFER=	000004	L\$CCP	002106	G	L10012	023352	NSSRM	004536	G	RAWTM	026430	G
G\$YES =	000010	L\$CLEA	023776	G	L10013	023642	NUMBM	031267		RCVERM	031050	
HAEM	002206	L\$CO	002032	G	L10014	024036	NURTY1	005422	G	RDBF	031350	
HALTM	030774	L\$DEPO	002011	G	L10015	024110	OFLINM	005456	G	RDBUF	002314	G
HELP =	000000	L\$DESC	002136	G	L10016	024214	ONEFIL =	000001		RDF =	104001	G
HOE =	100000	L\$DESP	002076	G	L10017	025702	OPFLAG	003536	G	RDR =	104401	G
HRDCNT	003356	L\$DEVP	002060	G	L10020	024430	OPP.C =	020000	G	RECCNT	003376	G
HSSW	002320	L\$DISP	002124	G	L10021	024454	O\$APTS=	000000		RECLOG	003465	G
IBE =	010000	L\$DLY	002116	G	L10022	024474	O\$AU =	000001		RECREG	007066	
IDU =	000040	L\$DTP	002040	G	L10023	024514	O\$BGNR=	000001		RECTAP	010124	G
IER =	020000	L\$DTYP	002034	G	L10024	024534	O\$BGNS=	000001		RECUO	013060	G
IE.C =	000200	L\$DU	024040	G	L10025	024554	O\$DU =	000001		RERM	005017	G
INIT10	021364	L\$DUT	002072	G	L10026	024574	O\$ERRT=	000000		RETRYC	003460	G
INIT15	021662	L\$DVTY	002164	G	L10027	024614	O\$GNSW=	000001		REV	002324	G
INIT16	021702	L\$EF	002052	G	L10030	024634	O\$POIN=	000001		REWRT	015532	G
INTFLG	003472	L\$ENVI	002044	G	L10031	024654	O\$SETU=	000000		RFBC	002726	G
INTPRI=	000340	L\$ETP	002102	G	L10032	024712	PASCNT	003326	G	RFCERM	004521	G
INVRT	007764	L\$EXP1	002046	G	L10033	025076	PATCH	031462	G	RFREC	003026	G
IRE	003521	L\$EXP4	002064	G	L10034	026536	PATERN	003446	G	RFUNR	003036	G
IREC	002213	L\$EXPS	002066	G	L10035	026732	PATRO	011702	G	RLEXM	004556	G
IRECH	031124	L\$HARD	030014	G	L10036	027112	PATR1	011740	G	RNF =	125401	G
IREM	031171	L\$HIME	002120	G	L10037	030010	PATR2	011760	G	RNOPSC=	177740	G
ISR =	000100	L\$HPCP	002016	G	L10040	030120	PATR3	011770	G	RNR =	105401	G
IXE =	004000	L\$HPTP	002022	G	L10041	030726	PATR4	012014	G	RNYM	004753	G
I\$AU =	000041	L\$HW	002174	G	L10042	032010	PATR5	012026	G	RPF =	105001	G
I\$AUTO=	000041	L\$ICP	002104	G	L10044	032016	PATR6	012040	G	RPR =	125001	G
I\$CLN =	000041	L\$INIT	021364	G	MBR =	100012	PATR7	012060	G	RPTCNT	003462	G
I\$DU =	000041	L\$LADP	002026	G	MDSET	007526	PATR8	012112	G	RPTFLG	003517	G
I\$HRD =	000041	L\$LAST	032004	G	MEMOM	023250	PATBL	011660		RPT1A	020472	
I\$INIT=	000041	L\$LOAD	002100	G	MISCFG	003531	PATM	031307		RPT1B	020547	
I\$MOD =	000041	L\$LUN	002074	G	MOD.CO=	000400	PCMDWD	003424	G	RPT1C	020620	
I\$MSG =	000041	L\$MREV	002050	G	MOD.C1=	001000	PIRE	002216	G	RPT1D	020671	
I\$PROT=	000040	L\$NAME	002000	G	MOD.C2=	002000	PNT =	001000	G	RPT1E	021117	
I\$PTAB=	000041	L\$PRIO	002042	G	MOD.C3=	004000	PRI =	002000	G	RPT1F	020775	
I\$PWR =	000041	L\$PROT	021356	G	MOVMSG	012774	PRI00 =	000000	G	RPT1G	021046	
I\$RPT =	000041	L\$PRT	002112	G	MSGCNT=	000020	PRI01 =	000040	G	RPT1I	021243	
I\$SEG =	000041	L\$REPP	002062	G	MSGPKA	002544	PRI02 =	000100	G	RPT1J	021147	
I\$SETU=	000041	L\$REV	002010	G	MSGPKT	002354	PRI03 =	000140	G	RPT1K	021234	
I\$SFT =	000041	L\$RPT	017630	G	MSGPK0	002374	PRI04 =	000200	G	RRANV	002205	G
I\$SRV =	000041	L\$SOFT	030122	G	MSGPK1	002414	PRI05 =	000240	G	RRBC	002666	G
I\$SUB =	000041	L\$SPC	002056	G	MSGPK2	002434	PRI06 =	000300	G	RRCL =	000020	G
I\$TST =	000041	L\$SPCP	002020	G	MSGPK3	002454	PRI07 =	000340	G	RRREC	003006	G
JLOC	003444	L\$SPTP	002024	G	MS.RFC=	000004	PRXST	017452	G	RRUNR	003016	G
JLOOP	003442	L\$STA	002030	G	MS.XS0=	000006	PTCMD5	027652	G	RRVM	030745	
JMP =	000040	L\$SW	002204	G	MS.XS1=	000010	PWRFLG	003527	G	RTLE	014550	G
JMP.C =	000040	L\$TEST	002114	G	MS.XS2=	000012	RANB	003432	G	RTLRTN	014674	
J\$JMP =	000167	L\$TIML	002014	G	MS.XS3=	000014	RANBC =	153624	G	RWCPK	002350	G
LENMSK	003430	L\$UNIT	002012	G	MS.XS4=	000016	RANCMD	026220		RWD =	102010	G
LOE =	040000	L10000	002202		NCMD.C=	177740	RANDOM	003515	G	RWERR	003467	G
LOG	015626	L10001	002330		NCNT	003412	RANP =	000007	G	RSSAVE	003452	G
LOT =	000010	L10002	006116		NCNT1	003414	RANRD	026260	G	SCCNT	003336	G
L\$ACP	002110	L10003	007070		NEXTSP	030170	RANS	003434	G	SCERM	004475	G
L\$APT	002036	L10004	010100		NXTU	017210	RANSC =	032561	G	SCH =	140004	G
L\$AU	024112	L10005	010106		NINUSE=	177774	RANW	026504	G	SCHBK	002474	G
L\$AUT	002070	L10006	010114		NODEV	005543	RANWR	026372	G	SCHCNT=	000012	G
L\$AUTO	023354	L10007	010122		NOINTM	004670	RANWV	026416	G	SEQEND	003740	G
		L10010	021354		NRDYM	023740	RASFR	026456	G	SETCH	010222	G



M11

PARAMETER CODING

MACRO V05.03 Friday 22-May-87 08:12 Page 26-86

SEQ 0142

Symbol table

SETDEF	010026	G	TRAPD4	003530	G	T#HILI=	000010	T1	024216	G	WRTYCT	003316	G
SETRW	010246	G	TRAP4	023770	G	T#LAST=	000001	T1SWB	003523	G	WRTYER	003464	G
SETUP	011232	G	TSAM	004705	G	T#LOLI=	000000	T1.1	024226		WRTYFG	003463	G
SFF	= 105010	G	TSBA	= 002514	G	T#LSYM=	010000	T1.10	024636		WRUNR	002776	G
SFPTBL	002204	G	TSC.FC=	177717	G	T#LTND=	000005	T1.11	024656		WSM	= 140006	G
SFR	= 105410	G	TSC.TC=	177761	G	T#NEST=	177777	T1.12	024742		WSMBK	002506	G
SOFINI	007072	G	TSDB	002514	G	T#NSO =	000000	T1.2	024432		WSSR	012740	G
SRF	= 104010	G	TSMD	031317		T#NS1 =	000005	T1.3	024456		WTBF	031367	
SRR	= 104410	G	TSNP	003534	G	T#NS2 =	000002	T1.4	024476		WTBUF	002316	G
STAERM	006120	G	TSSR	002524	G	T#PCNT=	000000	T1.5	024516		WTM	= 100011	G
STAER1	006436		TSSREG	003454	G	T#PTAB=	010043	T1.6	024536		WTMFLG	003456	G
STAER2	006616		TSUNT	003532	G	T#PTHV=	000001	T1.7	024556		WTR	= 101011	G
STAER3	006675		TSVCT	002534	G	T#PTNU=	000001	T1.8	024576		WTV	= 104105	G
STAER4	006733		TS.A16=	000400	G	T#SAVL=	177777	T1.9	024616		WTVERM	004430	G
STAER5	006753		TS.A17=	001000	G	T#SEGL=	177777	T2	025704	G	WTYBRF	015150	
STAER6	006562		TS.NBA=	002000	G	T#SIZE=	000005	T3	026540	G	WTYCMD	015144	
STAER7	006530		TS.NXM=	004000	G	T#SUBN=	000000	T4	026734	G	WTYWRD	015146	
STAFLG	003526	G	TS.OFL=	000100	G	T#TAGL=	177777	T5	027114	G	XST2	= *****	GX
SVCGBL=	000000		TS.RMR=	010000	G	T#TAGN=	010045	TSWEOT	027674	G	X#ALWA=	000000	
SVCINS=	000001		TS.SC =	100000	G	T#TEMP=	000000	UAM	= 000200	G	X#FALS=	000040	
SVCSUB=	000000		TS.SPE=	020000	G	T#TEST=	000005	UNIMLK	005653		X#OFFS=	000400	
SVCTAG=	000000		TS.SSR=	000200	G	T#TSTM=	177777	UNL	= 100412	G	X#TRUE=	000020	
SVCTST=	000000		TS.UPE=	040000	G	T#TSTS=	000001	UNREC	003470	G	X0.BOT=	000002	G
SMBFLG	003520	G	TSiMD	002312	G	T#AU =	010016	URERM	005041	G	X0.EOT=	000001	G
SMB.C =	010000	G	TSSADR	030052		T#AUT=	010013	VFEXC	016212	G	X0.LET=	020000	G
SWSET	004231	G	TS5CL	002564	G	T#CLE=	010014	VFISU	016440	G	X0.ONL=	000100	G
S#LSYM=	010000		TS5INT	002554	G	T#DAT=	010044	VFYCNT	003346	G	X0.RLL=	010000	G
TCCRA	013454		TS5INO	010074	G	T#DU =	010015	VFYDAT	016126	G	X0.RLS=	040000	G
TCC0	013474	G	TS5IN1	010102	G	T#HAR=	010040	VFYFLG	003516	G	X0.TMK=	100000	G
TCC1	013512	G	TS5IN2	010110	G	T#HW =	010000	VFY.C =	000100	G	X0.WLK=	000004	G
TCC2	013530	G	TS5IN3	010116	G	T#INI=	010012	WAITF	007204	G	X2.BFE=	000100	G
TCC3	013640	G	TS5SW	002574	G	T#MSG=	010003	WLKCHK	007416	G	X2.EFE=	000200	G
TCC4	013656	G	TSSUNT	030076		T#PC =	000001	WLKZRO	011774		X2.EXT=	*****	GX
TCC5	014272	G	TS5VCT	030067		T#PRO=	010011	WRBC	002626	G	X2.OPM=	100000	G
TCC6	014370	G	T#ARGC=	000003		T#PTA=	010043	WRECL =	000020	G	X3.DCK=	000010	G
TCC7	014532	G	T#CODE=	001004		T#RPT=	010010	WRR	= 105005	G	X3.RNY=	157400	G
TC2RTN	013636		T#ERRN=	000002		T#SOF=	010041	WRREC	002766	G	X4.HSS=	100000	G
TIME1	003436	G	T#EXCP=	000000		T#SRV=	010007	WRT	= 104005	G	X4.RCE=	040000	G
TIME2	003440	G	T#FLAG=	000041		T#SUB=	010033	WRTCHK	007270	G	ZROPAT	011744	
TOERM	004453	G	T#FREE=	032016		T#SW =	010001	WRTCHR	007476	G	#LSTIN=	000001	
TOOMM	004727	G	T#GMAN=	000000		T#TES=	010037	WRTY	014676	G	#LSTTA=	000001	

. ABS. 032016 000 (RW,I,GBL,ABS,OVR)  
 000000 001 (RW,I,LCL,REL,CON)

Errors detected: 0

\*\*\* Assembler statistics

Work file reads: 303  
 Work file writes: 295  
 Size of work file: 28938 Words ( 114 Pages)  
 Size of core pool: 19684 Words ( 75 Pages)  
 Operating system: RSX-11M/PLUS (Under VAX/VMS)

Elapsed time: 00:04:16.49  
 CVTSED,CVTSED/-SP=SVC/ML,CVTSED