


# TR79F

TRDP/XXDP TR79F MONITOR  
MD-11-DMQUF-A

EP-DMQUF-A-DL-A  
COPYRIGHT © 1977  
FICHE 1 OF 1

MAR 1977  
**digital**  
MADE IN USA

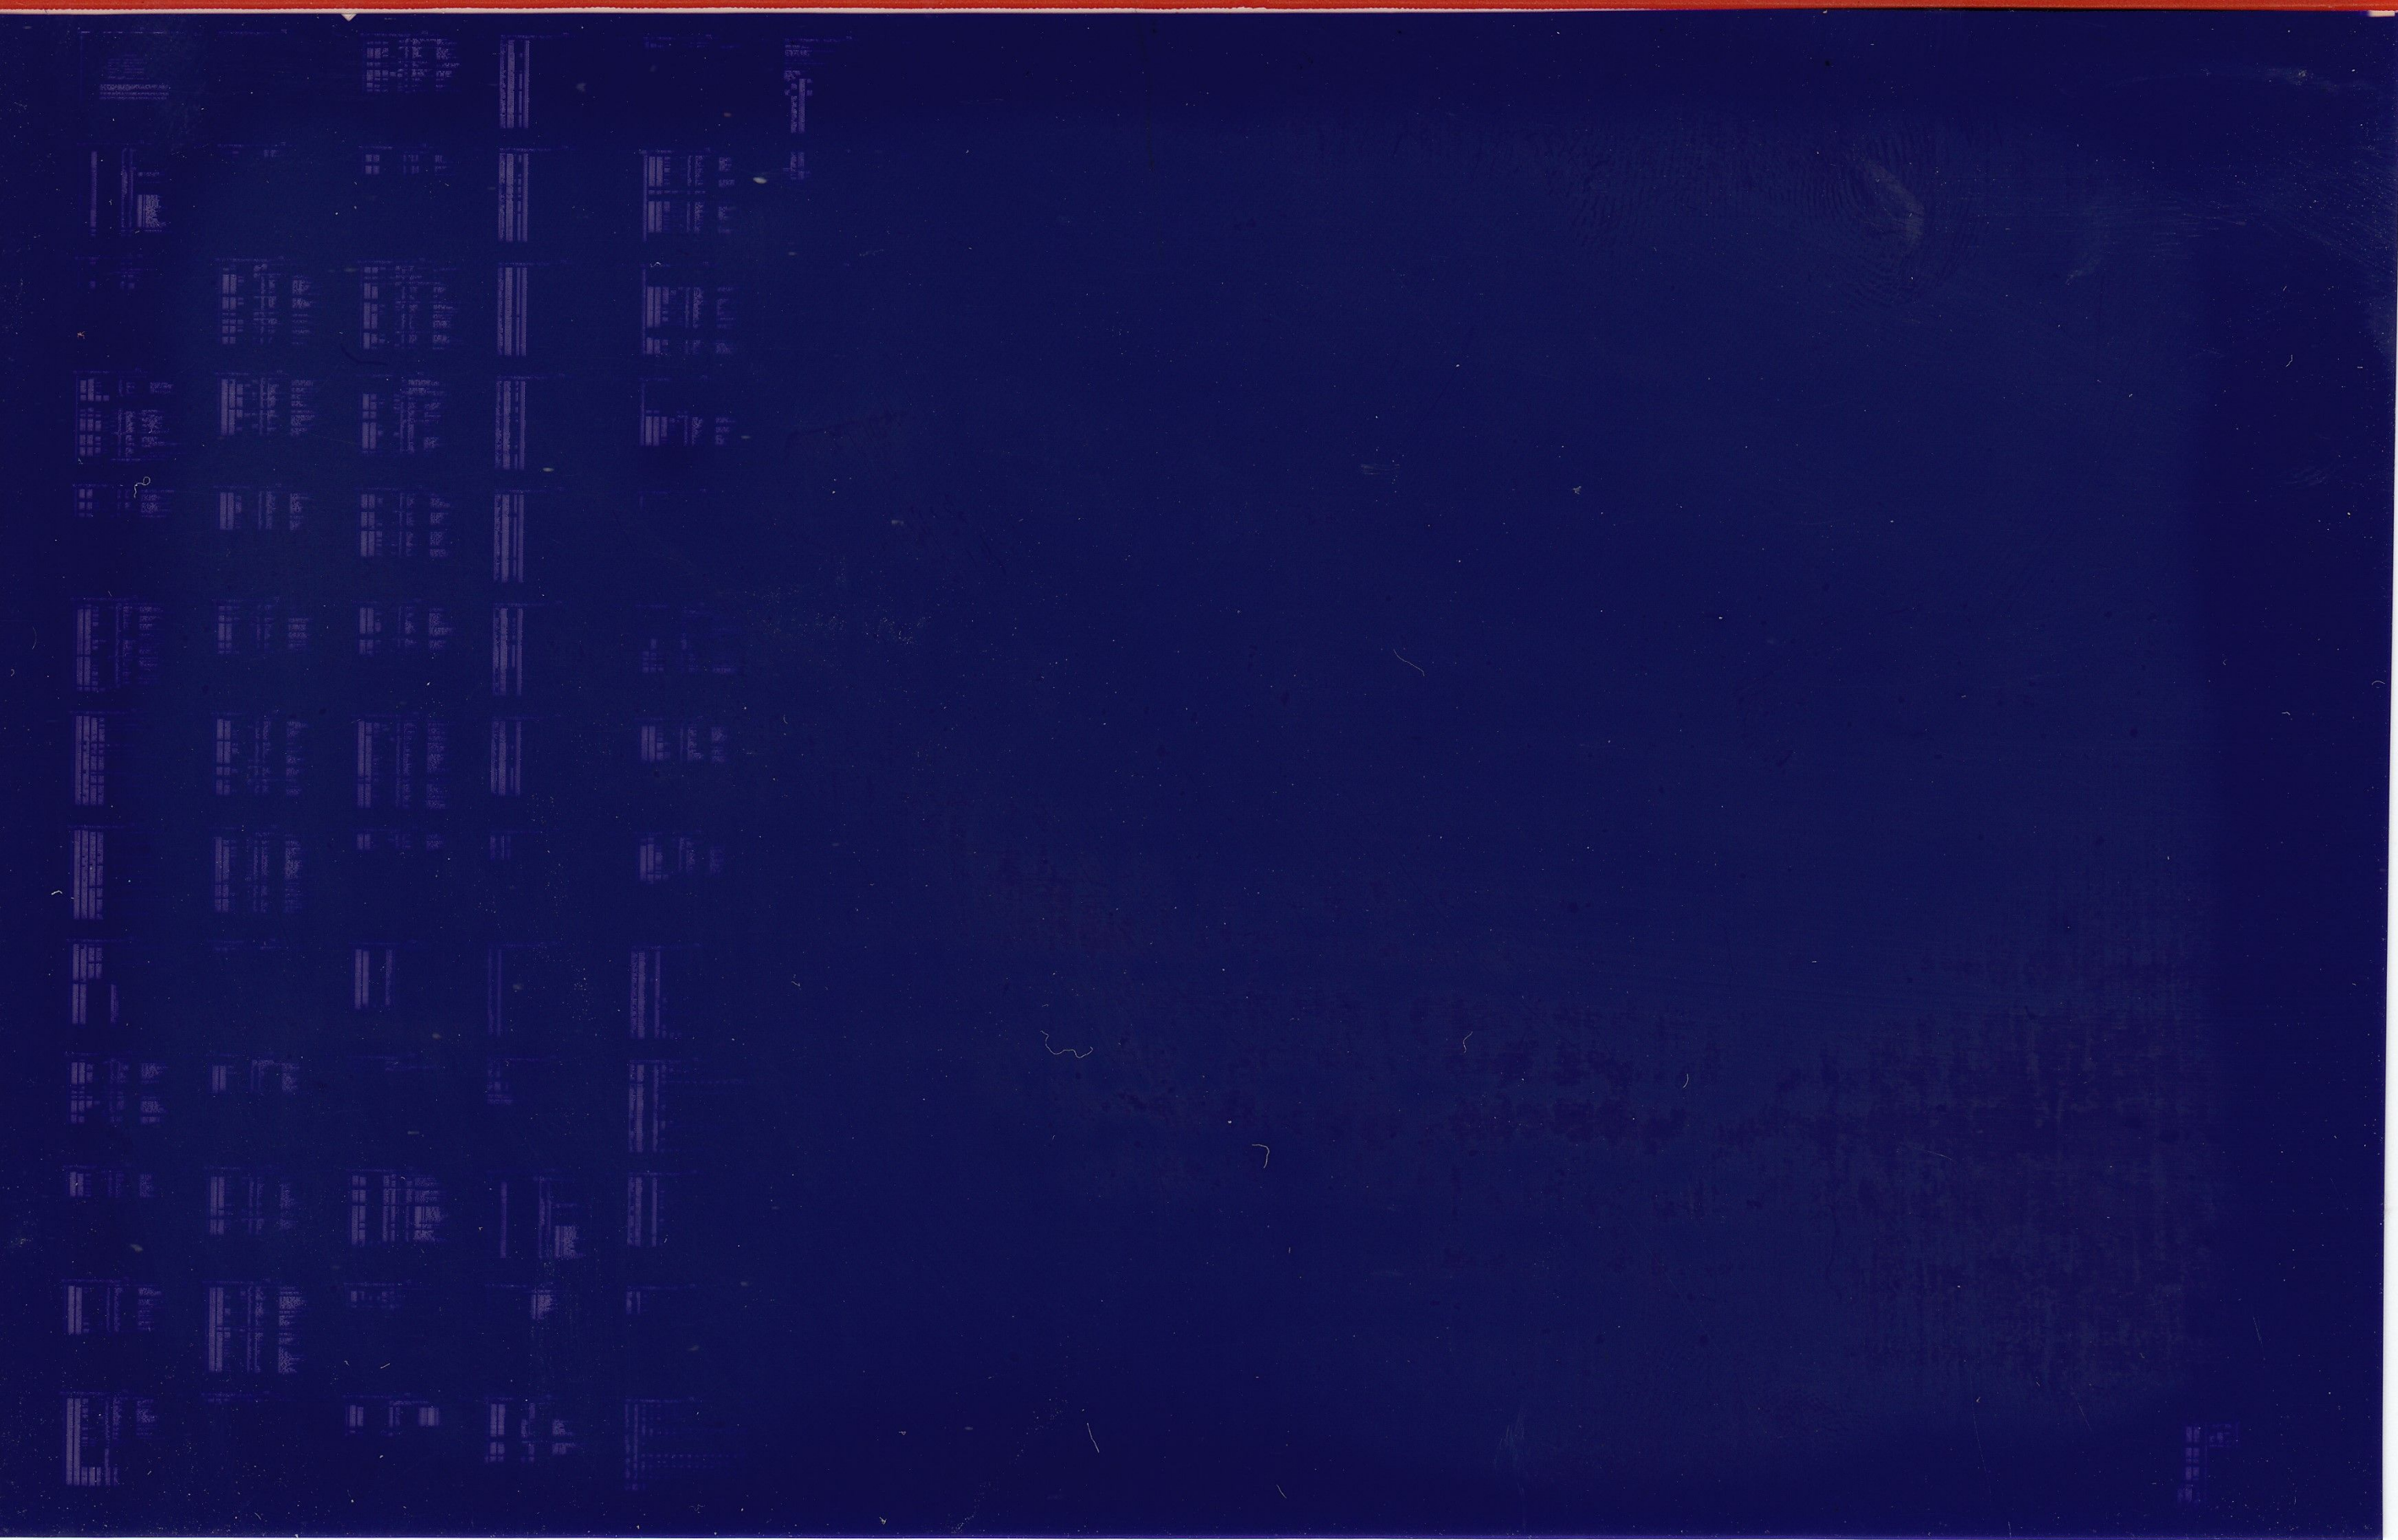



(1)		.LIST	BIN	
(1)		.SBTTL	EQUATES	
(1)	000000	R0	=%0	
(1)	000001	R1	=%1	
(1)	000002	R2	=%2	
(1)	000003	R3	=%3	
(1)	000004	R4	=%4	
(1)	000005	R5	=%5	
(1)	000006	R6	=%6	
(1)	000006	SP	=%6	
(1)	000007	PC	=%7	
(1)	000000	OPEN	=0	
(1)	177776	PS	=177776	
(1)	177776	PSW	=177776	
(1)	000340	PTY7	=340	
(1)	177716	XWCTR	=-62	; INDEX TO WRITE COUNTER.
(1)	177720	XFLMOD	=-60	; INDEX TO FILE MODE INDICATOR
(1)	177722	XFLCNT	=-56	; INDEX TO FILE COUNT
(1)	177724	XSVMAP	=-54	
(1)	177726	X SVCNT	=-52	
(1)	177730	XSVBLK	=-50	
(1)	177732	XSVNAM	=-46	; PHONY UFD BLOCK POINTERS
(1)	177736	XSVEXT	=-42	
(1)	177740	XSV DAT	=-40	
(1)	177742	XSVXX	=-36	
(1)	177744	X1STBK	=-34	
(1)	177746	XBKLG T	=-32	
(1)	177750	XLSTBK	=-30	
(1)	177752	XSVUPT	=-26	
(1)	177754	XBT	=-24	; INDEX TO BOOT ROUTINE.
(1)	177756	DRT	=-22	; INDEX TO DIRECTORY ROUTINE
(1)	177760	ZER	=-20	; INDEX TO ZERO ROUTINE
(1)	177762	DLT	=-16	; INDEX TO DELETE ROUTINE
(1)	177764	CLS	=-14	; INDEX TO CLOSE ROUTINE
(1)	177766	ETR	=-12	; INDEX TO ENTER ROUTINE
(1)	177770	SRH	=-10	; INDEX TO LOOKUP ROUTINE
(1)	177772	ALC	=-6	; INDEX TO ALLOCATE ROUTINE
(1)	177774	XSV	=-4	; INDEX TO SERVICE ROUTINE (DRIVER).
(1)	177776	XDN	=-2	; DRIVE NUMBER INDEX
(1)	000000	XCM	=0	; INDEX TO COMMAND REGISTER
(1)	000002	XWC	=2	; INDEX TO WORD COUNT
(1)	000004	XBA	=4	; INDEX TO BUS ADDRESS
(1)	000006	XDT	=6	; INDEX TO BLOCK NUMBER
(1)	000010	XCO	=10	; INDEX TO COMMAND
(1)	000012	XRD	=12	; INDEX TO READ COMMAND
(1)	000014	XWT	=14	; INDEX TO WRITE COMMAND
(1)	000016	XBC	=16	; INDEX TO REQUESTED BLOCK COUNT
(1)	000020	XDR	=20	; INDEX TO 1ST DIR BLOCK POINTER.
(1)	000022	XNB	=22	; INDEX TO LAST BLOCK # ALLOCATED.
(1)	000024	XXNAM	=24	; INDEX TO ASCII NAME IN DOB
(1)	010000	MONCNT	=10000	; MONITOR SIZE IS 4K
(1)	000024	MNBK	=24	; POINTER TO MONITOR CORE IMAGE.
(1)	000033	ALTMOD	=33	
(1)	000033	ALT1	=33	







```

(1)          .SBTTL SIZER, MONITOR RELOCATOR, AND OTHER GOODIES.
(1)          .=1000
(1) 001000 001000 000050' BEGIN: MOV #SPBOT,R6 ;SET UP STACK.
(1)          ;SIZE CORE AND UPDATE THE LITERALS OF RESIDENT MONITOR.
(1) 001004 012767 001072 176772 MOV #3$,4 ;POINT TIMEOUT TRAP TO 3$
(1) 001012 012700 174000 MOV #-4000,R0 ;DETERMINE TOP OF CORE IN 1K CHUNKS.
(1) 001016 005001 CLR R1
(1) 001020 062700 004000 1$: ADD #4000,R0
(1) 001024 062710 000000 ADD #0,(0) ;REFERENCE UNKNOWN LOC.
(1) 001030 005201 INC R1 ;IF HERE, NO TRAP OCCURRED.
(1) 001032 022701 000034 CMP #28.,R1 ;DONE 28 TIMES?
(1) 001036 001370 BNE 1$ ;BR IF NOT.
(1) 001040 062700 004000 ADD #4000,R0
(1) 001044 012767 000006 176732 2$: MOV #6,4 ;RESTORE ERROR TRAP.
(1) 001052 020127 000010 CMP R1,#8. ;8K OR GREATER?
(1) 001056 002010 BGE 4$ ;BR IF YES.
(1) 001060 004567 000642' JSR R5,MES ;INSUFFICIENT CORE MESSAGE.
(1) 001064 001435 NOCORE
(1) 001066 000000 HALT
(1) 001070 000777 BR ;LOCK IN HALT.
(1) 001072 012716 001044 3$: MOV #2$,(6) ;TRAPPED TO HERE. EXIT TO 2$
(1) 001076 000002 RTI
(1) 001100 006301 4$: ASL R1 ;READY TO TYPE CORE SIZE.
(1) 001102 116167 001236 000302 MOVB KCODE(1),AK+1
(1) 001110 116167 001237 000275 MOVB KCODE+1(1),AK+2
(1) 001116 166700 000112 SUB LIMIT+2,R0 ;SET UP NEW LOAD ADDRESS
(1) 001122 010001 MOV R0,R1
(1) 001124 010167 000652' MOV R1,RELCNT ;SAVE IT AT RELTMP
(1) 001130 012702 002624 MOV #LITTB,R2
(1) 001134 022712 177777 51$: CMP #-1,(R2) ;END OF TABLE?
(1) 001140 001402 BEQ 6$ ;BR IF YES.
(1) 001142 060132 ADD R1,2(R2)+ ;CORRECT FOR RELOCATION.
(1) 001144 000773 BR 51$
(1)          ;RELOCATE MONITOR TO TOP OF CORE.
(1) 001146 005001 6$: CLR R1 ;WHERE PROGRAM STARTS.
(1) 001150 016702 000060 MOV LIMIT+2,R2
(1) 001154 112120 7$: MOVB (1)+,(0)+ ;RELOCATE ONE BYTE AT A TIME.
(1) 001156 005302 DEC R2 ;DONE?
(1) 001160 001375 BNE 7$ ;CONTINUE RELOCATION.
(1) 001162 004567 000642' JSR R5,MES ;TYPE TITLE AND CORE SIZE.
(1) 001166 001330 NAME
(1) 001170 004567 000642' JSR R5,MES ;TYPE RESTART ADDR.
(1) 001174 001416 ARSTR
(1) 001176 016703 000136' MOV $COMC3,R3
(1) 001202 004767 001232' JSR PC,ITOA
(1) 001206 004567 000642' JSR R5,MES ;TYPE FOR HELP MESSAGE.
(1) 001212 001460 FHELP
(1) 001214 004567 000642' JSR R5,MES ;TYPE THE HELP MESSAGE
(1) 001220 001547 MNINST
(1) 001222 004767 000202' JSR PC,DELAY ;WAIT A BIT.
(1) 001226 016707 000136' MOV $COMC3,PC ;GOTO RESIDENT MONITOR.
(1) 001232 000000 000000 LIMIT: .LIMIT
(1)          .EVEN
(1) 001236 030040 030440 031040 KCODE: .ASCII ' 0 1 2 3 4 5 6 7 8 9 '
(1) 001244 031440 032040 032440
(1) 001252 033040 033440 034040
    
```

(1)	001260	034440				
(1)	001262	030061	030461	031061	.ASCII	'1011121314151617181920'
(1)	001270	031461	032061	032461		
(1)	001276	033061	033461	034061		
(1)	001304	034461	030062			
(1)	001310	030462	031062	031462	.ASCII	'2122232425262728'
(1)	001316	032062	032462	033062		
(1)	001324	033462	034062			
(1)	001330	052045	042122	020120	NAME:	.ASCII '"%TRDP - XXDP TR79F MONITOR M-11-DMQUF-A 21-OCT-76"'
(1)	001336	020055	054130	050104		
(1)	001344	052040	033522	043071		
(1)	001352	046440	047117	052111		
(1)	001360	051117	046440	030455		
(1)	001366	026461	046504	052521		
(1)	001374	026506	020101	030462		
(1)	001402	047455	052103	033455		
(1)	001410	066				
(1)	001411	040	020040	000113	AK:	.ASCIZ ' K'
(1)	001416	051045	051505	040524	ARSTRT:	.ASCIZ '%RESTART ADDR:'
(1)	001424	052122	040440	042104		
(1)	001432	035122	000			
(1)	001435	045	047111	052523	NOCORE:	.ASCIZ '%INSUFFICIENT CORE'
(1)	001442	043106	041511	042511		
(1)	001450	052116	041440	051117		
(1)	001456	000105				
(1)	001460	052045	020117	041101	FHELP:	.ASCIZ '%TO ABORT THE FOLLOWING HELP MESSAGE TYPE CTRL C (↑)%'
(1)	001466	051117	020124	044124		
(1)	001474	020105	047506	046114		
(1)	001502	053517	047111	020107		
(1)	001510	042510	050114	046440		
(1)	001516	051505	040523	042507		
(1)	001524	052040	050131	020105		
(1)	001532	052103	046122	041440		
(1)	001540	024040	041536	022451		
(1)	001546	000				
(1)	001547	045	052045	050131	MNINST:	.ASCII'"%TYPE:'
(1)	001554	035105				
(1)	001556	043045	041474	037122	.ASCII	'%F<CR> TO SET CONSOLE FILL COUNT'
(1)	001564	052040	020117	042523		
(1)	001572	020124	047503	051516		
(1)	001600	046117	020105	044506		
(1)	001606	046114	041440	052517		
(1)	001614	052116				
(1)	001616	042045	041474	037122	.ASCII	'%D<CR> FOR DIRECTORY ON CONSOLE, OR'
(1)	001624	043040	051117	042040		
(1)	001632	051111	041505	047524		
(1)	001640	054522	047440	020116		
(1)	001646	047503	051516	046117		
(1)	001654	026105	047440	122		
(1)	001661	045	027504	036106	.ASCII	'%D/F<CR> FOR SHORT DIRECTORY ON CONSOLE, OR'
(1)	001666	051103	020076	047506		
(1)	001674	020122	044123	051117		
(1)	001702	020124	044504	042522		
(1)	001710	052103	051117	020131		
(1)	001716	047117	041440	047117		
(1)	001724	047523	042514	020054		



(1)	001732	051117			
(1)	001734	042045	046057	041474	.ASCII '%D/L<CR> FOR DIRECTORY ON LINE PRINTER, OR'
(1)	001742	037122	043040	051117	
(1)	001750	042040	051111	041505	
(1)	001756	047524	054522	047440	
(1)	001764	020116	044514	042516	
(1)	001772	050040	044522	052116	
(1)	002000	051105	020054	051117	
(1)	002006	042045	046057	043057	.ASCII '%D/L/F<CR> FOR SHORT DIRECTORY ON LINE PRINTER.'
(1)	002014	041474	037122	043040	
(1)	002022	051117	051440	047510	
(1)	002030	052122	042040	051111	
(1)	002036	041505	047524	054522	
(1)	002044	047440	020116	044514	
(1)	002052	042516	050040	044522	
(1)	002060	052116	051105	054	
(1)	002065	045	020122	047503	.ASCII '%R COPY<CR> TO RUN COPY PROGRAM.'
(1)	002072	054520	041474	037122	
(1)	002100	052040	020117	052522	
(1)	002106	020116	047503	054520	
(1)	002114	050040	047522	051107	
(1)	002122	046501	054		
(1)	002125	045	020122	044506	.ASCII '%R FILENAME<CR> TO RUN ANY OTHER PROGRAM.'
(1)	002132	042514	040516	042515	
(1)	002140	041474	037122	052040	
(1)	002146	020117	052522	020116	
(1)	002154	047101	020131	052117	
(1)	002162	042510	020122	051120	
(1)	002170	043517	040522	027115	
(1)	002176	046045	043040	046111	.ASCII '%L FILENAME<CR> TO LOAD A PROGRAM ONLY'
(1)	002204	047105	046501	036105	
(1)	002212	051103	020076	047524	
(1)	002220	046040	040517	020104	
(1)	002226	020101	051120	043517	
(1)	002234	040522	020115	047117	
(1)	002242	054514			
(1)	002244	051445	041474	037122	.ASCII '%S<CR> TO START THE PROGRAM JUST LOADED.'
(1)	002252	052040	020117	052123	
(1)	002260	051101	020124	044124	
(1)	002266	020105	051120	043517	
(1)	002274	040522	020115	052512	
(1)	002302	052123	046040	040517	
(1)	002310	042504	026104		
(1)	002314	051445	040440	042104	.ASCII '%S ADDR<CR> TO START THE PROGRAM AT SPECIFIC ADDRESS'
(1)	002322	036122	051103	020076	
(1)	002330	047524	051440	040524	
(1)	002336	052122	052040	042510	
(1)	002344	050040	047522	051107	
(1)	002352	046501	040440	020124	
(1)	002360	050123	041505	043111	
(1)	002366	041511	040440	042104	
(1)	002374	042522	051523		
(1)	002400	041445	043040	046111	.ASCII '%C FILENAME<CR> TO RUN A CHAIN.'
(1)	002406	047105	046501	036105	
(1)	002414	051103	020076	047524	
(1)	002422	051040	047125	040440	

```
(1) 002430 041440 040510 047111
(1) 002436 054
(1) 002437 045 020103 044506
(1) 002444 042514 040516 042515
(1) 002452 050457 036126 051103
(1) 002460 020076 047524 051040
(1) 002466 047125 040440 041440
(1) 002474 040510 047111 044440
(1) 002502 020116 052521 041511
(1) 002510 020113 042526 044522
(1) 002516 054506 046440 042117
(1) 002524 027105
(1) 002526 051045 043105 051105
(1) 002534 052040 020117 054130
(1) 002542 050104 052440 042523
(1) 002550 020122 040515 052516
(1) 002556 046101 046440 026504
(1) 002564 030461 042055 050532
(1) 002572 040530 043040 051117
(1) 002600 040440 042104 052111
(1) 002606 047511 040516 020114
(1) 002614 042510 050114 022456
(1) 002622 000
(1) 002624
(1)
(1) 002624 000154'
(1) 002626 001570'
(1) 002630 001550'
(1) 002632 000332'
(1) 002634 000334'
(1) 002636 000270'
(1) 002640 000272'
(1) 002642 000250'
(1) 002644 000252'
(1) 002646 001510'
(1) 002650 002540'
(1) 002652 000054'
(1) 002654 000374'
(1) 002656 000342'
(1) 002660 002276'
(1) 002662 002152'
(1) 002664 001462'
(1) 002666 000136'
(1) 002670 000146'
(1) 002672 001032'
(1) 002674 003120'
(1) 002676 002102'
(1) 002700 002072'
(1) 002702 002156'
(1) 002704 001452'
(1) 002706 177777
(1)
(1) 000000'
```

.ASCII '%C FILENAME/QV<CR> TO RUN A CHAIN IN QUICK VERIFY MODE.'

.ASCIZ '%REFER TO XXDP USER MANUAL MD-11-DZQXA FOR ADDITIONAL HELP.%'

.EVEN

```
$LITTB: $REL1
$REL2+2
$REL3
$REL4
$REL4+2
$REL5
$REL5+2
$REL6
$REL6+2
$REL7
$REL10+2
$REL11+2
$REL12+2
$REL13+2
$REL14+2
$REL15+2
$REL16+2
$COMC3
COMCON+2
GETIND+2
LOAD4+2
$BUF
$BUF2
$TXNAM
$IDDB
-1
```

.CSECT MTDIRT

```

(1)                                     .SBTTL NON-RESIDENT CODE
(1)      000000' 000000'                .CSECT
(1)                                     :DIRECTORY ROUTINE.
(1)      000000' 005726                NRDIR: TST      (SP)+      ;POP OFF 1ST STACK ELEMENT.
(1)      000002' 012667 002410'        MOV      (SP)+,FILLCT ;GET FILL COUNT.
(1)      000006' 012667 001466'        MOV      (SP)+,CURDRV  ;GET THE CURRENT DRIVE NUMBER.
(1)      000012' 012667 000136'        MOV      (SP)+,$COMC3  ;GET RES MONITOR RESTART ADDR.
(1)      000016' 012667 001124'        MOV      (SP)+,KBPTR   ;GET KYBD POINTER.
(1)      000022' 005002                CLR      R2           ;FOR DEVICE SET ROUTINE.
(1)      000024' 004767 001442'        JSR      PC,SETI      ;SET INPUT. NO NAME.
(1)      000030' 105067 000030        CLRB     FSTMOD       ;ASSUME NO FAST MODE SWITCH.
(1)      000034' 004767 000034'        JSR      PC,NRGTSW    ;GET SWITCHES.
(1)      000040' 004567 002114'        JSR      R5,BCLEAR    ;CLEAR NAME TO '?'S
(1)      000044' 004506' 000077 000011 IFNAM,77,9.
(1)      000052' 010565 177720        MOV      R5,XFLMOD(R5) ;INDICATE WILD MODE.
(1)      000056' 004775 177756        JSR      PC,ADRT(R5)  ;GO OUTPUT DIRECTORY.
(1)      000062' 000207                RTS      PC           ;RETURN.

(1)      000064' 000      FSTMOD: .BYTE 0
(1)      000066' 000066'                .EVEN

(1)      000066' 105267 177772        SETFST: INCB     FSTMOD ;SET FAST MODE.
(1)      000072' 000400                BR      NRGTSW

(1)      000074' 012701 000144'        NRGTSW: MOV      #NRSWTB,R1 ;POINT TO NON-RESIDENT SWITCH TABLE.
(1)      000100' 000167 000552'        JMP      GTOKK        ;GO SET SWITCHES.

(1)      000104' 016767 000030 001004' LPSW:  MOV      LPS,MREG ;CHANGE STATUS REG.
(1)      000112' 016767 000024 001000'      MOV      LPB,MCUT    ;CHANGE BUFFER REG.
(1)      000120' 052767 000200 002410'      BIS      #200,FILLCT ;MAKE FILLCOUNT NEGATIVE.
(1)      000126' 012702 000014        MOV      #14,R2      ;OUTPUT A FORM FEED.
(1)      000132' 004767 000202'        JSR      PC,DELAY    ;WAIT FOR FORM FEED DONE.
(1)      000136' 000756                BR      NRGTSW       ;SEE ABOUT OTHER SWITCHES.
(1)      000140' 177514                LPS:    177514        ;LINE PRINTER STAT REG ADDR.
(1)      000142' 177516                LPB:    177516        ;LINE PRINTER BUFFER REG ADDR.

(1)      000144'                NRSWTB:
(2)      000144' 000066'                .WORD   SETFST       ;DISPATCH ADDRESS FOR /F
(2)      000154' 000104'                .WORD   LPSW         ;DISPATCH ADDRESS FOR /L
(2)      000164' 000212'                .WORD   RTSPC        ;DISPATCH ADDRESS FOR <15>
(2)      000172' 000546'                .WORD   GTOK         ;DISPATCH ADDRESS FOR <40>
(1)      000200' 177777                -1          ;TERMINATOR.

```

(1)							
(2)	000202'		002040'				
(1)	000206'	004467	002156'				
(1)	000212'	005001					
(1)	000214'	112302		1\$:	MOV B	(R3)+,R2	
(1)	000216'	004767	000666'	2\$:	JSR	PC,ME\$1	
(1)	000222'	005201			INC	R1	
(1)	000224'	020127	000006		CMP	R1,#6	
(1)	000230'	103771			BLO	1\$	
(1)	000232'	101003			BHI	3\$	
(1)	000234'	112702	000056		MOVB	#',R2	
(1)	000240'	000766			BR	2\$	
(1)	000242'	120127	000012	3\$:	CMPB	R1,#10.	
(1)	000246'	103762			BLO	1\$	
(2)	000250'	004767	002052'		JSR	PC,RST04	
(1)	000254'	000167	000752'		JMP	TAB	

:SUB TO TYPE FILE NAME.

\$TPNM1::

:SAVE REGS 0-4  
 :ADDR OF NAME TO R3.  
 :CHAR COUNTER.  
 :GET A CHAR.  
 :TYPE IT.  
 :UP CHAR COUNT.  
 :DONE 6?  
 :BR IF NOT YET.  
 :BR IF MORE THAN 6.  
 :SIX. TYPE A DOT.  
 :GO TYPE THE DOT.  
 :DONE 10?  
 :BR IF NOT.  
 :RESTORE REGS 0-4  
 :GO TAB AND RTS PC.

```

(1) .SBTTL BINARY TO DECIMAL CONVERT AND TYPE SUBROUTINE
(2) 000260' 004467 002040' BCD CV:: JSR R4, SAVO4 ;SAVE REGS 0-4
(1) 000264' 012504 MOV (R5)+, R4 ;NUMBER OF DIGITS
(1) 000266' 012700 000374' MOV #DECTAB, R0 ;TABLE OF DECIMAL NUMBERS
(1) 000272' 005046 CLR -(SP) ;STACK WORD FOR INDICATOR.
(1) 000274' 005740 BCD1: TST -(R0) ;STEP TO THE LARGEST DIGIT
(1) 000276' 005304 DEC R4
(1) 000300' 003375 BGT BCD1
(1) 000302' 005002 BCD2: CLR R2 ;R2 IS TO RECEIVE THE QUOTIENT
(1) 000304' 012001 MOV (R0)+, R1 ;THE DIVISOR
(1) 000306' 001422 BEQ BCD3 ;EXIT IF ZERO
(1) 000310' 160103 BCD5: SUB R1, R3 ;DIVIDE BY SUBTRACTING
(1) 000312' 103402 BCS BCD4
(1) 000314' 005202 INC R2 ;UP THE QUOTIENT AFTER EACH SUB
(1) 000316' 000774 BR BCD5
(1) 000320' 060103 BCD4: ADD R1, R3 ;GONE TOO FAR
(1) 000322' 005702 TST R2 ;QUOTIENT =0?
(1) 000324' 001005 BNE BCD6 ;NO
(1) 000326' 005716 TST (SP) ;LEADING ZERO'S?
(1) 000330' 001003 BNE BCD6 ;NO
(1) 000332' 012702 000040 MOV #40, R2 ;YES PRINT SPACE
(1) 000336' 000403 BR BCD7
(1) 000340' 005216 BCD6: INC (SP) ;NOMORE LEADING ZERO'S
(1) 000342' 062702 000060 ADD #'0, R2 ;MAKE IT ASCII
(1) 000346' 004767 000776' BCD7: JSR PC, CHROUT ;PRINT IT
(1) 000352' 000753 BR BCD2
(1) 000354' 005726 BCD3: TST (SP)+ ;POP INDICATOR WORD.
(2) 000356' 000167 002236' JMP RESR5 ;GO RESTORE REGS 0-4, DO RTS R5.
(1) 000362' 023420 001750 000144 .WORD 10000., 1000., 100., 10., 1
(1) 000370' 000012 000001
(1) 000374' 000000 DECTAB: .WORD 0
    
```

```

(1) .SBTTL DATE UNPACK AND TYPE SUBROUTINE
(1) 000376' 004467 002040' DATUPK: JSR R4, SAV04 ;SAVE THEM
(1) 000402' 012704 000105 MOV #69., R4 ;BASE YEAR IS 1970
(1) 000406' 042703 100000 BIC #100000, R3 ;GET RID OF CONTIG BIT
(1) 000412' 005204 DATUP1: INC R4 ;SEE!
(1) 000414' 162703 001750 SUB #1000., R3 ;FIND WHAT YEAR
(1) 000420' 003374 BGT DATUP1
(1) 000422' 062703 001750 ADD #1000., R3 ;WENT TOO FAR
(1) 000426' 012767 000034 000066 MOV #28., DATTAB+2 ;ASSUME LEAN YEAR.
(1) 000434' 032704 000003 BIT #3, R4 ;LEAP YEAR?
(1) 000440' 001002 BNE DATUP4 ;BR IF NOT.
(1) 000442' 005267 000054 INC DATTAB+2 ;YES. CORRECT FOR FEB.
(1) 000446' 012700 000520' DATUP4: MOV #DATTAB, R0 ;GO FIND WHAT MONTH
(1) 000452' 020310 DATUP3: CMP R3, (R0) ;LESS THAN WHAT THIS MON HAS
(1) 000454' 003402 BLE DATUP2 ;YES, FOUND THE MONTH
(1) 000456' 162003 SUB (R0)+, R3 ;NO, ADVANCE MONTH
(1) 000460' 000774 BR DATUP3
(1) 000462' 004567 177572 DATUP2: JSR R5, BCDCV ;PRINT OUT THE DAY FIRST
(1) 000466' 000002 .WORD 2
(1) 000470' 016067 000030 000004 MOV 24. (R0), DATUP5 ;POINT TO MONTH NAME
(1) 000476' 004567 000642' JSR R5, MES ;AND PRINT IT
(1) 000502' 000000 DATUP5: .WORD 0
(1) 000504' 010403 MOV R4, R3 ;NOW THE YEAR
(1) 000506' 004567 177546 JSR R5, BCDCV ;PRINT THAT OUT
(1) 000512' 000002 .WORD 2
(2) 000514' 000167 002022' JMP RESR7 ;GO RESTORE REGS 0-4, DO RTS PC.
(1) 000520' 000037 000034 000037 DATTAB: .WORD 31., 28., 31., 30.
(1) 000526' 000036 .WORD 31., 30., 31., 31.
(1) 000530' 000037 000036 000037 .WORD 31., 30., 31., 31.
(1) 000536' 000037 .WORD 30., 31., 30., 31.
(1) 000540' 000036 000037 000036 .WORD 30., 31., 30., 31.
(1) 000546' 000037
(1) 000550' 000600' $JAN
(1) 000552' 000606' $FEB
(1) 000554' 000614' $MAR
(1) 000556' 000622' $APR
(1) 000560' 000630' $MAY
(1) 000562' 000636' $JUN
(1) 000564' 000644' $JUL
(1) 000566' 000652' $AUG
(1) 000570' 000660' $SEP
(1) 000572' 000666' $OCT
(1) 000574' 000674' $NOV
(1) 000576' 000702' $DEC
(1) 000600' 045055 047101 000055 $JAN: .ASCIZ '-JAN-'
(1) 000606' 043055 041105 000055 $FEB: .ASCIZ '-FEB-'
(1) 000614' 046455 051101 000055 $MAR: .ASCIZ '-MAR-'
(1) 000622' 040455 051120 000055 $APR: .ASCIZ '-APR-'
(1) 000630' 046455 054501 000055 $MAY: .ASCIZ '-MAY-'
(1) 000636' 045055 047125 000055 $JUN: .ASCIZ '-JUN-'
(1) 000644' 045055 046125 000055 $JUL: .ASCIZ '-JUL-'
(1) 000652' 040455 043525 000055 $AUG: .ASCIZ '-AUG-'
(1) 000660' 051455 050105 000055 $SEP: .ASCIZ '-SEP-'
(1) 000666' 047455 052103 000055 $OCT: .ASCIZ '-OCT-'
(1) 000674' 047055 053117 000055 $NOV: .ASCIZ '-NOV-'
(1) 000702' 042055 041505 000055 $DEC: .ASCIZ '-DEC-'

```

B02

TRDP - XXDP TR79F MONITOR M-11-DMQUF-A MACY11 27(732) 03-JAN-77 13:49 PAGE 1-13  
DMQUFA.P11 DATE UNPACK AND TYPE SUBROUTINE

SEQ 0014

(1)

.EVEN

C02

SEQ 0015

(1)  
(1) 000000' 000000'  
(1) 000000' 000400  
(1)  
(1) 000000'

RUNBUF: .SBTTL CHAIN BUFFER  
.CSECT RUNBUF  
.BLKW 256.  
.SBTTL PAK & UNPAK TR BUF  
.CSECT TRBF



```

(1)          .SBTTL  COMMAND DECODER, INI, AND DELAY ROUTINES
(1)          000000' .CSECT  RESMON
(1)          .PROGRAM STACK
(1) 000000' 000024 R6STCK: .BLKW  20.
(1) 000050'       SPBOT:
(1)
(1)          .END OF PASS CHAIN MODE ENTRY POINT.
(1) 000050' 005046 RESTRT:: CLR      -(6)          ;CLEAR T BIT.
(1) 000052' 012746 000060' $REL11: MOV      #RSTRT1,-(6)      ;WILL RTI TO RSTRT1
(1) 000056' 000002       RTI
(1) 000060' 004767 000730 RSTRT1: JSR      PC,CROUT2
(1) 000064' 005737 000042       TST      @#42
(1) 000070' 001425       BEQ      COMCON
(1) 000072' 105767 000121       TSTB     QVMODE
(1) 000076' 001022       BNE      COMCON
(1) 000100' 005327       DEC      (PC)+
(1) 000102' 000000 PCOUNT: .WORD  0
(1) 000104' 001417       BEQ      COMCON
(1) 000106' 000207       RTS      PC
(1)
(1)          .ERROR REPORTING ROUTINE
(1) 000110' 004767 000066 COMC01: JSR      PC,DELAY
(2) 000114' 004467 001720       JSR      R4,SAV04
(1) 000120' 010500       MOV      R5,R0
(1) 000122' 004567 000526       JSR      R5,MES0
(1) 000126' 105767 004370       TSTB     RUNID
(1) 000132' 001004       BNE      COMCON
(1) 000134' 012707       MOV      (PC)+,PC
(1) 000136' 000140' $COMC3: COMC03
(1)
(1)          .CHAIN MODE IS CLEARED HERE.
(1) 000140' 005027 COMC03: CLR      (PC)+
(1) 000142' 000000 CHN:      .WORD  0
(1)
(1)          .WHERE EVERYTHING STARTS
(1) 000144' 012706 000050' COMCON: MOV      #SPBOT,SP
(1) 000150' 004567 001740       JSR      R5,BCLEAR
(1) 000154' 003400' 000000 001135 $REL1: CLRBEQ,0,CLREND-CLRBEG
(1)
(1) 000162' 004567 000454 COMC02: JSR      R5,MES
(1) 000166' 004535'       ADOT
(1) 000170' 004567 000630 COMC05: JSR      R5,INPUT
(1) 000174' 004767 000346       JSR      PC,GTCK
(1) 000200' 000761       BR      COMCON
(1)
(1) 000202' 005046 DELAY:: CLR      -(SP)
(1) 000204' 005316 1$:      DEC      (SP)
(1) 000206' 100776       BMI      1$
(1) 000210' 005726       TST      (SP)+
(1) 000212' 000207 RTSPC:  RTS      PC

```

```

;CHECK FOR CTL C.
;ABORT CURRENT PROGRAM?
;BR IF YES.
;QUICK VERIFY MODE?
;BR IF YES. DO NEXT CHAIN ENTRY.
;ALL PASSES DONE?
;PASS COUNTER.
;BR IF YES.
;NO. RETURN TO CURRENT PROGRAM.

```

```

;WAIT A BIT.
;SAVE REGS 0-4
;GET ADDR OF ASCII MESSAGE.
;TYPE ERROR MESSAGE.
;WAS IT RUN COMMAND?
;BR IF YES. CONTINUE CHAIN MODE.
;GO TO COMC03.

```

```

;CLEAR CHAIN MODE.
;CHAIN MODE INDICATOR.

```

```

;SET UP THE STACK
;CLEAR BUFFERS, VARIABLES.

```

```

;TYPE A DOT 1ST.

```

```

;GO FETCH A COMMAND
;CHECK COMMAND SYNTAX
;TILL EVERYTHING IS DONE

```

```

;DELAY A LITTLE BIT.

```

```

;RESTORE STACK.
;DONE. RETURN.

```

```

(1)          .SBTTL CHAIN SETUP ROUTINE
(1) 000214' 005027      DOIT: CLR      (PC)+      ; AT FIRST BLOCK. ALSO CLEARS QVMODE.
(1) 000216' 000        BKCT: .BYTE 0          ; CONTAINS CHAIN BLOCK #.
(1) 000217' 000        QVMODE: .BYTE 0        ; QUICK VERIFY INDICATOR.
(1) 000220' 012767 041503 004266      MOV      #'CC,IFNAM+6 ; SET UP A CCC EXTENSION.
(1) 000226' 112767 000103 004262      MOV      #'C,IFNAM+8.
(2) 000234' 004767 001206      JSR      PC,SETIN    ; SET INPUT DEVICE. NAME NEEDED.
(1) 000240' 004767 000302      JSR      PC,GTSW     ; GET SWITCHES.
(1) 000244' 004567 001634      JSR      R5,BMOVE   ; COPY INPUT DDB TO BATCH DDB.
(1) 000250' 003234' 004400' 000117 $REL6: BTCDD, INDD, BTCEND-BTCDD ; WANT FIRST BLOCK OF FILE.
(1) 000256' 105267 177734      DO1:  INCB  BKCT
(1) 000262' 010546      DO2:  MOV   R5,-(SP) ; SAVE R5.
(1) 000264' 004567 001614      JSR      R5,BMOVE   ; BATCH DDB TO INPUT DDB.
(1) 000270' 004400' 003234' 000117 $REL5: INDD, BTCDD, BTCEND-BTCDD
(2) 000276' 004467 001536      JSR      R4,SAV04   ; SAVE REGS 0-4
(1) 000302' 004767 002356      JSR      PC,INITI   ; INIT INPUT.
(2) 000306' 004767 001540      JSR      PC,RST04   ; RESTORE REGS 0-4
(1) 000312' 116703 177700      MOV      BKCT,R3    ; GET THE REQUIRED BLOCK NUMBER.
(1) 000316' 105067 177674      CLR      BKCT
(2) 000322'          DO3:
(2) 000322' 004767 001370      JSR      PC,READL   ; READ LINKED FILE BLOCK.
(1) 000326' 004567 001552      JSR      R5,BMOVE   ; INPUT BUFFER TO BATCH BUFFER.
(1) 000332' 000000' 003400' 001000 $REL4: RUNBUF,BUF,512.
(1) 000340' 012767 000002' 177574 $REL13: MOV      #RUNBUF+2,CHN ; SET CHAIN MODE WITH ADDR OF 1ST CHAR.
(1) 000346' 012767 000776 002764      MOV      #510.,RNBK ; # OF CHARACTERS IN BUFFER.
(1) 000354' 105267 177636      INCB     BKCT       ; INCR # OF BLOCKS READ.
(1) 000360' 005303      DEC      R3        ; READ THE WANTED BLOCK?
(1) 000362' 001357      BNE     D03        ; BR IF NOT.
(1) 000364' 012605      MOV      (SP)+,R5   ; RESTORE R5.
(1) 000366' 005027      RCKSUM: CLR      (PC)+ ; CHECKSUM THE BATCH BUFFER.
(1) 000370' 000000      RCKSM: .WORD 0
(1) 000372' 012703 000000' $REL12: MOV      #RUNBUF,R3 ; GET ADDR OF BATCH BUFFER.
(1) 000376' 012704 000400      MOV      #256.,R4   ; WILL DO 256 WORDS.
(1) 000402' 062367 177762      1$:  ADD      (R3)+,RCKSM ; CHECKSUM A WORD.
(1) 000406' 005304      DEC      R4        ; ALL DONE?
(1) 000410' 001374      BNE     1$        ; BR IF NOT.
(1) 000412' 000207      RTS      PC        ; YES. RETURN.

```

(1)				.SBTTL	CHAIN EXECUTION ROUTINE	
(1)	000414'	020001		CHAIN: CMP	RO, R1	; AT START OF KYBD BUFFER?
(1)	000416'	001021		BNE	CHAIN0	; BR IF NOT.
(1)	000420'	016746	177744	MOV	RCKSM, -(SP)	; SAVE BATCH CHECKSUM.
(1)	000424'	004767	177736	JSR	PC, RCKSUM	; RECHECKSUM THE BUFFER.
(1)	000430'	026726	177734	CMP	RCKSM, (SP)+	; MATCH?
(1)	000434'	001412		BEQ	CHAIN0	; BR IF YES.
(1)	000436'	016746	177500	MOV	CHN, -(SP)	; NO. SAVE CHN
(1)	000442'	016746	002672	MOV	RNBK, -(SP)	; SAVE RNBK
(1)	000446'	004767	177610	JSR	PC, D02	; GET THE BLOCK.
(1)	000452'	012667	002662	MOV	(SP)+, RNBK	; RESTORE RNBK.
(1)	000456'	012667	177460	MOV	(SP)+, CHN	; RESTORE CHN.
(1)	000462'	016703	177454	CHAIN0: MOV	CHN, R3	; NEXT COMMAND
(1)	000466'	016704	002646	MOV	RNBK, R4	; COUNT
(1)	000472'	005304		CHAIN1: DEC	R4	
(1)	000474'	100003		BPL	CHAIN2	; BR IF POSITIVE
(1)	000476'	004767	177554	JSR	PC, D01	; NO. NEED NEW BUFFER.
(1)	000502'	000767		BR	CHAIN0	
(1)	000504'	112302		CHAIN2: MOV	(R3)+, R2	; GET A BYTE
(1)	000506'	001614		BEQ	COMC03	; BACK TO COMC03.
(1)	000510'	120227	000012	CMP	R2, #12	; LINE FEED?
(1)	000514'	001766		BEQ	CHAIN1	; DISREGARD IT.
(1)	000516'	010367	177420	MOV	R3, CHN	; SAVE IT
(1)	000522'	010467	002612	MOV	R4, RNBK	; THAT TOO
(1)	000526'	000207		RTS	PC	; RETURN.

```

(1)
(1) 000530' 004767 000654      SETCNT: .SBTTL  COMMAND DECODER
(1) 000534' 010267 003760      JSR      PC,ATOI      ;GET THE COUNT.
(1) 000540' 000402              MOV      R2,ICOUNT   ;STORE IT.
(1)                                BR      GTSW
(1) 000542' 105267 177451      SETQV:  INCB  QVMODE      ;SET QV MODE.
(1)
(1) 000546'
(1) 000546' 012701 004542'      GTOK:GTSW:
(1) 000552' 016702 000074      GTOKK:  MOV      #COMTAB,R1      ;DEVICE DECODING COMES HERE
(1) 000556' 060201              ADD      RELCNT,R2      ;GET RELOCATION FACTOR.
(1)                                ;CORRECT R1 FOR RELOCATION.
(1)
(1) 000560' 016700 000340      GTOKX:  MOV      KBPTR,R0      ;GET STRING POINTER
(1) 000564' 012104              GTOK1:  MOV      (1)+,R4      ;GET DISPATCH ADDR.
(1) 000566' 012103              MOV      (1)+,R3      ;GET POINTER TO NEXT ENTRY.
(1) 000570' 122021              GTOK2:  CMPB     (R0)+,(R1)+   ;MATCH THE CHARACTER?
(1) 000572' 001007              BNE     GTOKY
(1) 000574' 105711              GTOK3:  TSTB     (R1)
(1) 000576' 001374              BNE     GTOK2
(1) 000600' 010067 000320      GTOK4:  MOV      R0,KBPTR
(1) 000604' 060204              ADD      R2,R4
(1) 000606' 005002              CLR     R2
(1) 000610' 002114              JMP     (R4)
(1)                                ;DISPATCH WHERE NEEDED.
(1)
(1) 000612' 010301
(1) 000614' 060201
(1) 000616' 022711 177777
(1) 000622' 001356
(1)
(1) 000624' 004567 177260
(1) 000630' 047111 041526 042115  INVCMD:: JSR      R5,COMC01
(1) 000636' 051457 000187      .ASCIZ  'INVCMD/SW'      ;REPORT INVALID COMMAND/SW
(1)                                .EVEN
(1)
    
```

```

(1) .SBTTL MESSAGE ROUTINES
(2) 000642' 004467 001172 MES:: JSR R4, SAV04 ;SAVE REGS 0-4
(1) 000646' 012500 MOV (R5)+, R0 ;MESSAGE BUFFER TO R0
(1) 000650' 062700 ADD (PC)+, R0 ;CORRECT FOR RELOCATION.
(1) 000652' 000000 RELCNT:: .WORD 0 ;RELOCATION FACTOR.
(1) 000654' 112002 MESO: MOV (R0)+, R2 ;PICK UP ONE CHR TO R2
(1) 000656' 001525 BEQ GEX04 ;BR IF 0.
(1) 000660' 004767 000002 JSR PC, MES1 ;GO OUTPUT CHAR.
(1) 000664' 000773 BR MESO ;GO FOR MORE.
(1) 000666' 120227 000011 MES1: CMPB R2, #11 ;TAB CODE?
(1) 000672' 001427 BEQ TAB ;BR IF YES TO DO A TAB.
(1) 000674' 120227 000045 CMPB R2, #'% ;%?
(1) 000700' 001036 BNE CHR0UT ;BR IF NOT.

(1) 000702' 010246 CRLF:: MOV R2, -(SP) ;SAVE R2.
(1) 000704' 012702 005015 MOV #5015, R2 ;OUTPUT CR.
(1) 000710' 004767 000062 JSR PC, CHR0UT
(1) 000714' 000302 SWAB R2 ;OUTPUT LINE FEED.
(1) 000716' 004767 000054 JSR PC, CHR0UT
(1) 000722' 116702 001462 MOVB FILLCT, R2 ;GET READY FOR FILLER CHARS.
(1) 000726' 005077 000046 1$: CLR @MOUT ;FILLER IS 0.
(1) 000732' 004767 000044 JSR PC, CROUT1
(1) 000736' 005302 DEC R2 ;DONE?
(1) 000740' 003372 BGT 1$ ;BR IF NOT.
(1) 000742' 005027 CLR (PC)+ ;CLEAR THE CHAR COUNT.
(1) 000744' 000000 CHRCNT: .WORD 0 ;CHAR COUNT VARIABLE.
(1) 000746' 012602 CRLF1: MOV (SP)+, R2 ;RESTORE R2.
(1) 000750' 000207 RTS PC ;DONE. RETURN.

;TAB SUBROUTINE.
(1) 000752' 010246 TAB:: MOV R2, -(SP) ;SAVE R2.
(1) 000754' 012702 000040 1$: MOV #40, R2 ;SPACES DO THE TABBING.
(1) 000760' 004767 000012 JSR PC, CHR0UT ;OUTPUT A SPACE.
(1) 000764' 142767 000370 177752 BICB #370, CHRCNT ;SEE IF DONE.
(1) 000772' 001370 BNE 1$ ;BR IF NOT DONE.
(1) 000774' 000764 BR CRLF1 ;GO EXIT.

;SUB TO OUTPUT CHARACTER TO CONSOLE OR LINE PRINTER
(1) 000776' 110237 CHR0UT:: MOV R2, @PC+ ;OUTPUT CHAR.
(1) 001000' 177566 MOUT: .WORD 177566
(1) 001002' 105737 CROUT1: TSTB @PC+ ;WAIT FOR READY.
(1) 001004' 177564 MREG: .WORD 177564 BPL CROUT1 ;BACK IF NOT READY.
(1) 001006' 100375 INCB CHRCNT ;UP CHARACTER COUNT.
(1) 001010' 105267 177730 CROUT2: JSR PC, CKYBD ;CHECK KEYBOARD.
(1) 001014' 004767 000116 RTS PC ;EXIT, NO CHAR.
(1) 001020' 000207 BR GETCR1 ;CHECK FOR CTRL C.
(1) 001022' 000470

```

```

(1)          .SBTTL INPUT ROUTINE
(1)          :TO CALL 'INPUT' DO A JSR R5,INPUT
(1)          :FOLLOWED BY + ADR OF MESSAGE TO BE TYPED PRIOR TO INPUT

(1) 001024' INPUT:
(2) 001024' GETIN:
(2) 001024' 004467 001010 JSR R4,SAVO4 ;SAVE REGS 0-4
(1) 001030' 012700 003354' GETIND: MOV #KBUF,R0 ;INPUT BUFFER
(1) 001034' 010001 MOV R0,R1 ;SAVE THE ADDRESS

(1) 001036' GETI01:
(1) 001036' 004767 000120 2$: JSR PC,GETCHR ;GET A CHARACTER
(1) 001042' 120227 000141 3$: CMPB R2,#141 ;LESS THAN LOWER CASE A?
(1) 001046' 103405 BLO 1$ ;BR IF YES.
(1) 001050' 120227 000172 CMPB R2,#172 ;HIGHER THAN LOWER CASE Z?
(1) 001054' 101002 BHI 1$ ;BR IF YES.
(1) 001056' 162702 000040 SUB #40,R2 ;MAKE IT UPPER CASE.
(1) 001062' 120227 000177 1$: CMPB R2,#177 ;RUBOUT?
(1) 001066' 001407 BEQ GETI02 ;YES
(1) 001070' 110220 GETI06: MOVB R2,(R0)+ ;STORE IT. NOT SPECIAL CHAR.
(1) 001072' 120227 000015 CMPB R2,#15 ;CARRIAGE RETURN?
(1) 001076' 001407 BEQ GETI08 ;QUITTING TIME
(1) 001100' 004767 177562 GETI03: JSR PC,MES1 ;ECHO THE CHARACTER
(1) 001104' 000754 BR GETI01 ;CONTINUE INPUT
(1) 001106' 020100 GETI02: CMP R1,R0 ;RUBOUT, BUFFER EMPTY?
(1) 001110' 001752 BEQ GETI01 ;YEP,ECHO CRLF
(1) 001112' 114002 GETI11: MOVB -(R0),R2 ;GET THE LAST CHR
(1) 001114' 000771 BR GETI03 ;AND ECHO IT
(1) 001116' 112720 000012 GETI08: MOVB #12,(R0)+ ;STORE LF TOO.
(1) 001122' 010127 MOV R1,(PC)+ ;POINT TO START OF KEYBOARD BUFFER.
(1) 001124' 000000 KBPTR: .WORD 0 ;KEYBOARD POINTER.
(1) 001126' 004767 177550 GEX02: JSR PC,CRLF ;CRLF.
(2) 001132' GEX04:
(2) 001132' 000167 001100 JMP RESR5 ;GO RESTORE REGS 0-4, DO RTS R5.

(1) 001136' 105737 CKYBD: TSTB @ (PC)+ ;KEYBOARD ACTIVE?
(1) 001140' 177560 KTKS: .WORD 177560
(1) 001142' 100006 BPL CKYBD1 ;BR IF NOT.
(1) 001144' 013702 MOV @ (PC)+,R2 ;GET CHARACTER.
(1) 001146' 177562 KTKB: .WORD 177562
(1) 001150' 042702 177600 BIC #177600,R2 ;CLEAR OUT JUNK BITS.
(1) 001154' 062716 000002 ADD #2,(SP) ;SET UP CHARACTER IN BUFFER RETURN.
(1) 001160' 000207 CKYBD1: RTS PC ;EXIT.

(1) 001162' 005767 176754 GETCHR: TST CHN ;IN CHAIN MODE?
(1) 001166' 001403 BEQ 1$ ;BR IF NOT.
(1) 001170' 004767 177220 JSR PC,CHAIN ;YES. GET CHAR FROM CHAIN FILE.
(1) 001174' 000403 BR GETCR1
(1) 001176' 004767 177734 1$: JSR PC,CKYBD ;WAIT FOR CHARACTER.
(1) 001202' 000775 BR 1$ ;LOOP TILL YOU GOT ONE.
(1) 001204' 120227 000003 GETCR1: CMPB R2,#3 ;CTRL C?
(1) 001210' 001363 BNE CKYBD1 ;BR IF NOT.
(1) 001212' 016707 176720 MOV $COMC3,PC ;YES. TIME TO QUIT.
    
```

J02

TRDP - XXDP TR79F MONITOR M-11-DMQUF-A MACY11 27(732) 03-JAN-77 13:49 PAGE 1-21  
DMQUFA.P11 ERROR MESSAGE ROUTINES.

SEQ 0022

(1)					.SBTTL	ERROR MESSAGE ROUTINES.	
(1)	001216'	004567	176666		DEVERR::	JSR R5,COMCO1	;REPORT DEVICE ERROR.
(1)	001222'	042504	042526	051122	.ASCIZ	'DEVERR'	
(1)	001230'	000					
(1)		001232'			.EVEN		

```

(1) .SBTTL ITOA SUBROUTINE
(1) :BINARY TO ASCII ROUTINE
(1) :TAKES WHAT'S IN R3 AND SHIFTS THREE BITS INTO R2
(1) :THEN CALLS PRINTOUT ROUTINE TO OUTPUT THEM
(1) ITOA:: JSR R4, SAVD4 ; I GET SCREWED WHEN I DON'T
(1) 001232* 004467 000602 MOV #6, R4 ; DO ONLY SIX TIMES
(1) 001236* 012704 000006 CLR R2 ; WHERE THE DIGITS GO
(1) 001242* 005002 BR ITOA3
(1) 001244* 000413 ITOA1: ADD #'0, R2 ; MAKE IT ASCII
(1) 001246* 062702 000060 JSR PC, CHROUT ; TYPE IT
(1) 001252* 004767 177520 DEC R4 ; ONE DOWN
(1) 001256* 005304 BLE ITOA2 ; IF NOMORE TO GO
(1) 001260* 003410 CLR R2 ; GET RID OF OLD STUFF
(1) 001262* 005002 ASL R3 ; SHIFT COMBINED
(1) 001264* 006303 ROL R2 ; THREE TIMES
(1) 001266* 006102 ASL R3 ; THIS IS
(1) 001270* 006303 ROL R2 ; ACTUALLY FASTER
(1) 001272* 006102 ITOA3: ASL R3 ; AND MORE EFFICIENT
(1) 001274* 006303 ROL R2 ; THAN A DO LOOP
(1) 001276* 006102 BR ITOA1 ; KEEP GOING
(1) 001300* 000762 ITOA2: JMP RESR7 ; GO RESTORE REGS 0-4, DO RTS PC.
(2) 001302*
(1) 001302* 000167 000514

```



```

(1) .SBTTL GETNUM/ATOI SUBROUTINES
(1)
(1)
(1) 001306' 016700 177512 GETNUM: MOV KBPTR,R0 ;GET STRING POINTER.
(1) 001312' 005001 GTNM1: CLR R1 ;DATA
(1) 001314' 005027 CLR (PC)+
(1) 001316' 000000 YES: .WORD 0
(1) 001320' 112002 2$: MOVB (R0)+,R2 ;GET A BYTE
(1) 001322' 120227 000040 CMPB R2,#40 ;SPACE?
(1) 001326' 001771 BEQ GTNM1 ;YES,IGNORE IT
(1) 001330' 122702 000015 CMPB #15,R2 ;CR?
(1) 001334' 001417 BEQ 3$ ;YES,RETURN
(1) 001336' 120227 000060 CMPB R2,#'0 ;LOW LIMIT
(1) 001342' 002414 BLT 3$ ;TOO LOW
(1) 001344' 120227 000067 CMPB R2,#'7 ;HIGH LIMIT
(1) 001350' 003011 BGT 3$ ;TOO HIGH
(1) 001352' 006301 ASL R1 ;SHIFT OLD STUFF
(1) 001354' 006301 ASL R1 ;3 TIMES LEFT
(1) 001356' 006301 ASL R1 ;I.E. MULT. BY OCTAL 10
(1) 001360' 060201 ADD R2,R1 ;ADD NEW TO OLD
(1) 001362' 162701 000060 SUB #'0,R1 ;BUT GET RID OF ASCII STUFF
(1) 001366' 105267 177724 INCB YES ;SET FLAG
(1) 001372' 000752 BR 2$ ;MORE, MORE
(1) 3$:
(1) 001374' 005300 GTNMO: DEC R0
(1) 001376' 010067 177522 MOV R0,KBPTR ;SAVE STRING POINTER.
(1) 001402' 105767 177710 GTNUM1: TSTB YES
(1) 001406' 000207 RTS PC ;NOMORE
(1)
(1) ;DECIMAL ASCII TO BINARY CONVERT SUBROUTINE.
(1) 001410' 016700 177510 ATOI: MOV KBPTR,R0 ;POINT TO STRING
(1) 001414' 112003 ATOI1: MOVB (R0)+,R3 ;GET DIGIT.
(1) 001416' 162703 000060 SUB #'0,R3 ;CONVERT TO BINARY
(1) 001422' 100764 BMI GTNMO ;NOT A DIGIT.
(1) 001424' 020327 000011 CMP R3,#9. ;CHECK UPPER LIMIT.
(1) 001430' 003361 BGT GTNMO ;TOO HIGH.
(1) 001432' 006302 ASL R2
(1) 001434' 006302 ASL R2
(1) 001436' 060302 ADD R3,R2 ;ALL DONE.
(1) 001440' 000765 BR ATOI1
    
```

```

(1) .SBTTL DEVICE SETUP ROUTINE, INPUT INIT ROUTINE
(1) 001442' 005046 SETI: CLR -(SP) ;INDICATE NO NAME.
(1) 001444' 000401 BR DVSET
(1) 001446' 010746 SETIN: MOV PC, -(SP) ;INDICATE NAME NEEDED.
(1) 001450' 012705 DVSET: MOV (PC)+, R5 ;INPUT DDB ADDR TO R5.
(1) 001452' 004462' $IDDB: .WORD INDEV
(1) 001454' 016746 177172 MOV RELCNT, -(SP) ;PUT RELOC FACTOR IN STACK.
(1) 001460' 012700 004656' $REL16: MOV #DEVTAB, R0 ;GET DEVICE TABLE ADDR.
(1) 001464' 062700 ADD (PC)+, R0 ;ADD OFFSET FOR DESIRED DEVICE.
(1) 001466' 000000 CURDRV: .WORD 0 ;HOLDS CURRENT DRIVE # TIMES 2.
(1) 001470' 011000 MOV (R0), R0 ;GET DEVICE SET UP ADDR.
(1) 001472' 061600 ADD (SP), R0 ;CORRECT FOR RELOCATION.
(1) 001474' 004710 JSR PC, (R0) ;GO SET UP DEVICE.
(1) 001476' 061600 ADD (SP), R0 ;CORRECT PARAM ADDR FOR RELOCATION.
(1) 001500' 010067 000006 MOV R0, $REL7+2
(1) 001504' 004567 000374 JSR R5, BMOVE ;MOVE DEVICE INFO TO DDB.
(1) 001510' 004436' 000000 000050 $REL7: INBOOT, OPEN, IFNAM-INBOOT ;DEST, SOURCE, COUNT.
(1) 001516' 016703 177766 MOV $REL7, R3
(1) 001522' 012701 000011 MOV #9, R1 ;NUMBER OF ENTRIES TO RELOCATE.
(1) 001526' 061623 5$: ADD (SP), (R3)+ ;RELOCATE ENTRY.
(1) 001530' 005301 DEC R1 ;DONE?
(1) 001532' 001375 BNE 5$ ;BR IF NOT.
(1) 001534' 062665 000020 ADD (SP)+, XDR(R5) ;ANOTHER ONE NEEDS IT.
(1) 001540' 005726 TST (SP)+ ;NAME NEEDED?
(1) 001542' 001531 BEQ RESR7A ;BR IF NOT.
(1) 001544' 004567 000344 FILNAM: JSR R5, BCLEAR ;CLEAR NAME AREA TO BLANKS.
(1) 001550' 004506' 000040 000006 $REL3: IFNAM, 40, 6.
(2) 001556' 004467 000256 FNAME3: JSR R4, SAVO4 ;SAVE REGS 0-4
(1) 001562' 016700 177336 MOV KBPTR, R0 ;KYBD BUFFER POINTER TO R0.
(1) 001566' 012704 004506' $REL2: MOV #IFNAM, R4
(1) 001572' 012703 000006 MOV #6, R3 ;UP TO 6 DIGITS FOR NAME
(1) 001576' 112002 FNAM1: MOV (R0)+, R2 ;GET A CHARACTER.
(1) 001600' 120227 000077 CMPB R2, #'? ;QUESTION MARK?
(1) 001604' 001003 BNE 1$ ;BR IF NOT.
(1) 001606' 010565 177720 MOV R5, XFLMOD(R5) ;SET FILE MODE INDICATOR.
(1) 001612' 000416 BR 3$
(1) 001614' 120227 000015 1$: CMPB R2, #15 ;CR?
(1) 001620' 001411 BEQ 2$ ;BR IF YES.
(1) 001622' 120227 000040 CMPB R2, #40 ;SPACE?
(1) 001626' 001763 BEQ FNAM1 ;BR IF YES.
(1) 001630' 120227 000060 CMPB R2, #'0 ;LESS THAN 0?
(1) 001634' 103403 BLO 2$ ;BR IF YES. NOT ALPHA-NUMERIC.
(1) 001636' 120227 000132 CMPB R2, #'Z ;HIGHER THAN Z?
(1) 001642' 101402 BLOS 3$ ;BR IF NOT. ALPHA-NUMERIC CHAR.
(1) 001644' 005300 2$: DEC R0 ;MOVE POINTER BACK ONE.
(1) 001646' 000403 BR 5$ ;GO CLEAN UP.
(1) 001650' 110224 3$: MOV R2, (R4)+ ;STORE THE CHARACTER.
(1) 001652' 005303 4$: DEC R3 ;DONE 6 CHARS?
(1) 001654' 003350 BGT FNAM1 ;BR IF NOT.
(1) 001656' 020327 000006 5$: CMP R3, #6 ;ANY NAME CHARS?
(1) 001662' 001403 BEQ INVNAM ;BR IF NONE. ERROR.
(1) 001664' 010067 177234 MOV R0, KBPTR ;SAVE STRING POINTER.
(1) 001670' 000454 BR RESR7 ;RESTORE REGS, DO RTS PC
    
```

N02

TRDP - XXDP TR79F MONITOR M-11-DMQUF-A MACY11 27(732) 03-JAN-77 13:49 PAGE 1-25  
DMQUFA.P11 DEVICE SETUP ROUTINE, INPUT INIT ROUTINE

SEQ 0026

(1)	001672'	004567	176212	INVNAM: JSR	RS.COMC01	
(1)	001676'	047111	047126	046501	.ASCIZ	'INVNAM'
(1)	001704'		000			
(1)		001706'			.EVEN	

;REPORT INVALID NAME.

```

(1)          SBTTL  READL, READC, AND BKREAD SUBROUTINES.
(1)          :SUB TO READ ONE BLOCK, SET R0 AND R1 POINTERS.
(1) 001706' 016700 000160  GTDATA: MOV  $BUF2,R0      ;ADDR OF 1ST DATA BYTE.
(1) 001712' 012701 000776      MOV  #510.,R1      ;SET BYTE COUNT IN R1.
(1)
(1)          :SUBROUTINE TO READ LINKED FILE BLOCK INTO BUF
(1) 001716' 016705 177530  READL: MOV  $IDDB,R5      ;POINT TO INPUT DDB.
(1) 001722' 105267 002575      INCB  PIPFLG      ;SET PIP MODE.
(1) 001726' 005765 000006      TST  XDT(R5)      ;LAST BLOCK?
(1) 001732' 001436      BEQ  EOMERR      ;BR IF YES. ERROR.
(1) 001734' 004767 000024      JSR  PC,BKREAD      ;READ BLOCK.
(1) 001740' 016765 001434 000006  MOV  BUF,XDT(R5)      ;SAVE NEXT BLOCK ADDRESS.
(1) 001746' 000207      READL1: RTS  PC      ;DONE. RETURN.
(1)
(1)          :SUB TO INPUT/OUTPUT NEXT BLOCK.
(1) 001750' 016765 001424 000006  NXTBLK:: MOV  BUF,XDT(R5)      ;GET BLOCK NUMBER.
(1) 001756' 001773      BEQ  READL1      ;IF 0. NO MORE. ERROR RETURN.
(1) 001760' 062716 000002      ADD  #2,(SP)      ;SET FOR NORMAL RETURN.
(1)
(1)          :SUBROUTINE TO READ A BLOCK INTO BUF.
(1) 001764' 004767 000076  BKREAD:: JSR  PC,CLRBUF      ;CLEAR THE BUFFER 1ST.
(1) 001770' 016765 000106 000004  MOV  $BUF,XBA(R5)      ;SET READ ADDRESS.
(1) 001776' 012765 000400 000002  BKRDO: MOV  #256.,XWC(R5)      ;SET WORD COUNT.
(1) 002004' 016565 000012 000010  READBK:: MOV  XRD(R5),XCO(R5) ;SET READ COMMAND.
(2) 002012'      XYBK:
(2) 002012' 004467 000022      JSR  R4,SAV04      ;SAVE REGS 0-4
(1) 002016' 004775 177774      JSR  PC,@XSV(R5)      ;DO IT.
(1)
(2) 002022'      RESR7::
(2) 002022' 004767 000024      JSR  PC,RST04      ;RESTORE REGS 0-4
(1) 002026' 000207      RESR7A: RTS  PC      ;RETURN.
(1)
(1) 002030' 004567 176054      EOMERR:: JSR  R5,COMC01      ;REPORT END OF MEDIUM ERROR.
(1) 002034' 047505 000115      .ASCIZ 'EOM'
(1)          .EVEN

```

```

(1)          .SBTTL  UTILITY SUBROUTINES
(1)
(1) 002040* 010346   SAV04:: MOV    R3,-(SP)      ;SAVE R3
(1) 002042* 010246   MOV    R2,-(SP)      ;SAVE R2
(1) 002044* 010146   MOV    R1,-(SP)      ;SAVE R1
(1) 002046* 010046   MOV    R0,-(SP)      ;SAVE R0
(1) 002050* 010407   MOV    R4,PC          ;R5 IS ALREADY SAVED
(1)
(1) 002052* 012604   RST04:: MOV   (SP)+,R4    ;RETURN ADDRESS
(1) 002054* 012600   MOV   (SP)+,R0        ;RESTORE R0
(1) 002056* 012601   MOV   (SP)+,R1        ;R1
(1) 002060* 012602   MOV   (SP)+,R2        ;R2
(1) 002062* 012603   MOV   (SP)+,R3
(1) 002064* 000204   RTS    R4             ;RESTORE R4 AND RETURN
(1)

```

```

(1) ;SUB TO CLEAR BUFFER.
(1) 002066' 004567 000022 CLRBUF:: JSR R5,BCLEAR ;CALL BYTE CLEAR SUB.
(1) 002072' 003402' 000000 000776 $BUF2:: BUF+2,0,510. ;DEST,CLEAR VALUE,COUNT
(1) 002100' 000207 RTS PC ;EXIT.
(1) 002102' 003400' $BUF:: BUF
(1) ;ROUTINE TO MOVE BYTE FIELDS.
(1) 002104' 012767 112120 000022 BMOVE:: MOV #112120,BMC2 ;SET A MOVB (1)+,(0)+
(1) 002112' 000403 BR BMC1
(1) ;ROUTINE TO CLEAR BYTE FIELDS TO SPECIFIC VALUE.
(1) 002114' 012767 110120 000012 BCLEAR:: MOV #110120,BMC2 ;SET A MOVB R1,(0)+
(2) 002122' BMC1:
(2) 002122' 004467 177712 JSR R4,SAV04 ;SAVE REGS 0-4
(1) 002126' 012500 MOV (5)+,R0 ;GET DEST ADDR.
(1) 002130' 012501 MOV (5)+,R1 ;GET SOURCE.
(1) 002132' 012502 MOV (5)+,R2 ;GET COUNT.
(1) 002134' 000000 BMC2: OPEN
(1) 002136' 005302 DEC R2 ;DONE?
(1) 002140' 001375 BNE BMC2 ;BR IF NOT.
(1) 002142' 000435 BMC3: BR UPKMN1
(1) ;CMPNAM SUBROUTINE. COMPARES TWO 9 CHARACTER NAMES. WILD CHARS ALLOWED.
(2) 002144' CMPNAM::
(2) 002144' 004467 177670 JSR R4,SAV04 ;SAVE REGS 0-4
(1) 002150' 012700 004506' $REL15: MOV #IFNAM,R0 ;DESIRED NAME ADDRESS.
(1) 002154' 012701 MOV (PC)+,R1 ;ADDR OF NAME UNDER QUESTION.
(1) 002156' 004524' $TXNAM:: .WORD TXNAM
(1) 002160' 012702 000011 MOV #9.,R2 ;COMPARE UP TO 9 CHARACTERS.
(1) 002164' 1$:
(1) 002164' 122710 000077 CMPB #'',(0) ;CHAR A WILD CHARACTER?
(1) 002170' 001002 BNE 11$ ;BR IF NOT.
(1) 002172' 122021 CMPB (R0)+,(R1)+ ;POINT TO NEXT CHAR.
(1) 002174' 000402 BR 2$
(1) 002176' 122021 11$: CMPB (0)+,(1)+ ;COMPARE CHARACTERS.
(1) 002200' 001003 BNE 3$ ;BR IF NOT SAME.
(1) 002202' 005302 2$: DEC R2 ;MATCH.DECREMENT COUNT.
(1) 002204' 001367 BNE 1$ ;BR IF NOT DONE YET.
(1) 002206' 005725 TST (R5)+ ;DONE. SET UP MATCH EXIT.
(1) 002210' 000412 3$: BR UPKMN1
(1) ;SUBROUTINE TO CONVERT RAD50 FILE NAME TO ASCII.
(2) 002212' UPKNAM::
(2) 002212' 004467 177622 JSR R4,SAV04 ;SAVE REGS 0-4
(1) 002216' 012501 MOV (R5)+,R1 ;GET ASCII ADDR.
(1) 002220' 012500 MOV (R5)+,R0 ;GET RAD50 ADDR.
(2) 002222' 004567 000026 JSR R5,UNPACK ;UNPACK 2 WORDS INTO 6 ASCII BYTES.
(1) 002226' 062700 000004 ADD #4,R0 ;POINT TO EXT ADDR.
(2) 002232' 004567 000006 JSR R5,UPACK1 ;UNPACK 1 WORD INTO 3 ASCII BYTES.
(1) 002236' UPKMN1:
(2) 002236' RESRS::
(2) 002236' 004767 177610 JSR PC,RST04 ;RESTORE REGS 0-4
(1) 002242' 000205 RTS R5 ;DONE. RETURN.
    
```

```

(1)          .SBTTL RAD50 UNPACK SUBROUTINE
(1)          :
(1)          : INPUT:  R0=ADR OF MOD40 NUMBER (2 WORDS)
(1)          :          R1=ADR OF ASCII STRING (6 BYTES)
(1)          : OUTPUT: R1 POINTS ONE PAST LAST GENERATED CHARACTER
(1)          :
(1)          : IF N IS THE MOD40 NUMBER, THEN
(1)          :          N=C1*50+2+C2*50+C3
(1)          :          THUS, N/50+2 IS C1 AND THE REMAINDER IS C2*50+C3
(1)          :          THE REMAINDER IS DIVIDED BY 50 TO GET C2 ETC.
(1) 002244' 012727 177777 UNPACK1:  MOV    #-1,(PC)+      ;UNPACK ONE WORD ONLY.
(1) 002250' 000000 PAKTMP:  .WORD  0
(1) 002252' 000403 BR      UNPA07
(1) 002254' 012767 177776 177766 UNPACK:  MOV    #-2,PAKTMP      ;MAJOR LOOP COUNT
(2) 002262' UNPA07:
(2) 002262' 004467 177552 JSR    R4,SAV04      ;SAVE REGS 0-4
(1) 002266' 012704 177775 UNPA09: MOV    #-3,R4      ;MINOR LOOP COUNT
(1) 002272' 011000 MOV    (R0),R0      ;GET MOD40 WORD
(1) 002274' 012702 002400 $REL14: MOV   #COEFF,R2 ;PTR TO COEFFICIENT TABLE
(1) 002300' 005003 UNPA06: CLR    R3      ;0 QUOTIENT
(1)          : DIVIDE BY COEFFICIENTS
(1) 002302' 020012 UNPA02: CMP    R0,(R2)   ;DONE WITH DIVIDE
(1) 002304' 103403 BLO    UNPA01      ;YES
(1) 002306' 161200 SUB    (R2),R0     ;NO-SUBTRACT COEFF.
(1) 002310' 005203 INC    R3          ;ADD 1 TO QUOTIENT
(1) 002312' 000773 BR     UNPA02
(1)          :
(1)          : DIVIDE DONE.  QUOT IN R3, REMAINDER IN R0
(1)          : CONVERT TO AN ASCII CHARACTER
(1) 002314' 105703 UNPA01: TSTB   R3
(1) 002316' 001406 BEQ    UNPA03      ;"BLANK"
(1) 002320' 120327 000033 CMPB   R3,#33
(1) 002324' 001407 BEQ    UNPA05      ;"$"
(1) 002326' 003004 BGT    UNPA04      ;"." OR "0-9"
(1) 002330' 062703 000040 ADD    #40,R3     ;"A-Z"
(1) 002334' 062703 000016 UNPA03: ADD   #16,R3
(1) 002340' 062703 000011 UNPA04: ADD   #11,R3
(1) 002344' 062703 000011 UNPA05: ADD   #11,R3
(1) 002350' 110321 MOVB   R3,(R1)+    ;STORE CHARACTER
(1) 002352' 005722 TST   (R2)+      ;ADVANCE TO NEXT COEFF.
(1) 002354' 005204 INC    R4          ;DONE 3 CHARS?
(1) 002356' 002750 BLT   UNPA06      ;NO-DO MORE
(1) 002360' 011600 MOV   (SP),R0     ;RESTORE ORIGINAL R0 AND
(1) 002362' 005720 TST   (R0)+      ;MOVE TO NEXT WORD
(1) 002364' 005267 177660 INC    PAKTMP     ;DONE 2 WORDS
(1) 002370' 002736 BR     UNPA09      ;NO
(1)          :
(1)          : DONE--PUT CURRENT R1 ONTO THE STACK
(1) 002372' 010166 000002 UNPA08: MOV   R1,2(SP)
(1) 002376' 000717 BR     UPKNM1     ;GO EXIT.
(1)          :
(1) 002400' 003100 000050 000001 COEFF:  .WORD  1600.,40.,1. ;40.+2, 40.+1,40.+0
    
```

```

(1)          .SBTTL FILL, RUN, AND START ROUTINES
(1) 002406' 012703 FILL: MOV (PC)+,R3 ;GET READY TO TYPE FILL COUNT.
(1) 002410' 000014 FILLCT: .WORD 14
(1) 002412' 004767 176614 JSR PC,ITOA ;PRINT THAT OUT
(1) 002416' 004767 176330 JSR PC,TAB ;TAB OVER.
(1) 002422' 004567 176376 JSR R5,INPUT ;WAIT FOR INPUT
(1) 002426' 004767 176654 JSR PC,GETNUM ;CONVERT INPUT STRING TO BINARY
(1) 002432' 001402 BEQ MOD1 ;JUST A CR,DO NOTHING
(1) 002434' 010167 177750 MOV R1,FILLCT ;PUT WHAT HE ENTERED THERE
(1) 002440' 000207 MOD1: RTS PC

(1)          ;START ROUTINE
(1) 002442' 004767 176640 START: JSR PC,GETNUM ;FETCH STARTING ADR
(1) 002446' 001420 BEQ RUN10 ;BR IF NO DATA TYPED.
(1) 002450' 006201 ASR R1 ;GOOD ADDRESS?
(1) 002452' 103404 BCS INVADR ;BR IF NOT (ODD).
(1) 002454' 060101 ADD R1,R1 ;RESTORE ADDR.
(1) 002456' 010167 000454 MOV R1,STADR ;SAVE ADDR.
(1) 002462' 000412 BR RUN10 ;DATA TYPED.
(1) 002464' 004567 175420 INVADR: JSR R5,COMCO1 ;REPORT INVALID ADDRESS.
(1) 002470' 047111 040526 051104 .ASCIZ 'INVADR'
(1) 002476' 000 .EVEN
(1) 002500' 002500' .EVEN

(1) 002500' 105267 002016 RUN: INCB RUNID ;SET RUN INDICATOR.
(1) 002504' 004767 000216 JSR PC,LOAD ;DO A LOAD 1ST.
(1) 002510' 004767 176032 RUN10: JSR PC,GTSW ;GET SWITCHES.
(1) 002514' 016767 002000 175360 MOV ICOUNT,PCOUNT ;GET I COUNT IF ANY.
(1) 002522' 001002 BNE RUN11 ;BR IF NON ZERO.
(1) 002524' 005267 175352 INC PCOUNT ;MAKE IT ONE.
(1) 002530' 005767 175406 RUN11: TST CHN ;CHAIN MODE?
(1) 002534' 001403 BEQ RUN20 ;BR IF NOT.
(1) 002536' 012737 000050' 000042 $REL10: MOV #RESTR1,2#42 ;SET RESTART ADDR IN LOC 42.
(1) 002544' 016701 000366 RUN20: MOV STADR,R1
(1) 002550' 006201 ASR R1
(1) 002552' 103002 BCC RUN30 ;BR IF EVEN ADDR.
(1) 002554' 012701 000100 MOV #100,R1 ;ODD ADDR START AT 200.
(1) 002560' 006301 RUN30: ASL R1 ;RESTORE THE ADDR.
(1) 002562' 016746 177622 RUN40: MOV FILLCT,-(SP) ;PASS THE FILL COUNT.
(1) 002566' 012746 012345 MOV #12345,-(SP) ;INDICATE XXDP MONITOR LOAD.
(1) 002572' 000111 JMP (R1) ;START THE PROGRAM.
    
```



```

(1)          .SBTTL  DIR ROUTINE
(1) 002574' 004767 176642 DIR: JSR PC,SETI ;NO NAME NEEDED.
(1) 002600' 012746 MOV (PC)+,-(SP) ;GET FILE POSITION COUNT.
(1) 002602' 000001 FILCNT: .WORD 1
(1) 002604' 004767 000000G JSR PC,CREWND ;REWIND TAPE.
(1) 002610' 004767 000000G 1$: JSR PC,CRDHDR ;READ FILE LABEL.
(1) 002614' 000436 BR FLNOTF ;EOT RETURN.
(1) 002616' 005316 DEC (SP) ;GOT TO FILE?
(1) 002620' 001373 BNE 1$ ;BR IF NOT.
(1) 002622' 005726 TST (SP)+ ;RESTORE STACK.
(1) 002624' 012765 010000 000002 MOV #MONCNT,XWC(R5) ;4K'S WORTH. STARTING AT LOC 0
(1) 002632' 005065 000004 CLR XBA(R5) ;XFR STARTS AT 0.
(1) 002636' 004767 177142 JSR PC,READBK ;DO IT.
(1) 002642' 012701 000000' MOV #NRDIR,R1 ;POINT TO NON-RES DIR ROUTINE.
(1) 002646' 016746 176252 MOV KBPTR,-(SP) ;PASS THE BUFFER POINTER.
(1) 002652' 016746 175260 MOV $COMC3,-(SP) ;PASS MONITOR RESTART ADDR.
(1) 002656' 016746 176604 MOV CURDRV,-(SP) ;PASS CURRENT DRIVE.
(1) 002662' 000737 BR RUN40 ;GO TO NON-RESIDENT DIR ROUTINE.
(1) ;VIA RUN40.
(1)
(1) ;INPUT INIT ROUTINE
(1) 002664' 016705 176562 INITI: MOV $IDDB,R5 ;POINT TO INPUT DDB.
(1) 002670' 010565 177744 MOV R5,X1STBK(R5) ;DUMMY BLOCK NUMBER.
(1) 002674' 004775 177770 JSR PC,JSRH(R5) ;FILE SEARCH.
(1) 002700' 000404 BR 2$ ;FILE NOT FOUND.
(1) 002702' 016565 177744 000006 MOV X1STBK(R5),XDT(R5) ;1ST BLOCK # TO INDT
(1) 002710' 000207 RTS PC ;FOUND. RETURN.
(1) 002712' 2$:
(1) 002712' 004567 175172 FLNOTF:: JSR R5,COMC01 ;REPORT FILE NOT FOUND.
(1) 002716' 042516 043130 046111 .ASCIZ 'NEXFIL'
(1) 002724' 000 .EVEN
(1) 002726'
    
```

```

(1)          .SBTTL  LOAD ROUTINE. ;.BIN OR .BIC FILES ONLY
(2) 002726'          LOAD: JSR PC,SETIN          ;SET INPUT DEVICE, NAME NEEDED.
(2) 002726' 004767 176514   MOV #BI,IFNAM+6      ;SET UP BIC EXTENSION.
(1) 002732' 012767 044502 001554   MOV #C,IFNAM+8.
(1) 002740' 112767 000103 001550   TST CHN          ;IN CHAIN MODE?
(1) 002746' 005767 175170   BNE 1$          ;BR IF YES.
(1) 002752' 001005          MOV #?,IFNAM+8.  ;NO. MAKE LAST CHAR WILD.
(1) 002754' 112767 000077 001534   MOV R5,XFLMOD(R5);INDICATE FILE MODE.
(1) 002762' 010565 177720
(2) 002766'          1$: JSR PC,INITI        ;INIT FOR INPUT.
(2) 002766' 004767 177672   LOAD1: JSR PC,GTDATA ;INPUT A BLOCK OF DATA
(1) 002772' 004767 176710   LOAD2: CLR (PC)+    ;INITIALIZE CHECKSUM
(1) 002776' 005027          CHKSUM: .WORD 0
(1) 003000' 000000          JSR PC,RDFRAM     ;READ A SYNC WORD
(1) 003002' 004767 000154   TST R3          ;GOT A NULL?
(1) 003006' 005703          BEQ LOAD2        ;IF YES, KEEP READING.
(1) 003010' 001772          DEC R3          ;SEE IF IT'S A ONE
(1) 003012' 005303          BNE CKSMER      ;IF NOT, LOAD ERROR.
(1) 003014' 001025          JSR PC,RDFRAM     ;SYNC IS A WORD
(1) 003016' 004767 000140   TSTB R3        ;OF 1
(1) 003022' 105703          BNE CKSMER      ;SO THE SECOND HALF MUST BE 0
(1) 003024' 001021          JSR PC,RD2FRM    ;2 BYTES=1 WORD
(1) 003026' 004767 000154   MOV R3,R4      ;ASSUMING NOT DONE YET
(1) 003032' 010304          SUB #4,R4       ;MINUS THE HEADER
(1) 003034' 162704 000004          CMP #2,R4       ;BYTE COUNT=6?
(1) 003040' 022704 000002          BEQ LJMPL      ;IT IS, THE END IS NEAR
(1) 003044' 001431          JSR PC,RD2FRM    ;GET LOAD ADR
(1) 003046' 004767 000134   MOV R3,R2      ;INTO R2
(1) 003052' 010302          LOAD3: JSR PC,RDFRAM ;GET A BYTE
(1) 003054' 004767 000102   BPL LOAD4      ;BYTE COUNT NOT ZERO YET
(1) 003060' 100016          TSTB CHKSUM     ;CHECK SUM SHOULD BE ZERO
(1) 003062' 105767 177712   BEQ LOAD2      ;IT IS
(1) 003066' 001743          CKSMER: JSR R5,COMCO1 ;REPORT LOAD ERROR.
(1) 003070' 004567 175014   .ASCIZ 'CKSMER'
(1) 003074' 045503 046523 051105
(1) 003102' 000          .EVEN
(1) 003104' 003104'          POFLOW: JSR R5,COMCO1 ;PROGRAM OVERFLOW MESSAGE.
(1) 003104' 004567 175000   .ASCIZ 'POFLO'
(1) 003110' 047520 046106 000117
(1) 003116' 020227 000000'   .EVEN
(1) 003122' 103370          LOAD4: CMP R2,#R6STCK ;PROTECT THE MONITOR
(1) 003124' 110322          BHS POFLOW      ;ABORT
(1) 003126' 000752          MOV R3,(R2)+    ;STORE THE BYTE.
(1) 003130' 004767 000052   BR LOAD3        ;GO GET MORE
(1) 003134' 010327          LJMP: JSR PC,RD2FRM ;GET THE JUMP ADR
(1) 003136' 000001          MOV R3,(PC)+    ;STORE IT FOR RAINY DAYS
(1) 003140' 000001          STADR: .WORD 1
(1) 003140' 004767 000016   JSR PC,RDFRAM   ;MAKE SURE THE CHECKSUM IS OK
(1) 003144' 105767 177630   TSTB CHKSUM     ;WE CHECK EVERY BLOCK
(1) 003150' 001347          BNE CKSMER
(1) 003152' 112737 000004 000041   MOV #4,2#41    ;SET LOAD MEDIUM INDICATOR.
(1) 003160' 000207          RTS PC          ;DONE. GET OUT.
(1) 003162' 005301          RDFRAM: DEC R1    ;BYTE COUNT IN BUFFER
(1) 003164' 100003          BPL RDFRAM      ;SOMETHING IN BUFFER
(1) 003166' 004767 176514   JSR PC,GTDATA   ;NO. GET ANOTHER BUFFER FULL
(1) 003172' 000773          BR RDFRAM       ;DO THE HOUSE KEEPING
    
```

(1)	003174*	112003		RDFRMA: MOVB	(R0)+,R3	:PICK UP CHR
(1)	003176*	060367	177576		ADD R3,CHKSUM	:DO THE CHECKSUM STUFF
(1)	003202*	005304			DEC R4	:LOAD BYTE COUNT
(1)	003204*	000207		RDFRMB: RTS	PC	
(1)	003206*	004767	177750	RD2FRM: JSR	PC,RDFRAM	:GET ONE BYTE FIRST
(1)	003212*	010327			MOV R3,(PC)+	:STORE IT TEMPORARILY
(1)	003214*	000000		LTEMP: .WORD	0	:TEMP STORAGE.
(1)	003216*	004767	177740		JSR PC,RDFRAM	:GET THE OTHER BYTE
(1)	003222*	110367	177767		MOVB R3,LTEMP+1	:INTO THE HIGH BYTE
(1)	003226*	016703	177762		MOV LTEMP,R3	:BACK INTO R3
(1)	003232*	000207			RTS PC	:RETURN

```

(1) .SBTTL BATCH DEVICE DESCRIPTOR BLOCK (DDB)
(1) 003234' BTCDOB:
(1) 003234' 000000 RWCTR: 0
(1) 003236' 000000 RFLMOD: 0
(1) 003240' 000000 RFLCNT: 0
(1) 003242' 000000 RSVMAP: 0
(1) 003244' 000000 RSVCNT: 0
(1) 003246' 000000 RSVBLK: 0
(1) 003250' 000000 000000 RSVNAM: 0,0
(1) 003254' 000000 RSVEXT: 0
(1) 003256' 000000 RSVDAT: 0
(1) 003260' 000000 RSVXX: 0
(1) 003262' 000000 R1STBK: 0
(1) 003264' 000000 RBKLG: 0
(1) 003266' 000000 RLSTBK: 0
(1) 003270' 000000 RSVUPT: 0
(1) 003272' 000000 RBOOT: 0
(1) 003274' 000000 RDRT: 0
(1) 003276' 000000 RZER: 0
(1) 003300' 000000 RDLT: 0
(1) 003302' 000000 RCLS: 0
(1) 003304' 000000 RRETR: 0
(1) 003306' 000000 RSRCH: 0
(1) 003310' 000000 RALC: 0
(1) 003312' 000000 RSRV: 0
(1) 003314' 000000 RDRV: 0
(1) 003316' 000000 RCM: 0
(1) 003320' 000000 RWC: 0
(1) 003322' 000000 RBA: 0
(1) 003324' 000000 RDT: 0
(1) 003326' 000000 RCOM: 0
(1) 003330' 000000 RPRC: 0
(1) 003332' 000000 RRPWC: 0
(1) 003334' 000000 RRBKCT: 0
(1) 003336' 000000 RDIR: 0
(1) 003340' 000000 RNBK: 0
(1) 003342' 000 000 000 RFNAM: .BYTE 0,0,0,0,0,0,0,0,0
(1) 003345' 000 000 000
(1) 003350' 000 000 000
(1) 003353' BTCEND:
(1) 003354' .EVEN

```

K03

(1)		;KEYBOARD BUFFER.
(1)	003354' 000012	KBUF: .BLKW 10.
(1)		.SBTTL START OF CLEARABLE CORE (DURING INIT)
(1)	003400'	CLRBEG: ;BEGINNING OF CLEARABLE AREA (DURING INIT).
(1)		;MAIN READ - WRITE BUFFER
(1)	003400' 000400	BUF:: .BLKW 256.

```

(1) .SBTTL INPUT DEVICE DESCRIPTOR BLOCK (DDB)
(1) 004400' DDBSTR: INDDB:
(1) 004400' 000000 IWCTR: .WORD 0 ;XWCTR OUTPUT FILE OPEN FLAG
(1) 004402' 000000 IFLMOD: .WORD 0 ;XFLMOD FILE MODE FLAG
(1) 004404' 000000 IFLCNT: .WORD 0 ;XFLCNT FILE COUNT
(1) 004406' 000000 ISVMAP: .WORD 0 ;XSVMAP BLK # OF FILE'S MAP BLOCK
(1) 004410' 000000 ISVCNT: .WORD 0 ;XSVCNT ENTRY # OF CURR FILE IN UFD
(1) 004412' 000000 ISVBLK: .WORD 0 ;XSVBLK BLK # OF CURR FILE'S UFD
(1)
(1) :UFD DIRECTORY ENTRY DATA FOR FILE
(1) 004414' 000000 000000 ISVNAM: .WORD 0,0 ;XSVNAM FILE'S FILENAME IN RAD50 (2 WORDS)
(1) 004420' 000000 ISVEXT: .WORD 0 ;XSVEXT FILE'S EXTENSION IN RAD50
(1) 004422' 000000 ISVDAT: .WORD 0 ;XSVDAT FILE'S CREATION DATE IN DOS FORMAT
(1) 004424' 000000 ISVXX: .WORD 0 ;XSVXX (NOT USED?)
(1) 004426' 000000 I1STBK: .WORD 0 ;X1STBK BLOCK # OF FILE'S FIRST DATA BLK
(1) 004430' 000000 IBKLG: .WORD 0 ;XBKLG # OF BLOCKS IN THE FILE
(1) 004432' 000000 ILSTBK: .WORD 0 ;XLSTBK BLOCK # OF LAST DATA BLOCK WRITTEN
(1) 004434' 000000 ISVUPT: .WORD 0 ;XSVUPT (NOT USED?)
(1) ;END OF DIRECTORY ENTRIES
(1)
(1) 004436' 000000 INBOOT: .WORD 0 ;XBT ADDRESS OF "BOOT" ROUTINE
(1) 004440' 000000 INDRT: .WORD 0 ;DRT ADDRESS OF "DIRECTORY" ROUTINE
(1) 004442' 000000 INZER: .WORD 0 ;ZER ADDRESS OF "ZERO" ROUTINE
(1) 004444' 000000 INDLT: .WORD 0 ;DLT ADDRESS OF "DELETE" ROUTINE
(1) 004446' 000000 INCLS: .WORD 0 ;CLS ADDRESS OF "CLOSE" ROUTINE
(1) 004450' 000000 INETR: .WORD 0 ;ETR ADDRESS OF "ENTER" (CREATE) ROUTINE
(1) 004452' 000000 INSRH: .WORD 0 ;SRH ADDRESS OF "LOOKUP" (SEARCH) ROUTINE
(1) 004454' 000000 INALC: .WORD 0 ;ALC ADDRESS OF "ALLOCATE" ROUTINE
(1) 004456' 000000 INSRV: .WORD 0 ;XSV ADDRESS OF DEVICE DRIVER ROUTINE
(1) 004460' 000000 INDRV: .WORD 0 ;XDN CURRENT DRIVE (UNIT) NUMBER
(1) 004462' 000000 INDEV: ;R5 POINTS HERE
(1) 004462' 000000 INCM: .WORD 0 ;XCM ADDRESS OF DEVICE'S COMMAND REGISTER
(1) 004464' 000000 INWC: .WORD 0 ;XWC CURRENT WORD COUNT
(1) 004466' 000000 INBA: .WORD 0 ;XBA CURRENT BUS (MEMORY) ADDRESS
(1) 004470' 000000 INBLK:
(1) 004470' 000000 INDT: .WORD 0 ;XDT CURRENT BLOCK NUMBER
(1) 004472' 000000 INCOM: .WORD 0 ;XCO CURRENT COMMAND CODE
(1) 004474' 000000 INPRC: .WORD 0 ;XRD READ COMMAND CODE
(1) 004476' 000000 INPWC: .WORD 0 ;XWT WRITE COMMAND CODE
(1) 004500' 000000 INBKCT: .WORD 0 ;XBC REQUESTED BLOCK COUNT
(1) 004502' 000000 INDIR: .WORD 0 ;XDR ADDRESS OF FIRST DIRECTORY BLK #
(1) 004504' 000000 INNbk: .WORD 0 ;XNB LAST BLOCK # ALLOCATED (NEXT BLK #)
(1) 004506' 000 000 000 IFNAM: .BYTE 0,0,0,0,0,0,0,0,0 ;XXNAM FILE'S NAME IN ASCII (9 CHAR'S)
(1) 004511' 000 000 000
(1) 004514' 000 000 000
(1) 004520' 004520' .EVEN
(1) DDBEND:

```

```

(1) .SBTTL INITIALIZABLE VARIABLES/ASCII STRINGS
(1)
(1) 004520' 000000 ICOUNT: .WORD 0
(1) 004522' 000 RUNID: .BYTE 0
(1) 004523' 000 PIPFLG:: .BYTE 0
(1) 004524' 000 000 000 TXNAM:: .BYTE 0,0,0,0,0,0
(1) 004527' 000 000 000
(1) 004532' 000 000 000 TXEXT: .BYTE 0,0,0
(1) 004535' CLREND:
(1)
(1) ;ASCII STRINGS
(1) 004535' 045 000056 ADOT: .ASCIZ '%.'
(1) 004540' 011 000 ATAB: .BYTE 11,0
(1) .EVEN

```

```

(1) .SBTTL COMMAND, SWITCH, AND DEVICE TABLES
(1) ;ALL COMMANDS ARE CHECKED AGAINST THE QUOTES
(1) ;NO ABBREVIATIONS ALLOWED
(1) 004542' COMTAB:
(2) 004542' 000542' .WORD SETQV ;DISPATCH ADDRESS FOR /QV
(2) 004552' 000530' .WORD SETCNT ;DISPATCH ADDRESS FOR /
(2) 004560' 000144' .WORD COMCON ;DISPATCH ADDRESS FOR :
(2) 004566' 002406' .WORD FILL ;DISPATCH ADDRESS FOR F
(2) 004574' 002442' .WORD START ;DISPATCH ADDRESS FOR S
(2) 004602' 002726' .WORD LOAD ;DISPATCH ADDRESS FOR L
(2) 004610' 002500' .WORD RUN ;DISPATCH ADDRESS FOR R
(2) 004616' 000214' .WORD DOIT ;DISPATCH ADDRESS FOR C
(2) 004624' 002574' .WORD DIR ;DISPATCH ADDRESS FOR D
(2) 004632' 000212' .WORD RTSPC ;DISPATCH ADDRESS FOR E
(2) 004640' 000212' .WORD RTSPC ;DISPATCH ADDRESS FOR <15>
(2) 004646' 000546' .WORD GTOK ;DISPATCH ADDRESS FOR <40>
(1) 004654' 177777 .WORD -1
(1)
(1) 004656' DEVTAB:
(1) 004656' 000000G .WORD SETMTO
1334 ;END OF SOURCE.
1335 000001 .END

```



ADOT	004535R		005	1333#
AK	001411			1333#*
ALC	= 177772			1333#
ALTMOD	= 000033			1333#
ALT1	= 000033			1333#
ALT2	= 000175			1333#
ALT3	= 000176			1333#
ARSTRT	001416			1333#
ATAB	004540R		005	1333#
ATOI	001410R		005	1333#
ATOI1	001414R		005	1333#
BCDCV	000260R	G		1333#
BCD1	000274R			1333#
BCD2	000302R			1333#
BCD3	000354R			1333#
BCD4	000320R			1333#
BCD5	000310R			1333#
BCD6	000340R			1333#
BCD7	000346R			1333#
BCLEAR	002114R	G	005	1333#
BEGIN	001000			1333#
BKCT	000216R		005	1333#*
BKRDO	001776R		005	1333#
BKREAD	001764R	G	005	1333#
BMC1	002122R		005	1333#
BMC2	002134R		005	1333#*
BMC3	002142R		005	1333#
BMOVE	002104R	G	005	1333#
BTCDD8	003234R		005	1333#
BTCEND	003353R		005	1333#
BUF	003400R	G	005	1333#
BURST	000130			1333#
CHAIN	000414R		005	1333#
CHAIN0	000462R		005	1333#
CHAIN1	000472R		005	1333#
CHAIN2	000504R		005	1333#
CHKSUM	003000R		005	1333#*
CHN	000142R		005	1333#*
CHRCNT	000744R		005	1333#*
CHROUT	000776R	G	005	1333#
CKSMER	003070R		005	1333#
CKYBD	001136R		005	1333#
CKYBD1	001160R		005	1333#
CLRBEG	003400R		005	1333#
CLRBUF	002066R	G	005	1333#
CLREND	004535R		005	1333#
CLS	= 177764			1333#
CMPNAM	002144R	G	005	1333#
COEFF	002400R		005	1333#
COMCON	000144R		005	1333#
COMC01	000110R		005	1333#
COMC02	000162R		005	1333#
COMC03	000140R		005	1333#
COMC05	000174R		005	1333#
COMTAB	004542R		005	1333#
CRDHDR	= *****	G		1333#

CREWNO=	*****	G	1333#
CRLF	000702R	G	005 1333#
CRLF1	000746R		005 1333#
CROUT1	001002R		005 1333#
CROUT2	001014R		005 1333#
CURDRV	001466R		005 1333#*
DATTAB	000520R		1333#*
DATUPK	000376R	G	1333#
DATUP1	000412R		1333#
DATUP2	000462R		1333#
DATUP3	000452R		1333#
DATUP4	000446R		1333#
DATUP5	000502R		1333#*
DDBEND	004520R		005 1333#
DDBSTR	004400R		005 1333#
DECTAB	000374R		1333#
DELAY	000202R	G	005 1333#
DEVERR	001216R	G	005 1333#
DEVTAB	004656R		005 1333#
DIR	002574R		005 1333#
DLT	= 177762		1333#
DOIT	000214R		005 1333#
DO1	000256R		005 1333#
DO2	000262R		005 1333#
DO3	000322R		005 1333#
DRT	= 177756		1333#
DVSET	001450R		005 1333#
EOMERR	002030R	G	005 1333#
ETR	= 177766		1333#
FHELP	001460		1333#
FILCNT	002602R		005 1333#
FILL	002406R		005 1333#
FILLCT	002410R		005 1333#*
FILNAM	001544R		005 1333#
FLNOTF	002712R	G	005 1333#
FNAM1	001576R		005 1333#
FNAM3	001556R		005 1333#
FSTMOD	000064R	G	1333#*
GETCHR	001162R		005 1333#
GETCR1	001204R		005 1333#
GETIN	001024R		005 1333#
GETIND	001030R		005 1333#
GETIO1	001036R		005 1333#
GETIO2	001106R		005 1333#
GETIO3	001100R		005 1333#
GETIO6	001070R		005 1333#
GETIO8	001116R		005 1333#
GETI11	001112R		005 1333#
GETNUM	001306R		005 1333#
GEX02	001126R		005 1333#
GEX04	001132R		005 1333#
GTDATA	001706R		005 1333#
GTNMO	001374R		005 1333#
GTNM1	001312R		005 1333#
GNUM1	001402R		005 1333#
GTOK	000546R		005 1333#

GTOKK	000552R	005	1333#
GTOKX	000560R	005	1333#
GTOKY	000612R	005	1333#
GTOK1	000564R	005	1333#
GTOK2	000570R	005	1333#
GTOK3	000574R	005	1333#
GTOK4	000604R	005	1333#
GTSW	000546R	005	1333#
IBKLG	004430R	005	1333#
ICOUNT	004520R	005	1333#*
IPLCNT	004404R	005	1333#
IPLMOD	004402R	G 005	1333#
IFNAM	004506R	005	1333#*
ILSTBK	004432R	005	1333#
INALC	004454R	005	1333#
INBA	004466R	005	1333#
INBKCT	004500R	005	1333#
INBLK	004470R	005	1333#
INBOOT	004436R	005	1333#
INCLS	004446R	005	1333#
INCM	004462R	005	1333#
INCOM	004472R	005	1333#
INDDB	004400R	005	1333#
INDEV	004462R	005	1333#
INDIR	004502R	005	1333#
INDLT	004444R	005	1333#
INDRT	004440R	005	1333#
INDRV	004460R	005	1333#
INDT	004470R	005	1333#
INETR	004450R	005	1333#
INIT	000070		1333#
INITI	002664R	005	1333#
INNBK	004504R	005	1333#
INPRC	004474R	005	1333#
INPUT	001024R	005	1333#
INPWC	004476R	005	1333#
INSRH	004452R	005	1333#
INSRV	004456R	005	1333#
INVADR	002464R	005	1333#
INVCMD	000624R	G 005	1333#
INVNAM	001672R	005	1333#
INWC	004464R	005	1333#
INZER	004442R	005	1333#
ISVBLK	004412R	005	1333#
ISVCNT	004410R	005	1333#
ISVDAT	004422R	005	1333#
ISVEXT	004420R	005	1333#
ISVMAP	004406R	005	1333#
ISVNAM	004414R	005	1333#
ISVUPT	004434R	005	1333#
ISVXX	004424R	005	1333#
ITOA	001232R	G 005	1333#
ITOA1	001246R	005	1333#
ITOA2	001302R	005	1333#
ITOA3	001274R	005	1333#
IWCTR	004400R	005	1333#

I1STBK	004426R	005	1333#
KBPTR	001124R	005	1333#*
KBUF	003354R	005	1333#
KCODE	001236		1333#
KTKB	001146R	005	1333#
KTKS	001140R	005	1333#
LIMIT	001232		1333#
LJMP	003130R	005	1333#
LOAD	002726R	005	1333#
LOAD1	002772R	005	1333#
LOAD2	002776R	005	1333#
LOAD3	003054R	005	1333#
LOAD4	003116R	005	1333#
LPB	000142R		1333#
LPS	000140R		1333#
LPSW	000104R		1333#
LTEMP	003214R	005	1333#*
MES	000642R G	005	1333#
MESC	000654R	005	1333#
MESI	000666R	005	1333#
MNBK =	000024		1333#
MNINST	001547		1333#
MOD1	002440R	005	1333#
MONCNT=	010000		1333#
MOUT	001000R	005	1333#*
MREG	001004R	005	1333#*
MTBA =	164006		1333#*
MTCM =	164000		1333#*
MTST =	164002		1333#*
MTWC =	164004		1333#*
NAME	001330		1333#
NOCORE	001435		1333#
NRDIR	000000R		1333#
NRGTSW	000074R		1333#
NRSWTB	000144R		1333#
NXTBLK	001750R G	005	1333#
OPEN =	000000		1333#
PACK	000250		1333#
PAKTMP	002250R	005	1333#*
PC =%	000007		1333#*
PCOUNT	000102R	005	1333#*
PIPFLG	004523R G	005	1333#*
POFLOW	003104R	005	1333#
PRTY7 =	000340		1333#
PS =	177776		1333#
PSW =	177776		1333#
QVMODE	000217R	005	1333#*
RALC	003310R	005	1333#
RBA	003322R	005	1333#
RBKLG	003264R	005	1333#
RBOOT	003272R	005	1333#
RCKSM	000370R	005	1333#*
RCKSUM	000366R	005	1333#
RCLS	003302R	005	1333#
RCM	003316R	005	1333#
RCOM	003326R	005	1333#

RDFRAM	003162R	005	1333#
RDFRMA	003174R	005	1333#
RDFRMB	003204R	005	1333#
RDIR	003336R	005	1333#
RDLT	003300R	005	1333#
RDRT	003274R	005	1333#
RDRV	003314R	005	1333#
RDT	003324R	005	1333#
RD2FRM	003206R	005	1333#
READBK	002004R	G 005	1333#
READL	001716R	005	1333#
READL1	001746R	005	1333#
READY	000262		1333#
REED	000176		1333#
RELCNT	000652R	G 005	1333#*
RESR5	002236R	G 005	1333#
RESR7	002022R	G 005	1333#
RESR7A	002026R	005	1333#
RESTR	000050R	G 005	1333#
RFLCNT	003240R	005	1333#
RFLMOD	003236R	005	1333#
RFNAM	003342R	005	1333#
RLSTBK	003266R	005	1333#
RNBK	003340R	005	1333#*
RPRC	003330R	005	1333#
RRBKCT	003334R	005	1333#
RRETR	003304R	005	1333#
RRPWC	003332R	005	1333#
RSRCH	003306R	005	1333#
RSRV	003312R	005	1333#
RSTRT1	000060R	005	1333#
RST04	002052R	G 005	1333#
RSVBLK	003246R	005	1333#
RSVCNT	003244R	005	1333#
RSVDAT	003256R	005	1333#
RSVEXT	003254R	005	1333#
RSVMAP	003242R	005	1333#
RSVNAM	003250R	005	1333#
RSVUPT	003270R	005	1333#
RSVXX	003260R	005	1333#
RTN	000310		1333#
RTSPC	000212R	005	1333#
RUN	002500R	005	1333#
RUNBUF	000000R	003	1333#
RUNID	004522R	005	1333#*
RUN10	002510R	005	1333#
RUN11	002530R	005	1333#
RUN20	002544R	005	1333#
RUN30	002560R	005	1333#
RUN40	002562R	005	1333#
RWC	003320R	005	1333#
RWCTR	003234R	005	1333#
RWNO	000112		1333#
RZER	003276R	005	1333#
RC	=%000000		1333#*
R1	=%000001		1333#*

R1STBK	003262R		005	1333#
R2	=%000002			1333**
R3	=%000003			1333**
R4	=%000004			1333**
R5	=%000005			1333**
R6	=%000006			1333**
R6STCK	000000R		005	1333#
SAV04	002040R	G	005	1333#
SETCNT	000530R		005	1333#
SETFST	000066R			1333#
SETI	001442R		005	1333#
SETIN	001446R		005	1333#
SETMTO=	*****	G		1333#
SETQV	000542R		005	1333#
SP	=%000006			1333**
SPBOT	000050R		005	1333#
SRH	= 177770			1333#
STADR	003136R		005	1333**
START	002442R		005	1333#
TAB	000752R	G	005	1333#
TADP	= *****	U		1333
TAPERR	000306			1333#
TRDP	= 000000			1253
TXEXT	004532R		005	1333#
TXNAM	004524R	G	005	1333#
UNPACK	002254R	G	005	1333#
UNPA01	002314R		005	1333#
UNPA02	002302R		005	1333#
UNPA03	002334R		005	1333#
UNPA04	002340R		005	1333#
UNPA05	002344R		005	1333#
UNPA06	002300R		005	1333#
UNPA07	002262R		005	1333#
UNPA08	002372R		005	1333#
UNPA09	002266R		005	1333#
UPACK1	002244R	G	005	1333#
UPKNAM	002212R	G	005	1333#
UPKNM1	002236R		005	1333#
XBA	= 000004			1333**
XBC	= 000016			1333#
XBKLG	= 177746			1333#
XBT	= 177754			1333#
XCM	= 000000			1333#
XCO	= 000010			1333**
XDN	= 177776			1333#
XDR	= 000020			1333**
XDT	= 000006			1333**
XFLCNT	= 177722			1333#
XFLMOD	= 177720			1333**
XLSTBK	= 177750			1333#
XNB	= 000022			1333#
XRD	= 000012			1333#
XSV	= 177774			1333#
XSVBLK	= 177730			1333#
XSVCNT	= 177726			1333#
XSVDAT	= 177740			1333#

1333

XSVEXT=	177736		1333#
XSVMAP=	177724		1333#
XSVNAM=	177732		1333#
XSVUPT=	177752		1333#
XSVXX =	177742		1333#
XWC =	000002		1333#*
XWCTR =	177716		1333#
XWT =	000014		1333#
XXNAM =	000024		1333#
XYBK	002012R	005	1333#
X1STBK=	177744		1333#*
YES	001316R	005	1333#*
ZER =	177760		1333#
\$APR	000622R		1333#
\$AUG	000652R		1333#
\$BUF	002102R	G 005	1333#
\$BUF2	002072R	G 005	1333#
\$COMC3	000136R	005	1333#*
\$DEC	000702R		1333#
\$FEB	000606R		1333#
\$IDDB	001452R	G 005	1333#
\$JAN	000600R		1333#
\$JUL	000644R		1333#
\$JUN	000636R		1333#
\$LITB	002624		1333#
\$MAR	000614R		1333#
\$MAY	000630R		1333#
\$NOV	000674R		1333#
\$OCT	000666R		1333#
\$REL1	000154R	005	1333#
\$REL10	002536R	005	1333#
\$REL11	000052R	005	1333#
\$REL12	000372R	005	1333#
\$REL13	000340R	005	1333#
\$REL14	002274R	005	1333#
\$REL15	002150R	005	1333#
\$REL16	001460R	005	1333#
\$REL2	001566R	005	1333#
\$REL3	001550R	005	1333#
\$REL4	000332R	005	1333#
\$REL5	000270R	005	1333#
\$REL6	000250R	005	1333#
\$REL7	001510R	005	1333#*
\$SEP	000660R		1333#
\$TPNM1	000202R	G	1333#
\$TXNAM	002156R	G 005	1333#
.	= 004660R	005	1333#

INITI	41#	1333
READL	50#	1333
RESREG	26#	1333
RESRS	26#	1333
RESR7	26#	1333
ROUTIN	26#	1333
SAVREG	26#	1333
SETBN	47#	1333
SETIN	44#	1333
TOKN	5#	1333
TOKNS	14#	1333
UNPACK	33#	1333
UPACK1	33#	1333
XDPMON	14#	1333
BOOT	14#	1333
IDENT	33#	1333



ADD	1333	
ASL	1333	
ASR	1333	
BCC	1333	
BCE	1333	
BEG	1333	
BGE	1333	
BGT	1333	
BHI	1333	
BHIS	1333	
BIC	1333	
BICB	1333	
BIS	1333	
BIT	1333	
BLE	1333	
BLO	1333	
BLOS	1333	
BLT	1333	
BMI	1333	
BNE	1333	
BPL	1333	
BR	1333	
CLR	1333	
CLRB	1333	
CMP	1333	
CMPB	1333	
DEC	1333	
HALT	1333	
INC	1333	
INCB	1333	
JMP	1333	
JSR	1333	
MOV	1333	
MOVB	1333	
NOP	1333	
ROL	1333	
RTI	1333	
RTS	1333	
SUB	1333	
SWAB	1333	
TST	1333	
TSTB	1333	
.ASCII	1333	
.ASCIZ	1333	
.ASECT	1333	
.BLKW	1333	
.BYTE	1333	
.CSECT	1333	
.END	1335	
.ENDC	1332	1333
.EVEN	1333	
.GLOBL	1333	
.IFDF	1253	1333
.IFF	1333	
.IFT	1333	
.IIF	1333	

K04

TRDP - XXDP TR79F MONITOR M-11-DMQUF-A MACY11 27(732) 03-JAN-77 13:49 PAGE 4-1  
DMQUFA.P11 CROSS REFERENCE TABLE -- PERMANENT SYMBOLS

SEQ 0049

.LIMIT	1333																	
.LIST	3	4	1333															
.MACRO	5	14	23	26	29	32	35	38	41	44	47	50	53	63	109			
.NLIST	1254																	
.PAGE	1	2	1333															
.REM	1333																	
.SBTTL	1333																	
.TITLE	1333																	
.WORD	1333																	

. ABS.	002710	000
	000710	001
MTDIRT	000000	002
RUNBUF	001000	003
TRBF	000000	004
RESMON	004660	005

ERRORS DETECTED: 0  
DEFAULT GLOBALS GENERATED: 0

\*TRDPM,TRDPM.LST/CRF=DMQUFA.P11/EQ:TRDP  
RUN-TIME: 11 16 2 SECONDS  
RUN-TIME RATIO: 93/30=3.1  
CORE USED: 16K (31 PAGES)



```
(1) .SBTTL GLOBAL REFERENCE DEFINITIONS
(1) ;EXTERNAL GLOBAL DEFINITIONS
(1)
(1) .GLOBL BMOVE,BCLEAR,CHROUT,CRLF
(1) .GLOBL CLRBUF,CMPNAM
(1) .GLOBL DEVERR,ITOA,MES
(1) .GLOBL NXTBLK,TXNAM,RELCNT
(1) .GLOBL FLNOTF,READBK
(1) .GLOBL RST04,SAVD4,UNPACK,UPACK1
(1) .GLOBL EOMERR,BKREAD
(1) .GLOBL BUF,DELAY
(1) .GLOBL PIPFLG,UPKNAM,IFLMOD
(1) .GLOBL $TXNAM,$BUF2,$BUF
(1) .GLOBL RESR7,INVCMD
(1) .GLOBL BCDCV
(1) .GLOBL DATUPK
(1) .GLOBL TAB
(1) .GLOBL $TPNM1
(1) .GLOBL FSTMOD
```

1001  
 (1) 000000' 000000G  
 (1) 000002' 000000'  
 (1) 000004' 000000G  
 (1) 000006' 000000G  
 (1) 000010' 000000G  
 (1) 000012' 000000G  
 (1) 000014' 000040'  
 (1) 000016' 000000G  
 (1) 000020' 000560'  
 (1) 000022' 000000  
 (1) 000024' 164000  
 (1) 000026' 000000  
 (1) 000030' 000000  
 (1) 000032' 000000  
 (1) 000034' 000000  
 (1) 000036' 000005  
 (1) 000040' 000003  
 (1) 000042' 000000  
 (1) 000044' 000050'  
 (1) 000046' 000000  
 (1) 000050'

PARAM: .SBTTL  
 INVCMD  
 DIRECT  
 INVCMD  
 INVCMD  
 INVCMD  
 INVCMD  
 INVCMD  
 LOOKUP  
 INVCMD  
 DRIVER  
 UNIT: 0  
 CMDREG: 164000  
 WCOUNT: 0  
 BUSADR: 0  
 BLOCK: 0  
 COMD: 0  
 READ: 5  
 WRITE: 3  
 RBKCT: 0  
 DIRPTR: DIRBLK  
 LSTBLK: 0  
 PAREND:

PARAMETER TABLE  
 :UNIT #  
 :COMMAND REGISTER ADDR  
 :WORD COUNT  
 :BUS ADDRESS  
 :BLOCK NUMBER  
 :COMMAND  
 :READ COMMAND  
 :WRITE COMMAND  
 :REQUESTED BLOCK COUNT  
 :POINTS TO 1ST DIR BLOCK.  
 :LAST BLOCK # ALLOCATED

1002  
 (1)  
 (1) 000050' 177777  
 (1) 000052' 000106'  
 (1) 000054' 000136'  
 (1) 000056' 000000G  
 (1) 000060' 000000G  
 (1) 000062' 000000G  
 (1) 000064' 000342'  
 (1) 000066' 000000G  
 (1)  
 1003 000070' 164002  
 1004 000072' 164000  
 1005 000074' 164004  
 1006 000076' 164006  
 1007

:PARAMETER TABLE FOR MTCOM SECTION.

DIRBLK: -1  
 REWIND  
 SKIPR  
 INVCMD  
 INVCMD  
 INVCMD  
 RDHDR  
 INVCMD  
 MTST: 164002  
 MTCM: 164000  
 MTWC: 164004  
 MTBA: 164006

;-1 INDICATES SEQUENTIAL FILE DEVICE.  
 :POINTS TO REWIND ROUTINE.  
 :POINTS TO SKIP REVERSE BLOCK ROUTINE.  
 :CLRHDR POINTER.  
 :WRTHDR POINTER.  
 :WRTEOF POINTER.  
 :POINTS TO RDHDR ROUTINE.  
 :WEOT POINTER

```

1009
1010 000100'
1012 000100' 012700 000000'
1013 000104' 000207
1014

```

```

.SBTTL SETMT ROUTINE
SETMTO::
MOV #PARAM,RO
RTS PC

```

```

:POINT TO PARAM TABLE.
:DONE. RETURN.

```

```

1016      .SBTTL  MAGTAPE ROUTINES
1017      000106' 004767 000052  REWIND: JSR    PC, MDRV      ; SELECT DRIVE
1018      000112' 032777 000040 177750 BIT    #40, AMTST    ; AT LOAD PIONT
1019      000120' 001003          BNE    1$          ; BRANCH IF YES
1020      000122' 052703 000021     BIS    #21, R3     ; REWIND
1021      000126' 000436          BR     MTD0        ; CHCK FOR DONE
1022      000130' 004767 000022 1$:    JSR    PC, WRTIDB ; GO WRITE IDB
1023      000134' 000207          RTS     PC          ; RETURN
1024      000136' 004767 000022  SKIPR: JSR    PC, MDRV      ; SELECT DRIVE
1025      000142' 052703 000011     BIS    #11, R3     ; BACK SPACE
1026      000146' 012765 000001 000002 MOV    #1, XWC(R5)
1027      000154' 000423          BR     MTD0
1028      000156' 012703 000005  WRTIDB: MOV    #5, R3      ; W/R IDB
1029      000162' 000420          BR     MTD0
1030      000164' 005003          MTD0:  CLR    R3
1031      000166' 116503 000013     MOVB  XRD+1(R5), R3 ; GET DRIVE NUMBER
1032      000172' 000303          SWAB  R3           ; PUT IN LEFT HALF
1033      000174' 010377 177672     MOV    R3, AMTCM   ; SELECT THE DRIVE
1034      000200' 004767 000066     JSR    PC, MTD02   ; WAIT FOR DRIVE RDY
1035      000204' 000207          RTS     PC          ; RETURN.
1051
1052
1053      000206' 012767 000002' 000000' TRBSET: MOV    #TRBUF, TRBF ;
1054      000214' 066767 000000G 000000' ADD    RELCNT, TRBF ;
1055      000222' 000207          RTS     PC          ;
1056
1057
1058
1059
1060      000224' 016577 000002 177642 MTD0:  MOV    XWC(R5), AMTWC ; GET WORD COUNT
1061      000232' 005477 177636     NEG    AMTWC
1062      000236' 004767 177744     JSR    PC, TRBSET
1063      000242' 016777 000000' 177626 MOV    TRBF, AMTBA ; MEM. ADDR.
1069      000250' 005077 177614 1$:    CLR    AMTST      ; CLEAR STATUS
1070      000254' 010377 177612     MOV    R3, AMTCM   ; SET THE FUNCTION AND GO
1071      000260' 032777 100200 177604 MTD01: BIT    #ERROR+DONE, AMTCM ; DONE?
1072      000266' 001774          BEQ    MTD01       ; WAITING
1073      000270' 100413          BMI    MTERR      ; ERROR
1074      000272' 032777 000001 177570 MTD02: BIT    #1, AMTST    ; DRIVE READY?
1075      000300' 001774          BEQ    MTD02       ; LOOP TILL DONE
1076      000302' 032777 000040 177560 BIT    #40, AMTST  ; LOAD PIONT
1077      000310' 001402          BEQ    1$
1078      000312' 004767 177640     JSR    PC, WRTIDB ;
1079      000316' 000207 1$:    RTS     PC
1080      000320' 032777 000010 177542 MTERR: BIT    #10, AMTST ; EOF?
1081      000326' 001403          BEQ    MTER1
1082      000330' 105267 000000'       INCB  EOFSEN      ; SET EOF SEEN FLAG
1083      000334' 000756          BR     MTD02
1084      000336' 000167 000000G  MTER1: JMP    DEVERR     ; WAIT FOR DRIVE TO SETTLE DOWN
1085
1086
1087
1088
1089
1090
1091
    
```

```

1092
1093
1094
1095
1096
1097
1098
1099
1100
1101
1102
1103 000342' 105067 000000' RDHDR: CLRB EOFSEN ;KEEP TRACK OF EOF'S SEEN
1104 000346' 004767 177612 RHDR5: JSR PC,MTDRV ;SEE WHAT HAPPENS
1105 000352' 012767 177762 000176 MOV #-14.,BYTCNT ;SET BYTE COUNT
1106 000360' 012777 177762 177506 MOV #-14.,AMTWC
1107 000366' 016767 000000G 000160 MOV $BUF,DES
1108 000374' 004767 177606 JSR PC,TRBSET
1109 000400' 016777 000000' 177470 MOV TRBF,AMTBA
1110 000406' 005077 177456 CLR AMTST ;CLEAR INHIBIT
1111 000412' 016577 000012 177452 MOV XRD(R5),AMTCM ;DO A READ
1112 000420' 004767 177646 JSR PC,MTD02 ;TEMP FIX MAKE SURE OF DONE
1113 000424' 032777 100200 177440 RHDR1: BIT #ERROR+DONE,AMTCM ;DONE?
1114 000432' 001774 BEQ RHDR1 ;NO
1115 000434' 100422 BMI RHDR3 ;ERROR
1116 000436' 032777 000010 177424 RHDR2: BIT #10,AMTST ;EOF?
1117 000444' 001407 BEQ RHDR6 ;NO
1118 000446' 105267 000000' INCB EOFSEN ;UP COUNT OF EOF'S SEEN.
1119 000452' 022767 000003 000000' CMP #3,EOFSEN ;SEEN 3?
1120 000460' 001405 BEQ RHDR4 ;BR IF YES. EOT.
1121 000462' 000731 BR RHDR5
1122 000464' 062716 000002 RHDR6: ADD #2,ASP ;NO ERRORS SKIP RETURN
1123 000470' 004767 000020 JSR PC,PAK ;GO PACK THE BUFFER
1124 000474' 005767 000000G RHDR4: TST BUF
1125 000500' 000207 RTS PC
1126 000502' 032777 001000 177360 RHDR3: BIT #1000,AMTST ;BLOCK LENGTH ERROR?
1127 000510' 001316 BNE RHDR5 ;DATA BLOCK
1128 000512' 000711 BR MTER1 ;SOME KINDA ERROR.
1129
1130
1131
1132
1133
1134
1135 000514' PAK: JSR R4,SAV04 ;SAVE REGS 0-4
(1) 000514' 004467 000000G JSR PC,TRBSET
1136 000520' 004767 177462 MOV TRBF,R0 ;GET INPUT BUFFER
1137 000524' 016700 000000' MOV DES,R1 ;GET OUTPUT BUFFER
1138 000530' 016701 000020 MOV (R0)+,(R1)+ ;PACK IT IN
1139 000534' 112021 1$: MOVB R0 ;POINT TO NEXT WORD
1140 000536' 005200 INC R0 ;COUNT THE BYTE
1141 000540' 005267 000012 INC BYTCNT ;BR IF NOT FINISHED
1142 000544' 001373 BNE 1$
1143 000546' 004767 000000G JSR PC,RST04 ;RESTORE REGS 0-4
1144 000552' 000207 RTS PC
1145
1146

```



1147  
1148  
1149  
1150  
1151  
1152  
1178  
1179  
1180  
1181  
1182  
1183  
1184  
1185  
1186  
1187  
1188  
1189  
1190  
1191  
1192  
1193  
1194  
1195  
1201  
1202  
1203  
1204  
1205  
1206  
1207  
1212  
1213  
1214  
1215  
1216  
1217  
1218  
1219  
1220

000554' 000000  
000556' 000000  
  
000560' 105067 000000'  
000564' 016567 000004 177762  
000572' 012767 177000 177756  
000600' 012777 177000 177266  
000606' 004767 177374  
000612' 016777 000000' 177256  
000620' 004767 177340  
000624' 005077 177240  
000630' 016577 000010 177234  
000636' 004767 177416  
000642' 004767 177646  
000646' 062767 001000 177700 2\$:  
000654' 105767 000000'  
000660' 001007  
000662' 105767 000000G  
000666' 001004  
000670' 162765 000400 000002  
000676' 003335  
000700' 000207

DES: 000  
BYTCNT: 000  
  
; THE DRIVER  
DRIVER: CLRB  
1\$: MOV  
11\$: MOV  
  
JSR  
MOV  
JSR  
CLR  
MOV  
JSR  
JSR  
ADD  
TSTB  
BNE  
TSTB  
BNE  
SUB  
BGT  
RTS

EOFSEN  
XBA(R5) DES  
#-512., BYTCNT  
#-512., AMTWC  
PC, TRBSET  
TRBF, AMTBA  
PC, MDRV  
AMTST  
XCO(R5), AMTCM  
PC, MTD01  
PC, PAK  
#512., DES  
EOFSEN  
3\$  
PIPFLG  
3\$  
#256., XWC(R5)  
1\$  
PC

; SAW NO EOF YET  
; LOAD POINTER  
; 256 WORDS PER RECORD  
; SET WORD COUNT IN DEVICE  
;  
  
; SELECT THE DRIVE.  
; CLEAR INHIBIT  
; EXECUTE COMMAND  
; WAIT FOR DONE  
  
; UPDATE  
; EOF ???  
; BRANCH IF YES  
; PIP MODE?  
; YES, EXIT  
; DECREMENT WC  
; NOT DONE YET

F05

TR79F - XXDP TR79F MODULE READ-ONLY  
DMQUFA.P12 MAGTAPE ROUTINES

MACY11 27(732) 03-JAN-77 13:48 PAGE 1-7

SEQ 0057

10  
11  
12  
13  
14  
15  
16  
17  
18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67  
68  
69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100

```

1229          000000*
(1)
(1)          ;          .CSECT MTCOMM
(1)          ; TR79F MAGTAPE FILE HEADER FORMAT
(1)          ;
(1)          ;          FILE HEADER CONSISTS OF SEVEN (7) WORDS.
(1)          ;
(1)          ;          WORD 1 THROUGH 3          NAME AND EXTENSION IN RAD50
(1)          ;
(1)          ;          WORD 4          PPN (401)
(1)          ;
(1)          ;          WORD 5          0
(1)          ;
(1)          ;          WORD 6          DATE (DOS FORMAT), IF CONTIGUOUS
(1)          ;          FILE, BIT 15 IS SET TO 1.
(1)          ;
(1)          ;          WORD 7          FILE SIZE IN # OF 256 WORD BLOCKS.
(1) 000000*   000   000  EOFSEN: .BYTE 0,0
(1)          ;          .SBTTL DISPATCH TO UNIQUE DEVICE ROUTINES.
(1)          ;
(1)          ;          CDIR= 0
(1)          ;          CRWD= 2
(1)          ;          CSKPR= 4
(1)          ;          CCLHD= 6
(1)          ;          CWTHD= 10
(1)          ;          CWEOF= 12
(1)          ;          CRHD= 14
(1)
(1) 000002*
(1) 000002* 012746 000002  CREWIND::
(1) 000006* 000405              MOV    #CRWD, -(SP)          ;POINT TO REWIND ROUTINE.
(1)              BR      COMMON
(1)
(1) 000010* 012746 000004  CSKIPR: MOV    #CSKPR, -(SP)       ;POINT TO SKIPR ROUTINE.
(1) 000014* 000402              BR      COMMON
(1)
(1) 000016*
(1) 000016* 012746 000014  CRDHDR::
(1)              MOV    #CRHD, -(SP)       ;POINT TO RDHDR ROUTINE.
(1)
(1) 000022* 066516 000020  COMMON: ADD    XDR(R5), (SP)          ;ADD ADDR OF ROUTINE TABLE.
(1) 000026* 017616 000000              MOV    3(SP), (SP)           ;GET ADDR OF DESIRED ROUTINE.
(1) 000032* 066716 000000              ADD    RELCNT, (SP)        ;CORRECT FOR RELOCATION.
(1) 000036* 012607              MOV    (SP)+, PC          ;GO TO DESIRED ROUTINE.

```

```

(1) .SBTTL LOOKUP ROUTINE
(1)
(1) 000040' 005765 177722 LOOKUP: TST XFLCNT(R5) ;FILE COUNT 0?
(1) 000044' 001403 BEQ 1$ ;BR IF YES. GO REWIND.
(1) 000046' 005765 177720 TST XFLMOD(R5) ;IN FILE MODE?
(1) 000052' 001002 BNE SEARCH ;BR IF YES.
(1) 000054' 004767 177722 1$: JSR PC,CREWIND ;REWIND TAPE.
(1) 000060' 004767 177732 SEARCH: JSR PC,CRDHDR ;READ HEADER BLOCK.
(1) 000064' 000443 BR 4$ ;NOT FOUND. AT EOT.
(1) 000066' 005265 177722 INC XFLCNT(R5) ;INCREMENT FILE COUNT.
(1) 000072' 005767 000000G TST BUF ;DELETED FILE?
(1) 000076' 001770 BEQ SEARCH ;BR IF YES. SKIP IT.
(1) 000100' 016767 000000G 000012 MOV $TXNAM,2$
(1) 000106' 016767 000000G 000006 MOV $BUF,2$+2
(1) 000114' 004567 000000G JSR R5,UPKNAM ;CONVERT NAME TO ASCII.
(1) 000120' 000000 000000 2$: OPEN,OPEN
(1) 000124' 004567 000000G JSR R5,CMPNAM ;COMPARE NAMES.
(1) 000130' 000753 BR SEARCH ;NO MATCH.
(1) 000132' 016765 000000G 177732 MOV BUF,XSVNAM(R5) ;STORE NAME IN DDB.
(1) 000140' 016765 000002G 177734 MOV BUF+2,XSVNAM+2(R5)
(1) 000146' 016765 000004G 177736 MOV BUF+4,XSVEXT(R5) ;STORE EXTENSION.
(1) 000154' 016765 000012G 177740 MOV BUF+10.,XSVDAT(R5) ;THE DATE TOO.
(1) 000162' 016765 000014G 177746 MOV BUF+12.,XBKLG(T(R5) ;FILE LENGTH ALSO.
(1) 000170' 062716 000002 ADD #2,(SP) ;SET UP SUCCESS EXIT.
(1) 000174' 000207 4$: RTS PC ;DONE. RETURN.
(1)
(1)
(1)

```

```

(1) 000000' 000000'
(1) 000000' 000002'
(1) 000002' 001000
(1)
(1) 000000' 000000'
(1) 000000' 004567 000000G
(1) 000004' 000074'
(1) 000006' 004767 000040'
(1) 000012' 000426
(1) 000014' 004767 000000G
(1) 000020' 016503 177722
(1) 000024' 004767 000000G
(1) 000030' 004767 000000G
(1) 000034' 004767 000000G
(1) 000040' 016503 177740
(1) 000044' 004767 000000G
(1) 000050' 005765 177740
(1) 000054' 100354
(1) 000056' 112702 000103
(1) 000062' 004767 000000G
(1) 000066' 000747
(1) 000070' 000167 000002'
(1) 000074'
(1) 000074' 042445 052116 054522
(1) 000102' 004443 044506 047114
(1) 000110' 046501 042456 052130
(1) 000116' 042011 052101 022505
(1) 000124' 000
(1) 000126'
2308 000001

```

```

.CSECT TRBF
TRBF: TRBUF
TRBUF: .BLKW 512.
       .SBTTL DIRECTORY ROUTINE
       .CSECT MTDIRT
DIRECT: JSR R5,MES ;WHAT KINDA TAPE
        HEADER
1$: JSR PC,LOOKUP ;FIND A FILE.
    BR 2$ ;BR IF NO MORE.
    JSR PC,CRLF ;CRLF
    MOV XFLCNT(R5),R3 ;TYPE FILE COUNT.
    JSR PC,ITOA ;DO IT.
    JSR PC,TAB ;TAB.
    JSR PC,$TPNMI ;TYPE FILE NAME.
    MOV XSV DAT(R5),R3 ;TYPE FILE DATE.
    JSR PC,DATUPK ;DO IT.
    TST XSV DAT(R5) ;CONTIGUOUS FILE?
    BPL 1$ ;BR IF NOT.
    MOVB #'C,R2 ;YES. TYPE A C.
    JSR PC,CHROUT ;DO IT.
    BR 1$ ;GO FOR MORE.
2$: JMP CREWIND ;REWIND TAPE

.HEADER:
.ASCIZ '%ENTRY#<11>'FILNAM.EXT'<11>'DATE%'

.EVEN
.END

```





TR79F = 000000		999			
TXNAM = *****	G	1000#			
UNIT = 000022R		1001#			
UNPACK= *****	G	1000#			
UPACK1= *****	G	1000#			
UPKNAM= *****	G	1000#	1229		
WCOUNT = 000026R		1001#			
WRITE = 000040R		1001#			
WRTIDB = 000156R		1022	1028#	1078	
XBA = 000004		1000#	1194		
XBC = 000016		1000#			
XBKLG= 177746		1000#	1229*		
XBT = 177754		1000#			
XCM = 000000		1000#			
XCO = 000010		1000#	1206		
XDN = 177776		1000#			
XDR = 000020		1000#	1229		
XDT = 000006		1000#			
XFLCNT= 177722		1000#	1229*		
XFLMOD= 177720		1000#	1229		
XLSTBK= 177750		1000#			
XNB = 000022		1000#			
XRD = 000012		1000#	1031	1111	
XSV = 177774		1000#			
XSVBLK= 177730		1000#			
XSVCNT= 177726		1000#			
XSVDAT= 177740		1000#	1229*		
XSVEXT= 177736		1000#	1229*		
XSVMAP= 177724		1000#			
XSVNAM= 177732		1000#	1229*		
XSVUPT= 177752		1000#			
XSVXX = 177742		1000#			
XWC = 000002		1000#	1026*	1060	1218*
XWCTR = 177716		1000#			
XWT = 000014		1000#			
XXNAM = 000024		1000#			
XXXXX = *****	U	3			
X1STBK= 177744		1000#			
ZER = 177760		1000#			
\$BUF = *****	G	1000#	1107	1229	
\$BUF2 = *****	G	1000#			
\$TPNM1= *****	G	1000#	1229		
\$TXNAM= *****	G	1000#	1229		
. = 000126R		004	1229#		



DKCOMM	250#	
DKPARM	209#	
MTCOMM	820#	1229
MTPARM	225#	1002
PACK	54#	
PACK1	58#	
PARAM	170#	1001
RESREG	45#	1143
RESR5	48#	
RESR7	51#	
ROUTIN	32#	
SAVREG	42#	1135
TITLE	70#	1000
UNPACK	62#	
UPACK1	66#	



ERRORS DETECTED: 0  
DEFAULT GLOBALS GENERATED: 0

\*TR79FR,TR79FR.LST/CRF=DMQUFA.P12/EQ:TR79F/EQ:RONLY  
RUN-TIME: 8 9 1 SECONDS  
RUN-TIME RATIO: 35/19=1.8  
CORE USED: 13K (25 PAGES)

LNKX11 V022 3-JAN-77 13:51

#DMQUFA.BIN/T:20000,TRDP.MAP=TRDPM,TR79FR/E

LOAD MAP

TRANSFER ADDRESS: 000001  
LOW LIMIT: 005760  
HIGH LIMIT: 020000

\*\*\*\*\*

MODULE	TRDP	SECTION ENTRY	ADDRESS	SIZE
<. ABS.>			000000	000000
<			005760	000710
	BCDCV		006240	
	DATUPK		006356	
	FSTMOD		006044	
	\$TPNM1		006162	
<MTDIRT>			006670	000126
<RUNBUF>			007016	001000
<TRBF >			010016	002002
<RESMON>			012020	004660
	BCLEAR		014134	
	BKREAD		014004	
	BMOVE		014124	
	BUF		015420	
	CHROUT		013016	
	CLRBUF		014106	
	CMPNAM		014164	
	CRLF		012722	
	DELAY		012222	
	DEVERR		013236	
	EOMERR		014050	
	FLNOTF		014732	
	IFLMOD		016422	
	INVCMD		012644	
	ITOA		013252	
	MES		012662	
	NXTBLK		013770	
	PIPFLG		016543	
	READBK		014024	
	RELCNT		012672	
	RESR5		014256	
	RESR7		014042	
	RESTR7		012070	
	RST04		014072	

SAV04 014060  
TAB 012772  
TXNAM 016544  
UNPACK 014274  
UPACK1 014264  
UPKNAM 014232  
\$BUF 014122  
\$BUF2 014112  
\$IDDB 013472  
\$TXNAM 014176

\*\*\*\*\*

MODULE	TR79F	ADDRESS	SIZE
SECTION	ENTRY		
<	>	016700	000702
	SETMT0	017000	
<MTCOMM>		017602	000176
	CRDHDR	017620	
	CREWNO	017604	

RUN-TIME: 1 SECONDS